

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
ABRASION BOOT - STABILIZER	55-10-01-01	43
AC POWER OUTLET INSTALLATION	24-20-00	
ACCESS COVER	24-20-00-01	19
ACCESS COVER	24-20-00-01	22
ACCESS COVER	53-21-00-03	81A
ACCESS PANEL	71-60-01-02	81
ACCESS PANELS - WING	57-11-01	
ACCESSORY UNIT ASSEMBLIES USED WITH 400B AUTOPILOT AND IFCS	22-10-01	
ACTUATOR ASSEMBLY	27-30-02-03	1B
ACTUATOR ASSEMBLY - AILERON TRIM SPARES	27-10-03-03	1C
ACTUATOR ASSEMBLY - AILERON TRIM SPARES	27-10-03-03	1B
ACTUATOR ASSEMBLY - AILERON TRIM TAB	27-10-03-04	1A
ACTUATOR ASSEMBLY - AILERON TRIM TAB	27-10-03-04	1C
ACTUATOR ASSEMBLY - AILERON TRIM TAB	27-10-03-04	1B
ACTUATOR ASSEMBLY - ELEVATOR TRIM TAB	27-30-02-04	1A
ADAPTER	34-10-02-01	6
ADAPTER	34-10-02-02	8
ADAPTER	35-10-01-01	58
ADAPTER	35-10-01-01	59
ADAPTER	35-10-01-01	60
ADAPTER	35-13-00-01	9
ADAPTER	77-11-00-01	4A
ADAPTER	77-11-00-02	3
ADAPTER - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-02	19
ADAPTER - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-02	23
ADAPTER - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-02	31
ADAPTER - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-02	34
ADAPTER - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-02	38
ADAPTER - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-02	42
ADAPTER - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-02	49
ADAPTER - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-02	56
ADAPTER - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-02	60
ADAPTER - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-02	63
ADAPTER ASSEMBLY	27-10-01-02	5
ADAPTER ASSEMBLY	27-10-01-03	4
ADAPTER ASSEMBLY	27-10-01-05	8
ADAPTER ASSEMBLY - OIL VENT LINE	71-10-00-02	80
ADAPTER ASSEMBLY - OIL VENT LINE	71-10-00-02	80A
ADAS PLUS PROCESSOR INSTALLATION	77-30-00	
ADC UNIT - REFERENCE SUPPLIER PART NUMBER 011-00882-10 (MOD 1 ONLY)	34-14-00-01	1
ADF LOOP ANTENNA INSTALLATION USED WITH SPERRY 300 AND 400 ADF	34-50-00	
ADF RECEIVER	34-50-01-05	1A
ADF RECEIVER - (MOD 9, SOFTWARE MOD 01)	34-50-01-05	1
ADF SENSE ANTENNA INSTALLATION	34-50-00	
ADJUSTER - LEFT RUDDER STOP	55-30-00-01	24
ADJUSTER - LEFT RUDDER STOP	55-30-00-02	21
ADJUSTER - LEFT RUDDER STOP	55-30-00-03	21
ADJUSTER - LEFT RUDDER STOP	55-30-00-03	22
ADJUSTER - RIGHT RUDDER STOP	55-30-00-01	25
ADJUSTER - RIGHT RUDDER STOP	55-30-00-02	22
AFCS MODE CONTROLLER	22-10-00-02	1
AFT CARGO POD ASSEMBLY	25-52-00-02A	450
AFT PANEL	79-20-00-03	109
AFT RECEPTACLE PLATE ASSEMBLY - LEFT/RIGHT	24-20-00-01	16
AFT RECEPTACLE PLATE CLIP - LEFT/RIGHT AFT	24-20-00-01	18
AFT RECEPTACLE PLATE CLIP - LEFT/RIGHT FORWARD	24-20-00-01	17
AILERON AND SPOILER CONTROL SYSTEM	27-10-02	
AILERON ASSEMBLY - LEFT	57-60-00-01	5
AILERON ASSEMBLY - RIGHT	57-60-00-01	8
AILERON INSTALLATION	57-60-00	
AILERON TRIM ACTUATOR ASSEMBLY	27-10-03	
AILERON TRIM CONTROL SYSTEM	27-10-03	
AILERON TRIM TAB ACTUATOR ASSEMBLY	27-10-03	
AILERON TRIM WHEEL INSTALLATION	27-10-03	
AIR CONDITIONER COMPRESSOR AND DRIVE UNIT INSTALLATION	21-51-01	
AIR CONDITIONER CONDENSER INSTALLATION	21-51-02	
AIR CONDITIONING SYSTEM	21-51-00	
AIR DEFLECTOR INSTALLATION - CARGO DOOR	52-34-00	
AIR EJECTOR ASSEMBLY	21-41-00-01	102
ALTAIR ENGINE TREND MONITORING (ETM) COMPONENT INSTALLATION	77-30-00	
ALTERNATOR ASSEMBLY - 28 VOLT 95 AMP	24-36-01-01	1

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
ALTERNATOR CONTROL UNIT ASSEMBLY.....	24-36-00-01	1B
ALTERNATOR CONTROL UNIT ASSEMBLY.....	24-36-00-01	1C
ALTIMETER - ENCODING ALERTER IN-HG.....	34-10-00-04	11
ALTIMETER - ENCODING ALERTER MILLIBARS.....	34-10-00-04	12
ALTIMETER - ENCODING IN-HG.....	34-10-00-04	9
ALTIMETER - ENCODING MILLIBARS.....	34-10-00-04	10
ALTIMETER - INDICATOR.....	34-10-00-01	9
ALTIMETER - INDICATOR.....	34-10-00-02	20
ALTIMETER - INDICATOR.....	34-10-00-03	13
ALTIMETER - INDICATOR.....	34-10-00-04	7
ALTIMETER - INDICATOR 20 FEET INCREMENTS AND MILLIBARS.....	34-10-00-01	87
ALTIMETER - INDICATOR 20 FEET INCREMENTS AND MILLIBARS.....	34-10-00-02	21
ALTIMETER - INDICATOR 20 FEET INCREMENTS AND MILLIBARS.....	34-10-00-02	33
ALTIMETER - INDICATOR 20 FEET INCREMENTS AND MILLIBARS.....	34-10-00-04	8
ALTIMETER - INDICATOR 20 FOOT INCREMENTS AND MILLIBARS.....	34-10-00-01	10
ALTIMETER - INDICATOR 20 FOOT INCREMENTS AND MILLIBARS.....	34-10-00-01	11
ALTIMETER - INDICATOR 20 FOOT INCREMENTS AND MILLIBARS.....	34-10-00-01	12
ALTIMETER - INDICATOR 20 FOOT INCREMENTS AND MILLIBARS.....	34-10-00-01	12A
ALTIMETER - INDICATOR 20 FT INCREMENTS & MILLIBARS.....	34-10-00-01	77
ALTIMETER - INDICATOR 20 FT INCREMENTS & MILLIBARS.....	34-10-00-03	14
ALTIMETER - INDICATOR 20 FT INCREMENTS & MILLIBARS.....	34-10-00-03	30
ALTIMETER - INDICATOR 50 FEET INCREMENTS AND MILLIBARS USED WITH ENCODING ALTIMETER.....	34-10-00-01	84
ALTIMETER - INDICATOR 50 FOOT INCREMENTS AND MILLIBARS.....	34-10-00-01	13
ALTIMETER - INDICATOR 50 FT INCREMENTS & MILLIBARS USED WITH ENCODING ALTIMETER.....	34-10-00-01	76
ALTIMETER - INDICATOR USED WITH ENCODING ALTIMETER.....	34-10-00-01	75
ALTIMETER - INDICATOR USED WITH ENCODING ALTIMETER.....	34-10-00-01	83
ALTIMETER IN - HG.....	34-10-00-05	9
ALTIMETER IN - HG.....	34-10-00-06	4
ALTIMETER MILLIBAR.....	34-10-00-05	10
ALTIMETER MILLIBAR.....	34-10-00-06	5
ALTIMETER MILLIBAR (20 FT INCREMENTS).....	34-10-00-06	6
ALTIMETER MILLIBAR - (20 FOOT INCREMENTS).....	34-10-00-05	11
ALTITUDE ALERTER (TYPE AA-801A).....	34-10-00-06	17
ALTITUDE PRESELECT/ALERTER INSTALLATION.....	34-10-01	
ALTITUDE REGULATOR.....	35-10-01-04	175
ALTITUDE REGULATOR - OXYGEN PRESSURE COMPENSATED.....	35-01-00-02	9
ALTITUDE REGULATOR - OXYGEN PRESSURE COMPENSATED.....	35-01-00-02	9A
ALTITUDE REGULATOR - PRESSURE COMPENSATED.....	35-01-00-01	11
ALTITUDE SENSOR AND AIRSPEED SWITCH INSTALLATION.....	34-11-01	
ANCHOR - CARGO TIE DOWN USE WITH 3000 LB BELT.....	25-51-03-01	9
ANCHOR PLATE.....	25-51-01-01	23A
ANCHOR PLATE.....	25-51-01-02	24A
ANCHOR PLATE.....	25-51-01-03	23
ANCHOR PLATE.....	25-51-01-03	23B
ANCHOR PLATE.....	25-51-02-01	5
ANCHOR PLATE.....	25-51-02-01	5A
ANCHOR PLATE.....	25-51-02-02	5
ANCHOR PLATE.....	25-51-02-02	6A
ANCHOR PLATE.....	25-51-02-03	6
ANCHOR PLATE.....	25-51-02-03	6A
ANCHOR PLATE.....	25-51-03-01	1
ANCHOR PLATE.....	25-51-03-01	1A
ANCHOR PLATE.....	25-52-00-03	12
ANCHOR PLATE.....	25-52-00-03	12B
ANCHOR PLATE.....	53-20-01-03	14
ANCHOR PLATE.....	53-20-01-03	14B
ANCHOR PLATE - CARGO BARRIER NET.....	25-51-01-01	22
ANCHOR PLATE - CARGO BARRIER NET.....	25-51-01-02	24
ANGLE.....	25-52-00-01	24
ANGLE.....	25-52-00-01	76
ANGLE.....	25-52-00-02	31
ANGLE.....	25-52-00-02	88
ANGLE.....	25-52-00-02A	243
ANGLE.....	25-52-00-02A	341
ANGLE.....	25-52-00-02A	419
ANGLE.....	31-30-00-02	18
ANGLE.....	31-30-00-02A	20
ANGLE.....	71-60-01-02	173
ANGLE - BULKHEAD ASSEMBLY.....	25-52-00-02	155
ANGLE - INDUCTION AIR BAND.....	71-60-01-01	233

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
ANGLE ASSEMBLY	71-60-01-02	177
ANNUNCIATOR PANEL INSTALLATION	33-10-00	
ANTENNA - ARTEX ELT	25-60-00-06	79A
ANTENNA - DME/TRANSPONDER	34-51-14-01	4B
ANTENNA - DME/TRANSPONDER	34-51-14-01	76A
ANTENNA - KA-96 GPS	34-55-07-01	1A
ANTENNA - KA-96 GPS	34-62-00-01	17A
ANTENNA - L-BAND	34-51-14-02	1
ANTENNA - L-BAND	34-51-14-02	1A
ANTENNA - L-BAND FORWARD RIGHT AND LEFT USED ON AIRPLANES WITH CARGO POD	34-51-15-01	80
ANTENNA - L-BAND FORWARD RIGHT AND LEFT USED ON AIRPLANES WITH CARGO POD	34-51-15-01	80A
ANTENNA - L-BAND FORWARD RIGHT AND LEFT USED ON AIRPLANES WITH CARGO POD	34-51-16-01	80
ANTENNA - L-BAND SECOND TRANSPONDER AFT RIGHT	34-51-15-01	150
ANTENNA - L-BAND SECOND TRANSPONDER AFT RIGHT	34-51-15-01	150A
ANTENNA - L-BAND SECOND TRANSPONDER AFT RIGHT	34-51-16-01	150
ANTENNA - RADAR ALTIMETER	34-10-00-08	9
ANTENNA - RADAR ALTIMETER	34-10-00-08A	17
ANTENNA - TRANSDONDER USED ON AIRPLANES WITH CARGO POD	34-51-16-01	75
ANTENNA - TRANSPONDER RIGHT AND LEFT USED ON AIRPLANES WITHOUT CARGO POD	34-51-15-01	84
ANTENNA - TRANSPONDER RIGHT AND LEFT USED ON AIRPLANES WITHOUT CARGO POD	34-51-16-01	84
ANTENNA - TRANSPONDER USED ON AIRPLANES WITH CARGO POD	34-51-15-01	75
ANTENNA - WLAN STUBBY	77-30-00-02	2
ANTENNA - WLAN STUBBY	77-30-00-02	3
ANTENNA AND CABLE	25-60-00-03	5
ANTENNA BLADE KIT - NAV	34-54-02-01	1
ANTENNA COAX	34-54-03-01	7A
ANTENNA DOUBLER ASSEMBLY	23-15-00-01	3
ARGENTINE EXTERIOR PLACARDS AND MARKINGS - CABIN DOORS	11-LQ-28	
ARGENTINE EXTERIOR PLACARDS AND MARKINGS - COWLING	11-LQ-24	
ARGENTINE EXTERIOR PLACARDS AND MARKINGS - EMPENNAGE AND REAR BAGGAGE	11-LQ-23	
ARGENTINE EXTERIOR PLACARDS AND MARKINGS - FUSELAGE	11-LQ-22	
ARGENTINE EXTERIOR PLACARDS AND MARKINGS - LANDING GEAR	11-LQ-27	
ARGENTINE EXTERIOR PLACARDS AND MARKINGS - WINGS	11-LQ-25	
ARGENTINE INTERIOR PLACARDS AND MARKINGS - CABIN DOORS	11-LQ-38	
ARGENTINE INTERIOR PLACARDS AND MARKINGS - FLIGHT COMPARTMENT	11-LQ-31	
ARM ASSEMBLY - ELEVATOR PUSHROD	55-20-00-02	5
ARMREST ASSEMBLY	25-10-00-02A	105
ARMREST ASSEMBLY - OPPOSITE	25-10-00-02A	106
ARMREST ASSEMBLY LEFT	25-10-00-02	44
ARMREST ASSEMBLY RIGHT	25-10-00-02	45
ASH RECEIVER	25-23-02-01	99
ASH RECEIVER	25-23-02-03	7
ASH RECEIVER	25-23-02-04	7
ASH RECEIVER	25-23-02-05	104
ASH RECEIVER	25-23-02-06	98
ASH TRAY	25-10-02-01	37
ASH TRAY	25-10-02-01	38
ASH TRAY	25-23-02-01	82
ASH TRAY ASSEMBLY	25-23-02-05	11
ASH TRAY ASSEMBLY	25-23-02-05	82
ASH TRAY ASSEMBLY - LEFT	25-23-02-01	13
ASH TRAY ASSEMBLY - RIGHT DOOR	25-23-02-01	13A
ASH TRAY ASSEMBLY - RIGHT DOOR	25-23-02-05	82A
ATTACH ANGLE - LEFT .025 2024 T3	53-50-00-01	21C
ATTACH ANGLE - RIGHT .025 2024 T3	53-50-00-01	21D
ATTACH BRACKET - LEADING EDGE RIB ATTACH WS 244.48 .032 2024 T42	57-10-01-01	78
ATTITUDE GYRO	34-10-00-03	20
ATTITUDE HEADING REFERENCE SYSTEM (AHRS) INSTALLATION	34-25-00	
AUDIO CONTROL PANEL - USED WITH DUAL NAV/COMS, DME, MKR, ADF, TEL. AUTO SW AND W/INT PH	23-50-00-01	3
AUDIO PANEL - LEFT AND RIGHT GMA 1360D	23-51-00-01	2
AUDIO PANEL - LEFT GMA-1347 (MOD 2 & ON)	23-51-00-01	1
AUDIO PANEL - RIGHT GMA-1347 (MOD 2 & ON) OPTIONAL SECOND AUDIO PANEL INSTALLATIONS	23-51-00-01	1A
AUDIO PANEL INSTALLATION	23-51-00	
AUTOPILOT CIRCUIT BREAKERS	24-52-01	
AUTOPILOT COMPUTER - KFC 225	22-10-07	
AUTOPILOT COMPUTER INSTALLATION - TYPE KC 191 AND KC 192	22-10-06	
AVIONIC JCT BOX ASSEMBLY - USED WITH KT-73	24-50-03-01	5C
AVIONICS CIRCUIT BREAKER PANEL INSTALLATION	24-52-05	
AVIONICS CIRCUIT BREAKER PANEL INSTALLATION - USED WITH KING RADIOS ONLY	24-52-04	
AVIONICS CIRCUIT BREAKER PANEL INSTALLATION - USED WITH SPERRY 300 AND 400 SERIES	24-52-03	

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
RADIOS AND KING RADIOS		
AVIONICS GROUNDING BLOCK INSTALLATION	24-20-01	
AVIONICS JUNCTION BOX INSTALLATION	24-50-03	
AVIONICS RACK INSTALLATION	25-70-00	
AVIONICS SHELF INSTALLATION - TAILCONE	25-70-00	
AXLE	32-20-00-01	97
AXLE FITTING - MAIN GEAR	32-10-00-01	76A
AXLE FITTING - MAIN GEAR	32-10-00-01	76
AXLE FITTING - MAIN GEAR	32-10-00-02	75A
AXLE FITTING ASSEMBLY - MAIN GEAR	32-10-00-02	75B
BACKPLATE	31-30-00-02	13
BACKPLATE	31-30-00-02A	15
BACKPLATE	34-51-17-01	5
BACKPLATE ASSEMBLY	34-45-00-02	2
BACKPLATE ASSEMBLY	34-56-04-01	2
BACKPLATE ASSEMBLY - GEA-71	77-40-00-01	2
BAFFLE - LANDING LIGHT LEFT	33-40-00-01	15
BAFFLE - LANDING LIGHT RIGHT	33-40-00-01	16
BAFFLE - LEFT	33-40-00-01A	7
BAFFLE - RIGHT	33-40-00-01A	8
BALANCE WEIGHT - ELEVATOR	55-20-00-01	173
BALANCE WEIGHT - ELEVATOR	55-20-00-02	116
BALANCE WEIGHT - RUDDER	55-40-00-01	84A
BALANCE WEIGHT - RUDDER	55-40-00-03	82
BALANCE WEIGHT - RUDDER	55-40-00-01	84
BALANCE WEIGHT - RUDDER	55-40-00-04	82
BALANCE WEIGHT - RUDDER	55-40-00-05	81
BALANCED LOOP ANTENNA INSTALLATION - NAV	34-54-03	
BALL STUD	52-10-01-01	3A
BALL STUD	52-10-02-01	19A
BALL STUD	52-31-00-01	3A
BALL STUD	52-31-00-02	3A
BAND ASSEMBLY - INDUCTION AIR PLENUM UPPER	71-60-01-01	226
BANJO	30-10-02-06	255
BANJO	30-10-02-07	255
BANJO	30-10-02-08	29
BARREL	27-10-03-01	18
BASE - STATIC DISCHARGER	23-60-00-01	11
BASE - STATIC DISCHARGER	23-60-00-01	14
BASE - STATIC DISCHARGER	23-60-00-01	17
BASE - STATIC DISCHARGER	23-60-00-01	2
BASE - STATIC DISCHARGER	23-60-00-01	8
BATTERY CELL - MARATHON NICAD ONLY	24-34-00-01	11
BATTERY CELL - SAFT NICAD	24-34-00-01	12A
BATTERY INSTALLATION	24-34-00	
BATTERY PACK - SUPPLIED WITH ELT	25-60-00-02	2
BEAD ASSEMBLY - GLARESHIELD	31-00-00-01	44
BEAD ASSEMBLY - GLARESHIELD	31-00-00-01	44A
BEAD ASSEMBLY - GLARESHIELD	31-00-00-02	90A
BEAD ASSEMBLY - GLARESHIELD	31-00-00-03	29
BEAD ASSEMBLY - GLARESHIELD	31-00-00-02	90
BEARING	21-51-01-01	85
BEARING	21-51-01-02	95
BEARING	21-51-01-02A	90
BEARING	78-10-00-04	241
BEARING HOUSING	21-51-01-02	88
BEARING HOUSING	21-51-01-02A	86
BELLCRANK ASSEMBLY - ELEVATOR CONTROL	27-30-01-01	169
BELLCRANK ASSEMBLY - LEFT FLAP	27-50-01-04	75B
BELLCRANK ASSEMBLY - LEFT INBOARD	27-50-01-04	1A
BELLCRANK ASSEMBLY - LEFT INBOARD	27-50-01-04	1B
BELLCRANK ASSEMBLY - LEFT INBOARD	27-50-01-04	1C
BELLCRANK ASSEMBLY - RIGHT FLAP	27-50-01-04	76B
BELLCRANK ASSEMBLY - RIGHT FLAP	27-50-01-04	76
BELLCRANK ASSEMBLY - RIGHT FLAP	27-50-01-04	76A
BELLCRANK ASSEMBLY - RIGHT FLAP	27-50-01-04	76C
BELLCRANK ASSEMBLY - TORQUE TUBE	25-10-00-03	106
BELLMOUTH ASSEMBLY - COMPRESSOR AIR BLEED	71-60-01-01	234
BELT - ALTERNATOR	24-36-01-01	86
BELT ASSEMBLY - TIE DOWN 5000 LB RATING	25-51-03-01	11
BELT ASSEMBLY - TIE DOWN RATCHET 3000 LB RATING	25-51-03-01	7

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
BELT ASSEMBLY - TIE DOWN RATCHET 5000 LB RATING	25-51-03-01	8
BENCH SEAT UPHOLSTERY AND STRUCTURE ASSY	25-10-05	
BENDIX EJECTOR	34-24-00-03	25
BENDIX WEATHER RADAR INSTALLATION - TYPE RDS-82 AND RDS-81	34-43-00	
BENDIX/KING WEATHER RADAR INSTALLATION - TYPE RDR 2000	34-44-00	
BETA INDICATING SYSTEM - PROPELLER	61-20-00	
BLE LANDING LIGHT COVER - LEFT USED ON AIRCRAFT WITH TKS FAIRING	33-40-00-01A	15
BLE LANDING LIGHT COVER - RIGHT USED ON AIRCRAFT WITH TKS FAIRING	33-40-00-01A	16
BLE LANDING LIGHT COVER - USED ON AIRCRAFT WITH TKS FAIRING INSTALLATION	33-40-00-01	22
BLE LANDING LIGHT COVER - USED ON AIRCRAFT WITH TKS FAIRING INSTALLATION	33-40-00-01	23
BLE LENS ASSEMBLY - LEFT	33-40-00-01	26
BLE LENS ASSEMBLY - RIGHT	33-40-00-01	27
BLEED AIR HEATER COMPONENTS	21-41-00	
BLOCK - ENGINE MOUNT 1.50X2.00 7075 T73	53-10-00-01	160
BLOWER ASSEMBLY - EVAPORATOR	21-51-03-04	6
BOLT	21-21-01-01	30
BOLT	21-21-01-02	26
BOLT	21-21-01-03	30
BOLT	21-21-01-04	26
BOLT	21-21-02-01	32
BOLT	21-21-03-01	32
BOLT	21-21-03-02	103
BOLT	21-21-03-03	175
BOLT	21-41-00-01	26
BOLT	21-41-00-01	78
BOLT	21-41-00-01	82
BOLT	21-41-00-01	86
BOLT	21-51-03-01B	2
BOLT	21-51-03-02	35
BOLT	22-10-03-01	13
BOLT	22-10-03-01A	11
BOLT	22-10-05-01	89
BOLT	24-34-00-01	81
BOLT	24-36-02-02	11
BOLT	25-10-00-03	20
BOLT	25-10-03-01	83
BOLT	25-10-05-01	84
BOLT	25-10-05-01	90
BOLT	25-21-00-02A	164
BOLT	25-21-00-02A	169
BOLT	27-30-01-02	8
BOLT	27-50-01-04	245
BOLT	27-70-00-02	30
BOLT	28-10-03-01	165
BOLT	28-10-03-01	86
BOLT	28-21-00-01	171
BOLT	28-21-00-01	172
BOLT	28-21-00-01	78
BOLT	28-21-00-01	78A
BOLT	28-21-00-01	87
BOLT	28-21-00-01	90
BOLT	28-21-00-02	171
BOLT	28-21-00-02	172
BOLT	28-21-00-02	78
BOLT	28-21-00-02	78A
BOLT	28-23-00-01	26
BOLT	30-10-02-03	31
BOLT	30-10-02-05A	11
BOLT	30-10-03-01	81
BOLT	30-10-03-02	81
BOLT	30-60-10-01	23
BOLT	32-10-01-01	3
BOLT	32-10-01-01	4
BOLT	36-10-00-01	13
BOLT	36-10-00-02	13
BOLT	53-10-01-01	161
BOLT	53-10-01-02	187
BOLT	53-11-00-01	24
BOLT	53-12-00-01	127
BOLT	53-12-00-01	80
BOLT	53-12-00-01	87

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
BOLT	53-12-00-03	152
BOLT	53-12-00-03	161
BOLT	53-12-00-03	167
BOLT	55-30-00-01	121
BOLT	55-30-00-02	117
BOLT	71-10-00-01	93
BOLT	71-60-01-01	101
BOLT	71-60-01-01	151
BOLT	71-60-01-01	159
BOLT	71-60-01-01	183
BOLT	71-60-01-01	24
BOLT	71-60-01-01	25A
BOLT	71-60-01-01	3
BOLT	71-60-01-01	86
BOLT	71-60-01-01	94
BOLT	71-60-01-02	155
BOLT	71-60-01-02	7
BOLT	73-10-00-01	2
BOLT	77-11-00-01	83
BOLT	77-11-00-01	88
BOLT	77-12-00-01	83
BOLT	77-12-00-01	88
BOLT	78-10-00-02	13
BOLT	78-10-00-04	258
BOLT	78-10-00-04	262
BOLT	78-10-00-04	266
BOLT	78-10-00-04	81
BOLT	78-10-00-05	15
BOLT	78-10-00-05	33
BOLT	78-10-00-05	45
BOLT	79-20-00-01	13
BOLT	79-20-00-01	2
BOLT	79-20-00-01	31
BOLT	79-20-00-02	2
BOLT	79-20-00-02	77
BOLT	79-20-00-03	100
BOLT	79-20-00-03	21
BOLT	79-20-00-03	90
BOLT	79-20-00-03	95
BOLT	80-10-01-02	21
BOLT - EVAPORATOR ASSEMBLY ATTACH	21-51-03-01A	30
BOLT - FUEL RESEVIOR COMPONENTS ATTACH	28-21-00-02	90
BOLT - SUPPORT ASSEMBLY ATTACH	28-21-00-02	87
BOLT - USED WITH 2662013-1 & 2662017-3	27-50-01-01	160
BOLT - USED WITH 2662013-1, 2662017-1 & 2662024-1	27-50-01-01	158
BOLT - USED WITH 2662013-2, 2662017-2 & 2662024-1	27-50-01-01	87
BOLT - USED WITH 300 AMP STARTER/GENERATOR OPTION	24-36-00-01	12A
BOOT - PROPELLER DEICE	30-60-00-01	25
BOOT - PROPELLER DEICE	30-60-00-02	2
BOSS	71-70-00-02	6
BOX	24-50-01-01A	25
BOX	24-50-01-01A	26
BOX	24-50-01-01A	26A
BOX ASSEMBLY	24-50-01-01A	10
BOX ASSEMBLY	24-50-01-01A	11
BOX ASSEMBLY	24-50-01-01A	12
BOX ASSEMBLY	24-50-01-01A	12A
BRACKET	21-21-03-02	6
BRACKET	21-21-03-02	9
BRACKET	21-21-03-03	76
BRACKET	21-41-00-01	29
BRACKET	21-41-00-01	81
BRACKET	24-34-00-01	91
BRACKET	25-52-00-02A	27
BRACKET	25-52-00-02A	28
BRACKET	26-10-00-01	18
BRACKET	26-10-00-01	29
BRACKET	26-10-00-01	41
BRACKET	26-10-00-01	42
BRACKET	26-10-00-01	42A
BRACKET	26-10-00-01	49

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
BRACKET	26-10-00-01	6
BRACKET	26-10-00-02	15
BRACKET	26-10-00-02	17
BRACKET	26-10-00-02	18
BRACKET	26-10-00-02	21
BRACKET	28-21-00-01	322
BRACKET	28-21-00-02	324
BRACKET	28-23-00-01	165
BRACKET	30-10-03-01	35
BRACKET	30-10-03-01	84
BRACKET	30-10-03-02	35
BRACKET	30-10-03-02	84
BRACKET	33-40-00-01A	9
BRACKET	35-14-00-01	162
BRACKET	53-22-01-01	101
BRACKET	53-22-01-01	79
BRACKET	53-22-01-02	118
BRACKET	53-22-01-02	83
BRACKET	53-22-01-03	160
BRACKET	53-22-01-03	83
BRACKET	53-22-01-04	117
BRACKET	53-22-01-04	83
BRACKET	53-22-01-05	156
BRACKET	53-22-01-05	76
BRACKET	71-60-01-02	165
BRACKET	71-70-00-01	101
BRACKET	71-70-00-01	165
BRACKET	71-70-00-02	46
BRACKET	71-70-00-02	81
BRACKET	74-10-00-01	12
BRACKET	76-10-01-01B	76
BRACKET	77-11-00-01	82
BRACKET	77-11-00-02	25
BRACKET	77-11-00-02	26
BRACKET	77-11-00-02	9
BRACKET	77-12-00-01	82
BRACKET	78-10-00-05	14
BRACKET	78-10-00-05	2
BRACKET	79-20-00-02	165
BRACKET	79-20-00-03	103
BRACKET	79-20-00-03	13
BRACKET	79-30-00-02	14
BRACKET	79-30-00-03	10
BRACKET	80-10-01-03	11
BRACKET	80-10-01-03	16
BRACKET - CABLE SUPPORT	21-41-02-01	7
BRACKET - CARGO POD	25-52-00-02	20
BRACKET - CARGO POD	25-52-00-02	21
BRACKET - COMPASS MOUNTING	31-00-00-01	36
BRACKET - COMPASS MOUNTING	31-00-00-02	80
BRACKET - COMPASS MOUNTING USED ON 2613358-1	31-00-00-03	15
BRACKET - CONDITION CONTROL	76-10-01-01B	106
BRACKET - COWL ATTACH	78-10-00-04	265
BRACKET - DRAIN LINES	71-70-00-02	26
BRACKET - EJECTOR DUCT ATTACH	78-10-00-04	253
BRACKET - EMERGENCY POWER	76-10-01-01B	78
BRACKET - FUEL ECOLOGY	53-10-00-01	78
BRACKET - LANDING LIGHT	33-40-00-01	9
BRACKET - OIL TUBE	79-20-00-03	84
BRACKET - OIL TUBE	79-20-00-03	89
BRACKET - OIL TUBE	79-20-00-03	94
BRACKET - PROP CONTROL	76-10-01-01B	19
BRACKET - PULLEY UPPER RUDDER .040 2024 T42	53-13-03-01	31
BRACKET - STARTER/GENERATOR BLAST TUBE AFT	71-60-01-01	167
BRACKET - STARTER/GENERATOR BLAST TUBE FORWARD	71-60-01-01	10
BRACKET - TORQUE LINE ATTACH AFT	77-11-00-01	98
BRACKET - TORQUE LINE ATTACH AFT	77-12-00-01	98
BRACKET - TORQUE LINE ATTACH FORWARD	77-11-00-01	99
BRACKET - TORQUE LINE ATTACH FORWARD	77-12-00-01	99
BRACKET ASSEMBLY	23-70-00-01	14
BRACKET ASSEMBLY	24-36-00-01	7

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
BRACKET ASSEMBLY	24-36-01-02	8
BRACKET ASSEMBLY	30-60-00-01	28
BRACKET ASSEMBLY	30-60-00-02	20
BRACKET ASSEMBLY	33-20-00-01A	13
BRACKET ASSEMBLY	33-20-00-01A	16
BRACKET ASSEMBLY	44-20-00-01	3
BRACKET ASSEMBLY	79-20-00-03	102
BRACKET ASSEMBLY - 95 AMP ALTERNATOR	24-36-01-01	9
BRACKET ASSEMBLY - ACCELEROMETER	31-30-00-02	19
BRACKET ASSEMBLY - ACCELEROMETER	31-30-00-02A	21
BRACKET ASSEMBLY - ADAPTERS	31-30-00-02	27
BRACKET ASSEMBLY - ADAPTERS	31-30-00-02A	29
BRACKET ASSEMBLY - ALTERNATOR CONTROL UNIT S135-4	53-10-01-01	153
BRACKET ASSEMBLY - ALTERNATOR CONTROL UNIT S135-4	53-10-01-02	179
BRACKET ASSEMBLY - COCKPIT VOICE DATA RECORDER	31-30-00-02	4
BRACKET ASSEMBLY - COCKPIT VOICE DATA RECORDER	31-30-00-02A	6
BRACKET ASSEMBLY - CONDITION CONTROL	76-10-01-01B	105
BRACKET ASSEMBLY - COWL ATTACH	53-10-00-01	14
BRACKET ASSEMBLY - CREW STEP	52-61-00-01	96B
BRACKET ASSEMBLY - CREW STEP	52-61-00-01	97B
BRACKET ASSEMBLY - EMERGENCY POWER	76-10-01-01B	75
BRACKET ASSEMBLY - ENGINE MOUNT CENTER	71-20-00-02	33
BRACKET ASSEMBLY - ENGINE MOUNT LOWER LEFT	71-20-00-01	76
BRACKET ASSEMBLY - ENGINE MOUNT LOWER LEFT	71-20-00-02	34
BRACKET ASSEMBLY - ENGINE MOUNT LOWER RIGHT	71-20-00-01	77
BRACKET ASSEMBLY - ENGINE MOUNT LOWER RIGHT	71-20-00-02	35
BRACKET ASSEMBLY - ENGINE MOUNT UPPER CENTER	71-20-00-01	75
BRACKET ASSEMBLY - FUEL ECOLOGY TANK	28-21-00-03	1
BRACKET ASSEMBLY - GENERATOR CONTROL UNIT	53-10-01-01	155
BRACKET ASSEMBLY - GENERATOR CONTROL UNIT	53-10-01-02	181
BRACKET ASSEMBLY - LEFT	55-30-00-04	21
BRACKET ASSEMBLY - PULLEY LOWER RUDDER .040 2024 T42	53-13-03-01	32
BRACKET ASSEMBLY - RIGHT	55-30-00-04	22
BRACKET ASSEMBLY - TIMER	33-20-00-01	96
BRAKE ASSEMBLY	32-40-00-03	2C
BRAKE ASSEMBLY-MAIN WHEEL - REFERENCE SUPPLIER PART NUMBER 30-182	32-40-00-03	2
BRAKE ASSEMBLY-MAIN WHEEL - REFERENCE SUPPLIER PART NUMBER 30-182A	32-40-00-03	2B
BRAKE ASSY	32-40-00-03	2A
BRAKE DISC	32-40-00-01	21
BRAKE MASTER CYLINDER ASSEMBLY	32-41-01	
BRAKE RETURN SPRING INSTALLATION	32-41-02	
BRAKE SYSTEM	32-41-00	
BRAZILIAN EXTERIOR PLACARDS AND MARKINGS - CABIN DOORS	11-PP-28	
BRAZILIAN EXTERIOR PLACARDS AND MARKINGS - COWLING	11-PP-24	
BRAZILIAN EXTERIOR PLACARDS AND MARKINGS - COWLING	11-PP-27	
BRAZILIAN EXTERIOR PLACARDS AND MARKINGS - EMPENNAGE AND REAR BAGGAGE	11-PP-23	
BRAZILIAN EXTERIOR PLACARDS AND MARKINGS - FUSELAGE	11-PP-22	
BRAZILIAN EXTERIOR PLACARDS AND MARKINGS - WINGS	11-PP-25	
BRAZILIAN INTERIOR PLACARDS AND MARKINGS - CABIN	11-PP-32	
BRAZILIAN INTERIOR PLACARDS AND MARKINGS - CABIN DOORS	11-PP-38	
BRAZILIAN INTERIOR PLACARDS AND MARKINGS - FLIGHT COMPARTMENT	11-PP-31	
BREATHING PAD	77-11-00-02	49
BREATHING PAD - SEPARATOR	77-11-00-01	93
BREATHING VENT ASSEMBLY	71-70-00-02	75
BREATHING VENT ASSEMBLY - OVERBOARD OIL BREATHING	71-70-00-01	178
BRITISH EXTERIOR PLACARDS AND MARKINGS - EMPENNAGE AND REAR BAGGAGE	11-G-23	
BRITISH INTERIOR PLACARDS AND MARKINGS - CABIN	11-G-38	
BRITISH INTERIOR PLACARDS AND MARKINGS - FLIGHT COMPARTMENT	11-G-31	
BRUSH BLOCK - PROPELLER	61-10-00-01	19
BRUSH BLOCK ASSEMBLY - PROPELLER DEICE	30-60-00-02	12
BULB - CHART LIGHTS HALOGEN, USED WITH 2585 AND RL6843 CHART LIGHTS	33-20-00-01	30A
BULB - COMPASS	34-21-00-01	3
BULB - POST LIGHT	33-20-00-04	2
BULB - WING NAV LIGHT	33-41-00-01	14
BULKHEAD	25-52-00-02A	238
BULKHEAD	25-52-00-02A	339
BULKHEAD	25-52-00-02A	413
BULKHEAD ASSEMBLY	25-52-00-02A	234
BULKHEAD ASSEMBLY	25-52-00-02A	335
BULKHEAD ASSEMBLY	25-52-00-02A	409
BULKHEAD ASSEMBLY	25-52-00-02A	452

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
BULKHEAD ASSEMBLY - FS 154.75	25-52-00-01	23A
BULKHEAD ASSEMBLY - FS 154.75	25-52-00-02	30A
BULKHEAD ASSEMBLY - FS 166.45	53-13-03	
BULKHEAD ASSEMBLY - FS 209.15	25-52-00-01	75
BULKHEAD ASSEMBLY - FS 209.15	25-52-00-02	80
BULKHEAD ASSEMBLY - FS 257.15	25-52-00-02	150
BULKHEAD ASSEMBLY - FS 283.85	25-52-00-01	86
BULKHEAD ASSEMBLY - FS 331.85	25-52-00-02	161
BULKHEAD FITTING	71-70-00-02	19
BUMPER	53-30-01-01	168
BUMPER - LEFT ONLY	53-30-01-02	97
BUNGEE ASSEMBLY - NOSE GEAR STEERING	32-50-00-01	1
BUSHING	26-10-00-02	5
BUSHING	27-30-02-02	16
BUSHING ASSEMBLY	25-52-00-01	185
BUSHING ASSEMBLY	25-52-00-02	233
BUSHING ASSEMBLY	25-52-00-02A	173
BUSHING ASSEMBLY	25-52-00-02A	204
BUSHING ASSEMBLY	25-52-00-02A	322
BUSHING ASSEMBLY	25-52-00-02A	397
BUSHING ASSEMBLY - NOSE GEAR STEERING	32-50-00-01	20
BUSHING ASSEMBLY - NOSE GEAR STEERING	53-10-00-01	305
BUZZER	25-60-00-06	76
C406-N ELT ROD ANTENNA	25-60-00-07	1
CABIN EQUIPMENT AND ACCESSORIES	25-22-00	
CABIN FLOOR COVERING AND CARPET INSTALLATION - PASSENGER VERSION	25-28-00	
CABIN FLOOR COVERING INSTALLATION	25-28-00	
CABIN FLOOR COVERING INSTALLATION - NOT APPLICABLE TO 208B PASSENGER VERSION	25-28-00	
CABIN FLOOR COVERING INSTALLATION - PASSENGER VERSION	25-28-00	
CABIN FLOORBOARDS	53-20-00	
CABIN FLOORBOARDS - 208B PASSENGER VERSION	53-20-00	
CABIN HEATING AND DEFROSTING SYSTEM	21-22-00	
CABIN HEATING AND DEFROSTING SYSTEM	21-22-01	
CABIN HEATING AND DEFROSTING SYSTEM - PASSENGER VERSION	21-22-02	
CABIN LIGHTING INSTALLATION	33-20-00	
CABIN PLYWOOD FLOORBOARDS	53-20-01	
CABIN PLYWOOD FLOORBOARDS - 5/8 INCH	53-20-01	
CABIN SIDEWALL UPHOLSTERY - HARD INTERIOR - PASSENGER VERSION	25-23-02	
CABIN SIDEWALL UPHOLSTERY - PASSENGER VERSION	25-23-02	
CABIN SIDEWALLS UPHOLSTERY	25-23-02	
CABIN SIDEWALLS UPHOLSTERY HARD INTERIOR	25-23-02	
CABIN TOP UPHOLSTERY	25-23-00	
CABIN TOP UPHOLSTERY - PASSENGER VERSION	25-23-01	
CABIN TOP UPHOLSTERY WITH HARD INTERIOR	25-23-00	
CABIN WINDOWS INSTALLATION	56-20-00	
CABIN WINDOWS INSTALLATION PASSENGER VERSION	56-20-00	
CABLE - BATTERY TO BATTERY CONTACTOR	24-34-00-01	100
CABLE - BATTERY TO BATTERY CONTACTOR	24-34-00-01	99
CABLE - BATTERY TO GENERATOR	24-34-00-01	97
CABLE - FIRE DETECTOR	26-10-00-01	1
CABLE - FIRE DETECTOR	26-10-00-01	12
CABLE ASSEMBLY	26-10-00-02	2
CABLE ASSEMBLY	26-10-00-02	3
CABLE ASSEMBLY - DOOR PULL	52-10-01-01	48
CABLE ASSEMBLY - PASSENGER DOOR STEP	52-10-02-01	2
CABLE ASSEMBLY - SEAT BELT RESTRAINT	25-21-01-01	89
CABLE ASSEMBLY CONTACTOR TO BATTERY	24-50-02-01	157
CABLE ASSEMBLY CONTACTOR TO BATTERY	24-50-02-01	159
CABLE ASSEMBLY CONTACTOR TO BATTERY - USED WITH 300 AMP STARTER/GENERATOR	24-50-02-01	158
CABLE ASSEMBLY CONTACTOR TO BATTERY - USED WITH 300 AMP STARTER/GENERATOR	24-50-02-01	161
CABLE ASSEMBLY CONTACTOR TO EXTERNAL POWER RECPT	24-50-02-01	163
CABLE ASSEMBLY CONTACTOR TO EXTERNAL POWER RECPT - USED WITH 300 AMP STARTER/	24-50-02-01	164
GENERATOR		
CABLE ASSEMBLY CONTACTOR TO EXTERNAL POWER RECPT - USED WITH 300 AMP STARTER/	24-50-02-01	167
GENERATOR		
CABLE ASSEMBLY CONTACTOR TO STARTER/GENERATOR	24-50-02-01	151
CABLE ASSEMBLY CONTACTOR TO STARTER/GENERATOR - USED WITH 300 AMP STARTER/	24-50-02-01	152
GENERATOR		
CABLE ASSEMBLY CONTACTOR TO STARTER/GENERATOR - USED WITH 300 AMP STARTER/	24-50-02-01	155
GENERATOR		
CAM BLOCK	25-52-00-01	196

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
CAM BLOCK	25-52-00-02	309
CAM BLOCK	25-52-00-02A	178
CAM BLOCK	25-52-00-02A	328
CAM BLOCK	25-52-00-02A	403
CAN	71-70-00-02	2
CAN ASSEMBLY - EPA	73-10-00-01	1
CAN ASSEMBLY - EPA	73-10-00-02	1
CAN ASSEMBLY - OIL	71-70-00-02	1
CANADIAN INTERIOR PLACARDS AND MARKINGS - FLIGHT COMPARTMENT	11-C-31	
CAP ASSEMBLY - FUEL FILLER	28-10-01-01	1
CAP ASSEMBLY - FUEL FILLER	28-10-01-01	11
CARGO BARRIER ASSEMBLY	25-51-01-01	2
CARGO BARRIER ASSEMBLY	25-51-01-02	2
CARGO BARRIER ASSEMBLY	25-51-01-02	2A
CARGO BARRIER ASSEMBLY	25-51-01-03	1
CARGO BARRIER ASSEMBLY	25-51-01-03	1A
CARGO BARRIER INSTALLATION	25-51-01	
CARGO DOOR ASSEMBLY - LOWER	52-31-01-01	7B
CARGO DOOR ASSEMBLY - LOWER 208B AND 208 WITH CARGO TIE DOWN	52-31-01-01	10
CARGO DOOR ASSEMBLY - UPPER	52-31-00-02	10E
CARGO DOOR ASSEMBLY - UPPER	52-31-00-02	10D
CARGO DOOR ASSEMBLY - UPPER USED WITH AIR DEFLECTOR	52-31-00-01	18
CARGO DOOR INSTALLATION - LOWER	52-31-01	
CARGO DOOR INSTALLATION - UPPER	52-31-00	
CARGO DOOR INSTALLATION - UPPER NOT USED ON PASSENGER VERSION	52-31-00	
CARGO DOOR JAMB STRUCTURE	53-13-02	
CARGO DOOR WINDOWS	56-30-00	
CARGO NET ASSEMBLY	25-52-00-03	1
CARGO PARTITION INSTALLATION	25-51-02	
CARGO PARTITION INSTALLATION - NOT APPLICABLE TO PASSENGER VERSION	25-51-02	
CARGO PARTITION INSTALLATION WITH CARGO TIEDOWN	25-51-02	
CARGO POD AND LANDING GEAR DEICE SYSTEM	30-10-03	
CARGO POD BOND ASSEMBLY	25-52-00-02A	152
CARGO POD BOND ASSEMBLY	25-52-00-02A	152B
CARGO POD FIELD INSTALLATION	25-52-00	
CARGO POD INSTALLATION	25-52-00	
CARGO TIE DOWN STRUCTURE COMPONENTS	53-15-00	
CARGO TIE DOWN STRUCTURE COMPONENTS CARGOMASTER	53-15-00	
CARGO TIEDOWN INSTALLATION	25-51-03	
CARPET ASSEMBLY - BAGGAGE COMPARTMENT	25-28-00-03	1
CARPET ASSEMBLY - BAGGAGE COMPARTMENT	25-28-00-04	1
CARTRIDGE	34-55-00-01	2
CARTRIDGE (NORTH AMERICAN DATABASE)	34-55-06-01	7
CASE ASSEMBLY - SMOKE GOGGLES	35-15-00-01	12
CENTER CARGO POD ASSEMBLY	25-52-00-02A	375
CENTER CARGO POD BOND ASSEMBLY	25-52-00-02A	377
CENTER FUSELAGE SKINS AND COMPONENTS	53-30-01	
CENTER FUSELAGE STRUCTURE	53-12-00	
CENTER FUSELAGE STRUCTURE - FS 186.45 TO FS 228.00	53-12-00	
CERTIFICATION PLATE	11-F-23-01	1
CERTIFICATION PLATE	11-G-23-01	2
CHAIN - FORWARD AND AFT INFLIGHT MOVEABLE DOOR	52-32-00-02	23
CHAIN GUARD	27-30-03-02A	1
CHAIN GUARD	27-30-03-02A	1A
CHANNEL SUPPORT	71-70-00-02	9
CHARGE VALVE - AIR CONDITIONER DISCHARGE LINE	21-51-00-01	169
CHARGE VALVE - AIR CONDITIONER SUCTION LINE	21-51-00-01	170
CHART HOLDER ASSEMBLY	27-10-01-03	31B
CHART HOLDER ASSEMBLY	27-10-01-03	31C
CHART HOLDER ASSEMBLY	27-10-01-05	39
CHART LIGHT	33-20-00-01	24A
CHECK VALVE	79-20-00-03	92
CHECK VALVE - FUEL	28-22-00-01	84
CHECK VALVE ASSEMBLY	30-10-02-06	252
CHECK VALVE ASSEMBLY	30-10-02-07	252
CHECK VALVE ASSEMBLY	30-10-02-08	7
CHECK VALVE ASSEMBLY - LEFT	21-51-03-02A	6
CHECK VALVE ASSEMBLY - LEFT	21-51-03-02B	15
CHECK VALVE ASSEMBLY - LEFT EVAPORATOR	21-51-03-01	7
CHECK VALVE ASSEMBLY - RIGHT	21-51-03-02A	7
CHECK VALVE ASSEMBLY - RIGHT	21-51-03-02B	16

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
CHECK VALVE ASSEMBLY - RIGHT EVAPORATOR	21-51-03-01	8
CHINESE EXTERIOR PLACARDS AND MARKING - COWLING	11-B-24	
CHINESE EXTERIOR PLACARDS AND MARKINGS - EMPENNAGE AND REAR BAGGAGE	11-B-23	
CHINESE EXTERIOR PLACARDS AND MARKINGS - FUSELAGE	11-B-22	
CHINESE EXTERIOR PLACARDS AND MARKINGS - TKS	11-B-22	
CHINESE EXTERIOR PLACARDS AND MARKINGS - WINGS	11-B-25	
CHINESE INTERIOR PLACARDS AND MARKINGS - CABIN	11-B-32	
CHINESE INTERIOR PLACARDS AND MARKINGS - CABIN DOORS	11-B-38	
CHINESE INTERIOR PLACARDS AND MARKINGS - FLIGHT COMPARTMENT	11-B-31	
CHIP DETECTOR INDICATOR - SPERRY AUTOPILOT	79-30-00-01	29
CHORD ASSEMBLY - WINDSHIELD DE-ICE STOW LEFT ONLY	25-23-02-04	27
CIRCUIT BOARD ASSEMBLY - ANNUNCIATOR	33-10-00-02	9A
CIRCUIT BREAKER	24-50-02-01	235A
CIRCUIT BREAKER	25-60-00-03	11
CIRCUIT BREAKER	25-60-00-05	12
CIRCUIT BREAKER - ELECTRICAL POWER BOX	24-50-02-01	235
CIRCUIT BREAKER 5 AMP TORQUE IND	24-50-01-02	111
CIRCUIT BREAKER PANEL LIGHTING INSTALLATION	33-10-00	
CIRCUIT BREAKERS	24-50-01	
CLAMP	21-20-01-02	16
CLAMP	21-51-01-01	163
CLAMP	21-51-01-01	165
CLAMP	21-51-01-01A	88
CLAMP	21-51-01-02	101
CLAMP	21-51-01-02A	101
CLAMP	22-10-06-01	20
CLAMP	22-10-06-01	22
CLAMP	22-10-07-01	12
CLAMP	24-36-01-01	85
CLAMP	26-10-00-02	6
CLAMP	28-21-00-01	3
CLAMP	28-21-00-01	311
CLAMP	28-21-00-02	3
CLAMP	28-21-00-02	312
CLAMP	28-21-00-02	317
CLAMP	28-21-00-02	325
CLAMP	30-10-02-06	76
CLAMP	30-10-02-06	9
CLAMP	30-10-02-07	77
CLAMP	30-10-02-07	9
CLAMP	30-10-03-01	95A
CLAMP	34-10-02-01	3
CLAMP	34-10-02-02	10
CLAMP	34-11-00-01	103
CLAMP	34-11-00-01	161
CLAMP	34-11-00-01	9
CLAMP	34-11-00-02	14
CLAMP	34-11-00-02	7
CLAMP	34-11-00-02	77
CLAMP	34-11-00-02	79
CLAMP	34-11-00-02	9
CLAMP	34-11-00-03	14
CLAMP	34-11-00-03	7
CLAMP	34-11-00-03	77
CLAMP	34-11-00-03	79
CLAMP	34-11-00-03	9
CLAMP	34-11-00-04	14
CLAMP	34-11-00-04	7
CLAMP	34-11-00-04	77
CLAMP	34-11-00-04	79
CLAMP	34-11-00-04	9
CLAMP	34-11-01-01	7
CLAMP	34-11-01-02	9
CLAMP	34-23-00-01	13
CLAMP	34-23-00-01	15
CLAMP	34-23-00-01	6
CLAMP	34-23-00-01	9
CLAMP	34-23-00-02	12
CLAMP	34-23-00-02	5
CLAMP	34-23-00-02	8
CLAMP	34-24-00-01	12

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
CLAMP	34-24-00-01	6
CLAMP	34-24-00-01	9
CLAMP	34-24-00-02	12
CLAMP	34-24-00-02	15
CLAMP	34-24-00-02	17
CLAMP	34-24-00-02	9
CLAMP	35-10-00-03	11
CLAMP	35-10-00-04	11
CLAMP	71-70-00-01	153
CLAMP	71-70-00-01	16
CLAMP	71-70-00-02	104
CLAMP	71-70-00-02	24
CLAMP	71-70-00-02	94
CLAMP	71-70-00-02	97
CLAMP	79-30-00-02	3
CLAMP - COM TRANSCEIVER ONLY	21-20-01-02	19
CLAMP - HOSE	30-10-03-01	29
CLAMP - HOSE	30-10-03-01	31
CLAMP - HOSE	30-10-03-01	76
CLAMP - HOSE	30-10-03-01	93
CLAMP - HOSE	30-10-03-02	29
CLAMP - HOSE	30-10-03-02	31
CLAMP - HOSE	30-10-03-02	76
CLAMP - P-HOSE	30-10-03-02	93
CLAMP - W/O CARGO POD	28-21-00-01	312
CLAMP - WITH CARGO POD	28-21-00-01	313
CLAMP BOLT	21-51-00-01	9
CLAMP BOLT	21-51-00-01A	2
CLAMP BOLT	71-70-00-02	11
CLAMP BOLT	73-10-00-02	3
CLAMP BOLT	77-30-00-03	7
CLAMP BOLT - DRYER	21-51-00-01	76
CLAMP BOLT - DRYER	21-51-00-01B	2
CLIP	21-51-01-01	22
CLIP	21-51-01-01A	20
CLIP	21-51-01-02	16
CLIP	21-51-01-02A	16
CLIP	22-10-04-01	22
CLIP	22-10-04-01A	14
CLIP	22-10-05-01	23
CLIP	22-10-05-01A	30
CLIP	24-21-00-01	7
CLIP	24-21-00-01	8
CLIP	24-21-00-01	9
CLIP	25-21-01-01	88
CLIP	27-10-01-01	13
CLIP	27-10-03-01	19
CLIP	27-20-01-01	97
CLIP	27-30-01-01	157
CLIP	27-30-02-01	76
CLIP	27-50-01-04	237
CLIP	55-20-00-02	97A
CLIP - TURNBUCKLE LOCK	21-41-02-01	76
CLOSEOUT ASSEMBLY - ENGINE TRUSS	71-60-01-02	26A
CLOSEOUT ASSEMBLY - ENGINE TRUSS	71-60-01-02	26B
CLOSEOUT ASSEMBLY - ENGINE TRUSS	71-60-01-02	26
CLOSEOUT PANEL - ENGINE TRUSS	71-60-01-02	26C
CLOSEOUT PLATE	25-52-00-01	150
CLOSEOUT PLATE	25-52-00-02	170
CLOSEOUT PLATE	25-52-00-02A	460
COAT HANGER	25-23-02-01	18
COAT HANGER	25-23-02-01	77
COAT HANGER	25-23-02-02	16
COAT HANGER	25-23-02-02	77
COAT HANGER	25-23-02-05	16
COAT HANGER	25-23-02-05	77
COAT HANGER	25-23-02-06	105
COAT HANGER	25-23-02-06	34
COAX CONNECTOR	34-55-06-01	23
COAX CONNECTOR	34-55-08-01	19
COCKPIT PITOT/STATIC SYSTEM	34-10-02	

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
COCKPIT VOICE AND DATA RECORDER	31-30-00-02	1
COCKPIT VOICE AND DATA RECORDER	31-30-00-02A	1
COCKPIT VOICE DATA RECORDER INSTALLATION	31-30-00	
COCKPIT VOICE RECORDER	23-70-00	
COCKPIT VOICE RECORDER	23-70-00-01	1
COCKPIT VOICE RECORDER ADAPTER	23-70-00-01	20
COIL ASSEMBLY - EVAPORATOR	21-51-03-04	2
COIL ASSEMBLY - LEFT EVAPORATOR	21-51-03-03	3
COIL ASSEMBLY - RIGHT EVAPORATOR	21-51-03-03	4
COIL CORD ASSEMBLY	27-10-01-02	28
COIL CORD ASSEMBLY - CONTROL WHEEL	27-10-01-03	22
COIL CORD ASSEMBLY - CONTROL WHEEL	27-10-01-03	22A
COMBINATION HEADSET AND MICROPHONE INSTALLATION	23-50-03	
COMPASS INSTALLATION	34-21-00	
COMPRESSOR ASSEMBLY	21-51-01-02	1
COMPRESSOR ASSEMBLY	21-51-01-02A	1
COMPRESSOR DRIVE ASSEMBLY	21-51-01-01	75A
COMPRESSOR DRIVE ASSEMBLY	21-51-01-02	82
COMPRESSOR DRIVE ASSEMBLY	21-51-01-02	82A
COMPRESSOR MOUNT	21-51-01-02	78
COMPRESSOR MOUNT	21-51-01-02A	78
COMPRESSOR MOUNT - FORWARD	21-51-01-02	22
COMPRESSOR MOUNT - FORWARD	21-51-01-02A	22
COMPRESSOR MOUNT ASSEMBLY	21-51-01-02	75
COMPRESSOR MOUNT ASSEMBLY	21-51-01-02A	75
COMPRESSOR WASHRING INSTALLATION	71-41-00	
COMPUTER AMPLIFIER INSTALLATION	34-11-03	
CONDENSER ASSEMBLY - AIR CONDITIONER	21-51-02-01	1A
CONDUCTIVE GASKET	34-62-00-01	18
CONDUCTIVE GASKET - KLN 89B	34-55-07-01	2
CONFIGURATION MODULE	34-44-00-02	18
CONNECTOR	24-36-01-01	169A
CONNECTOR	24-50-01-01	28
CONNECTOR	24-50-01-01	32
CONNECTOR	24-50-01-01	39
CONNECTOR	24-50-01-01	42
CONNECTOR	24-50-01-01	46
CONNECTOR	28-41-00-01	18
CONNECTOR	28-42-01-01	22
CONNECTOR	30-40-00-01	11
CONNECTOR	30-40-00-01	17
CONNECTOR	30-40-00-02	79
CONNECTOR	34-20-00-01	10
CONNECTOR	34-20-00-01	14
CONNECTOR	34-43-00-01	19
CONNECTOR	34-43-00-01	22
CONNECTOR	34-44-00-01	12
CONNECTOR	34-44-00-02	15
CONNECTOR	34-51-08-01	7
CONNECTOR	34-55-06-01	16
CONNECTOR	34-55-06-01	17
CONNECTOR	34-55-08-01	10
CONNECTOR	34-55-08-01	11
CONNECTOR	34-58-00-01	10
CONNECTOR	73-32-00-01	5
CONNECTOR	73-32-00-01	8A
CONNECTOR	80-10-01-01	25
CONNECTOR	80-10-01-02	31
CONNECTOR - ANTENNA	34-51-03-01	8
CONNECTOR - CIRCUIT BREAKER	24-52-03-01	8
CONNECTOR - CIRCUIT BREAKER	24-52-04-01	6
CONNECTOR - ELEC PIN	28-21-00-01	110
CONNECTOR - ELEC PIN	28-21-00-01	122
CONNECTOR - ELEC PIN	28-21-00-02	111
CONNECTOR - ELEC PIN	28-21-00-02	123
CONNECTOR - ELEC SOCKET	28-21-00-01	111
CONNECTOR - ELEC SOCKET	28-21-00-01	123
CONNECTOR - ELEC SOCKET	28-21-00-02	112
CONNECTOR - ELEC SOCKET	28-21-00-02	124
CONNECTOR - ELECTRICAL TORQUE INDICATOR	77-12-00-01	6
CONNECTOR - FUEL FLOW TRANSMITTER	73-32-00-01	8

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
CONNECTOR - GROUNDING	24-40-00-01	1
CONNECTOR - IGNITION EXCITER	74-10-00-01	10
CONNECTOR - INSTRUMENTS	24-52-03-01	11
CONNECTOR - INSTRUMENTS	24-52-04-01	7
CONNECTOR - PERCENT RPM INDICATOR	77-14-00-01	2
CONNECTOR - PRESSURE SWITCH	34-11-00-01	92
CONNECTOR - PRESSURE SWITCH	34-11-00-01	92A
CONNECTOR - PROP RPM INDICATOR	77-13-00-01	2
CONNECTOR - TURN & BANK	34-10-00-01	95
CONNECTOR ASSEMBLY	21-41-00-01	5
CONNECTOR ASSEMBLY	21-41-00-01	9
CONNECTOR ASSEMBLY	24-36-01-01	169
CONNECTOR ASSEMBLY - AT TEMPERATURE BULB	79-30-00-01	24
CONNECTOR ASSEMBLY - CHIP DETECTOR	79-30-00-01	28
CONNECTOR ASSEMBLY - ELECTRICAL TORQUE INDICATOR	77-12-00-01	4
CONNECTOR ASSEMBLY - ELECTRICAL TORQUE INDICATOR	77-12-00-01	5
CONNECTOR ASSEMBLY - FUEL FLOW GAUGE	28-41-00-01	32
CONNECTOR ASSEMBLY - PERCENT RPM TACH GENERATOR	77-14-00-01	9
CONNECTOR ASSEMBLY - PROP RPM TACH GENERATOR	77-13-00-01	9
CONNECTOR FEMALE	24-50-02-01	225
CONNECTOR FEMALE	24-50-02-01	226
CONNECTOR MALE	24-50-02-01	228
CONNECTOR MALE	24-50-02-01	231
CONTACTOR - BATTERY	24-50-02-01	25
CONTACTOR - GENERATOR	24-50-02-01	26
CONTROL - ASSEMBLY-FUEL CONDITION	76-10-01-01	13
CONTROL - CABIN HEAT	21-22-00-01	77
CONTROL - CABIN HEAT	21-22-00-01A	77
CONTROL - CABIN HEAT	21-22-01-01	22
CONTROL - CABIN HEAT	21-22-02-01	77
CONTROL - CABIN HEAT	21-22-02-01A	77
CONTROL - DEFROST	21-22-01-01	6
CONTROL - DEFROST	21-22-01-01	6A
CONTROL - DEFROST	21-22-02-01	6
CONTROL - DEFROST	21-22-02-01	6A
CONTROL - FUEL SELECTOR	28-23-00-01	154
CONTROL - FUEL SELECTOR	28-23-00-01	79
CONTROL ARM ASSEMBLY - FLAP	27-50-01-02	40A
CONTROL ASSEMBLY	25-52-00-02A	19
CONTROL ASSEMBLY - BLEED AIR	21-41-00-01	21A
CONTROL ASSEMBLY - BLEED AIR	21-41-00-01	21
CONTROL ASSEMBLY - CABIN AIR/HEAT	24-50-00-01	32
CONTROL ASSEMBLY - CABIN HEAT	24-50-00-01	30
CONTROL ASSEMBLY - CONDITION CONTROL	76-10-01-01B	9
CONTROL ASSEMBLY - DEFROST	21-22-00-01	6
CONTROL ASSEMBLY - DEFROST	21-22-00-01	6A
CONTROL ASSEMBLY - DEFROST	21-22-00-01A	6
CONTROL ASSEMBLY - DEFROST	21-22-00-01A	6A
CONTROL ASSEMBLY - DEFROST	21-22-02-01A	6
CONTROL ASSEMBLY - DEFROST	21-22-02-01A	7
CONTROL ASSEMBLY - DEFROST	24-50-00-01	31
CONTROL ASSEMBLY - DEFROST	24-50-00-01	31A
CONTROL ASSEMBLY - DUEL FUEL SHUTOFF	28-21-00-02	229A
CONTROL ASSEMBLY - EMERGENCY POWER	76-10-01-01B	6
CONTROL ASSEMBLY - FRESH AIR	21-21-00-01	33
CONTROL ASSEMBLY - FRESH AIR	21-21-00-01	33A
CONTROL ASSEMBLY - FUEL RESERVOIR DRAIN VALVE WITH CARGO POD	28-22-00-01	160
CONTROL ASSEMBLY - FUEL SHUTOFF	28-21-00-01	229
CONTROL ASSEMBLY - FUEL SHUTOFF	28-21-00-02	229
CONTROL ASSEMBLY - LEFT FRESH AIR WITH FAN	21-21-04-01	11
CONTROL ASSEMBLY - MANUAL OVERRIDE 06970	76-10-01-01B	7
CONTROL ASSEMBLY - PARKING BRAKE	32-42-00-01	1
CONTROL ASSEMBLY - POWER	76-10-01-01	10A
CONTROL ASSEMBLY - PROPELLER	76-10-01-01	12
CONTROL ASSEMBLY - PROPELLER CONTROL 06970	76-10-01-01B	8
CONTROL ASSEMBLY - RIGHT FRESH AIR WITH FAN	21-21-04-01	12
CONTROL ASSEMBLY - RUDDER LOCK	27-70-00-01	93
CONTROL COLUMN INSTALLATION	27-10-01	
CONTROL LOCK ASSEMBLY	10-10-00-01	15
CONTROL LOCK ASSEMBLY	10-10-00-01	15A
CONTROL LOCK ASSEMBLY	10-10-00-02	31

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
CONTROL LOCK ASSEMBLY	10-10-00-02	31A
CONTROL LOCK ASSEMBLY	10-10-00-03	32
CONTROL LOCK ASSEMBLY	10-10-00-03	33
CONTROL LOCK ASSEMBLY	10-10-00-03	33A
CONTROL VALVE ASSEMBLY - TEMPERATURE.....	21-41-00-01	154
CONTROL WHEEL	27-10-01-05	5
CONTROL WHEEL AND SWITCHES INSTALLATION	27-10-01	
CONTROL WHEEL AND SWITCHES INSTALLATION - CAT II	27-10-01	
CONTROL WHEEL ASSEMBLY - COPILOT	27-10-01-05	3
CONTROL WHEEL ASSEMBLY - COPILOT WITH AUTOPILOT SPARES	27-10-01-05	4A
CONTROL WHEEL ASSEMBLY - COPILOT WITH AUTOPILOT SPARES ORDER 2660063-200	27-10-01-05	4
CONTROL WHEEL ASSEMBLY - PILOT	27-10-01-05	1
CONTROL WHEEL ASSEMBLY - PILOT WITH AUTOPILOT	27-10-01-05	2
CONTROLLER - IFCS	22-10-00-01	6
CONTROLLER, MODE SELECTOR AND ACCESSORY UNIT INSTALLATION	22-10-00	
CONVERTER - ASSEMBLY-LEFT VENT	21-21-03-02	106
CONVERTER - ASSEMBLY-RIGHT VENT	21-21-03-02	107
CONVERTER ASSEMBLY - LEFT VENT	21-21-01-02	29
CONVERTER ASSEMBLY - LEFT VENT	21-21-01-03	175
CONVERTER ASSEMBLY - LEFT VENT	21-21-01-04	29
CONVERTER ASSEMBLY - LEFT VENT	21-21-02-01	81
CONVERTER ASSEMBLY - LEFT VENT	21-21-03-03	178
CONVERTER ASSEMBLY - RIGHT VENT	21-21-01-02	30
CONVERTER ASSEMBLY - RIGHT VENT	21-21-01-03	176
CONVERTER ASSEMBLY - RIGHT VENT	21-21-01-04	30
CONVERTER ASSEMBLY - RIGHT VENT	21-21-02-01	82
CONVERTER ASSEMBLY - RIGHT VENT	21-21-03-03	179
CONVERTER ASSEMBLY - VENT LEFT	21-21-01-01	156
CONVERTER ASSEMBLY - VENT LEFT	21-21-03-01	81A
CONVERTER ASSEMBLY - VENT RIGHT	21-21-01-01	157
CONVERTER ASSEMBLY - VENT RIGHT	21-21-03-01	82A
CORD ASSEMBLY - WINDSHIELD DE-ICE STOW LEFT ONLY	25-23-02-03	25
COTTER PIN	21-21-00-01	25
COTTER PIN	21-21-00-01	32
COTTER PIN	21-41-00-01	19
COTTER PIN	21-41-02-01	81
COTTER PIN	21-41-02-01	85
COTTER PIN	25-10-00-01	16
COTTER PIN	25-10-00-02	11
COTTER PIN	25-10-00-03	110
COTTER PIN	25-10-00-03	30
COTTER PIN	27-10-01-01	22
COTTER PIN	27-10-01-01	35
COTTER PIN	27-10-02-01	96
COTTER PIN	27-10-02-02	96
COTTER PIN	27-10-03-01	81
COTTER PIN	27-10-03-01	93
COTTER PIN	27-20-01-01	9
COTTER PIN	27-20-02-02	88
COTTER PIN	27-30-01-01	11
COTTER PIN	27-50-01-02	18
COTTER PIN	27-50-01-02	25
COTTER PIN	27-50-01-03	36
COTTER PIN	27-50-01-04	234
COTTER PIN	27-70-00-01	174
COTTER PIN	27-70-00-01	19
COTTER PIN	27-70-00-01	24
COTTER PIN	27-70-00-01	96
COTTER PIN	27-70-00-02	8
COTTER PIN	28-23-00-01	13
COTTER PIN	32-41-00-01	84
COTTER PIN	32-41-02-01	6
COTTER PIN	52-10-00-01	79
COTTER PIN	52-10-00-02	108
COTTER PIN	52-10-00-02	111
COTTER PIN	52-10-00-02	30
COTTER PIN	52-10-00-03	6C
COTTER PIN	52-10-00-04	6
COTTER PIN	52-10-01-01	51
COTTER PIN	52-10-01-02	28
COTTER PIN	52-10-01-02	31

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
COTTER PIN.....	52-10-01-02	36
COTTER PIN.....	52-10-01-02	83
COTTER PIN.....	52-10-02-02	18
COTTER PIN.....	52-10-02-02	21
COTTER PIN.....	52-10-02-02	26
COTTER PIN.....	52-31-00-01	102A
COTTER PIN.....	52-31-00-01	106
COTTER PIN.....	52-31-00-02	102
COTTER PIN.....	52-31-00-02	19A
COTTER PIN.....	52-31-00-03	24
COTTER PIN.....	52-31-00-03	38
COTTER PIN.....	52-31-00-03	82
COTTER PIN.....	52-31-01-01	18
COTTER PIN.....	52-31-01-02	18
COTTER PIN.....	52-31-01-02	21
COTTER PIN.....	52-31-01-02	36
COTTER PIN.....	52-34-00-01	5
COTTER PIN.....	53-22-01-05	20
COTTER PIN.....	55-20-00-02	21A
COTTER PIN.....	71-60-00-02	95
COTTER PIN.....	76-10-01-01	6
COTTER PIN.....	76-10-01-01B	4
COTTER PIN - RIGHT ONLY.....	52-10-00-02	93
COTTER PIN - SEAT BACK ASSEMBLY.....	25-10-00-02A	11
COUPLER.....	23-51-00-01	11
COURTESY LIGHT INSTALLATION - WING.....	33-45-00	
COVER.....	25-52-00-02	330
COVER.....	25-52-00-02A	10
COVER.....	25-52-00-02A	15
COVER.....	25-52-00-02A	23
COVER.....	25-52-00-02A	77
COVER.....	25-52-00-02A	83
COVER.....	25-52-00-02A	95
COVER.....	25-52-00-02A	96
COVER.....	25-52-00-02A	97
COVER.....	32-10-01-01	7
COVER.....	32-10-01-01	8
COVER - AVIONICS MOUNTING PLATE.....	25-23-02-01	96A
COVER - AVIONICS MOUNTING PLATE.....	25-23-02-02	94A
COVER - AVIONICS MOUNTING PLATE.....	25-23-02-03	4A
COVER - AVIONICS MOUNTING PLATE.....	25-23-02-04	4A
COVER - AVIONICS MOUNTING PLATE.....	25-23-02-05	98A
COVER - AVIONICS MOUNTING PLATE.....	25-23-02-06	95A
COVER - FLOOR VINYL BAGGAGE COMPARTMENT.....	25-28-00-03	2
COVER - FLOOR VINYL BAGGAGE COMPARTMENT.....	25-28-00-04	2
COVER - FUEL DRAIN INBOARD WITH CARGO POD.....	28-22-00-01	167
COVER - FUEL DRAIN LINE.....	28-21-00-02	330
COVER - FUEL DRAIN LINE WITH CARGO POD.....	28-21-00-01	328
COVER - FUEL DRAIN OUTBOARD CARGO POD.....	28-22-00-01	176
COVER - FUEL DRAIN OUTBOARD CARGO POD.....	28-22-00-01	176C
COVER - FUEL DRAIN OUTBOARD WITH CARGO POD.....	28-22-00-01	171
COVER - LEFT.....	25-52-00-02A	100
COVER - LEFT.....	25-52-00-02A	5
COVER - LEFT.....	33-45-00-01A	8
COVER - LEFT MAIN GEAR STRUT.....	25-52-00-02	319A
COVER - LENS LEFT.....	33-40-00-01	28
COVER - LENS LEFT.....	33-40-00-01	30
COVER - LENS RIGHT.....	33-40-00-01	29
COVER - LENS RIGHT.....	33-40-00-01	31
COVER - PITOT TUBE.....	25-22-00-01	80
COVER - RIGHT.....	25-52-00-02A	101
COVER - RIGHT.....	25-52-00-02A	6
COVER - RIGHT.....	33-45-00-01A	9
COVER - RIGHT MAIN GEAR STRUT.....	25-52-00-02	320A
COVER - TERMINAL.....	80-10-01-01	11
COVER ASSEMBLY.....	25-52-00-02A	22
COVER ASSEMBLY.....	25-52-00-02A	94
COVER ASSEMBLY - CONTROL COLUMN.....	25-10-03-01	75A
COVER ASSEMBLY - ENGINE INLET LEFT.....	10-10-00-01	1
COVER ASSEMBLY - ENGINE INLET LEFT.....	10-10-00-01	4
COVER ASSEMBLY - ENGINE INLET RIGHT.....	10-10-00-01	2

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
COVER ASSEMBLY - ENGINE INLET RIGHT	10-10-00-01	5
COVER ASSEMBLY - FUEL DRAIN WITH CARGO POD	28-22-00-01	176A
COVER ASSEMBLY - LEFT	33-45-00-01A	6
COVER ASSEMBLY - MAIN LANDING GEAR WITH CARGO POD	32-10-01-01	2
COVER ASSEMBLY - RIGHT	33-45-00-01A	7
COVER ASSEMBLY - SLIP 3 PASSENGER SEAT	25-21-01-01	180
COVER ASSEMBLY - SLIP BENCH SEAT	25-21-00-03	172
COVER ASSEMBLY - SLIP PASSENGER SEAT	25-21-00-01	108
COVER ASSEMBLY - SLIP PASSENGER SEAT	25-21-00-02	103
COVER ASSEMBLY - SLIP PILOT AND COPILOT SEAT	25-10-00-02	99
COVER LEFT - NOSE GEAR BRACE	25-52-00-01	4
COVER LEFT - NOSE GEAR BRACE	25-52-00-02	4
COVER LENS - LEFT	33-40-00-01A	19
COVER LENS - RIGHT	33-40-00-01A	20
COVER PLATE - ELEVATOR	55-20-00-02	97C
COVER RIGHT - NOSE GEAR BRACE	25-52-00-01	6
COVER RIGHT - NOSE GEAR BRACE	25-52-00-02	6
COWL ASSEMBLY	71-10-00-02	8G
COWL ASSEMBLY	71-10-00-04	4
COWL ASSEMBLY	71-10-00-04	4A
COWL ASSEMBLY - LOWER LEFT	71-10-00-02	153A
COWL ASSEMBLY - LOWER LEFT	71-10-00-02	154
COWL ASSEMBLY - LOWER LEFT	71-10-00-02	154B
COWL ASSEMBLY - LOWER LH USED WITH AIR CONDITIONING	71-10-00	
COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD	71-10-00-02	3N
COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD	71-10-00-02	8E
COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD	71-10-00-02	3
COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD FOR SPARES ONLY	71-10-00-02	3B
COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ONLY	71-10-00-02	4G
COWL DECK ASSEMBLY	53-30-00-01	10
COWL DECK ASSEMBLY	53-30-00-02	9
COWL DECK ASSEMBLY	53-30-00-03	8
COWL DECK ASSEMBLY	53-30-00-04	10
COWL DECK COOLING FANS	21-50-00	
COWL HANGER ASSEMBLY - FORWARD LOWER	71-20-00-01	91B
CREW AND PASSENGER DOOR WINDOWS	56-30-00	
CREW DOOR ASSEMBLY	52-10-00	
CREW DOOR ASSEMBLY	52-10-00-01	14H
CREW DOOR ASSEMBLY - LEFT	52-10-00-01	7D
CREW DOOR ASSEMBLY - LEFT	52-10-00-01	7K
CREW DOOR ASSEMBLY - LEFT	52-10-00-01	7B
CREW DOOR ASSEMBLY - RIGHT	52-10-00-01	14B
CREW DOOR ASSEMBLY - RIGHT	52-10-00-01	14A
CREW STEP ASSEMBLY	52-61-00	
CREW STEP ASSEMBLY	52-61-00-01	1B
CREW STEP ASSEMBLY	52-61-00-01	1D
CREW STEP ASSEMBLY	52-61-00-01	1E
CUFF ASSEMBLY - LEFT WING STRUT LOWER	57-10-04-01	5B
CUFF ASSEMBLY - RIGHT WING STRUT LOWER	57-10-04-01	10B
CUP HOLDER - PILOT AND COPILOT	25-22-00-01	1
CVR ADAPTER	31-30-00-02	24
CVR ADAPTER	31-30-00-02A	26
CYLINDER AND REGULATOR ASSEMBLY - OXYGEN	35-01-00-01	1
CYLINDER AND REGULATOR ASSEMBLY - OXYGEN	35-01-00-02	1
DATA CONCENTRATOR UNIT - GSD 41 REFERENCE SUPPLIER PART NUMBER 011-01457-00 (MOD 0)	31-30-00-02	11
DATA CONCENTRATOR UNIT - GSD 41 REFERENCE SUPPLIER PART NUMBER 011-01457-00 (MOD 0)	31-30-00-02A	13
DATA LINK - GDL 69A	34-45-00-02	1A
DATA LINK - REFERENCE SUPPLIER PART NUMBER 011-00987-00 (MOD 1 ONLY)	34-45-00-02	1
DC POWER OUTLET INSTALLATION - CABIN	24-30-00	
DC POWER OUTLET INSTALLATION - COCKPIT	24-30-00	
DE-ICER - CARGO POD	30-10-03-01	34
DE-ICER - CARGO POD	30-10-03-02	34
DE-ICER STRUT	30-10-01-01	95
DE-ICER STRUT	30-10-01-01	95A
DE-ICER WING - LEFT-INBOARD	30-10-01-01	87
DE-ICER WING - LEFT-OUTBOARD	30-10-01-01	91
DE-ICER WING - RIGHT-INBOARD	30-10-01-01	89
DE-ICER WING - RIGHT-OUTBOARD	30-10-01-01	93
DECAL - RUDDER LOCK	11-N-31-01	150

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
DEFLECTOR ASSEMBLY - AIR	52-34-00-01	1
DEFLECTOR ASSEMBLY - CARGO DOOR AIR	52-34-00-01	1B
DEFLECTOR ASSEMBLY - CARGO DOOR AIR	52-34-00-01	1C
DEICE COMPONENTS - STABILIZER	30-10-02	
DEICE COMPONENTS - WING	30-10-01	
DEICE SYSTEM	30-10-00	
DEICER HORIZONTAL STABILIZER	30-10-02-01	21
DEICER MAIN GEAR FAIRING LEFT	30-10-03-02	99
DEICER MAIN GEAR FAIRING RIGHT	30-10-03-02	100
DEICER MLG FAIRING - LEFT	30-10-03-01	99
DEICER MLG FAIRING - RIGHT	30-10-03-01	100
DEICER VERTICAL FIN	30-10-02-01	19
DIAPHRAGM ASSEMBLY	25-10-00-01	80A
DIAPHRAGM ASSEMBLY	25-10-00-02	79
DIAPHRAGM ASSEMBLY	25-10-00-02A	79
DIGITAL INTERFACE UNIT	25-60-00-06	13
DIMMING ASSEMBLY	33-10-00-01	2A
DIRECTIONAL ANTENNAS	34-50-05	
DIRECTIONAL GYRO	34-10-00-01	173
DIRECTIONAL GYRO	34-10-00-01	173A
DIRECTIONAL GYRO	34-10-00-02	28
DIRECTIONAL GYRO	34-10-00-02	28A
DIRECTIONAL GYRO	34-10-00-03	24
DIRECTIONAL GYRO	34-10-00-03	24A
DIRECTIONAL GYRO - SLAVED (TYPE G-504A)	34-57-01-01	4
DIRECTIONAL GYRO - SLAVED USED WITH 400B AUTOPILOT	34-10-00-01	175
DISPLAY UNIT - GDU 1040A REFERENCE SUPPLIER PART NUMBER 011-00916-00 (MOD 4 ONLY) FOR	34-60-00-01	1F
SPARES ONLY		
DISPLAY UNIT - GDU 1040A REFERENCE SUPPLIER PART NUMBER 011-00916-10 (MOD 1 ONLY)	34-60-00-01	1B
DIVERTER VALVE ASSEMBLIES - BLEED AIR	21-41-02	
DME ANTENNA INSTALLATION	34-51-14	
DME INSTALLATION	34-51-14	
DME/TRANSPONDER ANTENNA INSTALLATION	34-51-14	
DOME - PROPELLER	61-10-00-01	1
DOOR ASSEMBLY	25-10-04-02	1
DOOR ASSEMBLY - AFT	25-52-00-02A	387
DOOR ASSEMBLY - CENTER AFT	25-52-00-02A	312
DOOR ASSEMBLY - DIVERTER	21-41-02-01	22
DOOR ASSEMBLY - DOOR ASSEMBLY-ELT	25-25-00-01	22
DOOR ASSEMBLY - ELT	25-25-00-02	18
DOOR ASSEMBLY - ELT	25-25-00-05	22
DOOR ASSEMBLY - ELT	25-25-00-06	17
DOOR ASSEMBLY - FORWARD	25-52-00-02A	162
DOOR ASSEMBLY - FRESH AIR LEFT	21-21-00-01	28
DOOR ASSEMBLY - FRESH AIR RIGHT	21-21-00-01	29
DOOR ASSEMBLY - GLOVE BOX	25-10-04-01	8
DOOR ASSEMBLY - GLOVE BOX	25-10-04-01	8A
DOOR ASSEMBLY - LEFT UPPER COWL	71-10-00-01	6
DOOR ASSEMBLY - LEFT WING	57-11-01-01	21
DOOR ASSEMBLY - PASSENGER UPPER	52-10-01-01	13B
DOOR ASSEMBLY - PASSENGER UPPER	52-10-01-01	13C
DOOR ASSEMBLY - REAR WALL	25-25-00-01	33
DOOR ASSEMBLY - REAR WALL	25-25-00-05	33
DOOR ASSEMBLY - RIGHT WING	57-11-01-01	22
DOOR ASSEMBLY AFT	25-52-00-01	176A
DOOR ASSEMBLY AFT	25-52-00-02	228C
DOOR ASSEMBLY CENTER AFT	25-52-00-02	227B
DOOR ASSEMBLY CENTER FORWARD	25-52-00-02	226B
DOOR ASSEMBLY CENTER FORWARD	25-52-00-02A	193
DOOR ASSEMBLY FORWARD	25-52-00-01	174A
DOOR ASSEMBLY FORWARD	25-52-00-02	225C
DOOR ASSEMBLY RECIRCULATE	21-41-02-01	13
DOOR BOND ASSEMBLY - CENTER FORWARD	25-52-00-02A	197
DOOR BOND ASSEMBLY - FORWARD	25-52-00-02A	166
DOOR DOUBLER - AFT	25-52-00-02A	382
DOOR DOUBLER - CENTER	25-52-00-02A	188
DOOR DOUBLER - FORWARD	25-52-00-02A	157
DOOR DOUBLER - FORWARD	25-52-00-02A	307
DOOR DOUBLER ASSEMBLY - CENTER	25-52-00-02A	184
DOOR DOUBLER ASSEMBLY - FORWARD	25-52-00-02A	153
DOOR DOUBLER ASSEMBLY - FORWARD	25-52-00-02A	303

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
DOOR DOUBLER ASSEMBLY - FORWARD & CENTER AFT	25-52-00-02	180A
DOOR DOUBLER ASSEMBLY CENTER	25-52-00-01	162E
DOOR DOUBLER ASSEMBLY CENTER	25-52-00-02	182A
DOOR DOUBLER ASSEMBLY FORWARD	25-52-00-01	162B
DOOR EXTENDER - CARGO DOOR GAS SPRING	52-31-00-01	2D
DOOR EXTENDER ASSEMBLY	52-10-00-03	12
DOOR EXTENDER ASSEMBLY	52-10-00-03	12A
DOOR EXTENDER ASSEMBLY	52-31-00-02	2A
DOOR EXTENDER ASSEMBLY - CARGO DOOR GAS SPRING	52-31-00-01	2
DOOR EXTENDER ASSEMBLY - CARGO DOOR GAS SPRING	52-31-00-01	2A
DOOR EXTENDER ASSEMBLY - CARGO DOOR GAS SPRING	52-31-00-01	2C
DOOR EXTENDER ASSEMBLY - CARGO DOOR GAS SPRING SPARES	52-31-00-01	2B
DOOR EXTENDER ASSEMBLY - GAS SPRING	52-10-01-01	1
DOOR EXTENDER ASSEMBLY - GAS SPRING	52-10-01-01	2B
DOOR EXTENDER ASSEMBLY - GAS SPRING	52-31-00-02	1
DOOR EXTENDER ASSEMBLY - GAS SPRING	52-31-00-02	2
DOOR EXTENDER ASSEMBLY - GAS SPRING	52-31-00-02	2B
DOOR EXTENDER ASSEMBLY - GAS SPRING SPARES	52-31-00-02	2D
DOOR HANDLE ASSEMBLY - LOWER CARGO DOOR	52-31-01-02	1
DOOR HANDLE ASSEMBLY - LOWER PASSENGER	52-10-02-02	1
DOOR HANDLE ASSEMBLY - LOWER PASSENGER	52-10-02-02	1A
DOOR INFLIGHT MOVEABLE OPERATING MECHANISM	52-32-00	
DOOR INSTALLATION - INFLIGHT MOVEABLE	52-32-00	
DOOR JAMB - UPPER LEFT CREW DOOR .040 2024 T42	53-10-01-01	17
DOOR JAMB - UPPER RIGHT CREW DOOR .040 2024 T42	53-10-01-01	18
DOOR LATCH ASSEMBLY	25-52-00-01	190A
DOOR LATCH ASSEMBLY	25-52-00-01	196A
DOOR LATCH ASSEMBLY	25-52-00-02	303A
DOOR LATCH ASSEMBLY	25-52-00-02	309A
DOOR LATCH ASSEMBLY	25-52-00-02A	326
DOOR LATCH ASSEMBLY	25-52-00-02A	401
DOOR SEAL - AFT	25-52-00-02A	386
DOOR SEAL - CENTER	25-52-00-02A	192
DOOR SEAL - FORWARD	25-52-00-02A	161
DOOR SEAL - FORWARD	25-52-00-02A	311
DOOR SEAL AFT	25-52-00-01	202
DOOR SEAL AFT	25-52-00-02	315
DOOR SEAL CENTER	25-52-00-01	201
DOOR SEAL CENTER	25-52-00-02	314
DOOR SEAL FORWARD	25-52-00-01	200
DOOR SEAL FORWARD	25-52-00-02	313
DOOR WARNING	52-71-00	
DOORPOST ASSEMBLY - LEFT UPPER	53-10-01-01	103
DOORPOST ASSEMBLY - LOWER LEFT	53-10-01-01	94
DOORPOST ASSEMBLY - LOWER LEFT	53-10-01-02	95
DOORPOST ASSEMBLY - LOWER RIGHT	53-10-01-02	96
DOORPOST ASSEMBLY - RIGHT LOWER	53-10-01-01	95
DOORPOST ASSEMBLY - RIGHT UPPER	53-10-01-01	104
DOORPOST ASSEMBLY - UPPER LEFT	53-10-01-02	104
DOORPOST ASSEMBLY - UPPER RIGHT	53-10-01-02	105
DORSAL ASSEMBLY - TAILCONE	53-50-00-01	1
DORSAL ASSEMBLY - TAILCONE	53-50-00-01	3B
DOUBLER - ELEVATOR	55-20-00-02	97B
DOUBLER SHOULDER HARNESS - LEFT	25-21-01-01	20
DOUBLER SHOULDER HARNESS - RIGHT	25-21-01-01	24
DOWN SPOUT ASSEMBLY	25-52-00-02A	105
DOWN SPOUT ASSEMBLY	25-52-00-02A	36
DOWN SPOUT ASSEMBLY - CARGO POD	53-30-00-01	83
DOWN SPOUT ASSEMBLY - CARGO POD	53-30-00-02	41
DOWN SPOUT ASSEMBLY - CARGO POD	53-30-00-03	28
DOWN SPOUT ASSEMBLY - CARGO POD	53-30-01-01	174
DOWN SPOUT ASSEMBLY - CARGO POD NOT APPLICABLE TO PASSENGER VERSION	53-30-01-02	188
DRAIN CAN ASSEMBLY	71-70-00-02	108
DRAIN CAN ASSEMBLY - F.C.U. LUBE OIL	71-70-00-01	10
DRAIN CAN WELD ASSEMBLY	71-70-00-02	109
DRAIN TUBE	25-52-00-02A	107
DRAIN TUBE	25-52-00-02A	38
DRAIN TUBE - CARGO POD	25-52-00-01	234
DRAIN TUBE - CARGO POD	25-52-00-02	323
DRAIN TUBE ASSEMBLY	71-70-00-02	16
DRAIN TUBE ASSEMBLY	73-10-00-02	9A

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
DRAIN TUBE WELD ASSEMBLY	25-52-00-02A	247
DRAIN TUBE WELD ASSEMBLY - FUEL DRAIN	25-52-00-01	203
DRAIN TUBE WELD ASSEMBLY - FUEL DRAIN CARGO POD	25-52-00-02	316
DRAIN VALVE	28-21-00-02	168
DRAIN VALVE	34-10-02-01	34
DRAIN VALVE	34-10-02-02	15
DRAIN VALVE	34-11-00-02	12
DRAIN VALVE	34-11-00-03	12
DRAIN VALVE	34-11-00-04	12
DRAIN VALVE	71-70-00-01	11
DRAIN VALVE	71-70-00-02	111
DRAIN VALVE	71-70-00-02	20
DRAIN VALVE - EPA CAN	73-10-00-01	4
DRAIN VALVE - FUEL	28-21-00-01	168
DRAIN VALVE - FUEL	57-11-01-01	161
DRAIN VALVE - STATIC SOURCE	34-11-00-01	163
DRAIN VALVE - STATIC SOURCE	34-11-01-01	11
DRIP PAN - TKS TANK ASSEMBLY	30-10-02-08	75
DRIP RAIL - LEFT 7075 T73	53-30-01-01	161
DRIP RAIL - LEFT 7075 T73	53-30-01-01	161A
DRIP RAIL - LEFT CM2974-3	53-30-01-02	85
DRIP RAIL - LEFT CM2974-3	53-30-01-02	85A
DRIP RAIL - RIGHT 7075 T73	53-30-01-01	162
DRIP RAIL - RIGHT 7075 T73	53-30-01-01	162A
DRIP RAIL - RIGHT CM2974-3	53-30-01-02	86
DRIP RAIL - RIGHT CM2974-3	53-30-01-02	86A
DRIVE ASSEMBLY - INFLIGHT MOVABLE DOOR	52-32-00-02	75
DRIVE PULLEY ASSEMBLY - ALTERNATOR	24-36-01-01	78
DRIVE SHAFT	21-51-01-02	89
DRIVE SHAFT	21-51-01-02	89A
DRIVE SHAFT	21-51-01-02A	87
DRIVE SHAFT	21-51-01-02A	87A
DUCT	22-10-07-01	24
DUCT	34-51-08-01	18
DUCT	34-51-16-01	11
DUCT - BULK ITEM	21-20-00-01	19
DUCT - BULK ITEM	21-21-00-01	10
DUCT - BULK ITEM	34-51-15-01	12
DUCT - BULK ITEM 68.00 IN LG HEATER VALVE TO OUTLET	21-22-01-01	32
DUCT - BULK ITEM 68.00 IN LG WYE TO TUBE ASSEMBLY	21-22-00-01	90
DUCT - BULK ITEM 9.00 IN LG HEATER VALVE TO DEFROSTER VALVE	21-22-00-01	86
DUCT - BULK ITEM 9.00 IN LG HEATER VALVE TO DEFROSTER VALVE	21-22-01-01	30
DUCT - BULK ITEM 9.00 IN LG HEATER VALVE TO DEFROSTER VALVE	21-22-02-01	84
DUCT - LEFT BULK ITEM 100.00 IN LG HEATER VALVE TO WYE ASSEMBLY	21-22-02-01	87
DUCT - LEFT BULK ITEM 22.00 IN LG TUBE ASSEMBLY TO WYE ASSEMBLY	21-22-00-01	91
DUCT - LEFT BULK ITEM 90.00 IN LG HEATER VALVE TO WYE ASSEMBLY	21-22-00-01	89
DUCT - RIGHT BULK ITEM 110.00 IN LG HEATER VALVE TO WYE ASSEMBLY	21-22-02-01	86
DUCT - RIGHT BULK ITEM 30.00 IN LG TUBE ASSEMBLY TO WYE ASSEMBLY	21-22-00-01	92
DUCT - RIGHT BULK ITEM 98.00 IN LG HEATER VALVE TO WYE ASSEMBLY	21-22-00-01	88
DUCT - USED WITH 1ST KING NAV/COM BULK ITEM	21-20-01-01	25
DUCT - USED WITH 2ND KING NAV/COM BULK ITEM	21-20-01-01	26
DUCT - USED WITH KING RADAR BULK ITEM	21-20-01-01	24
DUCT - USED WITH SPERRY TRANSPONDER BULK ITEM	21-20-00-01	18
DUCT .625 ID BULK ITEM	21-20-01-02	7
DUCT ASSEMBLY - SECONDARY EXHAUST EJECTOR	78-10-00-02	1
DUCT ASSEMBLY - SECONDARY EXHAUST EJECTOR	78-10-00-03	1
EDGE GUARD	25-52-00-02A	158
EDGE GUARD	25-52-00-02A	189
EDGE GUARD	25-52-00-02A	308
EDGE GUARD	25-52-00-02A	383
EDGE GUARD - CENTER	25-52-00-01	170
EDGE GUARD - CENTER FORWARD	25-52-00-02	186
EDGE GUARD - FORWARD AND AFT	25-52-00-01	169
EDGE GUARD - FORWARD, CENTER & AFT	25-52-00-02	185
EGPWS INSTALLATION	34-62-00	
EJECTOR	37-10-00-01	17
ELBOW	28-21-00-01	241
ELBOW	28-21-00-02	245
ELBOW	34-10-02-01	21
ELBOW	34-10-02-02	6
ELBOW	34-11-00-01	236

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
ELBOW	34-11-00-02	90
ELBOW	34-11-00-03	90
ELBOW	34-11-00-04	90
ELBOW	34-11-01-01	90
ELBOW	35-10-01-01	12
ELBOW	35-10-01-01	61
ELBOW	35-10-01-02	65
ELBOW	35-10-01-03	46B
ELBOW	35-13-00-01	10B
ELBOW	71-70-00-02	15
ELBOW	71-70-00-02	99
ELBOW	79-20-00-01	77
ELBOW	79-20-00-02	150
ELBOW	79-20-00-03	28
ELECTRIC POWER BOX INSTALLATION	24-50-02	
ELECTRICAL ASSEMBLY - PRESSURE SWITCH	79-30-00-03	26
ELECTRICAL MONITORING	24-37-00	
ELECTRICAL TORQUE INDICATING SYSTEM	77-12-00	
ELEVATOR ACTUATOR ASSEMBLY - TRIM TAB	27-30-02-03	1
ELEVATOR CONTROL SYSTEM	27-30-01	
ELEVATOR ELECTRIC TRIM ACTUATOR INSTALLATION	27-30-03	
ELEVATOR INSTALLATION	55-20-00	
ELEVATOR TRIM CONTROL SYSTEM	27-30-02	
ELEVATOR TRIM TAB ACTUATOR ASSEMBLY	27-30-02	
ELEVATOR TRIM WHEEL INSTALLATION	27-30-02	
ELT - ARTEX C406-2	25-60-00-06	1
EMBLEM - EXTERIOR CESSNA PASSENGER VERSION	11-N-22-01	2
EMBLEM - EXTERIOR CESSNA SUPERCARGOMASTER	11-N-22-01	3
EMERGENCY LOCATOR ANTENNA	25-60-00-02	11
EMERGENCY LOCATOR TRANSMITTER	25-60-00-02	1
EMERGENCY LOCATOR TRANSMITTER - ME-406	25-60-00	
EMERGENCY LOCATOR TRANSMITTER INSTALLATION	25-60-00	
EMERGENCY LOCATOR TRANSMITTER INSTALLATION - FRENCH CERTIFIED AIRPLANES	25-60-00	
EMERGENCY LOCATOR TRANSMITTER INSTALLATION - POINTER 3000	25-60-00	
EMERGENCY LOCATOR TRANSMITTER INSTALLATION - POINTER 3000-11	25-60-00	
EMERGENCY LOCATOR TRANSMITTER INSTALLATION - SOCATA ELT-90 FRENCH CERTIFIED	25-60-00	
AIRPLANES		
EMERGENCY LOCATOR TRANSMITTER INSTALLATION-ARTEX 110-406	25-60-00	
ENCODING ALTIMETER	34-10-00-01	75A
ENCODING ALTIMETER - ALERTER IN-H	34-10-00-01	16
ENCODING ALTIMETER - ALERTER MILL	34-10-00-01	17
ENCODING ALTIMETER - IN-HG	34-10-00-01	14
ENCODING ALTIMETER - INDICATOR	34-10-00-02	20A
ENCODING ALTIMETER - MILLIBARS	34-10-00-01	15
ENCODING ALTIMETER IN - HG (TYPE EA-401A)	34-10-00-05	1
ENCODING ALTIMETER IN - HG (TYPE EA-801A)	34-10-00-06	1
ENCODING ALTIMETER MILLIBAR (TYPE EA-801A)	34-10-00-06	2
ENCODING ALTIMETER MILLIBAR - (TYPE EA-401A)	34-10-00-05	2
END PLATE	71-70-00-02	3
END PLATE	71-70-00-02	4
ENGINE ASSEMBLY - TURBO PROPELLER 600SHP	71-00-01-01	1
ENGINE ASSEMBLY - TURBO PROPELLER 675SHP	71-00-01-01	2
ENGINE ASSEMBLY - TURBO PROPELLER 867SHP	71-00-01-01	3
ENGINE CONTROL QUADRANT INSTALLATION	76-10-01	
ENGINE CONTROLS	76-10-01	
ENGINE EXHAUST DUCT INSTALLATION - 208 -0001 & ON AND 208B -B0001 THRU -B4999 WITH	78-10-00	
CARGO POD AND 208B -B5000 & ON WITH OR WITHOUT CARGO POD		
ENGINE EXHAUST DUCT INSTALLATION - CARGO POD FIELD INSTALLATION	78-10-00	
ENGINE EXHAUST DUCT INSTALLATION WITH CARGO POD	78-10-00	
ENGINE EXHAUST DUCT INSTALLATION WITHOUT CARGO POD	78-10-00	
ENGINE INSTALLATION	71-00-01	
ENGINE MOUNT ASSEMBLY	71-20-00-01	1
ENGINE MOUNT ASSEMBLY	71-20-00-01	1A
ENGINE MOUNT ASSEMBLY	71-20-00-01	1B
ENGINE MOUNT WELD ASSEMBLY	71-20-00-01	1C
ENGINE MOUNT WELD ASSEMBLY	71-20-00-02	1
ENGINE MOUNTING	71-20-00	
ENGINE OIL COOLING SYSTEM - LARGE	79-20-00	
ENGINE OIL COOLING SYSTEM - LARGE 867HP	79-20-00	
ENGINE OIL COOLING SYSTEM - SMALL	79-20-00	
EPA CAN INSTALLATION	73-10-00	

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
ESCUTCHEON - LEFT BLANK.....	27-10-01-03	12
ESCUTCHEON - LEFT GRIP COPILOT.....	27-10-01-05	16
ESCUTCHEON - RIGHT BLANK.....	27-10-01-03	15
ESCUTCHEON - RIGHT GRIP PILOT.....	27-10-01-05	15
ESCUTCHEON - RIGHT MIC.....	27-10-01-03	150
ESCUTCHEON - RIGHT XPDR IDENT.....	27-10-01-03	14
EVAPORATOR ASSEMBLIES - WING MOUNTED.....	21-51-03	
EVAPORATOR ASSEMBLY - AFT.....	21-51-03	
EVAPORATOR INSTALLATION - AFT MOUNTED.....	21-51-03	
EVAPORATOR INSTALLATION - WING MOUNTED.....	21-51-03	
EXHAUST DIFFUSER.....	78-20-00	
EXHAUST DUCT ASSEMBLY - PRIMARY.....	78-10-00-01	1C
EXHAUST PANEL.....	79-20-00-03	114
EXHAUST PANEL ASSEMBLY.....	79-20-00-03	112
EXIT SIGN STRUCTURE INSTALLATION.....	25-61-00	
EXTENSION - FAIRING USED WITH LONG CHORD RUDDER.....	53-50-01-01	17
EXTENSION - FAIRING USED WITH LONG CHORD RUDDER.....	53-50-01-01	17A
EXTERNAL POWER SYSTEM COMPONENTS.....	24-40-00	
EXTINGUISHER.....	26-20-01-02	1
EXTINGUISHER - FIRE.....	26-20-01-01	1
EXTINGUISHER - FIRE.....	26-20-01-01	6
EXTINGUISHER - FIRE.....	26-20-01-02	1D
EXTINGUISHER - FIRE.....	26-20-01-02	1C
FAIRING ASSEMBLY.....	25-52-00-02A	1
FAIRING ASSEMBLY.....	53-30-01-03	20
FAIRING ASSEMBLY - AFT.....	53-30-01-03	15
FAIRING ASSEMBLY - FORWARD.....	53-30-01-03	1
FAIRING ASSEMBLY - NOSE GEAR TO POD.....	25-52-00-01	1B
FAIRING ASSEMBLY - NOSE GEAR TO POD.....	25-52-00-02	1B
FAIRING BOND ASSEMBLY.....	25-52-00-02A	451
FAIRLEAD HALF.....	27-10-02-02	28A
FAST ENGINE TREND MONITORING (ETM) COMPONENT INSTALLATION.....	77-30-00	
FAST ETM PROCESSOR.....	77-30-00-02	1
FEED THRU ASSEMBLY.....	34-50-00-04	6
FEEDBACK COLLAR ASSEMBLY.....	61-11-00-01	23
FENCE - AILERON LEFT .040 2024 T42.....	57-60-00-01	77
FENCE - AILERON RIGHT .040 2024 T42.....	57-60-00-01	78
FILLET ASSEMBLY.....	30-60-10-01	12
FILLET ASSEMBLY.....	61-11-00-01	11
FILTER.....	34-24-00-03	20B
FILTER - BETA.....	33-10-00-02	90
FILTER - FOAM.....	34-23-00-02	27
FILTER - FOAM.....	34-23-00-02	27A
FILTER - FOAM VACUUM RELIEF VALVE.....	34-23-00-01	29
FILTER - FOAM VACUUM RELIEF VALVE.....	34-23-00-01	29A
FILTER - FOAM VACUUM RELIEF VALVE.....	34-24-00-01	28
FILTER - FOAM VACUUM RELIEF VALVE.....	34-24-00-01	28A
FILTER - FOAM VACUUM RELIEF VALVE.....	34-24-00-02	31
FILTER - FOAM VACUUM RELIEF VALVE.....	34-24-00-02	31A
FILTER - VACUUM.....	34-24-00-03	16A
FILTER - VACUUM AIR.....	34-23-00-01	25
FILTER - VACUUM AIR.....	34-23-00-01	25A
FILTER - VACUUM AIR.....	34-23-00-02	23
FILTER - VACUUM AIR.....	34-23-00-02	23A
FILTER - VACUUM AIR.....	34-24-00-01	24
FILTER - VACUUM AIR.....	34-24-00-02	27
FILTER - VACUUM AIR.....	34-24-00-03	16
FILTER - VACUUM AIR VACUUM AIR.....	34-24-00-01	24A
FILTER - VACUUM AIR VACUUM AIR.....	34-24-00-02	27A
FILTER - VALVE VACUUM RELIEF.....	34-24-00-03	20A
FILTER ASSEMBLY - VACUUM AIR.....	34-23-00-01	20
FILTER ELEMENT ASSEMBLY - SEPARATOR.....	77-12-00-01	93
FIRE DETECTION CABLE.....	26-10-00-02	1
FIRE DETECTION SYSTEM.....	26-10-00	
FIRE EXTINGUISHER.....	26-20-01-02	1A
FIRE EXTINGUISHER.....	26-20-01-02	1B
FIRE EXTINGUISHER.....	26-20-01-03	2
FIRE EXTINGUISHER ASSEMBLY - CABIN, 2.5.....	26-20-01-03	1
FIRE EXTINGUISHER INSTALLATION.....	26-20-01	
FIRESEAL - AFT LEFT.....	71-60-01-02	161
FIRESEAL - AFT LEFT.....	71-60-01-02	161A

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
FIRESEAL - AFT RIGHT	71-60-01-02	169
FIRESEAL - ENGINE MOUNT	71-60-01-02	76A
FIRESEAL - ENGINE MOUNT	71-60-01-02	91A
FIRESEAL - ENGINE MOUNT	71-60-01-02	76
FIRESEAL - ENGINE MOUNT	71-60-01-02	91
FIRESEAL - FORWARD LEFT	71-60-01-02	151A
FIRESEAL - FORWARD LEFT	71-60-01-02	151B
FIRESEAL - FORWARD LEFT	71-60-01-02	151
FIRESEAL - FOWARD RIGHT	71-60-01-02	158
FIRESEAL ASSEMBLY - AFT LEFT	71-60-01-02	160
FIRESEAL ASSEMBLY - AFT RIGHT	71-60-01-02	168
FIRESEAL ASSEMBLY - ENGINE MOUNT	71-60-01-02	75A
FIRESEAL ASSEMBLY - ENGINE MOUNT	71-60-01-02	90
FIRESEAL ASSEMBLY - ENGINE MOUNT	71-60-01-02	90A
FIRESEAL ASSEMBLY - ENGINE MOUNT	71-60-01-02	75
FIRESEAL ASSEMBLY - FORWARD LEFT	71-60-01-02	150A
FIRESEAL ASSEMBLY - FORWARD LEFT	71-60-01-02	150B
FIRESEAL ASSEMBLY - FORWARD LEFT	71-60-01-02	150
FIRESEAL ASSEMBLY - FOWARD RIGHT	71-60-01-02	157
FIREWALL INSTALLATION	53-10-00	
FIREWALL SHUT OFF VALVE ASSEMBLY - CABIN HEAT	21-41-02-02	15
FIREWALL SHUT OFF VALVE ASSEMBLY - CABIN RETURN	21-41-02-02	2
FIREWALL SHUTOFF VALVE ASSEMBLIES	21-41-02	
FIS RECEIVER AND ANTENNA INSTALLATION	34-58-00	
FITTING	25-10-05-01	94
FITTING	25-10-05-02	78
FITTING	25-21-00-02B	79
FITTING	25-22-00-02	8
FITTING	71-70-00-02	5
FITTING - AFT LEFT STABILIZER ATTACH	53-14-00-01	263
FITTING - AFT LEFT STABILIZER ATTACH	53-14-00-02	165
FITTING - AFT RIGHT STABILIZER ATTACH	53-14-00-01	264
FITTING - AFT RIGHT STABILIZER ATTACH	53-14-00-02	166
FITTING - BULKHEAD	73-10-00-02	10
FITTING - CARGO TIE DOWN USE WITH 5000 LB BELT	25-51-03-01	10
FITTING - CARGO TIE DOWN USE WITH 5000 LB BELT	25-51-03-01	10A
FITTING - FORWARD LEFT STABILIZER ATTACH	53-14-00-01	261
FITTING - FORWARD LEFT STABILIZER ATTACH	53-14-00-02	163
FITTING - FORWARD RIGHT STABILIZER ATTACH	53-14-00-01	262
FITTING - FORWARD RIGHT STABILIZER ATTACH	53-14-00-02	164
FITTING - LEFT AND RIGHT	25-21-00-02A	253
FITTING - LEFT STABILIZER ATTACH	53-14-00-01	252
FITTING - LEFT STABILIZER ATTACH	53-14-00-02	153
FITTING - RIGHT STABILIZER ATTACH	53-14-00-01	253
FITTING - RIGHT STABILIZER ATTACH	53-14-00-02	154
FITTING - SEAT TRACK 3 FORWARD & 3 AFT	25-21-00-03	150
FITTING ASSEMBLY	25-22-00-02	7
FITTING ASSEMBLY	26-20-01-03	7
FITTING ASSEMBLY - SEAT TRACK	25-21-00-02	26
FITTING ASSEMBLY - SEAT TRACK 2 FORWARD & 2 AFT	25-21-00-01	19
FLANGE SEAL ASSEMBLY - BLEED AIR DUCT	36-10-00-02	12
FLAP ACTUATOR SWITCH ASSEMBLY	27-50-01	
FLAP ASSEMBLY - LEFT	57-50-00-01	3
FLAP ASSEMBLY - RIGHT	57-50-00-01	10
FLAP ASSEMBLY - SKIN	57-50-00	
FLAP ASSEMBLY - STRUCTURE	57-50-00	
FLAP BELLCRANK ASSEMBLY - RIGHT INBOARD	27-50-01-04	3
FLAP BELLCRANK ASSEMBLY - RIGHT INBOARD	27-50-01-04	3A
FLAP CONTROL SYSTEM	27-50-01	
FLAP CONTROL SYSTEM - WING	27-50-01	
FLAP INDICATOR INSTALLATION	27-50-01	
FLAP INSTALLATION	57-50-00	
FLAP TRACK - INBOARD .375 2024 T42	57-10-02-01	100
FLAP TRACK - OUTBOARD .375 2024 T3	57-10-02-04	82
FLAP TRACK - OUTBOARD .375 2024 T3	57-10-02-04	83
FLASHING BEACON LIGHT INSTALLATION	33-43-00	
FLIGHT DATA RECORDER	31-30-00	
FLIGHT HOUR RECORDER INSTALLATION	31-00-00	
FLOORBOARD ACCESS PANELS	53-21-00	
FLOORBOARD ACCESS PANELS - NOT APPLICABLE TO PASSENGER VERSION	53-21-00	
FLOORBOARD ACCESS PANELS - PASSENGER VERSION	53-21-00	

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
FLOW CONTROL VALVE INSTALLATION	21-41-01	
FLUID TANK & EQUIPMENT PACK - 5 FILTER ASSEMBLIES VERSION REFERENCE SUPPLIER PART NUMBER 13120-02	30-10-02-08	1
FLUID TANK & EQUIPMENT PACK - SINGLE FILTER ASSEMBLY VERSION REFERENCE SUPPLIER PART NUMBER 13120-19	30-10-02-08	1A
FLUID TANK & EQUIPMENT PALLET	30-10-02-08	1B
FLUX DETECTOR	34-20-00-01	2
FLUX DETECTOR INSTALLATION	34-20-00	
FM ANTENNA INSTALLATION	23-10-01	
FM TRANSCEIVER INSTALLATION	23-10-01	
FOLDING UTILITY STYLE SEAT INSTALLATION	25-21-02	
FOOT REST ASSEMBLY - PILOT	53-20-00-01	48B
FOOT REST ASSEMBLY - PILOT	53-20-00-01	48C
FOOT REST ASSEMBLY - PILOT	53-20-00-01	48D
FOOT REST ASSEMBLY - PILOT	53-20-00-01	48E
FOOT REST ASSEMBLY - PILOT	53-20-00-02	44B
FOOT REST ASSEMBLY - PILOT	53-20-00-02	44C
FOOT REST ASSEMBLY - PILOT	53-20-00-02	44D
FOOT REST ASSEMBLY - PILOT	53-20-00-02	44E
FOOT REST ASSEMBLY - PILOT	53-20-00-03	42B
FOOT REST ASSEMBLY - PILOT	53-20-00-03	42C
FOOT REST ASSEMBLY - PILOT	53-20-00-03	42D
FOOT REST ASSEMBLY - PILOT	53-20-00-03	42E
FORWARD CABIN TOP COMPONENTS	53-10-02	
FORWARD CARGO POD ASSEMBLY	25-52-00-02A	150
FORWARD CARRY THRU STRUCTURE	53-13-03	
FORWARD CARRY-THRU STRUCTURE	53-13-03	
FORWARD FUSELAGE SKINS AND COMPONENTS	53-30-00	
FORWARD FUSELAGE STRUCTURE	53-10-01	
FORWARD PANEL	79-20-00-03	107
FORWARD PANEL ASSEMBLY	79-20-00-03	106
FORWARD VENTILATION SYSTEM	21-21-00	
FRAME ASSEMBLY	25-10-00-01	81
FRAME ASSEMBLY	25-10-00-02	80
FRAME ASSEMBLY	25-10-00-02A	80
FRENCH EXTERIOR PLACARDS AND MARKINGS - EMPENNAGE AND REAR BAGGAGE	11-F-23	
FRENCH INTERIOR PLACARDS AND MARKINGS - CABIN	11-F-32	
FRONT SPAR ASSEMBLY - STABILIZER	55-10-00-02	12
FRONT SPAR ASSEMBLY - STABILIZER FORWARD	55-10-00-01	12
FRONT WING SPAR ASSEMBLIES - 208	57-10-03	
FRONT WING SPAR ASSEMBLIES - 208 & 208B	57-10-03	
FUEL DISTRIBUTION SYSTEM	28-21-00	
FUEL ECOLOGY TANK SYSTEM	28-21-00	
FUEL FILLER CAP INSTALLATION	28-10-01	
FUEL FILTER - ASSEMBLY	28-21-00-01	150
FUEL FILTER - ASSEMBLY	28-21-00-02	150
FUEL FLOW INDICATOR INSTALLATION	73-30-00	
FUEL FLOW TRANSMITTER - UN032	73-32-00-01	6A
FUEL INDICATING SYSTEM	28-41-00	
FUEL PUMP RELAY INSTALLATION	24-51-00	
FUEL QTY INDICATOR - LEFT & RIGHT	28-41-00-01	29
FUEL QTY INDICATOR - LEFT & RIGHT	28-41-00-01	29A
FUEL RESERVOIR COMPONENTS	28-22-00	
FUEL SELECTOR CONTROLS	28-23-00	
FUEL SELECTORS OFF WARNING SYSTEM	28-42-01	
FUEL SENSOR	28-41-00	
FUEL SHUTOFF VALVE - FIREWALL	28-23-01-01	27
FUEL SHUTOFF VALVE - FIREWALL	28-23-01-01	27A
FUEL SHUTOFF VALVES	28-23-01	
FUEL TOTALIZER INDICATING SYSTEM	73-32-00	
FUEL TRANSMITTER - MID-INBOARD	28-41-00-01	4
FUEL TRANSMITTER - MID-OUTBOARD	28-41-00-01	6
FUEL VENTILATION SYSTEM	28-10-03	
FUSE	34-52-01-01	14
G1000 ADF INSTALLATION	34-50-01	
G1000 INSTRUMENT PANEL	53-22-01	
G1000 NXI RACK ASSEMBLY	53-22-02	
G1000 OIL INDICATING	79-30-00	
G1000 RACK ASSEMBLY	53-22-02	
G1000 SYSTEM RACK	53-22-02-01	14
G1000 SYSTEM RACK	53-22-02-02	13

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
GA56 GPS ANTENNA STUD - GARMIN LEFT GNS 430	34-55-07-02	1
GA56 GPS ANTENNA STUD - GARMIN RIGHT GNS 530	34-55-07-02	5
GAGE - OUTSIDE AIR TEMPERATURE	34-12-00-01	1
GAGE - SUCTION	34-10-00-02	30
GAGE - SUCTION	34-10-00-03	27
GARMIN DISPLAY COOLING FAN	21-50-00	
GARMIN DISPLAY UNIT (GDU) INSTALLATION	34-60-00	
GARMIN GPS ANTENNA INSTALLATION	34-55-07	
GARMIN GTX 330 INSTALLATION WITH OR WITHOUT POD	34-51-16	
GARMIN GTX-327 INSTALLATION	34-51-15	
GARMIN GTX-33 TRANSPONDER INSTALLATION WITH OR WITHOUT POD	34-51-17	
GARMIN INTERGRATED AVIONICS UNIT INSTALLATION - GIA 63	34-56-04	
GAS GENERATOR RPM INDICATOR SYSTEM	77-14-00	
GASKET	21-51-01-01	158
GASKET	21-51-01-01	158A
GASKET	21-51-01-01A	79
GASKET	21-51-01-02	81
GASKET	21-51-01-02A	81
GASKET	24-36-01-01	22
GASKET	24-36-01-01	88
GASKET	24-36-01-02	25
GASKET	28-41-00-01	11
GASKET	28-41-00-02	4
GASKET	28-41-00-02	9
GASKET	33-41-00-02	6
GASKET	77-13-00-01	8
GASKET	77-14-00-01	8
GASKET	77-15-00-01	4
GASKET	77-15-00-01	8
GASKET - SPARES	80-10-01-02	3D
GASKET - WING INSPECTION LIGHT	33-44-00-03	3
GAUGE - SUCTION	31-00-00-01	5
GDC-74A AIR DATA COMPUTER INSTALLATION	34-14-00	
GDL 69A WEATHER DATA LINK INSTALLATION	34-45-00	
GEA-71 ENGINE INTERFACE - REFERENCE SUPPLIER PART NUMBER 011-00831-00 (MOD 1, 2, AND 3)	77-40-00-01	1A
GEA-71 ENGINE INTERFACE UNIT INSTALLATION	77-40-00	
GENERATOR - STARTER	80-10-01-01	10D
GENERATOR - STARTER	80-10-01-01	8A
GENERATOR - STARTER - STANDARD	80-10-01-03	1
GENERATOR - STARTER KIT	80-10-01-01	10B
GENERATOR - STARTER KIT	80-10-01-01	10A
GENERATOR CONTROL UNIT ASSEMBLY	24-31-00	
GLARESHIELD ASSEMBLY	31-00-00-01	34
GLARESHIELD ASSEMBLY	31-00-00-02	78B
GLARESHIELD ASSEMBLY	31-00-00-02	78C
GLARESHIELD ASSEMBLY	31-00-00-02	78D
GLARESHIELD ASSEMBLY	31-00-00-03	13A
GLARESHIELD ASSEMBLY	31-00-00-03	13B
GLARESHIELD ASSEMBLY - SPARES	31-00-00-01	33A
GLARESHIELD ASSEMBLY - SPARES	31-00-00-01	34A
GLARESHIELD ASSEMBLY - SPARES	31-00-00-02	78A
GLOVE BOX - G1000	25-10-04	
GLOVE BOX INSTALLATION	25-10-04	
GMC 710 AFCS MODE CONTROLLER	22-10-00	
GMU 44/44B MAGNETOMETER INSTALLATION	34-22-00	
GMU44B MAGNETOMETER - LEFT AND RIGHT	34-22-00-01	1C
GONIOMETER - (TYPE RA-446A)	34-52-00-01	6
GOVERNOR - PROPELLER OVERSPEED	61-20-01-01	1A
GOVERNOR - PROPELLER OVERSPEED SPARES AND	61-20-01-01	2
GPS ANTENNA INSTALLATION	34-55-07	
GPS KLN-89B INSTALLATION	34-55-06	
GPS KLN-94 INSTALLATION	34-55-08	
GPS TNL-2000T INSTALLATION	34-55-04	
GPS TNL-2000T OR TNL-3000T ANTENNA INSTALLATION	34-55-05	
GPS/LORAN TNL-3000T INSTALLATION	34-55-02	
GPS1/XM ANTENNA - LEFT	34-55-07-03	1
GPS2 ANTENNA - RIGHT	34-55-07-03	2
GRC10 XM WIRELESS REMOTE	44-20-00	
GREASE FITTING	32-20-00-01	238
GRILL ASSEMBLY - AIR CONDITIONER	21-51-03-01	1

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
GRILL ASSEMBLY - AIR CONDITIONER.....	21-51-03-01A	1
GRILL ASSEMBLY - AIR CONDITIONER.....	21-51-03-01B	12
GRILL ASSEMBLY - AIR CONDITIONER.....	21-51-03-02	1
GRILL ASSEMBLY - AIR CONDITIONER.....	21-51-03-02A	1
GRILL ASSEMBLY - AIR CONDITIONER.....	21-51-03-02B	21
GROMMET.....	21-51-03-01A	33
GROMMET.....	21-51-03-01B	38
GROMMET.....	21-51-03-02	38
GROMMET.....	24-36-00-01	27
GROMMET.....	24-50-01-01	13
GROMMET.....	24-50-01-01A	49
GROMMET.....	27-70-00-01	176
GROMMET.....	27-70-00-02	40
GROMMET.....	28-21-00-01	228
GROMMET.....	28-21-00-01	314
GROMMET.....	28-21-00-02	228
GROMMET.....	28-21-00-02	313
GROMMET.....	57-11-01-01	26
GROMMET.....	71-10-00-01	3A
GROMMET.....	71-10-00-02	15
GROMMET.....	71-10-00-02	163
GROMMET.....	71-10-00-02	166
GROMMET.....	71-10-00-02	169
GROMMET.....	71-10-00-02	172
GROMMET.....	71-10-00-02	18
GROMMET.....	71-10-00-02	21
GROMMET.....	71-10-00-03	23
GROMMET.....	71-10-00-03	8
GROMMET.....	71-10-00-03	85
GROMMET.....	71-10-00-04	11
GROMMET.....	71-10-00-04	14
GROMMET.....	71-10-00-04	17
GROMMET.....	71-10-00-04	82
GROMMET.....	71-10-00-04	85
GROMMET.....	71-10-00-04	88
GROMMET.....	71-10-01-01	17
GROMMET.....	71-10-01-01	20
GROMMET.....	71-10-01-01	25
GROMMET.....	71-41-00-01	15
GROMMET.....	71-60-01-01	175
GROMMET.....	71-60-01-02	16
GROMMET - COMBUSTION DRAIN LINE.....	71-70-00-01	88
GROMMET LEFT.....	71-10-01-01	41
GROUND CONNECTOR.....	24-20-01-01	2
GROUND STRAP - ALTERNATOR.....	24-36-01-01	15
GROUND STRAP - ENGINE.....	71-00-01-01	88
GROUND STRAP - ENGINE.....	71-00-01-01	92
GROUND STRAP - EXTERNAL POWER.....	24-40-00-01	19
GROUND STUD ASSEMBLY - STORMSCOPE.....	34-40-00-01	6
GROUNDING STRAP - CENTER.....	25-52-00-01	160A
GROUNDING STRAP - CENTER.....	25-52-00-02	176A
GROUNDING STRAP - CENTER.....	25-52-00-02A	233
GROUNDING STRAP - FORWARD.....	25-52-00-01	159A
GROUNDING STRAP - FORWARD.....	25-52-00-02	175A
GROUNDING STRAP - FORWARD.....	25-52-00-02A	232
GRT10 XM RADIO TRANSCEIVER INSTALLATION.....	44-20-00	
GSA 80 ROLL SERVO.....	22-10-03-01A	1
GSA 80 YAW SERVO.....	22-10-05-01A	1
GSA 81 PITCH SERVO.....	22-10-04-01A	1
GSA 81 TRIM SERVO.....	27-30-03-02A	11
GSA-80 TORQUE SERVO.....	22-10-03-01A	5
GSA-80 TORQUE SERVO.....	22-10-05-01A	5
GSA-81 TORQUE SERVO.....	22-10-04-01A	5
GSM 86 SERVO MOUNT.....	22-10-03-01A	6A
GSM 86 SERVO MOUNT.....	22-10-04-01A	6A
GSM ANTENNA INSTALLATION.....	23-15-00	
GSM-85A SERVO MOUNT.....	22-10-03-01A	6
GSM-85A SERVO MOUNT.....	22-10-04-01A	6
GSM-85A SERVO MOUNT.....	22-10-05-01A	6
GSM85 SERVO MOUNT - REFERENCE SUPPLIER PART NUMBER 011-00894-14 (MOD 1 ONLY).....	27-30-03-02A	12
GSR 56 BACK PLATE.....	23-30-00-01	5

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
GSR 56 INSTALLATION	23-30-00	
GSR 56 REMOTE RACK	23-30-00-01	2
GTS-825 TAS RECEIVER INSTALLATION	34-50-04	
GTS-825 VERTICAL MOUNT KIT	34-50-04-02	2
GTX-327 MOUNTING RACK	34-51-15-01	8A
GTX-327 SECOND TRANSPONDER	34-51-15-01	4
GTX-327 TRANSPONDER	34-51-15-01	3
GTX-330 BACKPLATE	34-51-16-01	10
GTX330 MODE-S SECOND TRANSPONDER - GARMIN	34-51-16-01	2
GTX330 MODE-S TRANSPONDER - GARMIN	34-51-16-01	1
GUARD	33-10-01-01	7
GUARD - AVIONICS BUS TIE	24-52-05-01	4
GUARD - AVIONICS BUS TIE SWITCH	24-52-04-01	3
GUARD - AVIONICS STANDBY POWER	24-52-05-01	2
GUARD - AVIONICS STANDBY POWER SWITCH	24-52-04-01	2
GUARD - CIRCUIT BREAKER	24-50-01-02	114
GUARD - SWITCH	27-50-01-01	187
GUIDE ASSEMBLY - NOSE GEAR STEERING	53-10-01-01	12
GUIDE ASSEMBLY - NOSE GEAR STEERING	53-10-01-01	12A
GUIDE ASSEMBLY - NOSE GEAR STEERING	53-10-01-01	12B
GUIDE ASSEMBLY - NOSE GEAR STEERING	53-10-01-02	12
GUIDE ASSEMBLY - NOSE GEAR STEERING	53-10-01-02	12A
GUIDE ASSEMBLY - NOSE GEAR STEERING	53-10-01-02	12B
GUTTER	25-52-00-02A	41
GUTTER - CARGO POD .040 6061 T6	53-30-01-01	173
GUTTER - CARGO POD FORWARD	53-30-00-03	27
GUTTER - CARGO POD FORWARD .040 6061 T6	53-30-00-01	82A
GUTTER - CARGO POD FORWARD .040 6061 T6	53-30-00-02	40
GWX 68/70/75 WEATHER RADAR INSTALLATION	34-45-00	
GYRO - DIRECTIONAL, AIR-DRIVEN	34-10-00-04	23A
GYRO - DIRECTIONAL, AIR-DRIVEN	34-10-00-04	23B
GYRO - DIRECTIONAL, AIR-DRIVEN	34-10-00-04	23C
GYRO - HORIZON	34-10-00-02	26A
GYRO - HORIZON	34-10-00-04	19B
GYRO FILTER ASSEMBLY	34-24-00-01	19
GYRO FILTER ASSEMBLY	34-24-00-03	11
GYRO FILTER ASSEMBLY - VACUUM AIR	34-23-00-02	18
GYRO FILTER ASSEMBLY - VACUUM AIR	34-24-00-02	22
GYRO INSTALLATION	34-24-00	
GYRO INSTALLATION - VACUUM	34-24-00	
GYROS INSTALLATION	34-23-00	
GYROS INSTALLATION - RIGHT FLIGHT PANEL	34-24-00	
HANDLE - CARGO DOOR OUTBOARD	52-31-00-03	31A
HANDLE - CARGO DOOR OUTBOARD	52-31-00-03	31
HANDLE - HINGE ALIGNMENT	71-60-01-01	106
HANDLE - INBOARD CREW DOOR	52-10-00-02	1A
HANDLE - INBOARD CREW DOOR	52-10-00-02	1
HANDLE - OUTBOARD CREW DOOR	52-10-00-02	104A
HANDLE - OUTBOARD CREW DOOR	52-10-00-02	104
HANDLE - OUTBOARD UPPER PASSENGER DOOR	52-10-01-02	89A
HANDLE - OUTBOARD UPPER PASSENGER DOOR	52-10-01-02	89
HANDLE - VENT WINDOW LEFT ONLY	56-30-00-01	25
HANDLE ASSEMBLY - CARGO DOOR INOARD	52-31-00-03	1
HANDLE ASSEMBLY - INBOARD UPPER PASSENGER DOOR	52-10-01-02	1
HANDLE ASSEMBLY - RUDDER LOCK	27-70-00-01	1
HANGER - HEADLINER	53-14-00-01	95
HANGER - HEADLINER .062DIA 1020	53-14-00-02	81
HANGER ASSEMBLY - CENTER	78-10-00-05	24
HANGER ASSEMBLY - FORWARD LOWER COWL	71-20-00-02	17
HANGER ASSEMBLY - INBOARD	78-10-00-05	6
HARNESS - SELF STOWING	53-22-02-01	26
HAT ASSEMBLY	31-30-00-02	5
HAT ASSEMBLY	31-30-00-02A	7
HEADLINER ASSEMBLY	25-23-00-01	2
HEADLINER ASSEMBLY	25-23-01-01	1
HEADLINER ASSEMBLY - COCKPIT	25-23-00-02	1
HEADLINER ASSEMBLY - COCKPIT	25-23-00-03	1C
HEADLINER ASSEMBLY - USED WITH CARGO TIE DOWN	25-23-00-01	3
HEADREST ASSEMBLY	25-10-00-02A	30
HEADREST ASSEMBLY	25-21-00-01	77
HEADREST ASSEMBLY	25-21-00-01	77A

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
HEADREST ASSEMBLY	25-21-00-02	98
HEADREST ASSEMBLY	25-21-00-03	77
HEADREST ASSEMBLY	25-21-00-03	77A
HEADREST ASSEMBLY - SEAT	25-10-00-01	152
HEADREST ASSEMBLY - SEAT	25-10-00-02	25
HEADSET - ASSEMBLY	23-50-03-01	3
HEADSET ASSEMBLY	23-50-03-01	4
HEAT SHIELD BOND ASSEMBLY	25-52-00-02	107
HEAT SHIELD BOND ASSEMBLY	25-52-00-02	107A
HEAT SHIELD BOND ASSEMBLY	25-52-00-02	107B
HEAT SHIELD BOND ASSEMBLY	25-52-00-02	107C
HEAT SHIELD BOND ASSEMBLY	25-52-00-02A	225
HEAT SHIELD BOND ASSEMBLY	25-52-00-02A	225A
HEAT SHIELD BOND ASSEMBLY	25-52-00-02A	225B
HEAT SHIELD BOND ASSEMBLY - FOR SPARES	25-52-00-02	107D
HEAT SHIELD BOND ASSEMBLY - FOR SPARES	25-52-00-02A	225C
HEAT SHIELD BOND ASSEMBLY - FOR SPARES	25-52-00-02A	225D
HEAT SINK - PRIMARY AND SECONDARY CONSOLE LIGHTING	33-20-00-04	4
HEATER AND DEFROSTER VALVE ASSEMBLIES	21-22-03	
HINGE - AFT FIRESEAL	71-60-01-02	162
HINGE - DOOR UPPER FORWARD	52-31-01-01	14A
HINGE ASSEMBLY	25-52-00-02A	167
HINGE ASSEMBLY	25-52-00-02A	198
HINGE ASSEMBLY	25-52-00-02A	316
HINGE ASSEMBLY	25-52-00-02A	391
HINGE ASSEMBLY - CARGO DOOR UPPER	52-31-00-02	15
HINGE ASSEMBLY - CARGO DOOR UPPER NOT USED WITH AIR DEFLECTOR	52-31-00-01	98
HINGE ASSEMBLY - COWL DOOR	71-10-00-01	11
HINGE ASSEMBLY - DOOR	25-52-00-01	181
HINGE ASSEMBLY - DOOR	25-52-00-02	229
HINGE ASSEMBLY - ELEVATOR	55-10-00-01	35
HINGE ASSEMBLY - ELEVATOR SS 0.00	55-10-00-02	77
HINGE ASSEMBLY - ELEVATOR SS 55.00	55-10-00-02	82
HINGE ASSEMBLY - HOISTING AFT REPLACES 2 WASHERS	57-10-00-01	39
HINGE ASSEMBLY - HOISTING FORWARD	57-10-00-01	30
HINGE ASSEMBLY - LOWER	55-30-00-02	18
HINGE ASSEMBLY - PASSENGER DOOR LOWER	52-10-02-01	159
HINGE ASSEMBLY - PASSENGER DOOR UPPER	52-10-01-01	18
HINGE ASSEMBLY - UPPER	55-30-00-02	14
HINGE BRACKET ASSEMBLY - SS 55.00	55-20-00-02	90A
HOLDER ASSEMBLY - APPROACH PLATE	27-10-01-02	85
HOLDER ASSEMBLY - APPROACH PLATE	27-10-01-03	31
HOLDER ASSEMBLY - APPROACH PLATE	27-10-01-03	31A
HORIZONTAL GYRO	34-10-00-01	154
HORIZONTAL GYRO	34-10-00-01	154A
HORIZONTAL GYRO	34-10-00-01	167
HORIZONTAL SITUATION INDICATOR (TYPE IG-832A)	34-57-02-01	4
HORIZONTAL SITUATION INDICATOR (TYPE IG-832A)	34-57-03-01	4
HORIZONTAL STABILIZER INSTALLATION	55-10-00	
HORN - ELEVATOR TRIM TAB	55-20-00-01	166
HORN - ELEVATOR TRIM TAB	55-20-00-02	166
HORN - WARNING AUTOPILOT DISCONNECT	34-56-02-01	85A
HORN - WARNING AUTOPILOT DISCONNECT	34-56-03-01	13
HORN - WARNING AUTOPILOT DISCONNECT	34-56-03-01	13A
HORN - WARNING AUTOPILOT DISCONNECT	34-56-02-01	85
HOSE	30-10-02-06	75A
HOSE	34-23-00-01	4A
HOSE	34-23-00-01	5A
HOSE	34-23-00-01	7A
HOSE	34-23-00-01	8A
HOSE	34-23-00-02	4A
HOSE	34-23-00-02	7A
HOSE	34-24-00-01	7A
HOSE	34-24-00-01	8A
HOSE	34-24-00-02	10A
HOSE	34-24-00-02	11A
HOSE	34-24-00-02	7A
HOSE	34-24-00-02	8A
HOSE	71-70-00-01	176
HOSE	71-70-00-02	103
HOSE	71-70-00-02	23

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
HOSE	71-70-00-02	77
HOSE	71-70-00-02	86
HOSE	71-70-00-02	93
HOSE	71-70-00-02	96
HOSE - 3.00 IN LG BULK ITEM	73-10-00-02	18
HOSE - BULK ITEM	30-10-02-08	92A
HOSE - BULK ITEM	34-24-00-01	4A
HOSE - BULK ITEM	34-24-00-01	5A
HOSE - BULK ITEM	34-24-00-03	8A
HOSE - BULK ITEM 24.00 IN LG COMPRESSOR DRIVE UNIT DRAIN	21-51-01-01	162
HOSE - SPECIFY LENGTH REQUIRED WHEN ORDERING	22-10-06-01	19
HOSE - SPECIFY LENGTH WHEN ORDERING	22-10-07-01	11
HOSE 10.50 IN LG BULK ITEM STARTER/GENERATOR OIL DRAIN - USED WITH AIR CONDITIONING GENERATOR TO TEE	71-70-00-01	152
HOSE 22.00 IN LG BULK ITEM STARTER/GENERATOR OIL DRAIN - USED WITH AIR CONDITIONING TEE TO EXHAUST DRAIN	71-70-00-01	151
HOSE 36.00 IN LG BULK ITEM STARTER/GENERATOR OIL DRAIN	71-70-00-01	150
HOSE ASSEMBLY	71-70-00-01	181A
HOSE ASSEMBLY	71-70-00-02	48
HOSE ASSEMBLY - BRAKE CYLINDER TO PARKING BRAKE VALVE	32-41-00-01	85C
HOSE ASSEMBLY - BRAKE CYLINDER TO PARKING BRAKE VALVE	32-41-00-01	86C
HOSE ASSEMBLY - TEE AT FIREWALL TO BRAKE CYLINDER	32-41-00-01	16A
HOSE ASSEMBLY - TORQUE PRESSURE GAGE TO FIREWALL	77-11-00-01	10B
HOSE ASSEMBLY - TORQUE VENT GAGE TO FIREWALL	77-11-00-01	7A
HOUSING - PIN	33-10-00-01	15
HOUSING - PIN	33-10-00-01	16
HOUSING - PIN OVERHEAD LIGHTS	33-20-00-01	31
HOUSING - SOCKET	33-10-00-01	13
HOUSING - SOCKET	33-10-00-01	14
HOUSING - SOCKET OVERHEAD LIGHTS	33-20-00-01	32
HSI GYRO - USED WITH 400B AUTOPILOT OR 400B IFCS	34-10-00-01	176
ICE DETECT ASSEMBLY	33-10-00-06	1
ICE DETECTOR LIGHT INSTALLATION	33-44-00	
ICE VANE SWITCH INSTALLATION	71-60-00	
IGNITION EXCITER INSTALLATION	74-10-00	
INDICATOR	76-10-01-02	86
INDICATOR - ADF	34-50-00-01	1
INDICATOR - AIRSPEED	34-10-00-02	1
INDICATOR - AIRSPEED	34-10-00-03	1
INDICATOR - AIRSPEED	34-10-00-04	1
INDICATOR - FLAP	27-50-01-02	42
INDICATOR - INTER-TURBINE TEMPERATURE	77-21-00-01	1
INDICATOR - INTER-TURBINE TEMPERATURE	77-21-00-01	1A
INDICATOR - OIL TEMP/OIL PRESSURE	79-30-00-01	1B
INDICATOR - OIL TEMP/OIL PRESSURE	79-30-00-01	1
INDICATOR - PERCENT RPM	77-14-00-01	1A
INDICATOR - PROP RPM	77-13-00-01	1A
INDICATOR - RMI	34-52-00-01	1
INDICATOR - TRUE AIRSPEED	34-10-00-01	1A
INDICATOR - TRUE AIRSPEED	34-10-00-02	6A
INDICATOR - TRUE AIRSPEED	34-10-00-03	5A
INDICATOR - VERTICAL SPEED	34-10-00-01	193
INDICATOR - VERTICAL SPEED	34-10-00-02	24
INDICATOR - VERTICAL SPEED	34-10-00-03	17
INDICATOR - VERTICAL SPEED	34-10-00-04	15
INDICATOR ASSEMBLY	32-20-00-02	104
INDICATOR ASSEMBLY - ELEVATOR TRIM	27-30-02-02	8
INDICATOR ASSEMBLY - NOSE GEAR SHOCK STRUT	32-20-00-03	121
INDICATOR ASSEMBLY - RUDDER TRIM	27-20-02-01	2
INDUCTION AIR PLENUM INSTALLATION	71-60-01	
INERTIAL SEPARATOR ACTUATOR INSTALLATION	71-60-00	
INERTIAL SEPARATOR INSTALLATION	71-60-00	
INLET PLUG ASSEMBLY	10-10-00-02	15A
INLET PLUG ASSEMBLY	10-10-00-02	1A
INLET PLUG ASSEMBLY - ENGINE LEFT	10-10-00-03	1
INLET PLUG ASSEMBLY - OIL	10-10-00-03	16
INSERT	21-51-01-02A	79
INSERT	34-11-01-02	17
INSPECTION PLATE - RIGHT .020 2024 T3	57-10-04-01	25
INSTRUMENT PANEL ASSEMBLY - G1000	53-22-01-06	1
INSTRUMENT PANEL ASSEMBLY - G1000	53-22-01-06	1A

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
INSTRUMENT PANEL ASSEMBLY - G1000	53-22-01-06	1B
INSTRUMENT PANEL ASSEMBLY - G1000	53-22-01-06	1C
INSTRUMENT PANEL ASSEMBLY - G1000	53-22-01-06	1D
INSTRUMENT PANEL ASSEMBLY - G1000	53-22-01-06	1E
INSTRUMENT PANEL EQUIPMENT - APPLICABLE TO CARGOMASTER NOT APPLICABLE TO CAT II AIRPLANES	31-00-00	
INSTRUMENT PANEL EQUIPMENT - CAT II AIRPLANES	31-00-00	
INSTRUMENT PANEL EQUIPMENT- NOT APPLICABLE TO CARGOMASTER	31-00-00	
INSTRUMENT PANEL INDICATORS - APPLICABLE TO CARGOMASTER NOT APPLICABLE TO CAT II AIRPLANES	34-10-00	
INSTRUMENT PANEL INDICATORS - APPLICABLE TO CAT II AIRPLANES	34-10-00	
INSTRUMENT PANEL INDICATORS NOT APPLICABLE TO CARGOMASTER	34-10-00	
INSTRUMENT PANEL LIGHTING INSTALLATION	33-10-00	
INSTRUMENT PANEL STRUCTURE	53-22-01	
INSTRUMENT PANEL STRUCTURE - CAT II AIRPLANES	53-22-01	
INSTRUMENT PANEL STRUCTURE USED WITH KFC150 AUTOPILOT	53-22-01	
INSTRUMENT PANEL STRUCTURE USED WITH KFC250 AUTOPILOT	53-22-01	
INSULATED - 208 PASSENGER VERSION	25-80-00	
INSULATION - 208 PASSENGER VERSION	25-80-00	
INSULATION - 208B PASSENGER VERSION	25-80-00	
INSULATION - CARGO VERSION	25-80-00	
INSULATOR	33-10-00-01	12A
INSULATOR	33-10-00-05	5
INTEGRATED AVIONICS UNIT - GIA63W (MOD ONLY)	34-56-04-01	1B
INTER-TURBINE TEMPERATURE INDICATOR	77-21-00	
INTERNAL SCREW	27-10-03-03	17
INVERTER	34-52-01-01	10
INVERTER INSTALLATION - 500VA	24-21-00	
INVERTER PLATE ASSEMBLY	24-21-00-01	5
JACK - AUXILIARY INPUT	23-50-03-02	15
JACK - MIC	23-50-03-02	13
JACK - MICROPHONE	23-50-02-01	5
JACK - MICROPHONE	23-50-03-01	6
JACK - MICROPHONE	23-50-03-01	6A
JACK INSTALLATION - HEADPHONE AND MIC	23-50-03	
JACK PAD - LEFT	32-10-00-01	99
JACK PAD - LEFT	32-10-00-02	90
JACK PAD - RIGHT	32-10-00-01	100
JACK PAD - RIGHT	32-10-00-02	90A
JACK POINT	32-20-00-01	239
JAMB - LEFT UPPER CREW DOOR .040 2024 T42	53-10-01-02	21
JAMB - RIGHT UPPER CREW DOOR .040 2024 T42	53-10-01-02	22
JAPANESE EXTERIOR PLACARDS AND MARKINGS - CABIN DOORS	11-JA-38	
JAPANESE EXTERIOR PLACARDS AND MARKINGS - COWLING	11-JA-24	
JAPANESE EXTERIOR PLACARDS AND MARKINGS - FUSELAGE	11-JA-22	
JAPANESE EXTERIOR PLACARDS AND MARKINGS - WINGS	11-JA-25	
JAPANESE INTERIOR PLACARDS AND MARKINGS - CABIN	11-JA-32	
JAPANESE INTERIOR PLACARDS AND MARKINGS - FLIGHT COMPARTMENT	11-JA-31	
JRS HARDWARE PACKAGE	24-51-00-02	2
JUMPER ASSEMBLY	25-52-00-02	98
JUMPER ASSEMBLY	25-52-00-02A	345
KAC-1052 TRAY ASSEMBLY	23-10-00-02	13
KCM-805 CONFIGURATION MODULE	34-50-04-01	5
KDR 510 VDL RECEIVER - (FIS)	34-58-00-01	1
KHF 1050 PANELS	23-10-00	
KICK GUARD COVER - C/B PANEL	24-50-01-01	75
KING ADF LOOP AND SENSE ANTENNA INSTALLATION - USED WITH KING KR87 ADF	34-50-01	
KING ADF RADIO INSTALLATION	34-50-01	
KING ADF RADIO INSTALLATION WITH KI-227 ADF INDICATOR	34-50-01	
KING ADF RADIO INSTALLATION WITH RMI	34-50-01	
KING AUDIO/INTERCOM WITH KR-21 MARKER BEACON INSTALLATION - (TYPES KMA24H-70 AUDIO PANEL AND KR-21 MARKER BEACON)	23-50-00	
KING AUDIO/INTERCOM/MARKER BEACON PANEL INSTALLATION - TYPE KMA24	23-50-00	
KING AUTOPILOT GYRO INSTALLATION AND SLAVING ACCESSORY - KAP 150 AND KFC 150	34-23-00	
KING DME INSTALLATION - TYPE KN63	34-51-12	
KING DME INSTALLATION - TYPE KN63	34-51-13	
KING HF RADIO ANTENNA INSTALLATION - TYPE KHF 950	34-50-00	
KING INSTALLATION KIT	27-10-01-03	94
KING INSTALLATION KIT	27-10-01-05	38
KING KHF950 RADIO INSTALLATION	23-10-00	
KING NAV SWITCH INSTALLATION	34-53-00	

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
KING NAV/COM RADIO INSTALLATION - TYPE KX165	34-50-01	
KING RADAR ALTIMETER INSTALLATION - TYPE KRA-10A	34-10-00	
KING RADAR ALTIMETER INSTALLATION - TYPE KRA-415 FED EX ONLY	34-10-00	
KING RMI INSTALLATION - TYPE KI229	34-52-01	
KING RNAV RADIO INSTALLATION - KNS81	34-50-03	
KING SECOND RMI INSTALLATION	34-52-02	
KING TRANSPONDER - KT73	34-51-08	
KING TRANSPONDER INSTALLATION - KT70	34-51-04	
KING TRANSPONDER INSTALLATION - KT70 SECOND TRANSPONDER	34-51-06	
KING TRANSPONDER INSTALLATION - KT71	34-51-05	
KING TRANSPONDER INSTALLATION - KT71 SECOND TRANSPONDER FED-X ONLY	34-51-07	
KING TRANSPONDER INSTALLATION - KT79	34-51-03	
KING VHF COMM RADIO INSTALLATION - KY196	34-54-00	
KLN-94 GPS RECEIVER	34-55-08-01	1C
KMD 850 INDICATOR INSTALLATION	34-61-00	
KMD-540 DATA CARD	34-61-00-01	5
KNOB	33-10-00-01A	6
KNOB - AILERON TRIM	27-10-03-02	8
KNOB - AILERON TRIM	27-10-03-02A	9
KNOB - EMERGENCY POWER LEVER	76-10-01-02	75
KNOB - OXYGEN CONTROL	35-14-00-01	76
KNOB ASSEMBLY	27-10-01-05	30
KNOB ASSEMBLY	28-22-01-01	7
KNOB ASSEMBLY	34-10-02-01	31
KNOB ASSEMBLY	34-10-02-02	31
KNOB ASSEMBLY - MAPLIGHT POTENTIOMETER	33-10-00-04	7
KNOB ASSEMBLY - OXYGEN CONTROL	35-14-00-01	75
KNOB ASSEMBLY - SELECTOR VALVE	34-11-00-01	155
KPA-1052 TRAY ASSEMBLY	23-10-00-02	9
KRX-1053 TRAY ASSEMBLY	23-10-00-02	5
KS-270C PITCH SERVO - VENDOR NO. 065-00178-2200 (MOD 8 & ON)	22-10-04-01	2A
KT73 MODE S TRANSPONDER - VENDOR 066-01164-0101 (MOD 1) & (SW01/04 ONLY)	34-51-08-01	1A
KTA-810 TAS PROCESSOR - 066-01152-0101 (SW MOD 01/02)	34-50-04-01	1
KTA-870 TAS RECEIVER INSTALLATION	34-50-04	
L-BAND ANTENNA	34-50-05-01	6
L-BAND ANTENNA - AFT LEFT AND RIGHT	34-50-05-01	75
L-BAND ANTENNA - AFT LEFT AND RIGHT	34-51-14-02	75
L-BAND ANTENNA - FORWARD LEFT AND RIGHT WITHOUT CARGO POD AND WITH TKS	34-51-17-01	80
L-BAND ANTENNA - TRANSPONDER LEFT AND RIGHT WITHOUT CARGO POD	34-51-17-01	84
L-BAND ANTENNA - TRANSPONDER WITH CARGO POD	34-51-17-01	75
L-BAND ANTENNA - TRANSPONDER, TOP 208 AND 208B	34-51-17-01	91
LAMP	33-10-00-02	14
LAMP	33-20-00-02	7
LAMP - ANNUNCIATOR	34-56-02-01	92
LAMP - ANNUNCIATOR	34-56-03-01	20
LAMP - FUEL TANK SELECTOR LIGHT	33-20-00-01	17
LAMP - IGNITION ON	33-10-00-02	15
LAMP - LOW VACCUUM WARNING	31-00-00-03	11
LAMP - OXYGEN CONTROL LIGHT	33-20-00-01	19
LAMP - POST LIGHT	33-20-00-01	23
LAMP - POSTLIGHT	33-20-00-01	101
LAMP - WING COURTESY LIGHT	33-45-00-01	18
LAMP ASSEMBLY	33-20-00-01	1B
LANDING AND TAXI LIGHT INSTALLATION	33-40-00	
LANDING AND TAXI LIGHT INSTALLATION - LIGHT EMITTING DIODE (LED)	33-40-00	
LANYARD	28-10-01-01	16
LANYARD	28-10-01-01	6
LAP BELT - LATCH - LONG, 53.00 INCHES	25-10-05-01	16A
LAP BELT - LATCH - LONG, 53.00 INCHES	25-10-05-02	20A
LAP BELT - LATCH - LONG, 53.00 INCHES	25-21-00-02A	95A
LAP BELT - LATCH - LONG, 53.00 INCHES	25-21-00-02B	21A
LATCH - INDUCTION AIR PANEL	71-60-01-01	179
LATCH ASSEMBLY - DOOR RESTRAINT	25-10-02-01	75
LATCH ASSEMBLY - DOOR RESTRAINT	25-10-02-01A	25
LATCH ASSEMBLY - DOOR RESTRAINT	25-23-02-03	92
LATCH ASSEMBLY - DOOR RESTRAINT	25-23-02-04	92
LATCH ASSEMBLY - DOOR RESTRAINT	25-23-03-01	21
LATCH HANDLE	25-52-00-02A	175
LATCH HANDLE	25-52-00-02A	324
LATCH HANDLE	25-52-00-02A	399
LATCH HANDLE ASSEMBLY	25-52-00-01	188

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
LATCH HANDLE ASSEMBLY	25-52-00-02	301
LATCH HANDLE ASSEMBLY	25-52-00-02A	174
LATCH HANDLE ASSEMBLY	25-52-00-02A	323
LATCH HANDLE ASSEMBLY	25-52-00-02A	398
LATCH MECHANISM - CREW DOOR	52-10-00	
LATCH MECHANISM - LOWER CARGO DOOR	52-31-01	
LATCH MECHANISM - LOWER PASSENGER DOOR	52-10-02	
LATCH MECHANISM - UPPER CARGO DOOR	52-31-00	
LATCH MECHANISM - UPPER PASSENGER DOOR	52-10-01	
LED COURTESY LIGHT INSTALLATION - WING	33-45-00	
LED FLASHING BEACON LIGHT INSTALLATION	33-43-00	
LED INSTRUMENT PANEL	33-10-00	
LED LAMP - USED IN RL6936 CHART LIGHT	33-20-00-01	30C
LED LIGHT - LANDING LEFT	33-40-00-01A	1
LED LIGHT - LANDING LEFT	33-40-00-01A	1A
LED LIGHT - LANDING RIGHT	33-40-00-01A	2
LED LIGHT - LANDING RIGHT FR005	33-40-00-01A	2A
LED LIGHT - TAXI LEFT	33-40-00-01A	3
LED LIGHT - TAXI LEFT	33-40-00-01A	3A
LED LIGHT - TAXI RIGHT	33-40-00-01A	4
LED LIGHT - TAXI RIGHT FR006	33-40-00-01A	4A
LED PANEL - LEFT SIDEWALL SWITCHES	33-10-01-01	3
LED PANEL - THROTTLE	33-10-01-01	9
LED PANELS	33-10-01	
LED WINGTIP LIGHT - LEFT	33-41-00-01A	1
LED WINGTIP LIGHT - RIGHT	33-41-00-01A	2
LENS	33-41-00-02	4
LENS	33-44-00-01	11
LENS - ICE DETECTOR LIGHT	33-44-00-02	11
LENS - JUMP LIGHT AMBER	52-32-00-02	97
LENS - JUMP LIGHT GREEN	52-32-00-02	98
LENS - JUMP LIGHT RED	52-32-00-02	96
LENS - LEFT	33-40-00-01	24
LENS - RIGHT	33-40-00-01	25
LENS - WING NAV LIGHT LEFT	33-41-00-01	12
LENS - WING NAV LIGHT RIGHT	33-41-00-01	13
LENS ASSEMBLY - LEFT	33-40-00-01A	17
LENS ASSEMBLY - LEFT LANDING AND TAXI LIGHT	33-40-00-01	17
LENS ASSEMBLY - LEFT LANDING AND TAXI LIGHT	33-40-00-01	18
LENS ASSEMBLY - RIGHT	33-40-00-01A	18
LEVEL SENDER	30-10-02-06	28
LEVEL SENDER	30-10-02-07	28
LEVEL SWITCH	30-10-02-06	24
LEVEL SWITCH	30-10-02-07	24
LEVEL SWITCH	30-10-02-08	15
LEVER - OXYGEN CONTROL	35-14-00-01	174
LEVER - OXYGEN CONTROL	35-14-00-01	29
LEVER - POWER CONTROL	76-10-01-01	117A
LIFE VEST STRAP	25-10-05-02	107
LIFE VEST STRAP	25-21-00-02B	100
LIGHT - ASSEMBLY-INDICATOR BATTERY OVERHEAT	33-10-00-02	93
LIGHT ASSEMBLY	34-10-02-01	19
LIGHT ASSEMBLY	77-11-00-01	3
LIGHT ASSEMBLY - 28 VOLT	34-24-00-03	3
LIGHT ASSEMBLY - CABIN	33-20-00-01	76B
LIGHT ASSEMBLY - CIRCUIT BREAKER PANEL	33-10-00-03	1
LIGHT ASSEMBLY - INDICATOR A/P OFF-A/P B.C.	33-10-00-02	75
LIGHT ASSEMBLY - INDICATOR BATTERY HOT	33-10-00-02	95
LIGHT ASSEMBLY - INDICATOR BETA	33-10-00-02	89
LIGHT ASSEMBLY - INDICATOR CHIP DETECTOR	33-10-00-02	77
LIGHT ASSEMBLY - INDICATOR DEICE PRESSURE	33-10-00-02	83
LIGHT ASSEMBLY - INDICATOR GENERATOR OVERHEAT	33-10-00-02	91
LIGHT ASSEMBLY - INDICATOR INVERTER INOP	33-10-00-02	87
LIGHT ASSEMBLY - INDICATOR STANDBY ELECTRIC POWER INOP	33-10-00-02	79
LIGHT ASSEMBLY - INDICATOR STANDBY ELECTRIC POWER ON	33-10-00-02	85
LIGHT ASSEMBLY - INDICATOR WINDSHIELD ANTI-ICE	33-10-00-02	81
LIGHT ASSEMBLY - PASSENGER READING	33-20-00-03	2B
LIGHT ASSEMBLY - TAIL NAVIGATION	33-41-00-02	1A
LIGHT ASSEMBLY - TAIL NAVIGATION	33-41-00-02	3A
LIGHT ASSEMBLY - WING NAVIGATION AND STROBE LEFT	33-41-00-01	1
LIGHT ASSEMBLY - WING NAVIGATION AND STROBE RIGHT	33-41-00-01	2

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
LIGHT BULB	34-55-06-01	77
LIGHT BULB	34-55-06-01	80
LIGHT BULB	34-55-06-01	83
LIGHT BULB	34-55-06-01	86
LIGHT BULB	34-55-08-01	77
LIGHT BULB	34-55-08-01	80
LIGHT BULB	34-55-08-01	83
LIGHT SPACER - LEFT	33-41-00-01A	3
LIGHT SPACER - RIGHT	33-41-00-01A	4
LINE - COMBUSTION DRAIN VALVE	71-70-00-01	3
LINE - EVAPORATOR DRAIN BULK ITEM	21-51-03-01	28
LINE - EVAPORATOR DRAIN BULK ITEM	21-51-03-02	36
LINE ASSEMBLY	25-52-00-02A	20
LINE ASSEMBLY	71-70-00-02	110
LINE ASSEMBLY	71-70-00-02	25
LINE ASSEMBLY	71-70-00-02	37
LINE ASSEMBLY	71-70-00-02	38
LINE ASSEMBLY - COMBUSTION DRAIN LG 13 IN	71-70-00-01	87
LINE ASSEMBLY - COMBUSTION DRAIN LG 23 IN	71-70-00-01	89
LINE ASSEMBLY - DRAIN	71-70-00-01	12
LINE ASSEMBLY - FUEL RESERVOIR DRAIN WITH CARGO POD	28-22-00-01	165
LINE ASSEMBLY - PROP OIL SEAL DRAIN	71-70-00-01	78A
LINE ASSEMBLY - S/G DRAIN	71-70-00-02	88
LINE ASSEMBLY - STARTER/GENERATOR OIL DRAIN	71-70-00-01	161
LINER ASSEMBLY - NOSE GEAR SUPPORT	32-20-00-01	236C
LOCK - FOR CONNECTOR AND BACKSHELL	34-62-00-01	10
LOCK ASSEMBLY - CARGO DOOR	52-31-00-03	33
LOCK ASSEMBLY - DOOR	52-10-01-02	85
LOCK ASSEMBLY - LEFT CREW DOOR	52-10-00-02	100
LOCKING RING	27-10-01-02	22
LOGO - CESSNA EXTERIOR AFT OF CARGO DOOR SUPERCARGOMASTER	11-N-22-01	4
LOGO - CONTROL WHEEL	11-N-31-01	2
LOGO - CONTROL WHEEL 25TH ANNIVERSARY	11-N-31-01	2C
LOGO EXTERIOR 25TH ANV.	11-N-22-01	5
LOGO MASK - CARAVAN	11-N-23-01	12
LORAN C KLN-88 INSTALLATION	34-55-00	
LORAN KLN-88 ANTENNA INSTALLATION	34-55-01	
LORAN TNL-3000 ANTENNA INSTALLATION	34-55-03	
LORAN-C ARNAV R-40 ILS INSTALLATION	34-30-02	
LORAN-C R-40 ILS ANTENNA INSTALLATION	34-30-02	
LOUVER ASSEMBLY	21-21-01-01	185
LOUVER ASSEMBLY	21-21-01-03	161
LOUVER ASSEMBLY	21-51-03-01A	20
LOUVER ASSEMBLY	21-51-03-01B	34
LOUVER ASSEMBLY - AIR CONDITIONER	21-51-03-02	26
LOWER BAND	71-60-01-02	176
LOWER BAND ASSEMBLY	71-60-01-02	175
LOWER CENTER FUSELAGE STRUCTURE	53-13-01	
LOWER COWL INSTALLATION	71-10-00	
LOWER FORWARD FUSELAGE STRUCTURE	53-11-00	
LOWER INSTRUMENT PANEL EQUIPMENT	24-50-00	
LOWER PANEL ASSEMBLY - OIL COOLER FORWARD	79-20-00-02	82
LUBRICATION FITTING	27-30-01-01	12
LUBRICATION FITTING	27-30-01-01	19
MAGNETOMETER - GMU 44 LEFT AND RIGHT REFERENCE SUPPLIER PART NUMBER	34-22-00-01	1A
011-00870-00(MOD 1 ONLY)		
MAIN ASSEMBLY - ME-406	25-60-00-07	4
MAIN ASSEMBLY - ME-406	25-60-00-07	4A
MAIN ASSEMBLY ME406 - REV E ONLY	25-60-00-07	4B
MAIN LANDING GEAR BULKHEAD STRUCTURE	53-13-03	
MAIN LANDING GEAR FAIRINGS INSTALLATION	32-10-01	
MAIN LANDING GEAR INSTALLATION	32-10-00	
MAIN WHEEL BRAKE ASSEMBLY	32-40-00	
MALAYSIAN EXTERIOR PLACARDS AND MARKINGS - CABIN DOOR	11-9M-28	
MALAYSIAN INTERIOR PLACARDS AND MARKINGS - CABIN	11-9M-32	
MANIFOLD ASSEMBLY - DEICE	30-10-01-01	2
MAP CLIP ASSEMBLY	27-10-01-05	39A
MAPLIGHT - CONTROL WHEEL	33-10-00	
MARKER BEACON ANTENNA INSTALLATION	34-30-01	
MASK - EXTERIOR	11-N-22-01	6
MASK - EXTERIOR LOGO	11-N-23-01	7

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
MASK - FEDEX	11-N-22-01	150
MASK - FEDEX FEEDER	11-N-22-01	151
MASK - LEFT FEDEX PROP DANGER	11-N-22-01	155
MASK - RIGHT FEDEX PROP DANGER	11-N-22-01	156
MASK AND LINE ASSEMBLY - COPILOT	35-15-00-01	2B
MASK AND LINE ASSEMBLY - COPILOT	35-15-00-01	3B
MASK AND LINE ASSEMBLY - PASSENGER	35-15-00-01	2
MASK AND LINE ASSEMBLY - PASSENGER	35-15-00-01	2A
MASK AND LINE ASSEMBLY - PILOT OXYGEN WITH MIC	35-15-00-01	1
MASK AND LINE ASSEMBLY WITH REGULATOR AND MIC	35-15-00-01	7A
MASK AND LINE ASSEMBLY-14 PLACE PASSENGER	35-15-00-01	3
MASK AND LINE ASSEMBLY-14 PLACE PASSENGER	35-15-00-01	3A
MASTER CYLINDER ASSEMBLY - BRAKE	32-41-01-01	1
METERING PIN ASSEMBLY - NOSE GEAR	32-20-00-02	21
METERING PIN ASSEMBLY - NOSE GEAR	32-20-00-03	24B
METERING PIN ASSEMBLY - NOSE GEAR	32-20-00-03	24
MEXICAN EXTERIOR PLACARDS AND MARKINGS - CABIN DOORS	11-XA-28	
MEXICAN EXTERIOR PLACARDS AND MARKINGS - COWLING	11-XA-24	
MEXICAN EXTERIOR PLACARDS AND MARKINGS - EMPENNAGE AND REAR BAGGAGE	11-XA-23	
MEXICAN EXTERIOR PLACARDS AND MARKINGS - FUSELAGE	11-XA-22	
MEXICAN EXTERIOR PLACARDS AND MARKINGS - LANDING GEAR	11-XA-27	
MEXICAN EXTERIOR PLACARDS AND MARKINGS - TKS	11-XA-22	
MEXICAN EXTERIOR PLACARDS AND MARKINGS - TKS	11-XA-25	
MEXICAN EXTERIOR PLACARDS AND MARKINGS - WINGS	11-XA-25	
MEXICAN INTERIOR PLACARDS AND MARKINGS - CABIN	11-XA-32	
MEXICAN INTERIOR PLACARDS AND MARKINGS - CABIN DOORS	11-XA-38	
MICROPHONE	35-15-00-01	10
MICROPHONE AND SWITCHES INSTALLATION - NAT AA97	23-50-07	
MICROPHONE INSTALLATION - HANDHELD	23-50-02	
MIXER - MUFFLER ASSEMBLY	21-41-00-01	103
MIXER - MUFFLER ASSEMBLY	21-41-00-01	107
MODULAR BRUSH ASSEMBLY - PROPELLER DEICE	30-60-00-01	1
MOTOR - EVAPORATOR ASSEMBLY	21-51-03-01A	41
MOTOR - EVAPORATOR BLOWER -LEFT AND RIGHT	21-51-03-03	11
MOTOR - EVAPORATOR BLOWER -LEFT AND RIGHT	21-51-03-03	11A
MOTOR - EVAPORATOR BLOWER -LEFT AND RIGHT	21-51-03-03	11B
MOTOR ASSEMBLY - EVAPORATOR	21-51-03-04	9
MOTOR ASSEMBLY - EVAPORATOR	21-51-03-04	9A
MOTOR ASSEMBLY - FLAP ACTUATOR	27-50-01-01	15
MOTOR ASSEMBLY - FLAP ACTUATOR	27-50-01-01	15A
MOUNT	77-30-00-02	4
MOUNT - PITCH SERVO (TYPE KM275)	22-10-04-01	3
MOUNT - SERVO (TYPE KM 275)	22-10-05-01	3
MOUNT WELD ASSEMBLY	79-20-00-03	12
MOUNT WELD ASSEMBLY	79-20-00-03	12A
MOUNT WELD ASSEMBLY	79-20-00-03	12B
MOUNTING BRACKET - OXYGEN CYLINDER MOUNTING	35-01-00-01	12
MOUNTING CAP ASSEMBLY	25-60-00-06	8
MOUNTING CAP ASSEMBLY	25-60-00-06	8A
MOUNTING HARDWARE	53-22-02-01	21
MOUNTING PLATE	25-22-00-02	2
MOUNTING PLATE - FIRE EXTINGUISHER	26-20-01-03	6
MOUNTING PLATE ASSEMBLY	25-22-00-02	1
MOUNTING RACK	23-51-00-01	5
MOUNTING RACK	23-51-00-01	5A
MOUNTING RACK	34-45-00-02	3
MOUNTING RACK	34-51-17-01	3
MOUNTING RACK	53-22-01-06	151
MOUNTING RACK	53-22-01-06	151A
MOUNTING RACK	53-22-02-01	18
MOUNTING RACK	53-22-02-01	20
MOUNTING RACK	53-22-02-01	22
MOUNTING RACK	53-22-02-01	24
MOUNTING RACK	53-22-02-01	25
MOUNTING RACK	53-22-02-02	16
MOUNTING RACK	53-22-02-02	20
MOUNTING RACK - GRS 77 AHRS	34-25-00-01	2
MOUNTING RACK - GRS 79 AHRS	34-25-00-01	2A
MOUNTING RACK - LEFT AND RIGHT	34-22-00-01	6
MOUNTING TRAY	34-40-00-02	9
MOUNTING TRAY	34-55-06-01	8

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
MOUNTING TRAY	34-55-08-01	3
MOUNTING TRAY ASSEMBLY	25-60-00-06	2
MOUNTING TRAY ASSEMBLY	25-60-00-07	6
MOUNTING TRAY ASSEMBLY	25-60-00-07	6A
MOUNTING TRAY FURNISHED W/TRANSCEIVER	34-51-04-01	3
MOUNTING TRAY FURNISHED W/TRANSCEIVER	34-51-06-01	2
NAMEPLATE	11-B-22-01	1A
NAMEPLATE	11-B-22-01	1B
NAMEPLATE	11-B-22-01	1C
NAMEPLATE	11-B-23-01	1A
NAMEPLATE	11-B-23-01	1B
NAMEPLATE	11-G-23-01	1
NAMEPLATE	11-G-23-01	1A
NAMEPLATE	11-G-23-01	1B
NAMEPLATE	11-LQ-22-01	8A
NAMEPLATE	11-LQ-22-01	8B
NAMEPLATE	11-LQ-22-01	8C
NAMEPLATE	11-LQ-23-01	3A
NAMEPLATE	11-LQ-23-01	3B
NAMEPLATE	11-N-22-01	1A
NAMEPLATE	11-N-22-01	1B
NAMEPLATE	11-N-22-01	1C
NAMEPLATE	11-N-23-01	1A
NAMEPLATE	11-N-23-01	1B
NAMEPLATE	11-PP-22-01	1A
NAMEPLATE	11-PP-22-01	1B
NAMEPLATE	11-PP-22-01	1C
NAMEPLATE	11-PP-23-01	1A
NAMEPLATE	11-PP-23-01	1B
NAMEPLATE	11-XA-22-01	75A
NAMEPLATE	11-XA-22-01	75B
NAMEPLATE	11-XA-22-01	75C
NAMEPLATE	11-XA-23-01	1A
NAMEPLATE	11-XA-23-01	1B
NAMEPLATE - AIR CONDITIONER	21-51-01-02	6
NAMEPLATE - AIR CONDITIONER	21-51-01-02A	6
NAMEPLATE - AIRCRAFT IDENTIFICATION	11-B-22-01	1
NAMEPLATE - AIRCRAFT IDENTIFICATION	11-LQ-22-01	8
NAMEPLATE - AIRCRAFT IDENTIFICATION	11-N-22-01	1
NAMEPLATE - AIRCRAFT IDENTIFICATION	11-PP-22-01	1
NAMEPLATE - AIRCRAFT IDENTIFICATION	11-XA-22-01	75
NAMEPLATE - EXTERIOR AIRCRAFT IDENTIFICATION	11-B-23-01	1
NAMEPLATE - EXTERIOR AIRCRAFT IDENTIFICATION	11-LQ-23-01	3
NAMEPLATE - EXTERIOR AIRCRAFT IDENTIFICATION	11-N-23-01	1
NAMEPLATE - EXTERIOR AIRCRAFT IDENTIFICATION	11-PP-23-01	1
NAMEPLATE - EXTERIOR AIRCRAFT IDENTIFICATION	11-XA-23-01	1
NAMEPLATE - OWNER IDENTIFICATION	11-N-24-01	1
NARCO WEATHER RADAR INSTALLATION - TYPE KWX56	34-44-00	
NAV ANTENNA INSTALLATION	34-54-02	
NET ASSEMBLY	25-51-01-03	21
NET ASSEMBLY	25-51-01-03	22
NET ASSEMBLY - CARGO BARRIER CENTER	25-51-01-01	20A
NET ASSEMBLY - CARGO BARRIER CENTER	25-51-01-01	20
NET ASSEMBLY - CARGO BARRIER CENTER	25-51-01-02	22
NET ASSEMBLY - CARGO BARRIER CENTER SPARES	25-51-01-02	22A
NET ASSEMBLY - CARGO BARRIER OUTBOARD	25-51-01-02	23
NET ASSEMBLY - CARGO BARRIER SIDE	25-51-01-01	21
NIPPLE	24-36-01-01	163
NOSE CAP AND COWL BULKHEAD INSTALLATION	71-10-01	
NOSE CAP ASSEMBLY - RIGHT	71-10-01-01	13
NOSE CAP/INDUCTION INLET ASSEMBLY - LEFT	71-10-01-01	1
NOSE GEAR FAIRING PANEL INSTALLATION	71-10-00	
NOSE GEAR INSTALLATION	32-20-00	
NOSE GEAR SHIMMY DAMPENER ASSEMBLY	32-20-01	
NOSE GEAR SHOCK STRUT ASSEMBLY	32-20-00	
NOSE GEAR STEERING	32-50-00	
NOSE GEAR STRUT ASSEMBLY	32-20-00-03	3B
NOSE GEAR STRUT ASSY	32-20-00-03	3A
NOSE GEAR STRUT ASSY	32-20-00-03	3C
NOZZLE ASSEMBLY - DEFROST LEFT	21-22-01-01	86
NOZZLE ASSEMBLY - DEFROST RIGHT	21-22-01-01	88

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
NOZZLE ASSEMBLY - LEFT DEFROST	21-22-00-01	167
NOZZLE ASSEMBLY - LEFT DEFROST	21-22-00-01A	160
NOZZLE ASSEMBLY - LEFT DEFROST	21-22-02-01	181
NOZZLE ASSEMBLY - LEFT DEFROST	21-22-02-01A	179
NOZZLE ASSEMBLY - RIGHT DEFROST	21-22-00-01	169
NOZZLE ASSEMBLY - RIGHT DEFROST	21-22-00-01A	161
NOZZLE ASSEMBLY - RIGHT DEFROST	21-22-02-01	183
NOZZLE ASSEMBLY - RIGHT DEFROST	21-22-02-01A	180
NUT	21-41-00-01	8
NUT	21-41-02-01	88
NUT	21-51-01-01	27
NUT	21-51-01-01A	25
NUT	21-51-01-02	13
NUT	21-51-01-02A	13
NUT	21-51-03-01	82
NUT	22-10-03-01	18
NUT	22-10-03-01A	78
NUT	22-10-04-01	20
NUT	22-10-04-01A	21
NUT	23-50-04-01	15
NUT	23-50-04-01A	12
NUT	23-50-05-01	14
NUT	23-50-05-01	90
NUT	23-50-05-01A	12
NUT	23-50-05-01A	86
NUT	23-51-00-01	9
NUT	23-51-00-01	9A
NUT	24-36-00-01	37
NUT	24-36-02-01A	8
NUT	25-10-00-01	13
NUT	25-10-00-01	162
NUT	25-10-00-01	167
NUT	25-10-00-01	90
NUT	25-10-00-02	20
NUT	25-10-00-02	8
NUT	25-10-00-02	92
NUT	25-10-00-02	98
NUT	25-10-00-02A	92
NUT	25-10-00-02A	95
NUT	25-10-00-03	115
NUT	25-10-00-03	181
NUT	25-10-05-01	155D
NUT	25-10-05-01	161
NUT	25-10-05-01	181
NUT	25-10-05-01	81
NUT	25-10-05-01	97
NUT	25-21-00-01	35
NUT	25-21-00-01	40
NUT	25-21-00-02	44
NUT	25-21-00-02	80
NUT	25-21-00-02A	162
NUT	25-21-00-02A	235
NUT	25-21-00-02A	248
NUT	25-21-00-02A	258
NUT	25-21-00-03	166
NUT	25-21-00-03	170
NUT	25-21-01-01	15
NUT	25-21-01-02	13
NUT	25-21-02-01	9
NUT	25-22-00-02	6
NUT	25-25-00-03	27
NUT	25-25-00-04	27
NUT	26-10-00-01	92
NUT	26-10-00-02	78
NUT	26-20-01-01	9
NUT	27-10-01-01	17
NUT	27-10-01-01	42
NUT	27-10-01-01	46
NUT	27-10-02-01	10
NUT	27-10-02-01	103
NUT	27-10-02-01	112

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
NUT	27-10-02-01	112A
NUT	27-10-02-01	17
NUT	27-10-02-02	10
NUT	27-10-02-02	102
NUT	27-10-02-02	15
NUT	27-10-02-02	158
NUT	27-10-02-02	158A
NUT	27-10-02-02	20
NUT	27-10-02-02	27
NUT	27-10-02-03	37
NUT	27-20-01-01	14
NUT	27-20-01-01	19
NUT	27-20-01-01	94
NUT	27-30-01-01	153
NUT	27-30-01-01	168
NUT	27-30-01-01	85
NUT	27-30-01-02	23
NUT	27-30-02-01	30
NUT	27-30-02-02	3
NUT	27-50-01-01	167
NUT	27-50-01-01	79
NUT	27-50-01-01	9
NUT	27-50-01-02	11
NUT	27-50-01-02	21
NUT	27-50-01-04	14
NUT	27-50-01-04	153
NUT	27-50-01-04	85
NUT	28-10-03-01	77
NUT	28-22-00-01	83
NUT	28-22-00-01	86
NUT	28-22-00-01	88
NUT	30-10-00-01	24
NUT	30-10-00-01	29
NUT	30-10-00-02	76
NUT	30-10-00-02	84
NUT	30-10-01-01	22
NUT	30-10-02-03	12
NUT	30-10-02-03	23
NUT	30-10-02-03	8
NUT	30-10-02-03	9
NUT	30-10-02-04	12
NUT	30-10-02-04	36
NUT	30-10-02-04	45
NUT	30-10-02-04	8
NUT	30-10-02-04	9
NUT	30-10-02-05	2A
NUT	30-10-02-05A	5
NUT	30-10-02-06	159
NUT	30-10-02-06	161
NUT	30-10-02-06	170
NUT	30-10-02-06	238
NUT	30-10-02-06	260
NUT	30-10-02-07	159
NUT	30-10-02-07	161
NUT	30-10-02-07	170
NUT	30-10-02-07	238
NUT	30-10-02-07	260
NUT	30-10-02-08	95
NUT	30-10-02-08	96
NUT	30-10-03-01	6
NUT	30-10-03-02	6
NUT	32-10-00-01	20
NUT	32-10-00-02	19
NUT	32-20-00-01	159
NUT	32-20-00-01	234
NUT	32-20-00-02	102
NUT	32-20-00-02	103
NUT	32-20-00-03	120
NUT	33-20-00-01	35
NUT	33-20-00-01A	25
NUT	34-30-02-01	14

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
NUT	34-43-00-01	21
NUT	34-44-00-01	14
NUT	34-44-00-02	17
NUT	34-50-00-03	19
NUT	52-10-00-01	158
NUT	52-10-02-01	10
NUT	52-10-02-01	100
NUT	52-10-02-01	86
NUT	52-10-02-01	91
NUT	52-31-01-01	25
NUT	52-32-00-02	18
NUT	52-34-00-01	32
NUT	53-11-00-01	249
NUT	53-13-03-02	112
NUT	53-13-03-02	13
NUT	53-13-03-02	19
NUT	53-13-03-02	23
NUT	53-13-03-03	107
NUT	53-13-03-03	11
NUT	53-13-03-03	19
NUT	53-13-03-03	7
NUT	53-13-03-04	158
NUT	53-13-03-04	163
NUT	53-13-03-04	19
NUT	53-13-03-04	5
NUT	53-22-02-01	13
NUT	53-22-02-01	17
NUT	53-22-02-01	5
NUT	53-22-02-01	8
NUT	53-22-02-02	12
NUT	53-22-02-02	15
NUT	53-22-02-02	4
NUT	53-22-02-02	7
NUT	53-30-01-01	78
NUT	53-30-01-02	83
NUT	55-10-00-01	8
NUT	55-10-00-02	8
NUT	55-20-00-01	22
NUT	55-20-00-02	16
NUT	56-10-00-01	83A
NUT	56-10-00-01	90A
NUT	57-10-02-01	31
NUT	57-10-03-01	22
NUT	57-10-03-01	6
NUT	57-10-03-02	21
NUT	57-10-03-02	6
NUT	57-10-03-03	22
NUT	57-10-03-03	6
NUT	57-10-03-04	20
NUT	57-10-03-04	6
NUT	57-10-03-05	12
NUT	57-10-03-05	9
NUT	57-10-04-01	110
NUT	57-50-00-01	26
NUT	61-20-00-01	15
NUT	71-20-00-01	5
NUT	71-20-00-02	4
NUT	71-60-00-02	157
NUT	71-60-00-02	176
NUT	71-60-00-02	85
NUT	76-10-01-02	92
NUT	77-13-00-01	7
NUT	77-14-00-01	7
NUT	77-15-00-01	3
NUT	77-15-00-01	7
NUT	78-10-00-02	23
NUT	78-10-00-03	21
NUT	78-10-00-03	30
NUT	78-10-00-04	109
NUT	78-10-00-04	154
NUT	78-10-00-04	173

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
NUT	78-10-00-04	260
NUT	78-10-00-04	264
NUT	78-10-00-04	268
NUT	78-10-00-05	17
NUT	78-10-00-05	35
NUT	78-10-00-05	47
NUT	80-10-01-01	14
NUT	80-10-01-02	5
NUT	80-10-01-03	3
NUT - AFT	25-10-00-03	171
NUT - AFT	25-21-00-03	159
NUT - ATTACH LOWER ARM	27-10-02-01	119
NUT - ATTACH LOWER ARM	27-10-02-02	166
NUT - ATTACH TO BLKHD STA 217.813	53-13-00-02	24
NUT - FORWARD	25-21-00-03	156
NUT - FORWARD ONLY	25-21-00-01	25
NUT - HANGER	78-10-00-04	25
NUT - INBOARD	25-21-00-03	35
NUT - LEFT	53-13-03-02	35
NUT - LOWER	25-21-00-03	18
NUT - LOWER	57-10-04-01	101
NUT - LOWER FORWARD-SEAT	25-21-00-03	106
NUT - OUTBOARD FITTINGS ONLY	25-51-01-01	17
NUT - OUTBOARD FITTINGS ONLY	25-51-01-02	14
NUT - RIGHT	53-13-03-02	36
NUT - SEAT BACK ASSEMBLY	25-10-00-02A	20
NUT - SEAT BACK ASSEMBLY	25-10-00-02A	8
NUT - SUB-PANEL ASSEMBLY ATTACH	53-22-01-06	81
NUT - UPPER	57-10-04-01	94
NUT - USED W/AN4-5A	34-50-00-04	86
NUT ATTACH AT ENGINE MOUNT	71-00-01-01	91
NUT ATTACH AT ENGINE MOUNT	71-00-01-01	95
NUT ATTACH AT ENGINE SHOCK MOUNT BRACKET	71-00-01-01	98
NUT FORWARD	25-21-00-02	32
NUT LOWER	25-21-00-02	18
NUT LOWER - FORWARD	25-21-00-01	105
NUTPLATE	21-22-00-01	98
NUTPLATE	21-22-01-01	84
NUTPLATE	21-22-02-01	155
NUTPLATE	21-51-03-01A	28
NUTPLATE	21-51-03-01B	5
NUTPLATE	21-51-03-02	33
NUTPLATE	24-36-01-01	13
NUTPLATE	24-50-02-01	14
NUTPLATE	25-10-02-02	5
NUTPLATE	25-51-02-01	10
NUTPLATE	27-50-01-03	26
NUTPLATE	28-23-00-01	94
NUTPLATE	30-10-01-01	29
NUTPLATE	31-30-00-02	20
NUTPLATE	31-30-00-02A	22
NUTPLATE	34-11-00-04	110
NUTPLATE	34-40-00-03	4
NUTPLATE	34-50-05-01	79
NUTPLATE	34-51-14-02	79
NUTPLATE	34-51-15-01	154
NUTPLATE	34-51-16-01	154
NUTPLATE	53-10-01-01	85A
NUTPLATE	53-10-01-02	15
NUTPLATE	53-10-01-02	38
NUTPLATE	53-12-00-01	114
NUTPLATE	53-12-00-01	122
NUTPLATE	53-12-00-02	20
NUTPLATE	53-12-00-02	37
NUTPLATE	53-12-00-02	87
NUTPLATE	53-12-00-02	92
NUTPLATE	53-12-00-03	109
NUTPLATE	53-12-00-03	191
NUTPLATE	53-12-00-03	22
NUTPLATE	53-12-00-03	30
NUTPLATE	53-12-00-03	51

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
NUTPLATE	53-13-03-01	23
NUTPLATE	53-13-03-01	29
NUTPLATE	53-13-03-02	46
NUTPLATE	53-13-03-02	81
NUTPLATE	53-13-03-03	26
NUTPLATE	53-15-00-01	104
NUTPLATE	53-15-00-01	14
NUTPLATE	53-15-00-01	152
NUTPLATE	53-15-00-01	171
NUTPLATE	53-15-00-01	257
NUTPLATE	53-15-00-01	6
NUTPLATE	53-15-00-01	84
NUTPLATE	53-15-00-01	91
NUTPLATE	53-15-00-01	97
NUTPLATE	53-15-00-02	1
NUTPLATE	53-15-00-02	165
NUTPLATE	53-15-00-02	18
NUTPLATE	53-15-00-02	180
NUTPLATE	53-15-00-02	187
NUTPLATE	53-15-00-02	190
NUTPLATE	53-15-00-02	229
NUTPLATE	53-15-00-02	244
NUTPLATE	53-15-00-02	377
NUTPLATE	53-15-00-02	402
NUTPLATE	53-15-00-02	6
NUTPLATE	53-15-00-02	75
NUTPLATE	53-20-00-01	35
NUTPLATE	53-20-00-01	41
NUTPLATE	53-20-00-02	30
NUTPLATE	53-20-00-02	36
NUTPLATE	53-20-00-03	28
NUTPLATE	53-20-00-03	34
NUTPLATE	53-22-00-01	14
NUTPLATE	53-22-00-02	12
NUTPLATE	53-22-00-02	4
NUTPLATE	53-22-00-02	84
NUTPLATE	53-22-01-01	87
NUTPLATE	55-10-00-01	103
NUTPLATE	55-10-00-02	179
NUTPLATE	57-10-02-01	19
NUTPLATE	57-10-02-01	22
NUTPLATE	57-11-00-01	106
NUTPLATE	57-40-00-01	388
NUTPLATE	57-60-00-01	156
NUTPLATE	57-60-00-01	159
NUTPLATE	71-60-01-01	184
NUTPLATE - LEFT STA 307.00	53-15-00-02	307A
NUTPLATE - RIGHT STA 307.00	53-15-00-02	307
NUTPLATE KIT	23-51-00-01	6
NUTPLATE KIT	34-45-00-02	4
NUTPLATE KIT	34-51-17-01	4
NUTPLATE KIT	53-22-01-06	152
NUTPLATE KIT	53-22-01-06	152A
NUTPLATE KIT	53-22-02-01	19
NUTPLATE KIT	53-22-02-01	23
NUTPLATE KIT	53-22-02-02	17
NUTPLATE KIT	53-22-02-02	19
NUTPLATE KIT	53-22-02-02	21
NUTPLATE KIT	53-22-02-02	26
O-RING	28-10-03-01	14
O-RING	28-10-03-01	76
O-RING	28-21-00-01	105
O-RING	28-21-00-01	246
O-RING	28-21-00-02	106
O-RING	28-21-00-02	250
O-RING	28-22-00-01	92
O-RING	79-20-00-01	8
O-RING	79-20-00-02	8
O-RING	80-10-01-01	6
O-RING	80-10-01-02	2A
OIL BREATHER AND ENGINE DRAINS INSTALLATION	71-70-00	

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
OIL COOLER	79-20-00-03	1
OIL COOLER - ASSEMBLY	79-20-00-01	1A
OIL COOLER - LARGE	79-20-00-02	1
OIL INDICATING	79-30-00	
OLIVE - FOR 3/16 IN NYLON TUBES	30-10-02-03	21
OLIVE - FOR 3/16 IN NYLON TUBES	30-10-02-04	33
ORIFICE ASSEMBLY	77-11-00-02	31
ORIFICE ASSEMBLY	77-11-00-02	53
OUTER PANEL	79-20-00-03	117
OUTER PANEL ASSEMBLY	79-20-00-03	116
OUTLET - AIR	21-21-01-02	100
OUTLET - AIR	21-21-01-02	75
OUTLET - AIR	21-21-01-04	154
OUTLET - AIR	21-21-01-04	181
OUTLET - AIR	21-21-03-02	31
OUTLET - AIR	21-21-03-03	99
OUTLET ASSEMBLY - AIR	53-22-01-05	4A
OUTLET ASSEMBLY - CABIN HEAT	21-22-01-01	75
OUTLET ASSEMBLY - OVERHEAD VENT AND LIGHT	21-21-03-02	16
OUTLET ASSEMBLY - OVERHEAD VENT AND LIGHT	21-21-03-03	85
OUTLET ASSEMBLY - OVERHEAD VENT AND LIGHT	21-21-03-03	93
OUTLET ASSEMBLY - OXYGEN	35-13-00-01	1
OUTLET ASSEMBLY - STANDBY ALTERNATOR DRAIN	24-36-01-01	173
OUTSIDE AIR TEMP GAGE INSTALLATION	34-12-00	
OVERHEAD VENTILATION SYSTEM	21-21-03	
OVERHEAD VENTILATION SYSTEM - 208	21-21-02	
OVERHEAD VENTILATION SYSTEM PASSENGER VERSION	21-21-03	
OVERHEAD VENTILATION SYSTEM WITH AIR CONDITIONING	21-21-01	
OVERHEAD VENTILATION SYSTEM WITHOUT AIR CONDITIONING	21-21-01	
OXYGEN CONTROL INSTALLATION	35-14-00	
OXYGEN CYLINDER AND REGULATOR INSTALLATION - 116.95 CUBIC FOOT	35-01-00	
OXYGEN CYLINDER AND REGULATOR INSTALLATION - 50.67 CUBIC FOOT	35-01-00	
OXYGEN FILLER VALVE INSTALLATION	35-11-00	
OXYGEN GAGE ASSEMBLY	35-14-00-01	4
OXYGEN MASKS AND LINES	35-15-00	
OXYGEN OUTLET VALVE ASSEMBLIES	35-13-00	
OXYGEN SYSTEM - 10 PORT	35-10-01	
OXYGEN SYSTEM - 13 PORT PASSENGER VERSION	35-10-01	
OXYGEN SYSTEM - 14 PORT PASSENGER VERSION	35-10-01	
OXYGEN SYSTEM - 2 PORT	35-10-00	
OXYGEN SYSTEM - 2 PORT PASSENGER VERSION	35-10-00	
P3 FLOW CONTROL VALVE RELAY INSTALLATION	24-51-00	
PA/COUPLER - KAC952	23-10-00-01	22
PAD - ARMREST	52-61-00-01	105
PAN ASSEMBLY - OIL DRIP	27-50-01-01	188
PANEL	25-52-00-02A	2
PANEL	53-22-01-05	3
PANEL - RIGHT	71-60-01-02	80
PANEL - UPPER	71-60-00-01	39A
PANEL - UPPER	71-60-01-02	88
PANEL ASSEMBLY	53-22-01-05	105
PANEL ASSEMBLY	53-22-01-05	106
PANEL ASSEMBLY - AIR INDUCTION PLENUM	71-60-01-01	13A
PANEL ASSEMBLY - CIRCUIT BREAKER	24-50-01-01	2A
PANEL ASSEMBLY - CIRCUIT BREAKER	24-50-01-01A	1
PANEL ASSEMBLY - CIRCUIT BREAKER	24-50-01-01A	2
PANEL ASSEMBLY - CIRCUIT BREAKER	24-50-01-01A	3
PANEL ASSEMBLY - CIRCUIT BREAKER	24-50-01-01	2
PANEL ASSEMBLY - INSTRUMENT	53-22-01-05	3C
PANEL ASSEMBLY - LEFT FLIGHT	53-22-01-05	6A
PANEL ASSEMBLY - LOWER	71-60-01-02	1
PANEL ASSEMBLY - LOWER LEFT	71-60-01-02	17A
PANEL ASSEMBLY - LOWER LEFT	71-60-01-02	17B
PANEL ASSEMBLY - LOWER LEFT	71-60-01-02	17
PANEL ASSEMBLY - OIL COOLER AFT LOWER	79-20-00-01	110
PANEL ASSEMBLY - OIL COOLER LOWER FORWARD	79-20-00-01	34
PANEL ASSEMBLY - RADIO	53-22-01-05	22A
PANEL ASSEMBLY - RIGHT	71-60-01-02	79
PANEL ASSEMBLY - RIGHT FLIGHT	53-22-01-05	12A
PANEL ASSEMBLY - TKS	53-22-01-05	107B
PANEL ASSEMBLY - UPPER	71-60-01-02	87

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
PANEL ASSEMBLY - WINDSHIELD ANTI-ICE	30-40-00-01	2
PANEL CLOSEOUT	25-23-00-02	39
PANEL CLOSEOUT	25-23-00-03	42
PANEL SUPPORT ASSEMBLY - LEFT	53-22-01-06	84A
PANEL SUPPORT ASSEMBLY - RIGHT	53-22-01-06	85A
PANEL WELD ASSEMBLY	71-60-01-02	11
PANEL WELD ASSEMBLY	71-60-01-02	11A
PARKING AND STORAGE EQUIPMENT	10-10-00	
PARKING BRAKE INSTALLATION	32-42-00	
PARTITION ASSEMBLY	25-51-02-02	2A
PARTITION ASSEMBLY	25-51-02-02	2B
PARTITION ASSEMBLY	25-51-02-03	2A
PARTITION ASSEMBLY	25-51-02-03	2B
PARTITION ASSEMBLY - CARGO	25-51-02-01	2A
PARTITION ASSEMBLY - CARGO	25-51-02-01	2B
PASSENGER AND CARGO DOOR UPHOLSTERY	25-23-03	
PASSENGER DOOR AND STEP INSTALLATION - LOWER	52-10-02	
PASSENGER DOOR ASSEMBLY - LOWER	52-10-02-01	154
PASSENGER DOOR ASSEMBLY - LOWER	52-10-02-01	154A
PASSENGER DOOR INSTALLATION - UPPER	52-10-01	
PASSENGER DOOR INSTALLATION LOWER WITHOUT STEPS AND WINDOW	52-10-00	
PASSENGER DOOR INSTALLATION UPPER WITHOUT STEPS AND WINDOW	52-10-00	
PASSENGER DOOR JAMB STRUCTURE PASSENGER VERSION	53-13-02	
PASSENGER LED READING LIGHT INSTALLATION	33-20-00	
PASSENGER READING LIGHT INSTALLATION	33-20-00	
PASSENGER SEAT UPHOLSTERY AND STRUCTURE ASSEMBLY	25-21-00	
PEDAL - RUDDER USED WITH DUAL CONTROLS	27-20-02-02	93
PEDESTAL ASSEMBLY - PILOT AND COPILOT SEAT	25-10-00	
PEDESTAL STRUCTURE	53-22-00	
PILOT AND COPILOT DOOR UPHOLSTERY	25-10-02	
PILOT ASSIST HANDLE INSTALLATION	25-10-02	
PIN	25-10-00-03	28
PIN	27-10-02-01	93
PIN	27-10-02-02	93
PIN	27-20-02-02	85
PIN	52-10-00-02	31
PIN	52-10-01-02	29
PIN	52-10-02-02	17
PIN	52-31-00-03	23
PIN	52-31-01-02	17
PIN	57-10-03-04	23
PIN - COTTER	28-23-00-01	153
PIN - COTTER	28-23-00-01	23
PIN - COTTER	28-23-00-01	32
PIN - COTTER	28-23-00-01	78
PIN - COTTER	52-31-00-03	77
PIN - COTTER	52-31-01-02	89
PIN - COTTER	53-22-01-01	21
PIN - COTTER	53-22-01-02	38
PIN - COTTER	53-22-01-03	41
PIN - COTTER	53-22-01-04	39
PIN - DOOR LOCK - RIGHT ONLY	52-10-00-02	92A
PIN - LOWER	32-41-00-01	80
PIN ASSEMBLY - DOOR LOCK - LEFT ONLY	52-10-00-02	90A
PITCH ACTUATOR INSTALLATION	27-30-01	
PITCH SERVO INSTALLATION	22-10-04	
PITCH SERVO INSTALLATION - KING AUTOPILOT	22-10-04	
PITCH TRIM ACTUATOR INSTALLATION - KING AUTOPILOT	27-30-03	
PITCH TRIM SERVO INSTALLATION	27-30-03	
PITOT SYSTEM - RH FLIGHT PANEL	34-11-01	
PITOT TUBE - STATIC HEATED	34-11-02-01	13A
PITOT TUBE INSTALLATION	34-11-02	
PITOT/STATIC INSTALLATION WITH FLIGHT DATA RECORDER	34-11-00	
PITOT/STATIC SYSTEM	34-11-00	
PLACARD	11-N-31-01	157
PLACARD - -MANEUVER SPEED AND 2	11-N-31-01	379
PLACARD - 208B TIRE PRESSURE	11-N-31-01	153
PLACARD - 600 SHP	11-N-31-01	240
PLACARD - 675 SHP	11-N-31-01	241
PLACARD - A JET FUEL ONLY	11-N-25-01	8
PLACARD - A/C ID	31-00-00-01A	26

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
PLACARD - A/P ROLL TRIM	11-N-31-01	238
PLACARD - A/P ROLL TRIM	34-56-02-01	79
PLACARD - A/P ROLL TRIM	34-56-03-01	12
PLACARD - AIR CONDITIONING	11-G-31-01	6
PLACARD - AIR CONDITIONING	11-N-31-01	304
PLACARD - AIR DEFLECTOR UPPER CABIN DOOR	11-B-38-01	153
PLACARD - AIR DEFLECTOR UPPER CABIN DOOR	11-B-38-01	153A
PLACARD - AIRCRAFT IDENT NUMBER	31-00-00-01	27
PLACARD - AIRCRAFT IDENTIFICATION	31-00-00-02	75
PLACARD - AIRCRAFT IDENTIFICATION	31-00-00-03	8
PLACARD - AIRSTAIR DOOR	11-N-38-01	80
PLACARD - AIRSTAIR DOOR USED WITH INFLIGHT MOVEABLE DOOR	11-N-22-01	153
PLACARD - ALT STATIC AIR	11-N-31-01	378
PLACARD - ALTERNATE STATIC SOURCE	11-N-31-01	81
PLACARD - ALTERNATE STATIC SOURCE	11-N-31-01	9
PLACARD - ALTERNATE STATIC SOURCE	11-N-31-01	9A
PLACARD - ALTERNATE STATIC SOURCE	11-PP-31-01	5
PLACARD - ALTERNATOR CONTROL UNIT	11-N-24-01	7
PLACARD - ALTERNATOR CONTROL UNIT	11-N-24-01	7A
PLACARD - AMMETER	11-N-31-01	78
PLACARD - AUXILIARY INPUT	11-N-31-01	236
PLACARD - BAGGAGE COMPARTMENT	11-N-32-01	1
PLACARD - BAGGAGE SHELVES	11-N-31-01	76
PLACARD - BATTERY CONTACTOR	11-N-24-01	13
PLACARD - CAA SEAT POSITION	25-10-05-02	24
PLACARD - CAA SEAT POSITION	25-21-00-02B	26
PLACARD - CAA-SEAT POSITION	11-G-38-01	1
PLACARD - CAA-SEAT POSITION	25-21-00-03	108
PLACARD - CABIN HEAT	11-N-31-01	306
PLACARD - CABIN LIGHTS	11-B-32-01	3
PLACARD - CABIN LIGHTS	11-B-32-01	4
PLACARD - CAUTION CARGO DOOR	11-N-31-01	302
PLACARD - CAUTION LEFT AND RIGHT	11-N-22-02	150
PLACARD - CAUTION LEFT AND RIGHT	11-N-25-02	1
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	450
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	451
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	452
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	452A
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	453
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	454
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	454A
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	455
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	456
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	457
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	458
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	459
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	459A
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	461
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	525
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	526
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	527
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	528
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	529
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	529A
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	530
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	531
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	532
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	533
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	534
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	535
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	535A
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	536
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	538
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	539
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	540
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	541
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	542
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	600
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	602
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	603
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	604

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	606
PLACARD - CIRCUIT BREAKER PANEL	11-N-31-01	675
PLACARD - CIRCUIT BREAKER PANEL CAT II AIRPLANES	11-N-31-01	460
PLACARD - CIRCUIT BREAKER PANEL CAT II AIRPLANES	11-N-31-01	462
PLACARD - CIRCUIT BREAKER PANEL CAT II AIRPLANES	11-N-31-01	537
PLACARD - CIRCUIT BREAKER PANEL CAT II AIRPLANES	11-N-31-01	601
PLACARD - CIRCUIT BREAKER PANEL CAT II AIRPLANES	11-N-31-01	605
PLACARD - CIRCUIT BREAKER PANEL WITH FDR/CVR	11-N-31-01	607
PLACARD - CIRCUIT BREAKER PANEL WITH FDR/CVR	11-N-31-01	608
PLACARD - COMPASS DEV WITH ANTI-ICE PANEL	11-N-31-01	158
PLACARD - DEICE	11-N-31-01	384
PLACARD - DEICE/ANTI-ICE	11-N-31-01	380
PLACARD - DOOR OPERATION	11-B-38-01	4
PLACARD - DOOR OPERATION	11-XA-38-01	1
PLACARD - DOOR OPERATION	11-XA-38-01	3
PLACARD - DOOR OPERATION LOWER CARGO DOOR	11-XA-38-01	5
PLACARD - DOOR OPERATION LOWER PASSENGER	11-XA-38-01	77
PLACARD - DOOR OPERATION UPPER CARGO DOOR	11-XA-38-01	6
PLACARD - DOOR OPERATION UPPER PASSENGER	11-XA-38-01	75
PLACARD - ELT	11-C-31-01	1
PLACARD - ELT	11-N-32-01	4A
PLACARD - ELT	11-XA-32-01	1
PLACARD - ELT	11-XA-32-01	3
PLACARD - ELT	11-N-32-01	3
PLACARD - ELT	11-N-32-01	4
PLACARD - ELT LOCATION	11-B-32-01	11
PLACARD - ELT LOCATION BLACK LETTERS	11-N-23-01	3
PLACARD - ELT LOCATION BLACK LETTERS SPARES	11-N-23-01	3A
PLACARD - ELT POSITION	11-XA-32-01	2
PLACARD - ELT SWITCH	11-B-32-01	6
PLACARD - ELT SWITCH OPERATION	11-F-32-01	1
PLACARD - ELT SWITCH OPERATION	11-N-32-01	2
PLACARD - EMERGENCY DOOR EXIT	11-LQ-28-01	76
PLACARD - EMERGENCY DOOR OPEN	11-LQ-28-01	77
PLACARD - EMERGENCY DOOR PUSH	11-LQ-28-01	75
PLACARD - EMERGENCY EXIT DOOR	11-B-38-01	78
PLACARD - EMERGENCY LOCATOR	11-B-32-01	10
PLACARD - EMERGENCY LOCATOR	11-B-32-01	5
PLACARD - EMERGENCY OPEN DOOR	11-B-38-01	79
PLACARD - EMERGENCY PUSH DOOR	11-B-38-01	80
PLACARD - ENGINE OIL CAPACITY	11-B-24-01	4
PLACARD - ENGINE OIL CAPACITY	11-N-24-01	9
PLACARD - ENGINE OIL CAPACITY	11-XA-24-01	2
PLACARD - EPA CAN, ALUMINUM LETTERING ON BLACK BACKGROUND	11-N-24-01	10
PLACARD - EXIT SIGN ASSEMBLY	11-B-38-01	77
PLACARD - EXIT SIGN ASSEMBLY	11-B-38-01	77A
PLACARD - EXTERNAL POWER	11-N-24-01	79
PLACARD - EXTERNAL POWER CONTACTOR	11-N-24-01	75
PLACARD - EXTERNAL START CONTACTOR	11-N-24-01	76
PLACARD - FIRE DETECT	11-N-31-01	77
PLACARD - FLAPS ICING	11-N-31-01	230A
PLACARD - FLUX VALVE	11-N-25-01	2
PLACARD - FUEL	11-G-31-01	4
PLACARD - FUEL CONTAMINATION WARNING	11-N-31-01	229
PLACARD - GAS SPRING	11-N-38-01	79
PLACARD - GAS SPRING	11-N-38-01	79A
PLACARD - GAS SPRING DISPOSAL PROCEDURE	11-XA-38-01	7
PLACARD - GENERATOR CONTACTOR	11-N-24-01	12
PLACARD - GROUND POWER MONITOR	11-N-24-01	77
PLACARD - ICING CONDITIONS IN FLIGHT	11-N-31-02	76
PLACARD - INERTIAL SEPARATOR	11-N-31-01	381
PLACARD - INTERNAL START CONTACTOR	11-N-24-01	78
PLACARD - JET FUEL	11-LQ-25-01	4
PLACARD - LEFT CREW DOOR	11-B-38-01	1
PLACARD - LEFT CREW DOOR	11-LQ-28-01	1
PLACARD - LEFT CREW DOOR	11-LQ-38-01	2
PLACARD - LEFT CREW DOOR	11-N-38-01	3
PLACARD - LEFT CREW DOOR	11-PP-38-01	3
PLACARD - LIFE VEST	11-B-32-01	9
PLACARD - LIFE VEST	11-B-32-01	9A
PLACARD - LIGHT SWITCH	11-B-32-01	1

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
PLACARD - LIGHT SWITCH.....	11-B-32-01	2
PLACARD - LIGHTS.....	11-N-31-01	383
PLACARD - LIGHTS BRT.....	11-N-31-01	305
PLACARD - LOAD LIMITS.....	11-B-32-01	7
PLACARD - LOAD SHED CENTRAL.....	11-N-24-01	4
PLACARD - LOCK.....	11-N-31-01	239
PLACARD - LOCK OPERATION.....	11-N-38-01	5
PLACARD - LOCK OVERRIDE.....	11-B-38-01	2
PLACARD - LOCK OVERRIDE.....	11-N-38-01	7
PLACARD - LOW VACUUM.....	11-N-31-01	300
PLACARD - LOWER CARGO DOOR.....	11-B-38-01	76
PLACARD - LOWER CARGO DOOR.....	11-N-38-01	75
PLACARD - LOWER DOOR.....	11-LQ-38-01	6
PLACARD - LOWER PASSENGER DOOR.....	11-B-38-01	151
PLACARD - LOWER PASSENGER DOOR.....	11-B-38-01	152
PLACARD - LOWER PASSENGER DOOR.....	11-LQ-38-01	77
PLACARD - LOWER PASSENGER DOOR.....	11-LQ-38-01	78
PLACARD - LOWER PASSENGER DOOR.....	11-N-38-01	76
PLACARD - MAGNETIC COMPASS.....	11-G-31-01	5
PLACARD - MAIN LANDING GEAR PART NUMBER AND SERIAL NUMBER IDENTIFICATION.....	11-N-27-01	1
PLACARD - MANEUVER SPEED.....	11-N-31-01	80
PLACARD - MAP LIGHT.....	11-N-31-01	8
PLACARD - MAXIMUM AIRSPEED.....	11-N-31-01	79
PLACARD - MIC AND PHONE.....	11-N-31-01	235
PLACARD - MIC AND PHONE.....	11-N-31-01	235A
PLACARD - MIC BLACK LETTERS.....	11-N-31-01	234
PLACARD - MIC WHITE LETTERS.....	11-N-31-01	233
PLACARD - NAV 1/NAV 2/RMI.....	11-N-31-01	237
PLACARD - OFF.....	11-N-31-01	83
PLACARD - OIL TANK.....	11-LQ-24-01	3
PLACARD - OIL TANK.....	11-XA-24-01	4
PLACARD - OPERATING SPEED CARGO DOOR.....	11-N-31-01	303
PLACARD - OPERATION LIMITS.....	11-N-31-02	1
PLACARD - OPERATION LIMITS.....	11-PP-31-01	1
PLACARD - OPERATION LIMITS.....	11-PP-31-01	3
PLACARD - OPERATIONAL LIMITATIONS IFR.....	11-G-31-01	2
PLACARD - OPERATIONAL LIMITATIONS IFR.....	11-N-31-01	4
PLACARD - OPERATIONAL LIMITATIONS KNOWN ICING.....	11-G-31-01	3
PLACARD - OPERATIONAL LIMITATIONS KNOWN ICING.....	11-N-31-01	5
PLACARD - OPERATIONAL LIMITATIONS KNOWN ICING.....	11-N-31-01	6
PLACARD - OPERATIONAL LIMITATIONS VFR.....	11-G-31-01	1
PLACARD - OPERATIONAL LIMITATIONS VFR.....	11-N-31-01	3
PLACARD - OVERSPEED GOVERNOR.....	11-N-31-01	375
PLACARD - OXYGEN FILL DOOR.....	11-LQ-28-01	5
PLACARD - PARKING BRAKE.....	11-N-31-01	376
PLACARD - PARTITION NET.....	11-N-32-01	5
PLACARD - PARTITION NET.....	11-N-32-01	6
PLACARD - PASSENGER DOOR.....	11-LQ-28-01	4
PLACARD - PEDESTAL CABIN HEAT.....	11-N-31-01	10
PLACARD - PEDESTAL RUDDER TRIM.....	11-N-31-01	154
PLACARD - PEDESTAL RUDDER TRIM.....	11-N-31-01	155
PLACARD - PHONE WHITE LETTERS.....	11-N-31-01	231
PLACARD - PHONE BLACK LETTERS.....	11-N-31-01	232
PLACARD - POD DOOR LOCKED.....	11-LQ-22-01	2
PLACARD - POD DOOR OPEN.....	11-LQ-22-01	1
PLACARD - POWER SOURCE.....	11-N-31-01	385
PLACARD - PRESSURIZED OIL TANK.....	11-N-24-01	8
PLACARD - RELAY BOX.....	11-N-24-01	150
PLACARD - RELAY BOX.....	11-N-24-01	151
PLACARD - RIGHT CREW DOOR.....	11-B-38-01	3
PLACARD - RIGHT CREW DOOR.....	11-LQ-38-01	4
PLACARD - RIGHT CREW DOOR.....	11-N-38-01	4
PLACARD - RPM 600 SHP.....	11-N-31-01	382
PLACARD - RUDDER GUST LOCK.....	11-N-23-01	9
PLACARD - RUDDER GUST LOCK.....	11-PP-23-01	3
PLACARD - RUDDER GUST LOCK SPARES.....	11-N-23-01	9A
PLACARD - RUDDER GUSTLOCK BLACK LETTERING.....	11-LQ-23-01	1
PLACARD - RUDDER LOCK.....	11-N-27-01	3
PLACARD - RUDDER LOCK.....	11-N-24-01	6
PLACARD - RUDDER LOCK CAUTION.....	11-LQ-24-01	1
PLACARD - RUDDER LOCK PULL.....	11-N-31-01	228

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
PLACARD - RUDDER LOCK SPARES	11-N-24-01	6A
PLACARD - RUDDER LOCK SPARES	11-N-27-01	3A
PLACARD - SEAT BELT	11-B-32-01	8
PLACARD - SEAT BELT	11-B-32-01	8A
PLACARD - SEAT POSITION	25-21-00-01	107
PLACARD - SEAT POSITION	25-21-00-02	102
PLACARD - SEAT POSITION	25-21-02-01	13
PLACARD - SEAT STOP LATCH WARNING	11-LQ-31-01	1
PLACARD - SEAT STOP LATCH WARNING	11-N-31-01	230
PLACARD - SEAT TRACK LIMIT	11-LQ-38-01	75
PLACARD - SENSOR SYSTEM POWER ON	11-N-31-01	82
PLACARD - SERIAL & PART NO.	27-30-01-01	4E
PLACARD - SERIAL & PART NUMBER	11-N-23-01	75
PLACARD - SERIAL AND PART NUMBER	32-20-00-01	237
PLACARD - SOLVENT CAUTION -LEFT AND RIGHT	11-XA-25-02	1
PLACARD - STANDBY ALTERNATOR	11-N-24-01	3
PLACARD - STANDBY FLAP MOTOR	11-N-31-01	301
PLACARD - STATIC SOURCE DRAIN VALVE ZONE	11-N-24-01	83
PLACARD - TIRE PRESSURE	11-N-31-01	151A
PLACARD - TIRE PRESSURE	11-N-31-01	152
PLACARD - TKS FILLER CAP	11-XA-22-02	1
PLACARD - TKS FILLER CAP -WITH FARING	11-N-22-02	75
PLACARD - TKS FILLER CAP -WITH FARING	11-N-22-02	75A
PLACARD - TKS FILLER CAP -WITH FARING	11-N-22-02	75B
PLACARD - TKS KNOWN ICING PARTIAL TKS ONLY	11-N-31-02	78
PLACARD - TKS OPERATION LIMIT	11-XA-22-02	2
PLACARD - TKS OPERATION LIMITS	11-N-31-02	75
PLACARD - TKS OPERATIONS LIMIT	11-N-22-02	2
PLACARD - TKS OPERATIONS LIMIT	11-N-22-02	76
PLACARD - TORQUE SETTING 675 SHP WITH AIR CONDITIONING	11-N-31-01	226
PLACARD - TORQUE SETTING 675 SHP WITH AIR CONDITIONING	11-N-31-01	227
PLACARD - TORQUE SETTING 867 SHP WITH AIR CONDITIONING	11-N-31-01	227A
PLACARD - TORQUE SETTING WITH AIR CONDITIONING	11-N-31-01	225
PLACARD - TOW LIMIT WARNING	11-LQ-24-01	2
PLACARD - TOW LIMIT WARNING	11-N-27-01	4
PLACARD - TOW LIMIT WARNING	11-N-27-01	6A
PLACARD - TOW LIMIT WARNING SPARES S3815-3	11-N-27-01	4A
PLACARD - TUG TOW FRONT FORK	11-LQ-27-01	1
PLACARD - UPPER CARGO DOOR	11-B-38-01	75
PLACARD - UPPER CARGO DOOR	11-LQ-28-01	3
PLACARD - UPPER CARGO DOOR	11-LQ-38-01	5
PLACARD - UPPER CARGO DOOR	11-N-38-01	1
PLACARD - UPPER CARGO DOOR	11-PP-38-01	1
PLACARD - UPPER PASSENGER DOOR	11-B-38-01	150
PLACARD - UPPER PASSENGER DOOR	11-LQ-38-01	79
PLACARD - UPPER PASSENGER DOOR	11-N-38-01	2
PLACARD - UPPER PASSENGER DOOR	11-PP-38-01	2
PLACARD - VENT	11-N-31-01	377
PLACARD - VERIFY FUEL SELECTOR ON	11-N-31-01	156
PLACARD - WARNING CARGO DOOR	11-N-22-01	154
PLACARD - WARNING CARGO DOOR	11-N-32-01	7
PLACARD - WEIGHT LIMIT AFT COMPARTMENT	11-LQ-22-01	7
PLACARD - WEIGHT LIMIT CENTER COMPARTMENT	11-LQ-22-01	3
PLACARD - WEIGHT LIMIT CENTER COMPARTMENT AFT	11-LQ-22-01	6
PLACARD - WEIGHT LIMIT CENTER COMPARTMENT FORWARD	11-LQ-22-01	4
PLACARD - WEIGHT LIMIT FORWARD COMPARTMENT	11-LQ-22-01	5
PLACARD - WINDSHIELD ANTI-ICE OFF	11-N-31-02	77
PLACARD ASSEMBLY - -OXYGEN FILLER DOOR	11-N-23-01	5
PLACARD ASSEMBLY - AFT COMPARTMENT ZONE 924	11-N-22-01	83
PLACARD ASSEMBLY - BAGGAGE COMPARTMENT	11-PP-32-01	1
PLACARD ASSEMBLY - BATTERY	11-XA-24-01	7
PLACARD ASSEMBLY - BATTERY BOX	11-N-24-01	84
PLACARD ASSEMBLY - BRAKE FLUID RESERVOIR	11-N-24-01	2
PLACARD ASSEMBLY - BRAKE FLUID RESERVOIR	11-LQ-24-01	4
PLACARD ASSEMBLY - BRAKE FLUID RESERVOIR	11-XA-24-01	3
PLACARD ASSEMBLY - CARGO DOOR BLACK LETTERS	11-N-28-01	1
PLACARD ASSEMBLY - CARGO DOOR BLACK LETTERS	11-N-28-01	75
PLACARD ASSEMBLY - CARGO DOOR WHITE LETTERS	11-N-28-01	3
PLACARD ASSEMBLY - CENTER-FORWARD COMPARTMENT ZONE 922 AND 923	11-N-22-01	81
PLACARD ASSEMBLY - DOOR LOCKED	11-N-22-01	77
PLACARD ASSEMBLY - DOOR OPEN	11-N-22-01	75

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
PLACARD ASSEMBLY - DOOR WARNING LOWER PASSENGER	11-XA-38-01	76
PLACARD ASSEMBLY - ELT	11-PP-32-01	3
PLACARD ASSEMBLY - ELT LOCATION	11-XA-23-01	2
PLACARD ASSEMBLY - ELT SWITCH OPERATION	11-PP-32-01	2
PLACARD ASSEMBLY - EPA CAN	11-XA-24-01	6
PLACARD ASSEMBLY - EXIT SIGN	11-LQ-38-01	76
PLACARD ASSEMBLY - EXTERNAL POWER	11-B-24-01	5
PLACARD ASSEMBLY - EXTERNAL POWER	11-XA-24-01	1
PLACARD ASSEMBLY - EXTERNAL POWER	11-PP-24-01	1
PLACARD ASSEMBLY - FLUX VALVE	11-XA-25-01	3
PLACARD ASSEMBLY - FLUX VALVE	11-XA-25-01	3A
PLACARD ASSEMBLY - FLUX VALVE	11-N-25-01	1
PLACARD ASSEMBLY - FORWARD CARGO COMPARTMENT	11-PP-22-01	2
PLACARD ASSEMBLY - FORWARD CARGO COMPARTMENT	11-PP-22-02	3
PLACARD ASSEMBLY - FORWARD COMPARTMENT ZONE 921	11-N-22-01	79
PLACARD ASSEMBLY - FUEL CAP INBOARD	11-LQ-25-01	1
PLACARD ASSEMBLY - FUEL CAP OUTBOARD	11-LQ-25-01	3
PLACARD ASSEMBLY - FUEL CAPACITY INBOARD FUEL FILLER	11-N-25-01	6
PLACARD ASSEMBLY - FUEL CAPACITY OUTBOARD FUEL FILLER	11-N-25-01	4
PLACARD ASSEMBLY - FUEL FILL CAPACITY INBOARD	11-PP-25-01	1
PLACARD ASSEMBLY - FUEL FILL CAPACITY OUTBOARD	11-PP-25-01	2
PLACARD ASSEMBLY - FUEL FILTER	11-XA-24-01	5
PLACARD ASSEMBLY - FUEL FILTER	11-N-24-01	81
PLACARD ASSEMBLY - FUEL FILTER	11-PP-24-01	2
PLACARD ASSEMBLY - JET A FUEL	11-XA-25-01	2
PLACARD ASSEMBLY - JET FUEL	11-XA-25-01	1
PLACARD ASSEMBLY - LEFT CREW DOOR	11-LQ-38-01	1
PLACARD ASSEMBLY - LEFT CREW DOOR	11-XA-28-01	1
PLACARD ASSEMBLY - LEFT CREW DOOR	11-PP-28-01	2
PLACARD ASSEMBLY - LEFT CREW DOOR BLACK LETTERS	11-N-28-01	7
PLACARD ASSEMBLY - LEFT CREW DOOR WHITE LETTERS	11-N-28-01	9
PLACARD ASSEMBLY - LOCK OPERATION	11-N-38-01	6
PLACARD ASSEMBLY - LOCK OPERATION	11-XA-38-01	4
PLACARD ASSEMBLY - LOCK OVERRIDE	11-XA-38-01	2
PLACARD ASSEMBLY - LOCK OVERRIDE	11-N-38-01	8
PLACARD ASSEMBLY - LOWER PASSENGER DOOR	11-XA-28-01	5
PLACARD ASSEMBLY - LOWER PASSENGER DOOR	11-N-38-01	77
PLACARD ASSEMBLY - LOWER PASSENGER DOOR BLACK LETTER	11-N-28-01	13
PLACARD ASSEMBLY - LOWER PASSENGER DOOR WARNING	11-B-38-01	154
PLACARD ASSEMBLY - LOWER PASSENGER DOOR WARNING	11-B-38-01	154A
PLACARD ASSEMBLY - LOWER PASSENGER DOOR WHITE LETTER	11-N-28-01	15
PLACARD ASSEMBLY - ON SIDE OF NOSE LANDING GEAR	11-PP-27-01	4
PLACARD ASSEMBLY - OXYGEN FILL DOOR	11-XA-23-01	3
PLACARD ASSEMBLY - PASSENGER DOOR	11-XA-28-01	4
PLACARD ASSEMBLY - PASSENGER DOOR	11-PP-28-01	1
PLACARD ASSEMBLY - PASSENGER DOOR WHITE LETTERS	11-N-28-01	6
PLACARD ASSEMBLY - POD DOOR LOCKED FORWARD, CENTER, AFT	11-XA-22-01	7
PLACARD ASSEMBLY - POD DOOR LOCKED FORWARD, FORWARD CENTER, AFT CENTER, AFT	11-XA-22-01	8
PLACARD ASSEMBLY - RIGHT CREW DOOR	11-LQ-38-01	3
PLACARD ASSEMBLY - RIGHT CREW DOOR	11-XA-28-01	2
PLACARD ASSEMBLY - RIGHT CREW DOOR BLACK LETTERS	11-N-28-01	10
PLACARD ASSEMBLY - RIGHT CREW DOOR WHITE LETTERS	11-N-28-01	12
PLACARD ASSEMBLY - RUDDER LOCK	11-XA-23-01	4
PLACARD ASSEMBLY - RUDDER LOCK	11-N-24-01	5
PLACARD ASSEMBLY - RUDDER LOCK CAUTION	11-XA-27-01	3
PLACARD ASSEMBLY - RUDDER LOCK CAUTION	11-N-27-01	2
PLACARD ASSEMBLY - TOW LIMIT	11-XA-27-01	2
PLACARD ASSEMBLY - TOW LIMIT WARNING	11-N-27-01	6
PLACARD ASSEMBLY - TUG TOW	11-XA-27-01	1
PLACARD ASSEMBLY - TUG TOW	11-N-27-01	7
PLACARD ASSEMBLY - TURN LIMIT	11-PP-27-01	1
PLACARD ASSEMBLY - UPPER CARGO DOOR	11-XA-28-01	3
PLACARD ASSEMBLY - UPPER HALF PASSENGER DOOR BLACK LETTERS	11-N-28-01	4
PLACARD ID PLATE - USED ON FUSELAGE ASSEMBLY & LEFT/RIGHT WING ASSYS	11-N-32-01	8A
PLACARD LOCATIONS	11-00-00	
PLACARD SET - COMPASS CORRECTION	11-N-31-01	75
PLATE	11-N-22-01	9
PLATE	25-51-01-03	23A
PLATE	25-52-00-03	12A
PLATE	53-20-01-03	14A
PLATE - ANCHOR	25-51-02-01	6

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
PLATE - ANCHOR.....	25-51-03-01	2
PLATE - CARGO BARRIER NET.....	25-51-01-01	23
PLATE - CARGO BARRIER NET.....	25-51-01-02	25
PLATE - CARGO BARRIER NET.....	25-51-02-02	6
PLATE - CARGO BARRIER NET.....	25-51-02-03	7
PLATE - LANDING LIGHT.....	33-40-00-01	3
PLATE - LANDING LIGHT.....	33-40-00-01A	13
PLATE - LEFT.....	25-10-04-02	13
PLATE - RIGHT.....	25-10-04-02	14
PLATE - TAXI LIGHT.....	33-40-00-01	6
PLATE - TAXI LIGHT -LEFT AND RIGHT.....	33-40-00-01A	14
PLATE - TAXI LIGHT -LEFT AND RIGHT.....	33-40-00-01A	14A
PLATE ASSEMBLY - STRIKE RUDDER LOCK.....	55-40-00-03	108
PLATE ASSEMBLY - SWITCH ATTACH.....	21-41-00-01	12A
PLATE ASSEMBLY - SWITCH ATTACH.....	76-10-01-02	112A
PLATE IDENTIFICATION - USED ON FUSELAGE ASSEMBLY & LEFT/RIGHT WING ASSYS.....	11-N-32-01	8
PLATES AND SKINS - TAILCONE VENTILATION AND DRAINAGE.....	53-23-00	
PLENUM - HEATER DUCT LEFT FORWARD CENTER.....	21-22-02-01	157
PLENUM - HEATER DUCT RIGHT FORWARD CENTER.....	21-22-02-01	158
PLENUM - LEFT FORWARD HEATER DUCT.....	21-22-00-01	150
PLENUM - RIGHT FORWARD HEATER DUCT.....	21-22-00-01	151
PLENUM ASSEMBLY.....	80-10-01-02	10A
PLENUM ASSEMBLY.....	80-10-01-03	6
PLUG.....	24-37-00-01	11
PLUG.....	30-40-00-02	80
PLUG.....	30-60-00-01	30
PLUG.....	30-60-00-02	22
PLUG.....	32-20-00-02	105
PLUG.....	33-20-00-01	21
PLUG.....	33-20-00-01	84
PLUG.....	33-44-00-01	18
PLUG.....	33-45-00-01	21
PLUG.....	34-11-00-01	310
PLUG.....	34-20-00-01	111
PLUG.....	34-20-00-01	96
PLUG.....	35-10-00-05	81
PLUG.....	35-10-00-05	89
PLUG.....	35-10-01-04	12
PLUG.....	35-10-01-04	153
PLUG.....	35-10-01-04	157
PLUG.....	35-10-01-04	170
PLUG.....	35-10-01-04	23
PLUG.....	35-10-01-04	242
PLUG.....	35-10-01-04	248
PLUG.....	35-10-01-04	252
PLUG.....	35-10-01-04	264
PLUG.....	35-10-01-04	268
PLUG.....	35-10-01-04	27
PLUG.....	35-10-01-04	272
PLUG.....	35-10-01-04	3
PLUG.....	35-10-01-04	33
PLUG.....	35-10-01-04	91
PLUG.....	35-10-01-04	95
PLUG.....	35-10-01-04	99
PLUG.....	35-13-00-01	8
PLUG.....	73-32-00-01	8B
PLUG - ALTERNATOR CONTROL UNIT.....	24-36-00-01	5
PLUG - AT INDICATOR.....	79-30-00-01	4
PLUG - BATTERY.....	24-34-00-01	96A
PLUG - ELECTRIC.....	30-10-01-01	43
PLUG - RECEPTACLE.....	24-36-00-01	25
PLUG - STANDBY ALTERNATOR RELAY.....	24-36-00-01	41
PLUG ASSEMBLY - WINDOW.....	56-21-00-01	1
PLUG ASSEMBLY - WINDOW.....	56-21-00-02	1
PLUG ASSEMBLY - WINDOW.....	56-21-00-02	3
PLUG BUTTON.....	53-30-00-01	48
PLUG BUTTON.....	57-60-00-01	76
PLUG BUTTON - DOOR JAMB, PASSENGER AND CARGO.....	53-10-01-01	54
PLUG BUTTON - DOOR JAMB, PASSENGER AND CARGO.....	53-10-01-02	55
PLUG BUTTON - DOOR JAMB, PASSENGER AND CARGO.....	53-13-00-01	53
PLUG BUTTON - DOOR JAMB, PASSENGER AND CARGO.....	53-13-00-02	64

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
PLUG BUTTON - INSTALLED IN PASSENGER AND CARGO DOOR JAMBS	25-10-02-01	26
PLUG BUTTON - INSTALLED IN PASSENGER AND CARGO DOOR JAMBS	25-23-03-01	9A
PLUG/BLEEDER	28-21-00-02	96B
POCKET ASSEMBLY	25-10-00-02A	27
POCKET ASSEMBLY - SEAT BACK	25-10-00-02	40
POD ASSEMBLY	34-44-00-02	79
POD ASSEMBLY - WEATHER RADAR	34-45-00-01	13
POD ASSEMBLY - WEATHER RADAR	34-45-00-01	13A
POD ASSEMBLY - WEATHER RADAR, USED ON -203 SPARE RADOME/POD ASSEMBLY	34-45-00-01	21
POROUS PANEL - LEFT CENTER WING REFERENCE SUPPLIER PART NUMBER 13102-22	30-10-02-02	77
POROUS PANEL - LEFT HORIZONTAL STABILIZER REFERENCE SUPPLIER PART NUMBER 13102-33	30-10-02-02	10
POROUS PANEL - LEFT INBOARD WING 1.2MM	30-10-02-02	80B
POROUS PANEL - LEFT INBOARD WING 1.2MM	30-10-02-02	80C
POROUS PANEL - LEFT INBOARD WING REFERENCE SUPPLIER PART NUMBER 13102-27	30-10-02-02	80
POROUS PANEL - LEFT OUTBOARD WING REFERENCE SUPPLIER PART NUMBER 13102-21	30-10-02-02	75
POROUS PANEL - LEFT STRUT REFERENCE SUPPLIER PART NUMBER 13102-29	30-10-02-02	82
POROUS PANEL - RIGHT CENTER WING REFERENCE SUPPLIER PART NUMBER 13102-24	30-10-02-02	78
POROUS PANEL - RIGHT CENTER WING WITH RADAR	30-10-02-02	79A
POROUS PANEL - RIGHT CENTER WING WITH RADAR	30-10-02-02	79B
POROUS PANEL - RIGHT CENTER WING WITH RADAR REFERENCE SUPPLIER PART NUMBER 13102-26	30-10-02-02	79
POROUS PANEL - RIGHT INBOARD WING 1.2MM	30-10-02-02	81B
POROUS PANEL - RIGHT INBOARD WING 1.2MM	30-10-02-02	81C
POROUS PANEL - RIGHT INBOARD WING REFERENCE SUPPLIER PART NUMBER 13102-28	30-10-02-02	81
POROUS PANEL - RIGHT INBOARD WING SPARES ORDER 13102-108	30-10-02-02	81A
POROUS PANEL - RIGHT STRUT REFERENCE SUPPLIER PART NUMBER 13102-10	30-10-02-02	83
POROUS PANEL - VERTICAL FIN STABILIZER REFERENCE SUPPLIER PART NUMBER 13102-35	30-10-02-02	2
POTENTIOMETER ASSEMBLY - VOLTMETER ADJUSTMENT USED ON 2670120-1 ASSEMBLY	24-37-00-01	10
POWER CONTROLLER CLIP ASSEMBLY	24-20-00-01	4
POWER LEVER	76-10-01-01B	82
POWER SUPPLY - NAVIGATION AND STROBE LIGHT	33-41-00-01	4
POWER SUPPLY - NAVIGATION AND STROBE LIGHT	33-41-00-01	4A
PRESSURE REGULATOR	36-10-00-02	4A
PRESSURE REGULATOR	36-10-00-02	5
PRESSURE REGULATOR - ENGINE BLEED AIR	36-10-00	
PRESSURE REGULATOR - ENGINE BLEED AIR INSTALLATION	36-10-00	
PRESSURE SWITCH	30-10-02-06	239
PRESSURE SWITCH	30-10-02-07	239
PRESSURE SWITCH	30-10-02-08	14
PRESSURE SWITCH - AIRSPEED DIFFERENTIAL	34-11-00-01	75B
PRESSURE SWITCH - AIRSPEED DIFFERENTIAL	34-11-00-01	76
PRESSURE SWITCH - AIRSPEED DIFFERENTIAL	34-11-00-01	77
PRESSURE SWITCH - AIRSPEED DIFFERENTIAL LOWER	34-11-00-01	76A
PRESSURE SWITCH - AIRSPEED DIFFERENTIAL LOWER	34-11-00-01	77A
PRESSURE TRANSDUCER	79-30-00-02	19
PRESSURE TRANSDUCER	79-30-00-03	15
PRESSURE TRANSDUCER	79-30-00-03	15A
PRESSURE TRANSDUCER - UN005	79-30-00-02	19A
PRIMARY AND SECONDARY CONSOLE LIGHTING INSTALLATION	33-20-00	
PRIMARY EXHAUST DUCT INSTALLATION	78-10-00	
PROCESSOR - WX500 STORMSCOPE REFERENCE SUPPLIER PART NUMBER 805-11500-001(MOD C)	34-40-00-01	22
PROP ANCHOR ASSEMBLY	10-10-00-02	30
PROP ANCHOR ASSEMBLY	10-10-00-03	31
PROP ANCHOR ASSEMBLY	10-10-00-03	31A
PROP ANCHOR ASSEMBLY	10-10-00-03	31B
PROP ANCHOR ASSEMBLY	10-10-00-03	31C
PROP ANCHOR ASSEMBLY	10-10-00-03	31D
PROP ANCHOR ASSEMBLY - SPARES	10-10-00-01	12
PROP ANCHOR ASSEMBLY - SPARES	10-10-00-01	12B
PROP ANCHOR ASSEMBLY - SPARES	10-10-00-02	30B
PROP ANCHOR ASSEMBLY - SPARES	10-10-00-01	12A
PROP ANCHOR ASSEMBLY - SPARES	10-10-00-02	30A
PROPELLER AND SPINNER INSTALLATION - MCCAULEY	61-11-00	
PROPELLER AND SPINNER INSTALLATION 675HP - HARTZELL	61-10-00	
PROPELLER AND SPINNER INSTALLATION 867HP - HARTZELL	61-10-00	
PROPELLER ASSEMBLY - 3 BLADED HARTZELL	61-10-00-01	8
PROPELLER ASSEMBLY - NON DEICED MCCAULEY	61-11-00-01	1
PROPELLER DEICE INSTALLATION - HARTZELL	30-60-00	
PROPELLER DEICE INSTALLATION - MCCAULEY	30-60-00	
PROPELLER OVERSPEED GOVERNOR INSTALLATION	61-20-01	

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
PROPELLER RPM INDICATING SYSTEM.....	77-13-00	
PROPELLER TKS INSTALLATION - MCCAULEY.....	30-60-10	
PUBLIC ADDRESS SPEAKER INSTALLATION - 208.....	23-50-04	
PUBLIC ADDRESS SPEAKER INSTALLATION - 208B.....	23-50-05	
PULLEY.....	21-51-01-02	91
PULLEY.....	21-51-01-02A	93
PULLEY.....	22-10-03-01	15
PULLEY.....	22-10-03-01A	75
PULLEY.....	27-10-02-01	108
PULLEY.....	27-10-02-01	12
PULLEY.....	27-10-02-01	6
PULLEY.....	27-10-02-02	12
PULLEY.....	27-10-02-02	154
PULLEY.....	27-10-02-02	24
PULLEY.....	27-10-02-02	6
PULLEY.....	27-10-02-03	34
PULLEY.....	27-20-01-01	21
PULLEY.....	27-30-01-01	82
PULLEY.....	27-30-02-01	6
PULLEY.....	27-50-01-04	238
PULLEY BRACKET - UPPER .040 2024 T42.....	53-13-03-02	7
PULLEY BRACKET ASSEMBLY - LOWER .040 2024 T42.....	53-13-03-02	8
PUMP - EJECTOR.....	28-22-00-01	81
PUMP - EJECTOR.....	28-22-00-01	81A
PUMP - WINDSCREEN WASH.....	30-10-02-08	6
PUMP ASSEMBLY.....	30-10-02-06	20
PUMP ASSEMBLY.....	30-10-02-07	20
PUMP ASSEMBLY.....	30-10-02-08	5
PUSHROD ARM ASSEMBLY - ELEVATOR.....	55-20-00-01	10
QUADRANT ASSEMBLY - ENGINE CONTROL WITH "GO AROUND" SWITCH.....	76-10-01-02	1
QUADRANT ASSEMBLY - ENGINE CONTROL WITHOUT "GO AROUND" SWITCH.....	76-10-01-02	1A
RADAR - GWX 68 WEATHER.....	34-45-00-01	1
RADAR - GWX 70 WEATHER.....	34-45-00-01	1B
RADAR ALTIMETER - KRA-405B.....	34-10-00-08A	7
RADAR ALTIMETER INSTALLATION.....	34-10-00	
RADIO COOLING INSTALLATION - KING RADIOS.....	21-20-01	
RADIO COOLING INSTALLATION - SPERRY RADIOS.....	21-20-00	
RADIO SUPPORT STRAP.....	34-51-08-01	4
RADIO SUPPORT STRAP.....	34-51-15-01	5
RADIO SUPPORT STRAP.....	34-51-16-01	3
RDR 2000 WEATHER RADAR - VENDOR NO. 071-01519-0101 (MOD 1 SWID 01/04 & ON).....	34-44-00-02	25A
READING LIGHT.....	33-20-00-03	3A
REAR CARGO COMPARTMENT WALL UPHOLSTERY.....	25-25-00	
REAR CARGO COMPARTMENT WALL UPHOLSTERY - CARGOMASTER.....	25-25-00	
REAR CARGO COMPARTMENT WALL UPHOLSTERY - HARD INTERIOR.....	25-25-00	
REAR CARGO COMPARTMENT WALL UPHOLSTERY - NOT APPLICABLE TO PASSENGER VERSION.....	25-25-00	
REAR CARGO COMPARTMENT WALL UPHOLSTERY - PASSENGER VERSION.....	25-25-00	
RECEIVER - ADF.....	34-50-01-01	1B
RECEIVER - ADF (KING KR87) -MOD 9, SOFTWARE MOD 01.....	34-50-01-01	1A
RECEIVER - GRT10 XM REMOTE.....	44-20-00-01	1
RECEIVER - GRT10 XM REMOTE.....	44-20-00-01A	1
RECEIVER DRYER ASSEMBLY.....	21-51-00-01	8
RECEIVER/EXCITER - KTR953.....	23-10-00-01	14
RECEPTACLE PLATE ASSEMBLY - LEFT.....	24-20-00-01	10
RECEPTACLE PLATE ASSEMBLY - RIGHT.....	24-20-00-01	13
RECEPTACLE PLATE CLIP - LEFT AFT.....	24-20-00-01	12
RECEPTACLE PLATE CLIP - LEFT FORWARD.....	24-20-00-01	11
RECEPTACLE PLATE CLIP - RIGHT AFT.....	24-20-00-01	15
RECEPTACLE PLATE CLIP - RIGHT FORWARD.....	24-20-00-01	14
REDUCER.....	21-51-00-01B	9
REDUCER.....	28-21-00-01	103
REDUCER.....	28-21-00-02	104
REDUCER.....	28-21-00-03	25
REDUCER.....	30-10-03-01	21
REDUCER.....	30-10-03-02	21
REGULATOR - ASSEMBLY-OXYGEN.....	35-01-00-02	2
REGULATOR - OXYGEN.....	35-01-00-01	3
REGULATOR ASSEMBLY - PRESSURE REFER SK208-70.....	36-10-00-01	1
RELAY.....	24-51-00-02	1B
RELAY.....	27-30-03-01	20
RELAY - AND M83536/9-024M.....	24-51-00-02	1A

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
RELAY - FUEL SELECTOR OFF WARNING	28-42-01-01	12
RELAY BOX ASSEMBLY	24-50-02-01	2
RELAY SOCKET	30-40-00-02	101
RELIEF TUBE ASSEMBLY	38-30-01-01	12
RELIEF TUBE INSTALLATION	38-30-01	
REMOTE ACCESSORY BOX - KING AUTOPILOT INSTALLATION	22-10-09	
REMOTE GYRO INSTALLATION - KING TYPE KG 102A	34-23-00	
REMOTE MOUNT RACK	31-30-00-02	12
REMOTE MOUNT RACK	31-30-00-02A	14
RESERVOIR ASSEMBLY - BRAKE FLUID	32-41-00-01	2
RESERVOIR ASSEMBLY - FUEL	28-22-00-01	4
RESERVOIR ASSEMBLY - OVERBOARD	30-10-01-01	13
RESTRAINING NET INSTALLATION - CARGO DOOR	25-51-00	
RESTRAINT ASSEMBLY	25-10-05-02	16
RESTRAINT ASSEMBLY	25-21-00-02B	17
RESTRAINT SYSTEM - LEFT	25-21-00-03	93
RESTRAINT SYSTEM - RIGHT	25-21-00-02	94
RESTRAINT SYSTEM - RIGHT	25-21-00-03	95
RESTRICTOR	77-11-00-02	32
RESTRICTOR	77-11-00-02	54
RETAINER	33-40-00-01	32
RETAINER	33-40-00-01A	21
RETAINER	33-45-00-01A	10
RETAINER	76-10-01-01B	109
RETAINER - CONTROL CABLE	76-10-01-01B	94
RETAINER - FUEL CONDITION CONTROL	76-10-01-01	156
RETAINER - LENS	33-41-00-02	5
RETAINER - SEAL LOWER RIGHT	71-60-01-01	238
RETAINER ASSEMBLY	71-60-01-02	25
RETAINER ASSEMBLY	71-60-01-02	33
RETAINER ASSEMBLY	71-60-01-02	33A
RETAINER ASSEMBLY	71-60-01-02	33B
RETAINING RING	33-45-00-01A	4
RETAINING RING ASSEMBLY	33-45-00-01A	3
RETURN SPRING ASSEMBLY - BRAKE	32-41-02-01	1
RH FLIGHT PANEL INDICATORS	34-10-00	
RING ASSEMBLY - SLIP-PROPELLER DEICE	30-60-00-02	11
RING DOUBLER ASSEMBLY - WING INSPECTION LIGHT	33-44-00-03	4
ROD ASSEMBLY	30-40-00-01	2A
ROD END	76-10-01-01	109
ROD END	76-10-01-01	160
ROD END	76-10-01-01	79
ROD END	76-10-01-01	97
ROD END	78-10-00-05	31A
ROLL ACTUATOR INSTALLATION	27-10-02	
ROLL SERVO AUTOPILOT INSTALLATION	22-10-03	
ROLL SERVO AUTOPILOT INSTALLATION - KING AUTOPILOTS	22-10-03	
RUBBER - CHANNEL	71-60-01-02	77A
RUBBER - CHANNEL	71-60-01-02	92A
RUDDER ASSEMBLY	55-40-00-01	3
RUDDER ASSEMBLY	55-40-00-02	4
RUDDER ASSEMBLY	55-40-00-03	2
RUDDER ASSEMBLY	55-40-00-04	4
RUDDER ASSEMBLY	55-40-00-05	2
RUDDER ASSEMBLY	55-40-00-05	2A
RUDDER ASSEMBLY	55-40-00-05	2C
RUDDER ASSEMBLY	55-40-00-06	5A
RUDDER ASSEMBLY	55-40-00-07	2
RUDDER ASSEMBLY	55-40-00-07	2A
RUDDER ASSEMBLY	55-40-00-07	2B
RUDDER ASSEMBLY	55-40-00-07	2C
RUDDER ASSEMBLY	55-40-00-07	2D
RUDDER ASSEMBLY	55-40-00-07	2F
RUDDER ASSEMBLY	55-40-00-07	2G
RUDDER ASSEMBLY - FOR SPARES	55-40-00-06	5B
RUDDER ASSEMBLY - SPARE	55-40-00-04	4B
RUDDER ASSEMBLY - SPARE	55-40-00-04	4A
RUDDER CONTROL LOCK INSTALLATION	27-70-00	
RUDDER CONTROL SYSTEM	27-20-01	
RUDDER GUST LOCK INSTALLATION	27-70-00	
RUDDER HINGE ASSEMBLY - LOWER	55-30-00-04	18

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
RUDDER HINGE ASSEMBLY - UPPER	55-30-00-04	14
RUDDER INSTALLATION	55-40-00	
RUDDER INSTALLATION - 208	55-40-00	
RUDDER INSTALLATION - 208B	55-40-00	
RUDDER INSTALLATION LONG CHORD - 208	55-40-00	
RUDDER PEDALS INSTALLATION	27-20-02	
RUDDER STRIKE PLATE	55-40-00-07	108
RUDDER TRIM CONTROL SYSTEM	27-20-02	
RUSSIAN EXTERIOR PLACARDS AND MARKINGS - CABIN	11-RA-32	
RUSSIAN EXTERIOR PLACARDS AND MARKINGS - CABIN DOORS	11-RA-28	
RUSSIAN EXTERIOR PLACARDS AND MARKINGS - EMPENNAGE AND REAR BAGGAGE	11-RA-23	
RUSSIAN EXTERIOR PLACARDS AND MARKINGS - FLIGHT COMPARTMENT	11-RA-31	
RUSSIAN EXTERIOR PLACARDS AND MARKINGS - FUSELAGE	11-RA-22	
RUSSIAN EXTERIOR PLACARDS AND MARKINGS - TKS	11-RA-25	
RUSSIAN EXTERIOR PLACARDS AND MARKINGS - TKS	11-RA-22	
RUSSIAN INTERIOR PLACARDS AND MARKINGS - CABIN DOORS	11-RA-38	
SADDLE	71-70-00-02	10
SAFETY CLIP	52-10-00-03	14
SAFETY CLIP	52-10-00-04	10
SAFETY CLIP	52-10-01-01	4
SAFETY CLIP	52-10-02-01	20
SAFETY CLIP	52-31-00-01	4
SAFETY CLIP	52-31-00-02	4
SANDEN COMPRESSOR	21-51-01-02	5
SANDEN COMPRESSOR	21-51-01-02A	5
SCREW	21-21-00-01	35
SCREW	21-21-03-03	83
SCREW	21-22-00-01	2
SCREW	21-22-00-01	76
SCREW	21-22-00-01A	2
SCREW	21-22-01-01	2
SCREW	21-22-01-01	21
SCREW	21-22-02-01	2
SCREW	21-22-02-01A	2
SCREW	23-70-00-01	18
SCREW	24-30-00-02	25
SCREW	24-50-00-01	86B
SCREW	24-50-00-01	88C
SCREW	24-50-00-01	88D
SCREW	24-50-02-01	19
SCREW	24-50-02-01	245
SCREW	25-10-04-01	2A
SCREW	25-10-04-02	11
SCREW	25-10-05-02	100
SCREW	25-10-05-02	105
SCREW	25-10-05-02	91
SCREW	25-21-00-02B	85
SCREW	25-21-00-02B	93
SCREW	25-21-00-02B	98
SCREW	25-23-02-04	37A
SCREW	25-52-00-01	205
SCREW	25-52-00-02	318
SCREW	25-52-00-02A	249
SCREW	27-10-01-02	35
SCREW	27-10-01-03	28
SCREW	27-70-00-01	26
SCREW	28-21-00-01	22
SCREW	28-21-00-01	28
SCREW	28-21-00-02	22
SCREW	28-21-00-02	28
SCREW	30-10-02-06	178
SCREW	30-10-02-06	22
SCREW	30-10-02-06	270
SCREW	30-10-02-07	178
SCREW	30-10-02-07	22
SCREW	30-10-02-07	270
SCREW	31-00-00-01	39
SCREW	31-00-00-02	83
SCREW	33-10-00-03	2A
SCREW	33-20-00-04	15
SCREW	33-20-00-04	5

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
SCREW.....	34-10-00-07	14
SCREW.....	34-10-00-07	79
SCREW.....	34-11-00-02	95
SCREW.....	34-11-00-03	95
SCREW.....	34-11-00-04	95
SCREW.....	34-11-01-02	3
SCREW.....	34-20-00-01	8
SCREW.....	34-20-00-01	87
SCREW.....	34-43-00-01	17
SCREW.....	34-44-00-01	10
SCREW.....	34-44-00-02	13
SCREW.....	34-52-00-01	11
SCREW.....	35-10-00-01	31
SCREW.....	35-10-00-01	9
SCREW.....	35-10-00-02	11
SCREW.....	35-10-00-03	10
SCREW.....	35-10-00-03	38
SCREW.....	35-10-00-04	10
SCREW.....	35-10-00-04	80
SCREW.....	35-10-00-05	12
SCREW.....	35-10-00-05	98
SCREW.....	35-10-01-01	45
SCREW.....	35-10-01-01	9
SCREW.....	35-10-01-02	27
SCREW.....	35-10-01-03	76
SCREW.....	35-10-01-04	17
SCREW.....	35-10-01-04	230
SCREW.....	35-10-01-04	77
SCREW.....	52-32-00-02	113
SCREW.....	53-12-00-01	82A
SCREW.....	53-12-00-01	89A
SCREW.....	53-12-00-03	163A
SCREW.....	53-12-00-03	169A
SCREW.....	53-20-00-02	16
SCREW.....	53-20-00-03	15
SCREW.....	53-22-01-01	14
SCREW.....	53-22-01-01	24
SCREW.....	53-22-01-01	37
SCREW.....	53-22-01-01	8
SCREW.....	53-22-01-02	16
SCREW.....	53-22-01-02	23
SCREW.....	53-22-01-02	31
SCREW.....	53-22-01-02	7
SCREW.....	53-22-01-03	12
SCREW.....	53-22-01-03	27
SCREW.....	53-22-01-03	34
SCREW.....	53-22-01-04	16
SCREW.....	53-22-01-04	24
SCREW.....	53-22-01-04	32
SCREW.....	53-22-01-04	7
SCREW.....	53-22-01-06	83
SCREW.....	55-20-00-01	155
SCREW.....	55-20-00-02	155
SCREW.....	57-60-00-01	2
SCREW.....	71-60-00-02	180
SCREW.....	76-10-01-02	159B
SCREW.....	77-30-00-01	5
SCREW.....	77-30-00-02	5
SCREW - BLEEDER.....	32-40-00-03	26
SCREW - FLOORBOARD ASSEMBLY.....	53-20-00-01	20
SCREW - LEFT FLIGHT PANEL ASSEMBLY ATTACH.....	53-22-01-05	7
SCREW - LEFT ONLY.....	56-30-00-01	18
SCREW - LEFT ONLY.....	57-10-01-01	104
SCREW - MOUNT.....	35-10-01-04	160
SCREW - PILOT AND COPILOT.....	25-22-00-01	10
SCREW - RADIO PANEL ASSEMBLY ATTACH.....	53-22-01-05	23
SCREW - RIGHT FLIGHT PANEL ASSEMBLY ATTACH.....	53-22-01-05	13
SCREW - SUB-PANEL ASSEMBLY ATTACH.....	53-22-01-06	76
SCREW - SWITCH PLATE ATTACH.....	53-22-01-05	37
SCREW - USED ON 2613358-1.....	31-00-00-03	18
SCUFF PLATE - LEFT.....	25-10-03-01	27

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
SCUFF PLATE - LEFT CREW DOOR	25-10-03-01	32A
SCUFF PLATE - LEFT CREW DOOR	25-10-03-01	32
SCUFF PLATE - LEFT STANDARD	25-10-03-01	1
SCUFF PLATE - RIGHT	25-10-03-01	28
SCUFF PLATE - RIGHT CREW DOOR	25-10-03-01	34A
SCUFF PLATE - RIGHT CREW DOOR	25-10-03-01	34
SCUFF PLATE - RIGHT STANDARD	25-10-03-01	2
SCUFF PLATE AND CONTROL COLUMN COVER	25-10-03	
SCUFF PLATE ASSEMBLY - CO-PILOT .040 2024 T42	53-20-00-01	52
SCUFF PLATE ASSEMBLY - COPILOT	53-20-00-02	48
SCUFF PLATE ASSEMBLY - COPILOT	53-20-00-02	49
SCUFF PLATE ASSEMBLY - COPILOT	53-20-00-03	46
SCUFF PLATE ASSEMBLY - COPILOT	53-20-00-03	47
SCUFF PLATE ASSEMBLY - LEFT ALL OPTS	25-10-03-01	22
SCUFF PLATE ASSEMBLY - LEFT FORWARD	25-28-00-04	30
SCUFF PLATE ASSEMBLY - LEFT STANDARD	25-10-03-01	21
SCUFF PLATE ASSEMBLY - LEFT STANDARD & ALL OPTS	25-10-03-01	23
SCUFF PLATE ASSEMBLY - PILOT	53-20-00-01	48
SCUFF PLATE ASSEMBLY - PILOT	53-20-00-01	48A
SCUFF PLATE ASSEMBLY - PILOT	53-20-00-02	43
SCUFF PLATE ASSEMBLY - PILOT	53-20-00-02	44
SCUFF PLATE ASSEMBLY - PILOT	53-20-00-02	44A
SCUFF PLATE ASSEMBLY - PILOT	53-20-00-03	41
SCUFF PLATE ASSEMBLY - PILOT	53-20-00-03	42
SCUFF PLATE ASSEMBLY - PILOT	53-20-00-03	42A
SCUFF PLATE ASSEMBLY - RIGHT ALL OPTS	25-10-03-01	25
SCUFF PLATE ASSEMBLY - RIGHT FORWARD 2615052-12	25-28-00-04	31
SCUFF PLATE ASSEMBLY - RIGHT STANDARD	25-10-03-01	24
SCUFF PLATE ASSEMBLY - RIGHT STANDARD & ALL OPTS	25-10-03-01	26
SEAL	21-51-01-02	80
SEAL	21-51-01-02A	80
SEAL	28-21-00-01	79
SEAL	30-10-02-03	24
SEAL	30-10-02-04	41
SEAL	30-10-02-06	158
SEAL	30-10-02-07	158
SEAL	30-10-02-08	106
SEAL	30-10-02-08	99C
SEAL	79-20-00-03	110
SEAL - AFT	71-60-01-02	163
SEAL - DRIVE SHAFT	21-51-01-01	92
SEAL - INNER	79-20-00-03	128
SEAL - LOWER INDUCTION AIR BAND RIGHT	71-60-01-01	239
SEAL - OUTER	79-20-00-03	118
SEAL - OUTER	79-20-00-03	129
SEAL - UPPER INDUCTION AIR BAND	71-60-01-01	236
SEAL ASSEMBLY - BLEED AIR DUCT	36-10-00-01	12
SEAL ASSEMBLY - FIREWALL HEATER CONTROL	53-10-00-01	241
SEAL ASSEMBLY - FIREWALL WIRE BUNDLE	53-10-00-01	239
SEAL ASSEMBLY - INDUCTION AIR PLENUM	71-60-01-01	1
SEAL LOWER - INNER	79-20-00-03	127
SEAL RETAINER	79-20-00-03	108
SEAL RETAINER - AFT	71-60-01-02	164
SEAL RETAINER - INNER	79-20-00-03	119
SEAL RETAINER - INNER	79-20-00-03	124
SEAL RETAINER - INNER	79-20-00-03	126
SEAL RETAINER - OUTER	79-20-00-03	125
SEAL RETAINER - OUTER	79-20-00-03	130
SEAL STRIP - FELT 10.11 IN LG BULK ITEM	71-60-01-01	246
SEALER STRIP	71-60-01-02	154
SEALER STRIP	71-60-01-02	159
SEALER STRIP	71-60-01-02	166
SEALER STRIP	71-60-01-02	170
SEALER STRIP	71-60-01-02	23
SEALER STRIP	71-60-01-02	24
SEALER STRIP	71-60-01-02	5
SEALER STRIP	71-60-01-02	78
SEALER STRIP	71-60-01-02	82
SEALER STRIP	71-60-01-02	89
SEALER STRIP	71-60-01-02	93
SEALER STRIP	71-60-01-02	99

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
SEALING RING.....	30-10-02-03	19
SEALING RING.....	30-10-02-03	20
SEALING RING.....	30-10-02-04	28
SEALING RING.....	30-10-02-04	29
SEALING RING.....	30-10-02-04	47
SEALING RING.....	30-10-02-06	163
SEALING RING.....	30-10-02-06	168
SEALING RING.....	30-10-02-06	262
SEALING RING.....	30-10-02-07	163
SEALING RING.....	30-10-02-07	168
SEALING RING.....	30-10-02-07	262
SEALING RING - REFERENCE SUPPLIER PART NUMBER S1201-12.....	30-10-02-08	97
SEAR STRIP - FELT 9.16 IN LG BULK ITEM.....	71-60-01-01	247
SEAT AND SHOULDER HARNESS INSTALLATION - 2 PASSENGER BRITISH CERTIFIED AIRPLANES.....	25-21-01	
SEAT AND SHOULDER HARNESS INSTALLATION - 3 PASSENGER.....	25-21-01	
SEAT ASSEMBLY - 2 PASSENGER.....	25-21-01-02	2
SEAT ASSEMBLY - 2 PASSENGER.....	25-21-01-02	2A
SEAT ASSEMBLY - 3 PASSENGER.....	25-21-01-01	2
SEAT ASSEMBLY - 3 PASSENGER.....	25-21-01-01	2A
SEAT ASSEMBLY - BENCH.....	25-21-00	
SEAT ASSEMBLY - PILOT AND COPILOT.....	25-10-00	
SEAT ASSEMBLY - PILOT AND COPILOT WITH ARMREST.....	25-10-00	
SEAT ASSEMBLY - SINGLE LH.....	25-21-00	
SEAT ASSEMBLY - SINGLE RH.....	25-21-00	
SEAT ASSEMBLY - STOWABLE.....	25-21-02-01	4
SEAT ASSEMBLY - STOWABLE.....	25-21-02-01	4A
SEAT ASSEMBLY - STOWABLE.....	25-21-02-01	2
SEAT RAIL AND TRACK INSTALLATION.....	53-40-00	
SEAT RAIL AND TRACK INSTALLATION - PASSENGER.....	53-40-00	
SEAT RELEASE ASSEMBLY - PILOT AND COPILOT.....	25-10-00-03	31
SEAT RESTRAINT - RIGHT.....	25-21-01-01	6
SEAT RESTRAINT SYSTEM.....	25-21-02-01	6
SEAT RESTRAINT SYSTEM - LEFT.....	25-21-00-01	96
SEAT RESTRAINT SYSTEM- - LEFT & CENTER.....	25-21-01-01	5
SEAT RESTRAINT SYSTEM-5 POINT PILOT & COPILOT.....	25-10-00-01	158A
SEAT RESTRAINT SYSTEM-5 POINT PILOT & COPILOT.....	25-10-00-01	158B
SEAT RESTRAINT SYSTEM-5 POINT PILOT & COPILOT.....	25-10-00-02	88
SEAT RESTRAINT SYSTEM-5 POINT PILOT & COPILOT.....	25-10-00-02	88A
SEAT RESTRAINT SYSTEM-5 POINT PILOT & COPILOT.....	25-10-00-02	88B
SEAT RESTRAINT SYSTEM-LEFT.....	25-21-01-02	5
SEAT RESTRAINT SYSTEM-RIGHT.....	25-21-01-02	6
SEAT TRACK ASSEMBLY - LEFT OUTBOARD S2617-1.....	53-20-00-02	122
SEAT TRACK ASSEMBLY - LEFT OUTBOARD S2617-1.....	53-40-00-02	75
SEAT TRACK ASSEMBLY - LEFT OUTBOARD S2617-1.....	53-40-00-03	75
SEAT TRACK ASSEMBLY - RIGHT OUTBOARD S2617-1.....	53-20-00-02	123
SEAT TRACK ASSEMBLY - RIGHT OUTBOARD S2617-1.....	53-40-00-02	76A
SEAT TRACK ASSEMBLY - RIGHT OUTBOARD S2617-1.....	53-40-00-03	76
SECOND TRANSPONDER ANTENNA INSTALLATION - FED-X ONLY.....	34-51-02	
SELECTOR VALVE ASSEMBLY.....	34-10-02-01	25
SELECTOR VALVE ASSEMBLY.....	34-10-02-02	25
SELECTOR VALVE ASSEMBLY - ALTERNATE STATIC SOURCE.....	34-11-00-01	151
SENSOR - BATTERY TEMP NICAD ONLY.....	24-34-00-01	12
SEPARATOR ASSEMBLY.....	77-11-00-02	43
SEPARATOR ASSEMBLY - INERTIAL.....	71-60-00-01	2A
SEPARATOR ASSEMBLY - TORQUE VENT.....	77-11-00-01	91
SEPARATOR ASSEMBLY - TORQUE VENT.....	77-12-00-01	91
SERIAL & PART NO PLACARD - ENGINE MOUNT.....	11-N-24-01	14
SHAFT.....	25-52-00-01	190
SHAFT.....	25-52-00-02	303
SHAFT.....	25-52-00-02A	176
SHAFT.....	25-52-00-02A	325
SHAFT.....	25-52-00-02A	400
SHELF.....	77-30-00-02	17
SHELF ASSEMBLY.....	77-30-00-02	16
SHELF ASSEMBLY - GRS 77 AHRs.....	34-25-00-01	4
SHELF ASSEMBLY - GRS 77 AHRs.....	34-25-00-01	4A
SHELF SUPPORT - AFT.....	77-30-00-02	18
SHELF SUPPORT - FORWARD.....	77-30-00-02	19
SHIM.....	21-51-01-02	26
SHIM.....	21-51-01-02A	26
SHIMMY DAMPENER ASSEMBLY - NOSE GEAR.....	32-20-01-01	1D

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
SHROUD - AFT	79-20-00-03	105
SHROUD ASSEMBLY	79-20-00-03	46
SHROUD ASSEMBLY - ALTERNATOR	24-36-02-02	1
SHROUD ASSEMBLY - LOWER OIL VALVE	79-20-00-03	76
SHUTOFF VALVE - FUEL	30-10-02-06	236
SHUTOFF VALVE - FUEL	30-10-02-07	236
SIGHT GAUGE FLOAT BALL	30-10-02-06	10
SIGHT GAUGE FLOAT BALL	30-10-02-07	10
SIGHT GAUGE FLOAT BALL	30-10-02-08	12
SIGNAL CONDITIONER INSTALLATION	28-40-00	
SILKSCREEN ASSEMBLY - WEIGHT LIMIT AFT CENTER COMPARTMENT	11-XA-22-01	4
SILKSCREEN ASSEMBLY - WEIGHT LIMIT AFT COMPARTMENT	11-XA-22-01	5
SILKSCREEN ASSEMBLY - WEIGHT LIMIT AFT COMPARTMENT	11-XA-22-01	6
SILKSCREEN ASSEMBLY - WEIGHT LIMIT CENTER COMPARTMENT	11-XA-22-01	2
SILKSCREEN ASSEMBLY - WEIGHT LIMIT FORWARD CENTER COMPARTMENT	11-XA-22-01	3
SILKSCREEN ASSEMBLY - WEIGHT LIMIT FORWARD COMPARTMENT	11-XA-22-01	1
SKIN	25-52-00-02A	75
SKIN - REMOVABLE .040 2024 T3	53-30-01-01	154
SKIN - WING UPPER LEFT .040 2024 T42	57-11-00-01	1
SKIN PANEL - LOWER .040 2024 T3	53-30-01-02	176
SKYWATCH ANTENNA INSTALLATION	34-40-00	
SLAVING ACCESSORY UNIT INSTALLATION	22-10-02	
SLEEVE	30-10-02-03	5
SLEEVE	30-10-02-03	6
SLEEVE	30-10-02-03	7
SLEEVE	30-10-02-04	46
SLEEVE	30-10-02-04	5
SLEEVE	30-10-02-04	6
SLEEVE	30-10-02-04	7
SLEEVE	30-10-02-06	160
SLEEVE	30-10-02-06	162
SLEEVE	30-10-02-06	169
SLEEVE	30-10-02-06	261
SLEEVE	30-10-02-07	160
SLEEVE	30-10-02-07	162
SLEEVE	30-10-02-07	169
SLEEVE	30-10-02-07	261
SLEEVE	30-10-02-08	105
SLEEVE	30-10-02-08	94
SMOKE GOGGLES	35-15-00-01	11
SOLENOID VALVE	30-10-02-06	249
SOLENOID VALVE	30-10-02-07	249
SOLENOID VALVE	30-10-02-08	4
SONALERT - WARNING HORN UC003	28-42-01-01	24A
SONALERT SIGNAL	28-42-01-01	24C
SOUNDPROOFING - 208 PASSENGER VERSION	25-80-00	
SOUNDPROOFING - 208B PASSENGER VERSION	25-80-00	
SOUNDPROOFING - CARGO VERSION	25-80-00	
SPACER	21-51-01-02	94
SPACER	21-51-01-02A	91
SPACER	25-22-00-02	10
SPACER	28-21-00-01	320
SPACER	28-21-00-02	322
SPACER	34-51-04-01	18
SPACER	34-51-05-01	17
SPACER	34-51-06-01	17
SPACER	34-51-07-01	17
SPACER	71-60-01-02	152
SPACER	71-70-00-02	112
SPACER	71-70-00-02	113
SPACER	71-70-00-02	114
SPACER	71-70-00-02	115
SPACER - ENGINE DRAIN LINE	71-70-00-01	6B
SPACER - ENGINE DRAIN LINE AFT	71-70-00-01	4
SPACER - ENGINE DRAIN LINE CENTER	71-70-00-01	5
SPACER - ENGINE DRAIN LINE FORWARD	71-70-00-01	6
SPACER INBOARD	35-14-00-01	177A
SPEAKER ASSEMBLY	23-50-04-01	12
SPEAKER INSTALLATION	23-50-01	
SPERRY 300 DME INSTALLATION - TYPE RT-377A	34-51-09	
SPERRY 400 DME INSTALLATION - TYPE R-477A	34-51-10	

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
SPERRY 400 GLIDESLOPE INSTALLATION - TYPE R-443B	34-30-00	
SPERRY 400 RMI INSTALLATION TYPE IN-404A	34-52-00	
SPERRY 400B IFCS INSTALLATION - TYPE IF-550A	34-56-02	
SPERRY 400B NAVOMATIC INSTALLATION - TYPE AF-550A	34-56-03	
SPERRY 400B SLAVED GYRO INSTALLATION	34-57-01	
SPERRY 400B UNSLAVED GYRO INSTALLATION	34-57-00	
SPERRY 800 ENCODING ALTIMETER INSTALLATION WITH ALTITUDE ALERTER	34-10-00	
SPERRY ADF RADIO INSTALLATION	34-50-00	
SPERRY AREA NAVIGATION RADIO INSTALLATION 400 - TYPE RN-479A	34-50-02	
SPERRY AUDIO/INTERCOM/MARKER BEACON PANEL INSTALLATION	23-50-00	
SPERRY NAV/COM RADIO INSTALLATIONS	34-50-00	
SPERRY SLAVED HSI INSTALLATION - 400B IFCS	34-57-03	
SPERRY SLAVED HSI INSTALLATION 400B AUTOPILOT	34-57-02	
SPERRY TRANSPONDER INSTALLATION 400 - TYPE RT-459A	34-51-00	
SPINDLE - DOOR HANDLE	52-10-00-02	27A
SPIRAL WRAP	28-10-03-01	163
SPIRAL WRAP	28-41-00-01	13
SPOILER ASSEMBLY - LEFT WING	57-70-00-01	1
SPOILER ASSEMBLY - RIGHT WING	57-70-00-01	2
SSCVR MOUNT	31-30-00-02	2
SSCVR MOUNT	31-30-00-02A	2
STA - STRAP	21-21-01-04	153
STA - STRAP	35-10-01-01	46
STA - STRAP	35-10-01-03	77
STA - STRAP - DUCT ATTACH	21-21-01-04	79
STA STRAP	24-36-01-01	151
STA STRAP	28-21-00-01	308
STA STRAP	28-21-00-02	310
STA STRAP	30-10-00-01	3
STA STRAP	30-10-00-02	19
STA STRAP	30-10-00-02	90
STA STRAP	30-10-01-01	97
STA STRAP	30-10-02-01	14
STA STRAP	32-50-00-01	18
STA STRAP	35-10-00-01	10
STA STRAP	35-10-00-01	32
STA STRAP	35-10-00-01	34
STA STRAP	35-10-00-01	38
STA STRAP	35-10-00-03	39
STA STRAP	35-10-00-03	43
STA STRAP	35-10-00-04	78
STA STRAP	35-10-00-04	81
STA STRAP	35-10-01-01	10
STA STRAP	35-10-01-01	48
STA STRAP	38-30-01-01	18
STA STRAP	73-32-00-01	11
STA STRAP WITH CARGO POD	28-22-00-01	152
STA STRAP WITH CARGO POD	28-22-00-01	153
STABILIZER ASSEMBLY - HORIZONTAL	55-10-00-01	1
STABILIZER ASSEMBLY - HORIZONTAL	55-10-00-02	1C
STABILIZER ASSEMBLY - HORIZONTAL	55-10-00-02	1D
STABILIZER ASSEMBLY - HORIZONTAL	55-10-00-02	1
STABILIZER ASSEMBLY - HORIZONTAL	55-10-00-02	1A
STABILIZER ASSEMBLY - HORIZONTAL	55-10-00-02	1B
STABILIZER SKINS AND FAIRINGS	55-10-01	
STALL WARNING SYSTEM	27-31-00	
STANDBY ALTERNATOR INSTALLATION	24-36-01	
STANDBY ALTERNATOR OVERHEAT WARNING SYSTEM - BRITISH CERTIFIED AIRPLANES	24-36-02	
STANDBY ALTERNATOR RELAY ASSEMBLY	24-36-00-01	9
STANDBY ALTERNATOR SHROUD INSTALLATION - BRITISH CERTIFIED AIRPLANES	24-36-02	
STANDBY ELECTRICAL SYSTEM	24-36-00	
STANDOFF KIT	22-10-03-01A	8
STANDOFF KIT	22-10-04-01A	8A
STANDOFF KIT	22-10-05-01A	8
STARTER-GENERATOR OVERHEAT WARNING SYSTEM	24-36-02	
STARTER/GENERATOR INSTALLATION	80-10-01	
STARTER/GENERATOR INSTALLATION - 200 AMP 867HP	80-10-01	
STARTER/GENERATOR INSTALLATION - 300 AMP	80-10-01	
STATIC INVERTER	34-52-02-01	4
STATIC WICK DISCHARGE INSTALLATION	23-60-00	
STENCIL - CARGOMASTER ZONE 251 AND 252	11-N-22-01	7

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
STENCIL - SUPER CARGOMASTER.....	11-N-22-01	8
STEP ASSEMBLY - PASSENGER DOOR MIDDLE.....	52-10-02-01	111
STEP ASSEMBLY - PASSENGER DOOR UPPER.....	52-10-02-01	110
STEP ASSEMBLY - UPPER.....	52-61-00-01	76B
STIFFENER.....	25-52-00-02	87
STIFFENER.....	25-52-00-02A	340
STIFFENER.....	25-52-00-02A	414
STIFFENER.....	25-52-00-02A	92
STIFFENER.....	25-52-00-02A	93
STIFFENER.....	79-20-00-03	122
STIFFENER - MAIN LANDING GEAR AFT COVER ASSEMBLY ATTACH.....	32-10-01-01	14
STIFFENER - MAIN LANDING GEAR FORWARD COVER ASSEMBLY ATTACH.....	32-10-01-01	13
STINGER AND FAIRING ASSEMBLY.....	53-50-01	
STINGER ASSEMBLY - PASSENGER VERSION.....	53-50-01-01	4
STORAGE CASE ASSEMBLY - WINDSHIELD DEICE PANEL.....	30-40-00-01	87
STORMSCOPE AND SKYWATCH INSTALLATION.....	34-40-00	
STORMSCOPE INSTALLATION.....	34-40-00	
STORMSCOPE/SKYWATCH INDICATOR.....	34-40-00-02	1
STRAINER ASSEMBLY.....	30-10-02-06	254
STRAINER ASSEMBLY.....	30-10-02-07	254
STRAINER ASSEMBLY.....	30-10-02-08	31
STRAINER ASSEMBLY - FUEL.....	28-21-00-01	1
STRAINER ASSEMBLY - FUEL.....	28-21-00-02	1
STRAINER ASSEMBLY - FUEL.....	28-21-00-02	1A
STRAINER WELD ASSEMBLY.....	30-10-02-06	258
STRAINER WELD ASSEMBLY.....	30-10-02-07	258
STRAP.....	21-21-00-01	11
STRAP.....	21-21-01-02	49
STRAP.....	21-21-01-02	53
STRAP.....	21-21-01-02	81
STRAP.....	21-21-01-04	162
STRAP.....	21-21-03-02	12
STRAP.....	21-21-03-02	35
STRAP.....	21-21-03-02	39
STRAP.....	21-21-03-02	5
STRAP.....	21-21-03-02	8
STRAP.....	21-21-03-03	104
STRAP.....	21-21-03-03	108
STRAP.....	21-21-03-03	75
STRAP.....	21-21-03-03	78
STRAP.....	21-21-03-03	81
STRAP.....	21-22-00-01A	102
STRAP.....	21-22-02-01A	104
STRAP.....	21-22-02-01A	104A
STRAP.....	21-51-00-01	162
STRAP.....	21-51-00-01	450
STRAP.....	21-51-00-01A	159
STRAP.....	21-51-00-01A	227
STRAP.....	21-51-00-01A	82
STRAP.....	21-51-00-01A	88
STRAP.....	21-51-00-01B	159
STRAP.....	21-51-00-01B	227
STRAP.....	21-51-00-01B	318
STRAP.....	21-51-00-01B	82
STRAP.....	21-51-00-01B	88
STRAP.....	21-51-01-01	11
STRAP.....	22-10-07-01	23
STRAP.....	24-30-00-02	22
STRAP.....	24-30-00-02	23
STRAP.....	24-36-00-01	28
STRAP.....	25-52-00-01	155
STRAP.....	25-52-00-02	102
STRAP.....	25-52-00-02	177
STRAP.....	25-52-00-02A	231
STRAP.....	25-52-00-02A	334
STRAP.....	25-60-00-03	7
STRAP.....	27-10-03-01	24
STRAP.....	27-50-01-01	163
STRAP.....	27-50-01-01	89
STRAP.....	30-10-03-01	78
STRAP.....	30-10-03-02	78

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
STRAP.....	32-41-00-01	182
STRAP.....	32-41-00-01	3
STRAP.....	33-41-00-01	16
STRAP.....	34-10-00-04	28
STRAP.....	34-11-00-01	251
STRAP.....	34-11-01-01	105
STRAP.....	34-50-03-01	17
STRAP.....	34-51-15-01	11
STRAP.....	34-51-15-01	13
STRAP.....	34-51-16-01	9
STRAP.....	76-10-01-01B	10
STRAP - 3.2 IN LONG.....	21-20-01-01	13
STRAP - 3.2 INCHES LONG.....	21-20-01-02	15
STRAP - ATTACH BRAKE LINE TO MOUNT.....	32-10-01-01	169
STRAP - USED W/2ND NAV/COM.....	34-50-01-06	15
STRAP - WITH AIR CONDITIONING.....	21-21-03-03	7
STRAP - WITHOUT AIR CONDITIONING.....	21-21-03-03	6
STRAP ASSEMBLY - SHOULDER HARNESS LEFT.....	25-21-01-02	14
STRAP ASSEMBLY - SHOULDER HARNESS RIGHT.....	25-21-01-02	15
STRAP ASSEMBLY SHOULDER HARNESS - LEFT.....	25-21-01-01	17
STRAP ASSEMBLY SHOULDER HARNESS - LEFT.....	25-21-01-01	18
STRAP ASSEMBLY SHOULDER HARNESS - RIGHT.....	25-21-01-01	21
STRAP ASSEMBLY SHOULDER HARNESS - RIGHT.....	25-21-01-01	22
STRAP SHOULDER HARNESS - LEFT.....	25-21-01-01	19
STRAP SHOULDER HARNESS - RIGHT.....	25-21-01-01	23
STREAMER ASSEMBLY.....	10-10-00-02	22
STREAMER ASSEMBLY.....	10-10-00-02	8
STREAMER ASSEMBLY.....	10-10-00-03	24
STREAMER ASSEMBLY.....	10-10-00-03	9
STRIKE PLATE ASSEMBLY - RUDDER LOCK.....	55-40-00-05	105
STRIKER PLATE.....	25-52-00-01	172
STRIKER PLATE.....	25-52-00-02	188
STRIKER PLATE.....	25-52-00-02A	159
STRIKER PLATE.....	25-52-00-02A	160
STRIKER PLATE.....	25-52-00-02A	190
STRIKER PLATE.....	25-52-00-02A	191
STRIKER PLATE.....	25-52-00-02A	309
STRIKER PLATE.....	25-52-00-02A	310
STRIKER PLATE.....	25-52-00-02A	384
STRIKER PLATE.....	25-52-00-02A	385
STRIP ASSEMBLY - LEFT.....	25-52-00-02A	3
STRIP ASSEMBLY - LEFT.....	53-30-01-03	22
STRIP ASSEMBLY - RIGHT.....	25-52-00-02A	4
STRIP ASSEMBLY - RIGHT.....	53-30-01-03	23
STRUCTURE ASSEMBLY - WING LEFT.....	57-10-01-01	5A
STRUCTURE ASSEMBLY - WING LEFT.....	57-10-01-01	5
STRUCTURE ASSEMBLY - WING RIGHT.....	57-10-01-01	6A
STRUCTURE ASSEMBLY - WING RIGHT.....	57-10-01-01	6
STRUT ASSEMBLY - LEFT WING.....	57-10-04-01	76A
STRUT ASSEMBLY - RIGHT WING.....	57-10-04-01	78A
SUMP ASSEMBLY.....	57-11-01-01	155
SUNVISOR INSTALLATION.....	25-10-01	
SUPPORT.....	21-51-01-02	18
SUPPORT.....	21-51-01-02A	18
SUPPORT - ANTENNA LEFT.....	55-30-00-02	113A
SUPPORT - ANTENNA LEFT.....	55-30-00-04	118A
SUPPORT - ANTENNA RIGHT.....	55-30-00-02	114A
SUPPORT - ANTENNA RIGHT.....	55-30-00-04	119A
SUPPORT - TENSIONER.....	21-51-01-02	7
SUPPORT - TENSIONER.....	21-51-01-02A	7
SUPPORT ASSEMBLY.....	79-20-00-03	97
SUPPORT ASSEMBLY - COMPRESSOR DRIVE.....	21-51-01-01	93A
SUPPORT ASSEMBLY - COMPRESSOR DRIVE USED ON 300 AMP STARTER/GENERATOR.....	21-51-01-01	93E
SUPPORT BRACKET ASSEMBLY.....	21-51-00-01	12
SUPPORT BRACKET ASSEMBLY.....	21-51-00-01A	5
SUPPORT BRACKET ASSEMBLY.....	71-70-00-02	8
SUPPORT BRACKET ASSEMBLY.....	73-10-00-02	2
SUPPORT BRACKET ASSEMBLY - DRYER.....	21-51-00-01	79
SUPPORT BRACKET ASSEMBLY - DRYER.....	21-51-00-01B	5
SUPPORT PLATE.....	28-23-00-01	162
SUPPORT PLATE ASSEMBLY.....	28-23-00-01	161

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
SUPPORT STRAP	34-51-04-01	8
SUPPORT STRAP	34-51-05-01	7
SUPPORT STRAP	34-51-06-01	7
SUPPORT STRAP	34-51-07-01	7
SWITCH	27-10-01-05	18A
SWITCH	27-10-01-05	19A
SWITCH	34-23-00-02	17
SWITCH	34-40-00-02	4
SWITCH & NUT - MIC	27-10-01-03	17A
SWITCH & NUT - SPARES	27-10-01-03	79A
SWITCH & NUT - TRANSPONDER IDENTIFICATION	27-10-01-03	19A
SWITCH - COPILOT INTERPHONE	27-10-01-03	153
SWITCH - GUARD AVIONICS BUS TIE	24-52-03-01	4
SWITCH - GUARD AVIONICS STANDBY POWER	24-52-03-01	2
SWITCH - LIMIT LOWER INFLIGHT MOVEABLE DOOR	52-32-00-02	117
SWITCH - LOW VACUUM	34-23-00-01	30
SWITCH - LOW VACUUM	34-23-00-01	30A
SWITCH - LOW VACUUM	34-23-00-02	17A
SWITCH - LOW VACUUM	34-24-00-01	29
SWITCH - LOW VACUUM	34-24-00-01	29A
SWITCH - LOW VACUUM	34-24-00-02	32
SWITCH - LOW VACUUM	34-24-00-02	32A
SWITCH - PRIMARY AND SECONDARY CONSOLE LIGHT	33-20-00-04	7
SWITCH - PROP OVERSPEED	31-00-00-01	14
SWITCH - PROP OVERSPEED	31-00-00-02	6
SWITCH - PROP OVERSPEED	31-00-00-03	5
SWITCH - READING LIGHT	33-20-00-02	8
SWITCH AND CIRCUIT PANEL INSTALLATION	24-50-01	
SWITCH ASSEMBLY - FLAP ACTUATOR	27-50-01-03	4A
SWITCH ASSEMBLY - STALL WARNING HORN DISC	27-31-00-01	75
SWITCH PANEL ASSEMBLY	31-00-00	
SWITCH PANEL ASSEMBLY	31-00-00-01A	1
SWITCH PANEL ASSEMBLY	31-00-00-01A	1A
TAB ACTUATOR ASSEMBLY - AILERON TRIM	27-10-03-03	5
TACHOMETER GENERATOR INSTALLATION	77-15-00	
TAIL NAVIGATION LIGHT INSTALLATION	33-41-00	
TAILCONE DORSAL ASSEMBLY	53-50-00	
TAILCONE FLOORBOARD AND SHELF INSTALLATION - ARTEX ELT	53-20-02	
TAILCONE FLOORBOARD INSTALLATION	53-20-02	
TAILCONE SHELF ASSEMBLY	53-20-05	
TAILCONE SKINS AND COMPONENTS	53-30-02	
TAILCONE STRINGERS AND COMPONENTS	53-14-00	
TAILCONE STRUCTURE	53-14-00	
TAILCONE STRUCTURE - NOT APPLICABLE TO PASSENGER VERSION	53-14-00	
TAILSTAND STOW INSTALLATION	25-22-00	
TANK AND EQUIPMENT ASSEMBLY	30-10-02-06	1
TANK AND EQUIPMENT ASSEMBLY	30-10-02-07	1
TANK ASSEMBLY	30-10-02-06	6
TANK ASSEMBLY	30-10-02-07	6
TAS DIRECTIONAL ANTENNA	34-50-05-01	1
TEE	35-10-00-01	21
TEE	35-10-00-02	23
TEE	35-10-00-03	29
TEE	35-10-00-04	27
TEE	35-10-00-05	75
TEE	35-10-01-01	19
TEE	35-10-01-01	20
TEE	35-10-01-02	17
TEE	35-10-01-03	22
TEE	35-10-01-04	14
TEE	35-10-01-04	162
TEE	35-10-01-04	19
TEE	35-10-01-04	238
TEE	35-10-01-04	244
TEE	35-10-01-04	260
TEE	35-10-01-04	29
TEE	35-10-01-04	8
TEE	35-10-01-04	85
THREADED ROD	25-22-00-02	9
THREE POINT AND 400 ENCODING ALTIMETER INSTALLATION	34-10-00	
TIE	21-20-01-02	13

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
TIE.....	21-51-00-01A	12
TIE.....	21-51-00-01B	12
TIE.....	22-10-01-01	18
TIE.....	23-70-00-01	29
TIE.....	24-30-00-02	28
TIE.....	25-52-00-02A	91
TIE.....	25-60-00-01	7
TIE.....	25-60-00-02	8
TIE.....	25-60-00-03	8
TIE.....	25-60-00-04	7
TIE.....	25-60-00-05	8
TIE.....	28-21-00-03	37
TIE.....	30-10-02-04	27
TIE.....	30-10-02-06	156
TIE.....	30-10-02-07	156
TIE.....	30-10-02-08	104
TIE.....	33-43-00-01	23
TIE.....	34-10-02-01	8
TIE.....	34-10-02-02	23
TIE.....	34-11-00-02	94
TIE.....	34-11-00-03	94
TIE.....	34-11-00-04	94
TIE.....	34-11-01-02	14
TIE.....	34-20-00-01	88
TIE.....	34-20-00-01	9
TIE.....	34-24-00-03	10
TIE.....	34-44-00-01	11
TIE.....	34-50-02-01	10
TIE.....	34-51-14-01	97
TIE.....	34-56-02-01	83
TIE.....	35-10-00-02	10
TIE.....	35-10-00-02	76
TIE.....	35-10-00-05	104
TIE.....	35-10-00-05	13
TIE.....	35-10-00-05	99
TIE.....	35-10-01-02	10
TIE.....	35-10-01-02	26
TIE.....	35-10-01-04	161
TIE.....	35-10-01-04	18
TIE.....	35-10-01-04	231
TIE.....	35-10-01-04	256
TIE.....	35-10-01-04	78
TIE - BULK ITEM.....	30-10-02-06	79
TIE - BULK ITEM.....	30-10-02-07	80
TIE - LEFT WING.....	30-10-02-03	16
TIE - PILOT.....	27-10-01-05	34
TIE - RIGHT WING USED WITH NO RADAR.....	30-10-02-03	16A
TIE - RIGHT WING USED WITH RADAR.....	30-10-02-03	16B
TIE - STRAP.....	33-44-00-03	7
TIE DOWN ASSEMBLY PASSENGER VERSION.....	53-30-02-01	21
TIE STRAP.....	24-31-00-01	9
TIE STRAP.....	30-60-00-01	22
TIE STRAP.....	76-10-01-01	15
TIE WRAP.....	34-51-02-01	11
TIMER - DEICE.....	30-10-01-01	41
TIMER BOX.....	30-10-02-06	246
TIMER BOX.....	30-10-02-07	246
TIMER BOX.....	30-10-02-08	10
TIP.....	24-21-00-01	2
TIP.....	33-20-00-01A	2
TIP - WHITE.....	31-00-00-01A	18
TIP ASSEMBLY - EXTENDED FIN W/FLASHING BEACON.....	55-30-00-02	115
TIP ASSEMBLY - EXTENDED FIN W/O BEACON.....	55-30-00-01	97
TIP ASSEMBLY - EXTENDED FIN W/O FLASHING BEACON.....	55-30-00-02	96
TIP ASSEMBLY - EXTENDED FIN WITH FLASHING BEACON.....	55-30-00-01	119
TIP ASSEMBLY - FIN W/O BEACON.....	55-30-00-01	96
TIP ASSEMBLY - FIN WITH FLASHING BEACON.....	55-30-00-01	118
TIP ASSEMBLY - FIN WITHOUT FLASHING BEACON.....	55-30-00-03	97A
TIP ASSEMBLY - STABILIZER.....	55-10-00-01	113A
TIP ASSEMBLY - STABILIZER.....	55-10-00-02	189A
TIP ASSEMBLY - STABILIZER.....	55-10-00-01	113

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
TIP ASSEMBLY - STABILIZER	55-10-00-02	189
TIP ASSEMBLY - VERTICAL FIN	55-30-00-03	96A
TIP ASSEMBLY - VERTICAL FIN	55-30-00-04	96C
TIP ASSEMBLY - VERTICAL FIN -	55-30-00-04	96B
TIP ASSEMBLY - VERTICAL FIN -W/FLASHING BEACON	55-30-00-04	96A
TIP ASSEMBLY - VERTICAL FIN -W/O FLASHING BEACON	55-30-00-04	97A
TIP ASSEMBLY - WING LEFT .032 2024 T42	57-30-00-01	1
TIP ASSEMBLY - WING RIGHT .032 2024 T42	57-30-00-01	2
TIRE - MAIN GEAR 6.50 X 10 8 PLY	32-40-00-01	2A
TKS ACCESSORY PALLET	30-10-02-06	225
TKS ACCESSORY PALLET	30-10-02-07	225
TKS CARGO NET INSTALLATION	25-52-00	
TKS COMPONENTS - WING AND TAIL PANEL INSTALLATION	30-10-02	
TKS FAIRING INSTALLATION	53-30-01	
TKS FIREWALL FORWARD INSTALLATION	30-10-02	
TKS FLUID TANK & EQUIPMENT PACK INSTALLATION	30-10-02	
TKS FUEL SUMP INSTALLATION - FAIRING	28-22-01	
TKS LOW PROFILE TANK INSTALLATION - 208	30-10-02	
TKS LOW PROFILE TANK INSTALLATION - 208B	30-10-02	
TKS OIL INDICATING	79-30-00	
TKS SYSTEM	30-10-00	
TKS TUBE ROUTING - FUSELAGE	30-10-02	
TKS TUBE ROUTING - WINGS	30-10-02	
TKS VORTEX GENERATOR INSTALLATION	30-10-02	
TKS WINDSHIELD ICE DETECT LIGHT INSTALLATION	33-10-00	
TKS WINDSHIELD SPRAYBAR INSTALLATION	30-40-01	
TORQUE INDICATOR	77-11-00-02	1
TORQUE INDICATOR - MECHANICAL	77-11-00-01	2A
TORQUE TRANSMITTER INSTALLATION	77-12-00	
TORQUE TRANSMITTER INSTALLATION - FDR & CVR	77-12-00	
TRANSCIEVER - NAV/COM 300 (TYPE RT-385A)	34-50-00-05	6
TRANSMISSION - ASSEMBLY & JACK SCREW	27-50-01-01	11
TRANSMITTER - FUEL INBOARD	28-41-00-01	1
TRANSMITTER - FUEL INBOARD	28-41-00-01	1A
TRANSMITTER - FUEL OUTBOARD	28-41-00-01	2
TRANSPONDER - GTX 33 #1 VENDOR NUMBER 011-00779-10 (HD MOD 2 ONLY)	34-51-17-01	1
TRANSPONDER - GTX 33 #1 VENDOR NUMBER 011-00779-10 (MOD 1 & 2 ONLY)	34-51-17-01	1A
TRANSPONDER - GTX 33 #2 VENDOR NUMBER 011-00779-10 (HD MOD 2 ONLY) OPTION	34-51-17-01	2
TRANSPONDER - GTX 33 #2 VENDOR NUMBER 011-00779-10 (MOD 1 & 2 ONLY) OPTION	34-51-17-01	2A
TRANSPONDER - GTX 33 ES #1 OPTION VENDOR NUMBER 011-00779-30(MOD 1 & 2 ONLY)	34-51-17-01	1B
TRANSPONDER - GTX 33 ES #2 OPTION VENDOR NUMBER 011-00779-30(MOD 1 & 2 ONLY)	34-51-17-01	2B
TRAY	34-10-00-08A	9
TREAD - LOWER STEP	52-61-00-01	79B
TREAD - UPPER STEP	52-61-00-01	80B
TRIM TAB ASSEMBLY - ELEVATOR LEFT .016 2024 T3	55-20-00-02	152
TRIM TAB ASSEMBLY - ELEVATOR LEFT .016 2024 T42	55-20-00-01	152
TRIM TAB ASSEMBLY - ELEVATOR RIGHT .016 2024 T3	55-20-00-02	153
TRIM TAB ASSEMBLY - ELEVATOR RIGHT .016 2024 T42	55-20-00-01	153
TRIM WHEEL ASSEMBLY - AILERON	27-10-03-02	1
TRIM WHEEL ASSEMBLY - AILERON	27-10-03-02A	1
TRUNNION ASSEMBLY - LEFT MAIN GEAR	32-10-00-01	3
TRUNNION ASSEMBLY - MAIN GEAR RIGHT	32-10-00-02	2C
TRUNNION ASSEMBLY - RIGHT MAIN GEAR	32-10-00-01	4
TUBE	71-70-00-02	105
TUBE ASSEMBLY	71-70-00-02	106
TUBE ASSEMBLY	71-70-00-02	22
TUBE ASSEMBLY	73-10-00-02	15
TUBE ASSEMBLY	77-11-00-02	35
TUBE ASSEMBLY	79-20-00-03	44
TUBE ASSEMBLY	79-20-00-03	87
TUBE ASSEMBLY	79-20-00-03	88
TUBE ASSEMBLY	79-20-00-03	93
TUBE ASSEMBLY	79-20-00-03	96
TUBE ASSEMBLY - FUEL ECOLOGY	28-21-00-03	10
TUBE ASSEMBLY - FUEL ECOLOGY	28-21-00-03	16
TUBE ASSEMBLY - FUEL ECOLOGY	28-21-00-03	17
TUBE ASSEMBLY - FUEL ECOLOGY	28-21-00-03	23
TUBE ASSEMBLY - FUEL MAIN DRAIN	71-70-00-02	50
TUBE ASSEMBLY - LEFT	71-20-00-01	90
TUBE ASSEMBLY - LEFT AND RIGHT	71-20-00-01	91A
TUBE ASSEMBLY - PRESSURE	77-11-00-02	10

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
TUBE ASSEMBLY - RIGHT	71-20-00-01	91
TUBE ASSEMBLY - S/G DRAIN	71-70-00-02	98
TUBE ASSEMBLY - TORQUE GAUGE	77-11-00-02	18
TUBE ASSEMBLY - TORQUE GAUGE	77-11-00-02	19
TUBE ASSEMBLY - TORQUE GAUGE	77-11-00-02	30
TUBE ASSEMBLY - VENT	77-11-00-02	12
TUBE WELD ASSEMBLY	71-60-01-02	12
TURN COORDINATOR	34-10-00-01	93A
TURN COORDINATOR	34-10-00-01	93B
TURN COORDINATOR	34-10-00-02	14A
TURN COORDINATOR	34-10-00-02	14B
TURN COORDINATOR	34-10-00-03	10A
TURN COORDINATOR	34-10-00-03	10B
TURN COORDINATOR	34-10-00-04	4A
TURN COORDINATOR	34-10-00-04	4B
TURNBUCKLE BODY CLIP	27-50-01-04	236
U.S. EXTERIOR PLACARDS AND MARKINGS - CABIN DOORS	11-N-28	
U.S. EXTERIOR PLACARDS AND MARKINGS - COWLING	11-N-24	
U.S. EXTERIOR PLACARDS AND MARKINGS - EMPENNAGE AND REAR BAGGAGE	11-N-23	
U.S. EXTERIOR PLACARDS AND MARKINGS - FUSELAGE	11-N-22	
U.S. EXTERIOR PLACARDS AND MARKINGS - LANDING GEAR	11-N-27	
U.S. EXTERIOR PLACARDS AND MARKINGS - TKS	11-N-22	
U.S. EXTERIOR PLACARDS AND MARKINGS - TKS	11-N-25	
U.S. EXTERIOR PLACARDS AND MARKINGS - WINGS	11-N-25	
U.S. INTERIOR PLACARDS AND MARKINGS - CABIN	11-N-32	
U.S. INTERIOR PLACARDS AND MARKINGS - CABIN DOORS	11-N-38	
U.S. INTERIOR PLACARDS AND MARKINGS - FLIGHT COMPARTMENT	11-N-31	
U.S. INTERIOR PLACARDS AND MARKINGS - TKS	11-N-31	
UNION	21-41-00-01	162
UNION	21-41-01-03	10
UNION	24-36-01-01	90
UNION	32-41-00-01	151
UNION	32-41-00-01	78
UNION	34-10-02-01	5
UNION	34-10-02-02	20
UNION	34-11-00-01	225A
UNION	34-11-00-02	81
UNION	34-11-00-03	100
UNION	34-11-00-03	81
UNION	34-11-00-04	81
UNION	34-11-01-01	19
UNION	34-11-01-01	77A
UNION	71-70-00-01	79A
UNION	71-70-00-02	29A
UNION	71-70-00-02	49
UNION	77-11-00-02	33
UNION - 2 EACH SWITCH	34-11-00-01	89
UNION - LEFT AND RIGHT PITOT LINE	34-11-02-01	7
UNION - LEFT AND RIGHT STATIC LINE	34-11-02-01	8
UNION - LEFT AND RIGHT STATIC LINE	34-11-02-01	9A
UNION - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-03	100
UNION - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-03	12
UNION - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-03	16
UNION - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-03	20
UNION - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-03	24
UNION - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-03	28
UNION - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-03	36
UNION - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-03	39
UNION - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-03	44
UNION - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-03	47
UNION - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-03	56
UNION - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-03	85
UNION - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-03	93
UNION - USED WITH OXYGEN SYSTEM PROVISIONS	35-10-01-03	96
UNIT - AHRs REFERENCE SUPPLIER PART NUMBER 011-00868-10 (HDW MOD 1,2 & 3 ONLY)	34-25-00-01	1B
UNIT - AHRs REFERENCE SUPPLIER PART NUMBER 0110086810 (HDW MOD 1 ONLY)	34-25-00-01	1
UPHOLSTERY ASSEMBLY - BOTTOM	25-10-00-02A	75
UPPER BAND ASSEMBLY	71-60-01-02	171
UPPER CENTER FUSELAGE STRUCTURE	53-13-00	
UPPER COWLS AND DOORS INSTALLATION	71-10-00	
UPPER PANEL	79-20-00-03	121

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
V-BELT	21-51-01-02	102
V-BELT	21-51-01-02A	102
V-BELT - AIR CONDITIONER COMPRESSOR	21-51-01-01	94
VACUUM SYSTEM	37-10-00	
VALVE	21-51-00-01A	89
VALVE	21-51-00-01A	91
VALVE	21-51-00-01B	89
VALVE	21-51-00-01B	91
VALVE - AIR CONDITIONER DISCHARGE LINE	21-51-00-01	235
VALVE - AIR CONDITIONER SUCTION LINE	21-51-00-01	239
VALVE - COMPRESSOR DISCHARGE	21-51-01-01	2
VALVE - COMPRESSOR SUCTION	21-51-01-01	6
VALVE - EVAPORATOR EXPANSION	21-51-03-04	3
VALVE - EVAPORATOR EXPANSION	21-51-03-04	3A
VALVE - EVAPORATOR EXPANSION	21-51-03-04	3B
VALVE - FLAP CHECK	79-20-00-03	82
VALVE - FLOW CONTROL	21-41-01-02	1A
VALVE - FUEL DRAIN - WITHOUT CARGO POD	28-22-00-01	28
VALVE - FUEL DRAIN 1 LEFT & 1 RIGHT	28-21-00-01	252
VALVE - FUEL DRAIN 1LH & 1 RIGHT	28-21-00-01	255
VALVE - FUEL DRAIN 2 LEFT & 2 RIGHT	28-21-00-02	256
VALVE - LEFT & RIGHT EVAPORATOR EXPANSION	21-51-03-03	8
VALVE - LEFT & RIGHT EVAPORATOR EXPANSION	21-51-03-03	8A
VALVE - LEFT & RIGHT EVAPORATOR EXPANSION	21-51-03-03	8B
VALVE - OIL DRAIN	71-70-00-01	236
VALVE - SWING CHECK	28-21-00-01	94
VALVE - SWING CHECK	28-21-00-02	94
VALVE - VACUUM RELIEF	34-23-00-01	28
VALVE - VACUUM RELIEF	34-23-00-02	26
VALVE - VACUUM RELIEF	34-24-00-01	27
VALVE - VACUUM RELIEF	34-24-00-02	30
VALVE - VACUUM RELIEF	34-24-00-03	20
VALVE ASSEMBLY	21-21-01-01	5A
VALVE ASSEMBLY	21-21-01-01	5B
VALVE ASSEMBLY	25-52-00-02A	78
VALVE ASSEMBLY	28-22-01-01	1
VALVE ASSEMBLY - DEFROSTER	21-22-03-01	78
VALVE ASSEMBLY - DIVERTER	21-41-02-01	1
VALVE ASSEMBLY - DRAIN EPA CAN	73-10-00-02	13
VALVE ASSEMBLY - FILLER OXYGEN	35-11-00-01	2
VALVE ASSEMBLY - FILLER OXYGEN	35-11-00-02	1
VALVE ASSEMBLY - FILLER OXYGEN	35-11-00-01	1
VALVE ASSEMBLY - FLOW CONTROL	21-41-01-01	3
VALVE ASSEMBLY - FUEL DRAIN WITH CARGO POD	28-22-00-01	156
VALVE ASSEMBLY - FUEL RESERVOIR	28-22-00-01	21
VALVE ASSEMBLY - FUEL VENT	28-10-03-01	13
VALVE ASSEMBLY - LEFT WING VENT	21-21-01-02	2A
VALVE ASSEMBLY - LEFT WING VENT	21-21-01-03	4
VALVE ASSEMBLY - LEFT WING VENT	21-21-02-01	4
VALVE ASSEMBLY - LEFT WING VENT	21-21-03-01	4
VALVE ASSEMBLY - LEFT WING VENT	21-21-03-02	82
VALVE ASSEMBLY - LEFT WING VENT	21-21-01-02	2
VALVE ASSEMBLY - LEFT WING VENT	21-21-02-01	3
VALVE ASSEMBLY - LEFT WING VENT	21-21-03-01	3
VALVE ASSEMBLY - LEFT WING VENT	21-21-03-02	81
VALVE ASSEMBLY - LJHWING VENT	21-21-01-03	3
VALVE ASSEMBLY - PARKING BRAKE	32-42-00-01	8
VALVE ASSEMBLY - RIGHT WING VENT	21-21-01-02	3A
VALVE ASSEMBLY - RIGHT WING VENT	21-21-01-03	6
VALVE ASSEMBLY - RIGHT WING VENT	21-21-02-01	7
VALVE ASSEMBLY - RIGHT WING VENT	21-21-03-01	7
VALVE ASSEMBLY - RIGHT WING VENT	21-21-03-02	84
VALVE ASSEMBLY - RIGHT WING VENT	21-21-01-02	3
VALVE ASSEMBLY - RIGHT WING VENT	21-21-01-03	5
VALVE ASSEMBLY - RIGHT WING VENT	21-21-02-01	6
VALVE ASSEMBLY - RIGHT WING VENT	21-21-03-01	6
VALVE ASSEMBLY - RIGHT WING VENT	21-21-03-02	83
VALVE ASSEMBLY - SHUT OFF	79-20-00-03	37
VALVE ASSEMBLY - SWING CHECK	28-22-00-01	16A
VALVE ASSEMBLY - WING VENT LEFT	21-21-01-01	4
VALVE ASSEMBLY - WING VENT LEFT	21-21-01-04	2

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
VALVE ASSEMBLY - WING VENT LEFT	21-21-03-03	156A
VALVE ASSEMBLY - WING VENT LEFT	21-21-03-03	156
VALVE ASSEMBLY - WING VENT RIGHT	21-21-01-01	5
VALVE ASSEMBLY - WING VENT RIGHT	21-21-01-04	3
VALVE ASSEMBLY - WING VENT RIGHT	21-21-03-03	157A
VALVE ASSEMBLY - WING VENT RIGHT	21-21-03-03	157
VARIABLE RESISTOR - PRIMARY AND SECONDARY CONSOLE LIGHTING	33-20-00-04	3
VARISTOR ASSEMBLY - METAL OXIDE	30-60-00-01	35A
VARISTOR ASSEMBLY - METAL OXIDE	30-60-00-02	27A
VENT TUBE ASSEMBLY	71-70-00-02	14
VENT TUBE ASSEMBLY	71-70-00-02	95
VENT TUBE ASSEMBLY	73-10-00-02	7A
VENT WINDOW ASSEMBLY - LEFT ONLY	56-30-00-01	5A
VENTILATION FAN INSTALLATION	21-21-04	
VERTICAL FIN ASSEMBLY	55-30-00-01	9
VERTICAL FIN ASSEMBLY	55-30-00-04	8B
VERTICAL FIN ASSEMBLY	55-30-00-04	8C
VERTICAL FIN ASSEMBLY	55-30-00-04	8D
VERTICAL FIN INSTALLATION	55-30-00	
VHF BLADE ANTENNA INSTALLATION	34-54-01	
VIETNAM EXTERIOR PLACARDS AND MARKINGS - COWLING	11-VN-24	
VIETNAM EXTERIOR PLACARDS AND MARKINGS - EMPENNAGE AND REAR BAGGAGE	11-VN-23	
VIETNAM EXTERIOR PLACARDS AND MARKINGS - FUSELAGE	11-VN-22	
VIETNAM EXTERIOR PLACARDS AND MARKINGS - LANDING GEAR	11-VN-27	
VIETNAM EXTERIOR PLACARDS AND MARKINGS - TKS	11-VN-22	
VIETNAM EXTERIOR PLACARDS AND MARKINGS - WINGS	11-VN-25	
VIETNAM INTERIOR PLACARDS AND MARKINGS - CABIN DOORS	11-VN-38	
VORTEX GENERATOR	55-10-01-01	42
WARNING HORN INSTALLATION - KAP 150 AND KFC 150 AUTOPILOT	22-40-00	
WASHER	10-10-00-03	12
WASHER	10-10-00-03	27
WASHER	21-21-00-01	38
WASHER	21-21-01-01	160
WASHER	21-21-01-01	21
WASHER	21-21-01-01	26
WASHER	21-21-01-01	32B
WASHER	21-21-01-01	36
WASHER	21-21-01-02	17
WASHER	21-21-01-02	22
WASHER	21-21-01-02	22A
WASHER	21-21-01-02	33
WASHER	21-21-01-03	179
WASHER	21-21-01-03	21
WASHER	21-21-01-03	26
WASHER	21-21-01-03	34
WASHER	21-21-01-04	17
WASHER	21-21-01-04	22
WASHER	21-21-01-04	22A
WASHER	21-21-01-04	33
WASHER	21-21-02-01	23
WASHER	21-21-02-01	28
WASHER	21-21-02-01	28A
WASHER	21-21-02-01	38
WASHER	21-21-02-01	85
WASHER	21-21-03-01	23
WASHER	21-21-03-01	28
WASHER	21-21-03-01	28A
WASHER	21-21-03-01	38
WASHER	21-21-03-01	85
WASHER	21-21-03-02	109
WASHER	21-21-03-02	78
WASHER	21-21-03-02	99
WASHER	21-21-03-03	153
WASHER	21-21-03-03	153A
WASHER	21-21-03-03	171
WASHER	21-21-03-03	181
WASHER	21-21-04-01	4
WASHER	21-22-00-01	15
WASHER	21-22-00-01	79
WASHER	21-22-00-01	8
WASHER	21-22-00-01	97

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
WASHER.....	21-22-00-01A	15
WASHER.....	21-22-00-01A	79
WASHER.....	21-22-00-01A	8
WASHER.....	21-22-01-01	15
WASHER.....	21-22-01-01	24
WASHER.....	21-22-01-01	8
WASHER.....	21-22-01-01	83
WASHER.....	21-22-02-01	12
WASHER.....	21-22-02-01	79
WASHER.....	21-22-02-01	8
WASHER.....	21-22-02-01A	16
WASHER.....	21-22-02-01A	79
WASHER.....	21-22-02-01A	9
WASHER.....	21-22-03-01	95
WASHER.....	21-22-03-01	96
WASHER.....	21-41-00-01	153
WASHER.....	21-41-00-01	18
WASHER.....	21-41-00-01	23
WASHER.....	21-41-00-01	27
WASHER.....	21-41-00-01	31
WASHER.....	21-41-00-01	35
WASHER.....	21-41-00-01	4
WASHER.....	21-41-00-01	40
WASHER.....	21-41-00-01	46
WASHER.....	21-41-00-01	79
WASHER.....	21-41-00-01	83
WASHER.....	21-41-00-01	87
WASHER.....	21-41-01-01	21
WASHER.....	21-41-01-01	96
WASHER.....	21-41-01-02	16
WASHER.....	21-41-01-02	19
WASHER.....	21-41-01-02	94
WASHER.....	21-41-01-03	17
WASHER.....	21-51-03-02B	5
WASHER.....	22-10-01-01	22
WASHER.....	22-10-03-01	12
WASHER.....	22-10-03-01	21
WASHER.....	22-10-03-01	25
WASHER.....	22-10-03-01	6
WASHER.....	22-10-03-01	9
WASHER.....	22-10-03-01A	12
WASHER.....	22-10-03-01A	3
WASHER.....	22-10-03-01A	4
WASHER.....	22-10-04-01	16
WASHER.....	22-10-04-01	5
WASHER.....	22-10-04-01	8
WASHER.....	22-10-04-01A	16
WASHER.....	22-10-04-01A	3
WASHER.....	22-10-04-01A	4
WASHER.....	22-10-05-01	11
WASHER.....	22-10-05-01	15
WASHER.....	22-10-05-01	20
WASHER.....	22-10-05-01	5
WASHER.....	22-10-05-01	88
WASHER.....	22-10-05-01	92
WASHER.....	22-10-05-01A	11
WASHER.....	22-10-05-01A	15
WASHER.....	22-10-05-01A	19
WASHER.....	22-10-05-01A	3
WASHER.....	22-10-05-01A	4
WASHER.....	22-10-07-01	18
WASHER.....	23-50-04-01	14
WASHER.....	23-50-04-01A	11
WASHER.....	23-50-05-01	13
WASHER.....	23-50-05-01	89
WASHER.....	23-50-05-01A	11
WASHER.....	23-50-05-01A	85
WASHER.....	23-60-00-01	5
WASHER.....	24-30-00-02	16
WASHER.....	24-34-00-01	25
WASHER.....	24-34-00-01	30

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
WASHER.....	24-34-00-01	34
WASHER.....	24-34-00-01	38
WASHER.....	24-34-00-01	78
WASHER.....	24-34-00-01	90
WASHER.....	24-34-00-01	94
WASHER.....	24-36-00-01	19
WASHER.....	24-36-02-01A	3
WASHER.....	24-36-02-02	12
WASHER.....	24-36-02-02	3
WASHER.....	24-40-00-01	16
WASHER.....	24-50-02-01	20
WASHER.....	24-50-02-01	32
WASHER.....	25-10-00-01	15
WASHER.....	25-10-00-02	10
WASHER.....	25-10-00-02	51
WASHER.....	25-10-00-02	83
WASHER.....	25-10-00-02A	112
WASHER.....	25-10-00-02A	83
WASHER.....	25-10-00-03	155
WASHER.....	25-10-00-03	160
WASHER.....	25-10-00-03	161
WASHER.....	25-10-00-03	174
WASHER.....	25-10-00-03	180
WASHER.....	25-10-00-03	29
WASHER.....	25-10-00-03	82
WASHER.....	25-10-00-03	94
WASHER.....	25-10-03-01	84
WASHER.....	25-10-05-01	103
WASHER.....	25-10-05-01	153
WASHER.....	25-10-05-01	167
WASHER.....	25-10-05-01	173
WASHER.....	25-10-05-01	85
WASHER.....	25-10-05-01	88
WASHER.....	25-10-05-01	91
WASHER.....	25-21-00-01	15
WASHER.....	25-21-00-02A	165
WASHER.....	25-21-00-02A	170
WASHER.....	25-21-00-02A	228
WASHER.....	25-21-00-02A	240
WASHER.....	25-21-00-03	17
WASHER.....	25-21-00-03	25
WASHER.....	25-21-01-01	160
WASHER.....	25-21-01-01	161
WASHER.....	25-21-01-01	84
WASHER.....	25-21-01-01	91
WASHER.....	25-21-01-01	92
WASHER.....	25-28-00-02	21
WASHER.....	25-52-00-01	157
WASHER.....	25-52-00-01	16
WASHER.....	25-52-00-01	178
WASHER.....	25-52-00-01	183
WASHER.....	25-52-00-01	228
WASHER.....	25-52-00-01	39
WASHER.....	25-52-00-01	8
WASHER.....	25-52-00-02	15
WASHER.....	25-52-00-02	23
WASHER.....	25-52-00-02	27
WASHER.....	25-52-00-02	8
WASHER.....	25-52-00-02A	17
WASHER.....	25-52-00-02A	171
WASHER.....	25-52-00-02A	201
WASHER.....	25-52-00-02A	230
WASHER.....	25-52-00-02A	25
WASHER.....	25-52-00-02A	30
WASHER.....	25-52-00-02A	320
WASHER.....	25-52-00-02A	33
WASHER.....	25-52-00-02A	395
WASHER.....	25-52-00-02A	8
WASHER.....	25-52-00-02A	87
WASHER.....	25-70-00-02A	2B
WASHER.....	26-10-00-01	91

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
WASHER.....	26-10-00-02	20
WASHER.....	26-10-00-02	77
WASHER.....	26-20-01-03	4
WASHER.....	27-10-01-01	20
WASHER.....	27-10-01-01	20A
WASHER.....	27-10-01-02	10
WASHER.....	27-10-01-02	4
WASHER.....	27-10-01-02	7
WASHER.....	27-10-01-02	9
WASHER.....	27-10-01-03	3
WASHER.....	27-10-01-03	7
WASHER.....	27-10-01-05	11
WASHER.....	27-10-01-05	42
WASHER.....	27-10-01-05	7
WASHER.....	27-10-02-01	105
WASHER.....	27-10-02-01	105A
WASHER.....	27-10-02-01	153
WASHER.....	27-10-02-01	97
WASHER.....	27-10-02-02	151
WASHER.....	27-10-02-02	151A
WASHER.....	27-10-02-02	228
WASHER.....	27-10-02-02	98
WASHER.....	27-10-02-03	12
WASHER.....	27-10-02-03	16
WASHER.....	27-10-02-03	27
WASHER.....	27-10-02-03	32
WASHER.....	27-10-02-03	4
WASHER.....	27-10-02-03	9
WASHER.....	27-10-03-01	79
WASHER.....	27-10-03-01	91
WASHER.....	27-20-01-01	102
WASHER.....	27-20-01-01	7
WASHER.....	27-20-02-02	13
WASHER.....	27-20-02-02	81
WASHER.....	27-20-02-02	91
WASHER.....	27-30-01-01	161
WASHER.....	27-30-01-01	80
WASHER.....	27-30-01-02	18
WASHER.....	27-30-01-02	9
WASHER.....	27-30-02-02	17
WASHER.....	27-30-03-01	10
WASHER.....	27-30-03-01	25
WASHER.....	27-30-03-01	26
WASHER.....	27-30-03-01	7
WASHER.....	27-30-03-02	15
WASHER.....	27-30-03-02	22
WASHER.....	27-30-03-02	29
WASHER.....	27-30-03-02	7
WASHER.....	27-30-03-02A	17
WASHER.....	27-30-03-02A	17A
WASHER.....	27-30-03-02A	8
WASHER.....	27-50-01-01	178
WASHER.....	27-50-01-01	23
WASHER.....	27-50-01-02	17
WASHER.....	27-50-01-02	30
WASHER.....	27-50-01-02	33
WASHER.....	27-50-01-03	34
WASHER.....	27-50-01-03	6
WASHER.....	27-50-01-04	165
WASHER.....	27-50-01-04	166
WASHER.....	27-50-01-04	227
WASHER.....	27-50-01-04	233
WASHER.....	27-50-01-04	240
WASHER.....	27-70-00-01	170
WASHER.....	27-70-00-01	173
WASHER.....	27-70-00-01	18
WASHER.....	27-70-00-01	23
WASHER.....	27-70-00-01	85
WASHER.....	27-70-00-01	95
WASHER.....	27-70-00-02	23
WASHER.....	27-70-00-02	32

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
WASHER.....	27-70-00-02	43
WASHER.....	27-70-00-02	5
WASHER.....	27-70-00-02	6
WASHER.....	28-21-00-01	232
WASHER.....	28-21-00-01	236
WASHER.....	28-21-00-01	78B
WASHER.....	28-21-00-02	232
WASHER.....	28-21-00-02	236
WASHER.....	28-21-00-02	239
WASHER.....	28-21-00-02	78B
WASHER.....	28-22-01-01	19
WASHER.....	28-22-01-01	26
WASHER.....	28-23-00-01	12
WASHER.....	28-23-00-01	27
WASHER.....	28-40-00-01	4
WASHER.....	28-41-00-02	3A
WASHER.....	30-10-02-03	27
WASHER.....	30-10-02-03	32
WASHER.....	30-10-02-05	5
WASHER.....	30-10-02-05A	3
WASHER.....	30-10-02-06	23
WASHER.....	30-10-02-06	244
WASHER.....	30-10-02-06	251
WASHER.....	30-10-02-06	30
WASHER.....	30-10-02-07	23
WASHER.....	30-10-02-07	244
WASHER.....	30-10-02-07	251
WASHER.....	30-10-02-07	30
WASHER.....	30-10-03-01	103
WASHER.....	30-10-03-01	12
WASHER.....	30-10-03-01	15
WASHER.....	30-10-03-01	82
WASHER.....	30-10-03-02	103
WASHER.....	30-10-03-02	12
WASHER.....	30-10-03-02	15
WASHER.....	30-10-03-02	82
WASHER.....	30-40-00-01	10
WASHER.....	30-40-00-02	82
WASHER.....	31-30-00-01	84
WASHER.....	31-30-00-02	95
WASHER.....	31-30-00-02A	91
WASHER.....	32-10-00-01	7
WASHER.....	32-10-00-01	82
WASHER.....	32-10-00-02	5
WASHER.....	32-10-00-02	77
WASHER.....	32-10-01-01	6
WASHER.....	32-10-01-01	80
WASHER.....	32-41-00-01	160
WASHER.....	32-41-00-01	82
WASHER.....	32-41-02-01	4
WASHER.....	32-42-00-01	10
WASHER.....	32-42-00-01	7
WASHER.....	32-50-00-01	29
WASHER.....	32-50-00-01	32
WASHER.....	32-50-00-01	4
WASHER.....	33-10-00-01	10
WASHER.....	33-10-00-01	10A
WASHER.....	33-10-00-01	14D
WASHER.....	33-10-00-01	4
WASHER.....	33-10-00-05	3
WASHER.....	34-10-00-08A	11
WASHER.....	34-10-00-08A	15
WASHER.....	34-11-00-01	231A
WASHER.....	34-11-00-01	81
WASHER.....	34-11-00-01	87
WASHER.....	34-11-00-02	16
WASHER.....	34-11-00-02	19
WASHER.....	34-11-00-02	83
WASHER.....	34-11-00-02	91
WASHER.....	34-11-00-03	16
WASHER.....	34-11-00-03	19

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
WASHER.....	34-11-00-03	83
WASHER.....	34-11-00-03	91
WASHER.....	34-11-00-04	16
WASHER.....	34-11-00-04	19
WASHER.....	34-11-00-04	83
WASHER.....	34-11-00-04	91
WASHER.....	34-11-01-01	84
WASHER.....	34-11-01-01	86
WASHER.....	34-23-00-01	22
WASHER.....	34-23-00-02	20
WASHER.....	34-24-00-01	21
WASHER.....	34-24-00-02	24
WASHER.....	34-24-00-03	13
WASHER.....	34-30-00-01	19
WASHER.....	34-44-00-02	20
WASHER.....	34-44-00-02	23
WASHER.....	34-50-01-05	3
WASHER.....	34-50-01-06	21
WASHER.....	34-50-03-01	22
WASHER.....	34-51-02-01	6
WASHER.....	34-51-14-01	80
WASHER.....	34-51-14-01	92
WASHER.....	34-51-15-01	78
WASHER.....	34-51-15-01	83
WASHER.....	34-51-16-01	78
WASHER.....	34-51-16-01	83
WASHER.....	34-51-17-01	78
WASHER.....	35-14-00-01	156
WASHER.....	35-14-00-01	157
WASHER.....	35-14-00-01	166
WASHER.....	35-14-00-01	170
WASHER.....	35-14-00-01	171
WASHER.....	35-14-00-01	178
WASHER.....	35-14-00-01	21
WASHER.....	35-14-00-01	31
WASHER.....	35-14-00-01	37
WASHER.....	36-10-00-01	17
WASHER.....	36-10-00-02	17
WASHER.....	37-10-00-01	11
WASHER.....	37-10-00-01	7
WASHER.....	38-30-01-01	24
WASHER.....	52-10-00-01	16
WASHER.....	52-10-00-01	166
WASHER.....	52-10-00-01	179
WASHER.....	52-10-00-01	182
WASHER.....	52-10-00-01	80
WASHER.....	52-10-00-02	14
WASHER.....	52-10-00-03	8
WASHER.....	52-10-00-04	29
WASHER.....	52-10-01-01	39
WASHER.....	52-10-01-01	44
WASHER.....	52-10-01-02	78
WASHER.....	52-10-01-02	93
WASHER.....	52-10-02-01	174
WASHER.....	52-10-02-01	184
WASHER.....	52-31-00-01	89
WASHER.....	52-31-00-01	94
WASHER.....	52-31-00-02	89
WASHER.....	52-31-00-02	94
WASHER.....	52-31-00-03	28
WASHER.....	52-31-00-03	92
WASHER.....	52-31-01-01	12
WASHER.....	52-31-01-01	165
WASHER.....	52-31-01-01	17
WASHER.....	52-31-01-01	79
WASHER.....	52-31-01-01	80
WASHER.....	52-32-00-01	13
WASHER.....	52-32-00-01	33
WASHER.....	52-32-00-01	45
WASHER.....	52-32-00-01	51
WASHER.....	52-32-00-01	56

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
WASHER.....	52-32-00-01	9
WASHER.....	52-32-00-02	106
WASHER.....	52-32-00-02	111
WASHER.....	52-32-00-02	119
WASHER.....	52-32-00-02	32
WASHER.....	52-32-00-02	5
WASHER.....	52-32-00-02	83
WASHER.....	52-34-00-01	37
WASHER.....	52-34-00-01	4
WASHER.....	53-10-00-01	7
WASHER.....	53-10-01-01	162
WASHER.....	53-10-01-01	245
WASHER.....	53-10-01-02	11
WASHER.....	53-10-01-02	188
WASHER.....	53-10-01-02	267
WASHER.....	53-11-00-01	28
WASHER.....	53-11-00-01	320
WASHER.....	53-11-00-01	337
WASHER.....	53-12-00-02	18
WASHER.....	53-13-02-01	42
WASHER.....	53-13-02-02	50
WASHER.....	53-13-03-02	117
WASHER.....	53-13-03-02	29
WASHER.....	53-13-03-03	112
WASHER.....	53-13-03-03	15
WASHER.....	53-13-03-04	14
WASHER.....	53-13-03-04	15
WASHER.....	53-14-00-01	231
WASHER.....	53-14-00-02	112
WASHER.....	53-15-00-01	93
WASHER.....	53-15-00-02	14
WASHER.....	53-15-00-02	16
WASHER.....	53-15-00-02	167
WASHER.....	53-21-00-01	28A
WASHER.....	53-21-00-01	34A
WASHER.....	53-21-00-02	28A
WASHER.....	53-21-00-02	32A
WASHER.....	53-21-00-03	28A
WASHER.....	53-21-00-03	32A
WASHER.....	53-22-00-01	78
WASHER.....	53-22-00-01	81
WASHER.....	53-22-00-01	84
WASHER.....	53-22-00-01	90
WASHER.....	53-22-00-02	27
WASHER.....	53-22-00-02	87
WASHER.....	53-22-00-02	90
WASHER.....	53-30-01-01	156
WASHER.....	53-30-01-01	44
WASHER.....	53-30-01-02	78
WASHER.....	53-40-00-01	8
WASHER.....	53-40-00-02	7
WASHER.....	53-40-00-03	7
WASHER.....	55-10-00-01	3
WASHER.....	55-10-00-01	37
WASHER.....	55-10-00-02	3
WASHER.....	55-10-00-02	79
WASHER.....	55-20-00-01	175
WASHER.....	55-20-00-01	4
WASHER.....	55-20-00-02	4
WASHER.....	55-30-00-01	6
WASHER.....	55-30-00-02	6
WASHER.....	55-30-00-03	6
WASHER.....	55-30-00-04	6
WASHER.....	56-10-00-01	6
WASHER.....	56-10-00-01	76
WASHER.....	56-10-00-01	82
WASHER.....	56-10-00-01	89
WASHER.....	56-10-00-01	93
WASHER.....	56-10-00-01	98
WASHER.....	56-21-00-01	12
WASHER.....	56-21-00-02	14

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
WASHER.....	57-10-02-01	102
WASHER.....	57-10-02-03	14
WASHER.....	57-10-02-04	85
WASHER.....	57-10-03-02	18
WASHER.....	57-10-03-03	19
WASHER.....	57-10-03-04	17
WASHER.....	57-11-00-01	12
WASHER.....	57-40-00-01	83
WASHER.....	57-50-00-01	16
WASHER.....	57-50-00-01	20
WASHER.....	57-50-00-02	36
WASHER.....	61-11-00-01	21
WASHER.....	71-10-00-01	13
WASHER.....	71-10-00-01	28
WASHER.....	71-10-00-01	94
WASHER.....	71-10-00-02	175
WASHER.....	71-10-00-02	86
WASHER.....	71-10-00-04	20
WASHER.....	71-20-00-01	23
WASHER.....	71-20-00-01	3
WASHER.....	71-20-00-02	3
WASHER.....	71-41-00-01	12
WASHER.....	71-41-00-01	4
WASHER.....	71-41-00-01	8
WASHER.....	71-60-00-01	13
WASHER.....	71-60-00-01	93
WASHER.....	71-60-00-02	108
WASHER.....	71-60-00-02	16
WASHER.....	71-60-00-02	169
WASHER.....	71-60-00-02	181
WASHER.....	71-60-00-02	22
WASHER.....	71-60-00-02	7
WASHER.....	71-60-00-02	98
WASHER.....	71-60-00-03	21
WASHER.....	71-60-01-01	102
WASHER.....	71-60-01-01	12
WASHER.....	71-60-01-01	15
WASHER.....	71-60-01-01	152
WASHER.....	71-60-01-01	160
WASHER.....	71-60-01-01	169
WASHER.....	71-60-01-01	173
WASHER.....	71-60-01-01	229
WASHER.....	71-60-01-01	25
WASHER.....	71-60-01-01	250
WASHER.....	71-60-01-01	257
WASHER.....	71-60-01-01	25B
WASHER.....	71-60-01-01	4
WASHER.....	71-60-01-01	79
WASHER.....	71-60-01-01	87
WASHER.....	71-60-01-01	95
WASHER.....	71-70-00-01	156
WASHER.....	71-70-00-01	168
WASHER.....	71-70-00-01	173
WASHER.....	71-70-00-01	187
WASHER.....	71-70-00-01	229
WASHER.....	71-70-00-01	234
WASHER.....	71-70-00-01	80
WASHER.....	71-70-00-01	9
WASHER.....	71-70-00-01	94
WASHER.....	71-70-00-01	99
WASHER.....	71-70-00-02	117
WASHER.....	71-70-00-02	18
WASHER.....	71-70-00-02	28
WASHER.....	71-70-00-02	31
WASHER.....	71-70-00-02	44
WASHER.....	71-70-00-02	83
WASHER.....	74-10-00-01	3
WASHER.....	74-10-00-01	8
WASHER.....	76-10-01-01	101
WASHER.....	76-10-01-01	101A
WASHER.....	76-10-01-01	113

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
WASHER.....	76-10-01-01	119
WASHER.....	76-10-01-01	155
WASHER.....	76-10-01-01	158
WASHER.....	76-10-01-01	162
WASHER.....	76-10-01-01	169
WASHER.....	76-10-01-01	180
WASHER.....	76-10-01-01	21
WASHER.....	76-10-01-01	83
WASHER.....	76-10-01-01A	4
WASHER.....	76-10-01-01A	8
WASHER.....	76-10-01-01B	112
WASHER.....	76-10-01-01B	12
WASHER.....	76-10-01-01B	24
WASHER.....	76-10-01-01B	31
WASHER.....	76-10-01-01B	85
WASHER.....	76-10-01-01B	91
WASHER.....	76-10-01-01B	98
WASHER.....	76-10-01-02	3
WASHER.....	76-10-01-02	97
WASHER.....	76-10-01-02	98
WASHER.....	77-12-00-01	26
WASHER.....	77-12-00-01	76B
WASHER.....	77-12-00-02	4
WASHER.....	77-12-00-03	4
WASHER.....	77-30-00-02	12
WASHER.....	77-30-00-03	9
WASHER.....	78-10-00-02	14
WASHER.....	78-10-00-02	25
WASHER.....	78-10-00-03	23
WASHER.....	78-10-00-04	82
WASHER.....	78-10-00-04	82A
WASHER.....	79-20-00-01	14
WASHER.....	79-20-00-01	21
WASHER.....	79-20-00-01	3
WASHER.....	79-20-00-02	18
WASHER.....	79-20-00-02	3
WASHER.....	79-30-00-02	27
WASHER.....	79-30-00-03	23
WASHER.....	80-10-01-01	21
WASHER.....	80-10-01-02	14
WASHER - 2 REQUIRED AT FS 194.40 AND FS 214.40	27-20-01-01	86
WASHER - 2 REQUIRED AT FS 259.00 AND FS 307.00	27-20-01-01	87
WASHER - 2 REQUIRED FS 194.40	27-30-01-01	98
WASHER - 2 REQUIRED FS 214.40	27-30-01-01	99
WASHER - AFT	30-10-02-06	106
WASHER - AFT	30-10-02-07	109
WASHER - ATTACHES THERMOSTAT PROBE	27-31-00-01	13
WASHER - BEARING BLOCK ATTACH	25-10-00-02A	86
WASHER - BETWEEN GAGE AND SUPPORT ASSEMBLY	35-14-00-01	5
WASHER - BETWEEN ROD END BEARING AND ARM	27-50-01-02	9
WASHER - BETWEEN STRAP AND THE WALL	25-52-00-02	104
WASHER - BRACKET ATTACH	21-51-03-01	24
WASHER - CENTER BRACKETS ONLY	71-10-00-01	87
WASHER - CENTER DOOR	25-52-00-01	166
WASHER - ELEVATOR ATTACH	55-20-00-02	118
WASHER - ESCUTCHEON	52-10-00-02	83
WASHER - FORWARD	30-10-02-06	105
WASHER - FORWARD	30-10-02-07	108
WASHER - FORWARD AND AFT	52-32-00-02	15
WASHER - FORWARD AND AFT DOOR	25-52-00-01	165
WASHER - FORWARD SIDE	77-11-00-02	7
WASHER - GROUND WIRE ATTACH	30-40-00-01	39
WASHER - HANGER	78-10-00-04	27
WASHER - HINGE ASSEMBLY	25-52-00-02	231
WASHER - LEFT ONLY	56-30-00-01	27
WASHER - NOT FURNISHED WITH KIT	34-54-03-01	10
WASHER - OUTBOARD	25-21-00-03	30
WASHER - PANEL ASSEMBLY ATTACH	71-60-00-01	17
WASHER - RIGHT ONLY	27-20-02-02	12
WASHER - RIGHT ONLY	27-20-02-02	12A
WASHER - SEAT BACK ASSEMBLY	25-10-00-02A	10

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
WASHER - SKIN PANEL ATTACH	53-30-01-02	178
WASHER - STA.282.00	53-15-00-02	305
WASHER - UNDER BOLT HEAD	27-20-01-01	88
WASHER - UNDER BOLT HEAD	27-30-01-01	100
WASHER - UNDER NUT	28-42-01-01	17
WASHER - UNDER SCREW HEAD	28-42-01-01	16
WASHER - UPPER & LOWER	25-21-00-02	23
WASHER - USED WHEN DUAL SPERRY ADF INSTALLED	34-50-00-04	84
WASHER - USED WHEN ONE SPERRY ADF INSTALLED	34-50-00-04	83
WASHER - USED WITH 2617118-3,-4 BOLT GUIDE	52-10-00-02	160
WASHER - USED WITH 300 AMP STARTER/GENERATOR OPTION	24-36-00-01	19A
WASHER - WITH CARGO POD	28-22-00-01	163
WASHER - WITH CARGO POD	28-22-00-01	178
WASHER - WITH CARGO POD	34-51-14-02	7
WASHER 2 REQD STA 194.40	27-30-02-01	22
WASHER 2 REQD STA 214.40	27-30-02-01	23
WASHER ATTACH BEARING BLOCK	25-10-00-01	99
WASHER ATTACH BEARING BLOCK	25-10-00-02	87
WASHER OUTBOARD FITTINGS ONLY	25-51-01-03	14
WASHER TO ADJUST SHROUD	24-36-02-02	4
WASHER UNDER BOLT HEAD	27-30-02-01	24
WASHER UPPER	25-21-00-02	14
WASHRING ASSEMBLY - COMPRESSOR	71-41-00-01	1
WBA - DELAY RELAY SMASS	24-51-00-01	7
WBA - DIMMING CONTROL MODULE	33-10-00-01	13A
WBA - OIL PRESSURE SWITCH	79-30-00-03	26B
WEIGHT - RUDDER BALANCE	55-40-00-02	83A
WEIGHT - RUDDER BALANCE	55-40-00-06	79A
WEIGHT - RUDDER BALANCE	55-40-00-07	78A
WEIGHT - RUDDER BALANCE	55-40-00-02	83
WEIGHT ASSEMBLY - AILERON BALANCE	57-60-00-01	22
WELDMENT ASSEMBLY	78-10-00-05	1
WET TORQUE INDICATING SYSTEM	77-11-00	
WHEEL - RUDDER TRIM	27-20-02-01	5A
WHEEL AND TIRE ASSEMBLY - MAIN GEAR	32-40-00	
WHEEL AND TIRE ASSEMBLY - NOSE GEAR	32-40-00	
WHEEL ASSEMBLY - ELEVATOR TRIM	27-30-02-02	2
WHEEL ASSEMBLY - MAIN GEAR	32-40-00-01	9
WHEEL ASSEMBLY - NOSE GEAR	32-40-00-02	6
WHEEL ASSEMBLY - NOSE GEAR	32-40-00-02	6A
WICK - STATIC DISCHARGER AILERON LEFT AND RIGHT	23-60-00-01	16
WICK - STATIC DISCHARGER ELEVATOR LEFT AND RIGHT	23-60-00-01	10
WICK - STATIC DISCHARGER RUDDER	23-60-00-01	13
WICK - STATIC DISCHARGER STINGER	23-60-00-01	7
WICK - STATIC DISCHARGER USED WITH LONG CHORD RUDDER	23-60-00-01	1
WINDOW - CABIN	56-20-00-02	9
WINDOW - CABIN LEFT	56-20-00-01	14
WINDOW - CABIN LEFT	56-20-00-01	6
WINDOW - CABIN LEFT	56-20-00-02	11
WINDOW - CABIN RIGHT	56-20-00-01	12
WINDOW - CABIN RIGHT	56-20-00-01	15
WINDOW - CABIN RIGHT	56-20-00-01	7
WINDOW - CABIN RIGHT	56-20-00-02	12
WINDOW - CARGO DOOR	56-30-00-02	1
WINDOW - CREW DOOR LEFT	56-30-00-01	1
WINDOW - CREW DOOR RIGHT	56-30-00-01	2
WINDOW - PASSENGER DOOR	56-30-00-01	38
WINDOW PLUG INSTALLATION	56-21-00	
WINDOW PLUG INSTALLATION - PASSENGER VERSION	56-21-00	
WINDSHIELD ANTI-ICE INSTALLATION	30-40-00	
WINDSHIELD ICE INDICATOR LIGHT INSTALLATION	33-10-00	
WINDSHIELD INSTALLATION	56-10-00	
WINDSHIELD PUMP	30-10-02-06	242
WINDSHIELD PUMP	30-10-02-07	242
WING ASSEMBLY - LEFT	57-10-01-01	1
WING ASSEMBLY - RIGHT	57-10-01-01	2
WING INSPECTION LIGHT - FC009	33-44-00-03	1
WING INSTALLATION	57-10-00	
WING LEADING EDGE ASSEMBLIES	57-40-00	
WING LED INSPECTION LIGHT INSTALLATION	33-44-00	
WING NAVIGATION AND STROBE LIGHT INSTALLATION	33-41-00	

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

NOMENCLATURE	CH-SE-SU-FI	ITEM
WING NAVIGATION LED LIGHT INSTALLATION	33-41-00	
WING SKINS AND COMPONENTS	57-11-00	
WING SPAR REAR ASSEMBLIES	57-10-03	
WING SPOILER INSTALLATION	57-70-00	
WING STRUCTURE ASSEMBLY	57-10-01	
WING STRUCTURE COMPONENTS - FUEL BAY CENTER INBOARD	57-10-02	
WING STRUCTURE COMPONENTS - FUEL BAY CENTER OUTBOARD	57-10-02	
WING STRUCTURE COMPONENTS - FUEL BAY INBOARD	57-10-02	
WING STRUCTURE COMPONENTS - FUEL BAY OUTBOARD	57-10-02	
WING STRUT INSTALLATION	57-10-04	
WING TIP INSTALLATION	57-30-00	
WING TKS DOUBLER INSTALLATION WS 44.00 TO WS 104.75	57-10-01	
WINTER PANEL - INLET	71-10-00-04	91
WINTER PANEL - OUTLET	71-10-00-04	92
WIRE	34-50-00-03	11
WIRE - ANTENNA BULK ITEM	34-50-00-04	1
WIRE - CONTROL BULK ITEM 66.00 IN LG	21-21-01-01	163
WIRE - CONTROL BULK ITEM 66.00 IN LG	21-21-01-02	36
WIRE - CONTROL BULK ITEM 66.00 IN LG	21-21-01-03	182
WIRE - CONTROL BULK ITEM 66.00 IN LG	21-21-01-04	36
WIRE - CONTROL BULK ITEM 66.00 IN LG	21-21-02-01	88
WIRE - CONTROL BULK ITEM 80.00 IN LG	21-21-03-01	88
WIRE - CONTROL BULK ITEM 80.00 IN LG	21-21-03-02	113
WIRE - CONTROL BULK ITEM 80.00 IN LG	21-21-03-03	185
WIRE - JUMPER	28-10-03-01	10
WIRE - JUMPER	28-10-03-01	169
WIRE - JUMPER	28-10-03-01	96
WIRE - OXYGEN CONTROL 192.00 IN LG BULK ITEM	35-14-00-01	15
WIRE - OXYGEN CONTROL 192.00 IN LG BULK ITEM	35-14-00-01	151
WIRE - OXYGEN CONTROL 240.00 IN LG BLK	35-10-01-04	225
WIRE - OXYGEN CONTROL 240.00 IN LG BULK ITEM	35-14-00-01	152
WIRE - OXYGEN CONTROL 240.00 IN LG BULK ITEM	35-14-00-01	16
WIRE BUNDLE ASSEMBLY - PASS DOOR SWITCH -SMASSY ZF007	33-20-00-01A	19
WIRE BUNDLE ASSEMBLY CONTACTOR TO BATTERY	24-50-02-01	160
WIRE BUNDLE ASSEMBLY CONTACTOR TO BATTERY - USED WITH 300 AMP STARTER/GENERATOR	24-50-02-01	162
WIRE BUNDLE ASSEMBLY CONTACTOR TO EXTERNAL POWER RECPT	24-50-02-01	166
WIRE BUNDLE ASSEMBLY CONTACTOR TO EXTERNAL POWER RECPT - USED WITH 300 AMP STARTER/GENERATOR	24-50-02-01	168
WIRE BUNDLE ASSEMBLY CONTACTOR TO STARTER/GENERATOR	24-50-02-01	154
WIRE BUNDLE ASSEMBLY CONTACTOR TO STARTER/GENERATOR - USED WITH 300 AMP STARTER/GENERATOR	24-50-02-01	156
WIRE HARNESS - PROPELLER DEICE	30-60-00-01	21
WIRE HARNESS - PROPELLER DEICE	30-60-00-02	5
WIRE HARNESS, TANK	30-10-02-08	32
WIRING BUNDLE ASSEMBLIES - CABIN AUDIO	23-50-01	
YAW DAMPER SERVO INSTALLATION	22-10-05	
YAW SERVO INSTALLATION	22-10-05	