

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE   | CH           | SEC | SUBJ | FIG | ITEM  |
|--|--------------|-----|------|-----|-------|
| <b>A</b>   |              |     |      |     |       |
| ABRASION BOOT-STABILIZER .....                                       | 55-10-01-01  |     |      |     | -043  |
| AC CONTROLLER-1IN-4OUT BF001 .....                                   | 24-20-00-01  |     |      |     | -001  |
| ACCELEROMETER-3-AXIS .....   | 31-30-00-02  |     |      |     | -016  |
| ACCELEROMETER-3-AXIS .....   | 31-30-00-02A |     |      |     | -018  |
| ACCESS COVER .....   | 24-20-00-01  |     |      |     | -019  |
| ACCESS COVER .....   | 24-20-00-01  |     |      |     | -022  |
| ACCESS COVER .....   | 53-21-00-03  |     |      |     | -081A |
| ACCESS PANEL .....   | 71-60-01-02  |     |      |     | -081  |
| ACCESS PANEL ASSY .....  | 79-20-00-04  |     |      |     | -004  |
| ACCESS PANELS - WING .....   | 57-11-01-01  |     |      |     | -     |
| ACCESSORY UNIT ASSEMBLIES USED WITH 400B AUTOPILOT AND IFCS .....    | 22-10-01-01  |     |      |     | -     |
| ACTUATOR ASSY-AILERON TRIM SPARES FSO 2661615-13 .....               | 27-10-03-03  |     |      |     | -001A |
| ACTUATOR ASSY-AILERON TRIM SPARES .....                              | 27-10-03-03  |     |      |     | -001B |
| ACTUATOR ASSY-AILERON TRIM TAB 2661615-13 .....                      | 27-10-03-04  |     |      |     | -001A |
| ACTUATOR ASSY-AILERON TRIM TAB FSO 2661615-13 .....                  | 27-10-03-04  |     |      |     | -001B |
| ACTUATOR ASSY-AILERON TRIM TAB .....                                 | 27-10-03-04  |     |      |     | -001C |
| ACTUATOR ASSY-ELEVATOR TRIM TAB .....                                | 27-30-02-04  |     |      |     | -001A |
| ACTUATOR ASSY-ELECTRIC TRIM .....                                    | 27-30-03-01  |     |      |     | -002  |
| ADAPTER ASSY-OIL VENT LINE .....                                     | 71-10-00-02  |     |      |     | -080  |
| ADAPTER ASSY-OIL VENT LINE .....                                     | 71-10-00-02  |     |      |     | -080A |
| ADF LOOP ANTENNA INSTALLATION USED WITH SPERRY 300 AND 400 ADF ..... | 34-50-00-02  |     |      |     | -     |
| ADF RECEIVER-ALT FOR 066-1072-04 (MOD 9, SOFTWARE MOD 01) .....      | 34-50-01-05  |     |      |     | -001  |
| ADF RECEIVER-ALT FOR S3100-406 .....                                 | 34-50-01-05  |     |      |     | -001A |
| ADF SENSE ANTENNA INSTALLATION .....                                 | 34-50-00-03  |     |      |     | -     |
| ADJUSTER-LH RUDDER STOP .....  | 55-30-00-01  |     |      |     | -024  |
| ADJUSTER-RH RUDDER STOP .....  | 55-30-00-01  |     |      |     | -025  |
| AFT CARGO POD ASSY- .....  | 25-52-00-02A |     |      |     | -450  |
| AFT PANEL .....  | 79-20-00-03  |     |      |     | -109  |
| AFT RECEPTACLE PLATE ASSY-LH/RH .....                                | 24-20-00-01  |     |      |     | -016  |
| AFT RECEPTACLE PLATE CLIP-LH/RH FWD .....                            | 24-20-00-01  |     |      |     | -017  |
| AFT RECEPTACLE PLATE CLIP-LH/RH AFT .....                            | 24-20-00-01  |     |      |     | -018  |
| AILERON AND SPOILER CONTROL SYSTEM .....                             | 27-10-02-01  |     |      |     | -     |
| AILERON AND SPOILER CONTROL SYSTEM .....                             | 27-10-02-02  |     |      |     | -     |
| AILERON ASSY-LH .....  | 57-60-00-01  |     |      |     | -005  |
| AILERON ASSY-RH .....  | 57-60-00-01  |     |      |     | -008  |
| AILERON INSTALLATION .....   | 57-60-00-01  |     |      |     | -     |
| AILERON TRIM ACTUATOR ASSEMBLY .....                                 | 27-10-03-03  |     |      |     | -     |
| AILERON TRIM TAB ACTUATOR ASSEMBLY .....                             | 27-10-03-04  |     |      |     | -     |
| AILERON TRIM WHEEL INSTALLATION .....                                | 27-10-03-02  |     |      |     | -     |
| AILERON TRIM WHEEL INSTALLATION .....                                | 27-10-03-02A |     |      |     | -     |
| AIR CONDITIONER COMPRESSOR AND DRIVE UNIT INSTALLATION .....         | 21-51-01-01  |     |      |     | -     |
| AIR CONDITIONER CONDENSER INSTALLATION .....                         | 21-51-02-01  |     |      |     | -     |
| AIR CONDITIONING SYSTEM .....  | 21-51-00-01  |     |      |     | -     |
| AIR DEFLECTOR INSTALLATION - CARGO DOOR .....                        | 52-34-00-01  |     |      |     | -     |
| AIR EJECTOR ASSY .....   | 21-41-00-01  |     |      |     | -102  |
| ALARM ASSY-AIRSPPEED UB003 .....                                     | 34-11-00-01  |     |      |     | -301  |
| ALARM ASSY-FIRE DETECTOR UB001 .....                                 | 26-10-00-01  |     |      |     | -080  |
| ALTAIR ENGINE TREND MONITORING (ETM) COMPONENT INSTALLATION .....    | 77-30-00-01  |     |      |     | -     |
| ALTERNATOR ASSY 28 VOLT 95 AMP FSO 9910592-2 .....                   | 24-36-01-01  |     |      |     | -001  |
| ALTERNATOR CONTROL UNIT FSO 2618510-10 .....                         | 24-36-00-01  |     |      |     | -001  |
| ALTERNATOR CONTROL UNIT ASSY FSO 2618510-10 .....                    | 24-36-00-01  |     |      |     | -001A |
| ALTERNATOR CONTROL UNIT ASSY FSO 2618510-10 .....                    | 24-36-00-01  |     |      |     | -001B |
| ALTERNATOR CONTROL UNIT ASSY .....                                   | 24-36-00-01  |     |      |     | -001C |
| ALTIMETER INDICATOR .....  | 34-10-00-01  |     |      |     | -009  |
| ALTIMETER INDICATOR USED WITH ENCODING ALTIMETER .....               | 34-10-00-01  |     |      |     | -075  |
| ALTIMETER INDICATOR .....  | 34-10-00-02  |     |      |     | -020  |
| ALTIMETER INDICATOR 20 FT INCREMENTS & MILLIBARS .....               | 34-10-00-02  |     |      |     | -033  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE  | CH           | SEC | SUBJ | FIG | ITEM  |
|---|--------------|-----|------|-----|-------|
| <b>A</b> Continued  |              |     |      |     |       |
| ALTIMETER INDICATOR .....   | 34-10-00-03  |     |      |     | -013  |
| ALTIMETER INDICATOR 20 FT INCREMENTS & MILLIBARS .....  | 34-10-00-03  |     |      |     | -030  |
| ALTIMETER INDICATOR .....   | 34-10-00-04  |     |      |     | -007  |
| ALTIMETER-ENCODING ALERTER IN-HG .....  | 34-10-00-04  |     |      |     | -011  |
| ALTIMETER-ENCODING IN-HG .....  | 34-10-00-04  |     |      |     | -009  |
| ALTITUDE PRESELECT/ALERTER INSTALLATION .....   | 34-10-01-01  |     |      |     | -     |
| ALTITUDE REGULATOR-PRESSURE COMPENSATED .....   | 35-01-00-01  |     |      |     | -011  |
| ALTITUDE REGULATOR-OXYGEN PRESSURE COMPENSATED .....  | 35-01-00-02  |     |      |     | -009A |
| ALTITUDE SENSOR AND AIRSPEED SWITCH INSTALLATION .....  | 34-11-01-02  |     |      |     | -     |
| ANCHOR-CARGO TIE DOWN USE WITH 3000 LB BELT ALT FOR 40340-10 .....  | 25-51-03-01  |     |      |     | -009  |
| ANGLE .....   | 25-52-00-02A |     |      |     | -243  |
| ANGLE .....   | 25-52-00-02A |     |      |     | -419  |
| ANGLE .....   | 31-30-00-02  |     |      |     | -018  |
| ANGLE .....   | 31-30-00-02A |     |      |     | -020  |
| ANGLE-INDUCTION AIR BAND .....  | 71-60-01-01  |     |      |     | -233  |
| ANGLE .....   | 71-60-01-02  |     |      |     | -173  |
| ANGLE ASSY .....  | 71-60-01-02  |     |      |     | -177  |
| ANNUNCIATOR PANEL INSTALLATION .....  | 33-10-00-02  |     |      |     | -     |
| ANTENNA-RADIO PHONE YC1006 .....  | 23-15-00-01  |     |      |     | -001  |
| ANTENNA-STORMSCOPE .....  | 34-40-00-01  |     |      |     | -001  |
| ANTENNA-TRANSPONDER USED ON AIRPLANES WITH CARGO POD .....  | 34-51-15-01  |     |      |     | -075  |
| ANTENNA-L-BAND FWD RH AND LH USED ON AIRPLANES WITH CARGO POD .....   | 34-51-15-01  |     |      |     | -080  |
| ANTENNA-L-BAND SECOND TRANSPONDER AFT RH .....  | 34-51-15-01  |     |      |     | -150  |
| ANTENNA-KLN 89B ALT FOR 071-01620-0001 .....  | 34-55-07-01  |     |      |     | -001  |
| ANTENNA-KA-96 GPS .....   | 34-55-07-01  |     |      |     | -001A |
| ANTENNA BLADE KIT-NAV .....   | 34-54-02-01  |     |      |     | -001  |
| ANTENNA DOUBLER ASSY .....  | 23-15-00-01  |     |      |     | -003  |
| ANTENNA-WLAN STUBBY YT009 .....   | 77-30-00-02  |     |      |     | -002  |
| ANTENNA-WLAN STUBBY YT010 .....   | 77-30-00-02  |     |      |     | -003  |
| ARGENTINE EXTERIOR PLACARDS AND MARKINGS - CABIN DOORS .....  | 11-LQ-28-01  |     |      |     | -     |
| ARGENTINE EXTERIOR PLACARDS AND MARKINGS - COWLING .....  | 11-LQ-24-01  |     |      |     | -     |
| ARGENTINE EXTERIOR PLACARDS AND MARKINGS - EMPENNAGE AND REAR BAGGAGE .....                                       | 11-LQ-23-01  |     |      |     | -     |
| ARGENTINE EXTERIOR PLACARDS AND MARKINGS - FUSELAGE .....   | 11-LQ-22-01  |     |      |     | -     |
| ARGENTINE EXTERIOR PLACARDS AND MARKINGS - LANDING GEAR .....   | 11-LQ-27-01  |     |      |     | -     |
| ARGENTINE EXTERIOR PLACARDS AND MARKINGS - WINGS .....  | 11-LQ-25-01  |     |      |     | -     |
| ARGENTINE INTERIOR PLACARDS AND MARKINGS - CABIN DOORS .....  | 11-LQ-38-01  |     |      |     | -     |
| ARGENTINE INTERIOR PLACARDS AND MARKINGS - FLIGHT COMPARTMENT .....   | 11-LQ-31-01  |     |      |     | -     |
| ARM ASSY-ELEVATOR PUSHROD .....   | 55-20-00-02  |     |      |     | -005  |
| ARMREST ASSY LH .....   | 25-10-00-02  |     |      |     | -044  |
| ARMREST ASSY RH .....   | 25-10-00-02  |     |      |     | -045  |
| ASH RECEIVER .....  | 25-23-02-05  |     |      |     | -104  |
| ASH RECEIVER .....  | 25-23-02-06  |     |      |     | -098  |
| ASH TRAY .....  | 25-23-02-01  |     |      |     | -082  |
| ASH TRAY ASSY .....   | 25-23-02-05  |     |      |     | -011  |
| ASH TRAY ASSY .....   | 25-23-02-05  |     |      |     | -082  |
| ASH TRAY ASSY-LH .....  | 25-23-02-01  |     |      |     | -013  |
| ATTACH ANGLE-LH .025 2024 T3 .....  | 53-50-00-01  |     |      |     | -021C |
| ATTACH ANGLE-RH .025 2024 T3 .....  | 53-50-00-01  |     |      |     | -021D |
| ATTACH BRACKET-LEADING EDGE RIB ATTACH WS 244.48 .032 2024 T42 .....  | 57-10-01-01  |     |      |     | -078  |
| ATTITUDE GYRO .....   | 34-10-00-03  |     |      |     | -020  |
| ATTITUDE HEADING REFERENCE SYSTEM (AHRS) INSTALLATION .....   | 34-25-00-01  |     |      |     | -     |
| AUDIO PANEL INSTALLATION .....  | 23-51-00-01  |     |      |     | -     |
| AUTOPILOT CIRCUIT BREAKERS .....  | 24-52-01-01  |     |      |     | -     |
| AUTOPILOT COMPUTER - KFC 225 .....  | 22-10-07-01  |     |      |     | -     |
| AUTOPILOT COMPUTER INSTALLATION - TYPE KC 191 AND KC 192 .....  | 22-10-06-01  |     |      |     | -     |
| AVIONIC JCT BOX ASSY USED WITH KT-73 .....  | 24-50-03-01  |     |      |     | -005C |
| AVIONICS CIRCUIT BREAKER PANEL INSTALLATION .....   | 24-52-05-01  |     |      |     | -     |
| AVIONICS CIRCUIT BREAKER PANEL INSTALLATION - USED WITH KING RADIOS ONLY .....                                    | 24-52-04-01  |     |      |     | -     |
| AVIONICS CIRCUIT BREAKER PANEL INSTALLATION - USED WITH SPERRY 300 AND 400<br>SERIES RADIOS AND KING RADIOS ..... | 24-52-03-01  |     |      |     | -     |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE                                    | CH SEC SUBJ FIG | ITEM  |
|---|-----------------|-------|
| <b>A Continued</b>                              |                 |       |
| AVIONICS GROUNDING BLOCK INSTALLATION .....     | 24-20-01-01     | -     |
| AVIONICS JUNCTION BOX INSTALLATION .....        | 24-50-03-01     | -     |
| AVIONICS RACK INSTALLATION .....                | 25-70-00-01     | -     |
| AXLE-NOSE GEAR WHEEL AND TIRE ASSY ATTACH. .... | 32-20-00-01     | -097  |
| AXLE FITTING-MAIN GEAR FSO 2641010-7 .....      | 32-10-00-01     | -076  |
| AXLE FITTING-MAIN GEAR .....                    | 32-10-00-01     | -076A |

**B**

|  |              |       |
|--|--------------|-------|
| BACKPLATE .....  | 31-30-00-02  | -013  |
| BACKPLATE .....  | 31-30-00-02A | -015  |
| BAFFLE-LH .....  | 33-40-00-01A | -007  |
| BAFFLE-RH .....  | 33-40-00-01A | -008  |
| BAGGAGE DOME LIGHT FC014 .....   | 33-20-00-01A | -005  |
| BAGGAGE DOME LIGHT FC015 .....   | 33-20-00-01A | -011  |
| BAGGAGE DOME LIGHT FF002 .....   | 33-20-00-01A | -014  |
| BALANCE WEIGHT-ELEVATOR .....  | 55-20-00-01  | -173  |
| BALANCE WEIGHT-ELEVATOR .....  | 55-20-00-02  | -116  |
| BALANCE WEIGHT-RUDDER .....  | 55-40-00-01  | -084A |
| BALANCE WEIGHT-RUDDER .....  | 55-40-00-03  | -082  |
| BALANCE WEIGHT-RUDDER FSO 2633026-3 .....                                    | 55-40-00-04  | -082  |
| BALANCED LOOP ANTENNA INSTALLATION - NAV. ....                               | 34-54-03-01  | -     |
| BAND ASSY-INDUCTION AIR PLENUM UPPER .....                                   | 71-60-01-01  | -226  |
| BANJO .....  | 30-10-02-06  | -255  |
| BANJO .....  | 30-10-02-07  | -255  |
| BATTERY (40AH) .....   | 24-34-00-01  | -001A |
| BATTERY-MARATHON TSP410 NICAD .....  | 24-34-00-01  | -003  |
| BATTERY CELL-MARATHON NICAD ONLY .....                                       | 24-34-00-01  | -011  |
| BATTERY CELL-SAFT NICAD .....  | 24-34-00-01  | -012A |
| BATTERY INSTALLATION .....   | 24-34-00-01  | -     |
| BEAD ASSY-GLARESHIELD FSO 2615162-1 .....                                    | 31-00-00-02  | -090  |
| BEAD ASSY-GLARESHIELD .....  | 31-00-00-02  | -090A |
| BEAD ASSY-GLARESHIELD .....  | 31-00-00-03  | -029  |
| BEARING .....  | 21-51-01-02  | -095  |
| BEARING .....  | 21-51-01-02A | -090  |
| BEARING HOUSING .....  | 21-51-01-02  | -088  |
| BEARING HOUSING .....  | 21-51-01-02A | -086  |
| BELLCRANK ASSY-ELEVATOR CONTROL FSO 2612119-3 .....                          | 27-30-01-01  | -169  |
| BELLCRANK ASSY-RH FLAP FSO 2622258-2 .....                                   | 27-50-01-04  | -076  |
| BELLCRANK ASSY-LH INBD .....   | 27-50-01-04  | -001A |
| BELLCRANK ASSY-LH INBD .....   | 27-50-01-04  | -001B |
| BELLCRANK ASSY-LH INBD .....   | 27-50-01-04  | -001C |
| BELLCRANK ASSY-LH FLAP .....   | 27-50-01-04  | -075B |
| BELLCRANK ASSY-RH FLAP FSO 2622258-2 .....                                   | 27-50-01-04  | -076A |
| BELLCRANK ASSY-RH FLAP .....   | 27-50-01-04  | -076B |
| BELLCRANK ASSY-RH FLAP FSO 2622258-2 .....                                   | 27-50-01-04  | -076C |
| BELLMOUTH ASSY-COMPRESSOR AIR BLEED .....                                    | 71-60-01-01  | -234  |
| BELT-ALTERNATOR .....  | 24-36-01-01  | -086  |
| BELT ASSY-TIE DOWN RATCHET 3000 LB RATING. ....                              | 25-51-03-01  | -007  |
| BELT ASSY-TIE DOWN RATCHET 5000 LB RATING. ....                              | 25-51-03-01  | -008  |
| BELT ASSY-TIE DOWN 5000 LB RATING .....                                      | 25-51-03-01  | -011  |
| BENDIX WEATHER RADAR INSTALLATION - TYPE RDS-82 AND RDS-81 .....             | 34-43-00-01  | -     |
| BENDIX/KING WEATHER RADAR INSTALLATION - TYPE RDR 2000 .....                 | 34-44-00-02  | -     |
| BETA INDICATING SYSTEM - PROPELLER- .....                                    | 61-20-00-01  | -     |
| BLE LANDING LIGHT COVER-USED ON AIRCRAFT WITH TKS FAIRING INSTALLATION ..... | 33-40-00-01  | -022  |
| BLE LANDING LIGHT COVER-USED ON AIRCRAFT WITH TKS FAIRING INSTALLATION ..... | 33-40-00-01  | -023  |
| BLE LENS ASSY-LH .....   | 33-40-00-01  | -026  |
| BLE LENS ASSY-RH .....   | 33-40-00-01  | -027  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE                                      | CH           | SEC | SUBJ | FIG | ITEM  |
|---|--------------|-----|------|-----|-------|
| <b>B Continued</b>                                |              |     |      |     |       |
| BLEED AIR HEATER COMPONENTS .....                 | 21-41-00-01  |     |      |     | -     |
| BLOCK-ENGINE MOUNT 1.50X2.00 7075 T73 .....       | 53-10-00-01  |     |      |     | -160  |
| BLOWER ASSY-VENTILATION .....                     | 21-21-04-01  |     |      |     | -001  |
| BLOWER ASSY-VENTILATION .....                     | 21-21-04-01  |     |      |     | -001C |
| BLOWER ASSY-EVAPORATOR .....                      | 21-51-03-04  |     |      |     | -006  |
| BOLT .....  | 27-50-01-04  |     |      |     | -245  |
| BOLT .....  | 30-60-10-01  |     |      |     | -023  |
| BOLT .....  | 78-10-00-05  |     |      |     | -045  |
| BOOT-PROPELLER DEICE .....                        | 30-60-00-01  |     |      |     | -025  |
| BOOT-PROPELLER DEICE .....                        | 30-60-00-02  |     |      |     | -002  |
| BOSS .....  | 71-70-00-02  |     |      |     | -006  |
| BOX .....   | 24-50-01-01A |     |      |     | -025  |
| BOX .....   | 24-50-01-01A |     |      |     | -026  |
| BOX .....   | 24-50-01-01A |     |      |     | -026A |
| BOX ASSY .....                                    | 24-50-01-01A |     |      |     | -010  |
| BOX ASSY .....                                    | 24-50-01-01A |     |      |     | -011  |
| BOX ASSY .....                                    | 24-50-01-01A |     |      |     | -012  |
| BOX ASSY .....                                    | 24-50-01-01A |     |      |     | -012A |
| BRACKET .....                                     | 25-52-00-02A |     |      |     | -027  |
| BRACKET .....                                     | 25-52-00-02A |     |      |     | -028  |
| BRACKET .....                                     | 26-10-00-02  |     |      |     | -015  |
| BRACKET .....                                     | 26-10-00-02  |     |      |     | -017  |
| BRACKET .....                                     | 26-10-00-02  |     |      |     | -018  |
| BRACKET .....                                     | 26-10-00-02  |     |      |     | -021  |
| BRACKET .....                                     | 28-23-00-01  |     |      |     | -165  |
| BRACKET .....                                     | 33-40-00-01A |     |      |     | -009  |
| BRACKET-FUEL ECOLOGY .....                        | 53-10-00-01  |     |      |     | -078  |
| BRACKET-STARTER/GENERATOR BLAST TUBE FWD .....    | 71-60-01-01  |     |      |     | -010  |
| BRACKET .....                                     | 71-60-01-02  |     |      |     | -165  |
| BRACKET-DRAIN LINES .....                         | 71-70-00-02  |     |      |     | -026  |
| BRACKET .....                                     | 71-70-00-02  |     |      |     | -046  |
| BRACKET .....                                     | 71-70-00-02  |     |      |     | -081  |
| BRACKET-PROP CONTROL .....                        | 76-10-01-01B |     |      |     | -019  |
| BRACKET .....                                     | 76-10-01-01B |     |      |     | -076  |
| BRACKET-EMERGENCY POWER .....                     | 76-10-01-01B |     |      |     | -078  |
| BRACKET-CONDITION CONTROL .....                   | 76-10-01-01B |     |      |     | -106  |
| BRACKET .....                                     | 77-11-00-02  |     |      |     | -009  |
| BRACKET .....                                     | 77-11-00-02  |     |      |     | -025  |
| BRACKET .....                                     | 77-11-00-02  |     |      |     | -026  |
| BRACKET .....                                     | 78-10-00-05  |     |      |     | -002  |
| BRACKET .....                                     | 78-10-00-05  |     |      |     | -014  |
| BRACKET .....                                     | 79-20-00-03  |     |      |     | -013  |
| BRACKET-OIL TUBE .....                            | 79-20-00-03  |     |      |     | -084  |
| BRACKET-OIL TUBE .....                            | 79-20-00-03  |     |      |     | -089  |
| BRACKET-OIL TUBE .....                            | 79-20-00-03  |     |      |     | -094  |
| BRACKET .....                                     | 79-20-00-03  |     |      |     | -103  |
| BRACKET .....                                     | 80-10-01-03  |     |      |     | -011  |
| BRACKET ASSY-95 AMP ALTERNATOR .....              | 24-36-01-01  |     |      |     | -009  |
| BRACKET ASSY-FUEL ECOLOGY TANK .....              | 28-21-00-03  |     |      |     | -001  |
| BRACKET ASSY-COCKPIT VOICE DATA RECORDER .....    | 31-30-00-02  |     |      |     | -004  |
| BRACKET ASSY-ACCELEROMETER .....                  | 31-30-00-02  |     |      |     | -019  |
| BRACKET ASSY-ADAPTERS .....                       | 31-30-00-02  |     |      |     | -027  |
| BRACKET ASSY-COCKPIT VOICE DATA RECORDER .....    | 31-30-00-02A |     |      |     | -006  |
| BRACKET ASSY-ACCELEROMETER .....                  | 31-30-00-02A |     |      |     | -021  |
| BRACKET ASSY-ADAPTERS .....                       | 31-30-00-02A |     |      |     | -029  |
| BRACKET ASSY .....                                | 33-20-00-01A |     |      |     | -013  |
| BRACKET ASSY .....                                | 33-20-00-01A |     |      |     | -016  |
| BRACKET ASSY .....                                | 44-20-00-01  |     |      |     | -003  |
| BRACKET ASSY-COWL ATTACH .....                    | 53-10-00-01  |     |      |     | -014  |
| BRACKET ASSY-ALTERNATOR CONTROL UNIT S135-4 ..... | 53-10-01-01  |     |      |     | -153  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE  | CH SEC SUBJ FIG | ITEM  |
|---|-----------------|-------|
| <b>B Continued</b>  |                 |       |
| BRACKET ASSY-GENERATOR CONTROL UNIT .....                                   | 53-10-01-01     | -155  |
| BRACKET ASSY-ENGINE MOUNT UPR CTR .....                                     | 71-20-00-01     | -075  |
| BRACKET ASSY-ENGINE MOUNT LWR LH .....                                      | 71-20-00-01     | -076  |
| BRACKET ASSY-ENGINE MOUNT LWR RH .....                                      | 71-20-00-01     | -077  |
| BRACKET ASSY-EMERGENCY POWER .....  | 76-10-01-01B    | -075  |
| BRACKET ASSY-CONDITION CONTROL .....  | 76-10-01-01B    | -105  |
| BRACKET ASSY .....  | 79-20-00-03     | -102  |
| BRACKET ASSY-LH .....   | 55-30-00-04     | -021  |
| BRACKET ASSY-PULLEY LWR RUDDER .040 2024 T42 .....                          | 53-13-03-01     | -032  |
| BRACKET ASSY-RH .....   | 55-30-00-04     | -022  |
| BRACKET-PULLEY UPR RUDDER .040 2024 T42 .....                               | 53-13-03-01     | -031  |
| BRAKE ASSY-MAIN WHEEL ALT FOR 30-182 .....                                  | 32-40-00-03     | -002  |
| BRAKE ASSY-MAIN WHEEL .....   | 32-40-00-03     | -002A |
| BRAKE DISC .....  | 32-40-00-01     | -021  |
| BRAKE MASTER CYLINDER ASSEMBLY .....  | 32-41-01-01     | -     |
| BRAKE SYSTEM .....  | 32-41-00-01     | -     |
| BRAZILIAN EXTERIOR PLACARDS AND MARKINGS - CABIN DOORS .....                | 11-PP-28-01     | -     |
| BRAZILIAN EXTERIOR PLACARDS AND MARKINGS - COWLING .....                    | 11-PP-24-01     | -     |
| BRAZILIAN EXTERIOR PLACARDS AND MARKINGS - COWLING .....                    | 11-PP-27-01     | -     |
| BRAZILIAN EXTERIOR PLACARDS AND MARKINGS - EMPENNAGE AND REAR BAGGAGE ..... | 11-PP-23-01     | -     |
| BRAZILIAN EXTERIOR PLACARDS AND MARKINGS - FUSELAGE .....                   | 11-PP-22-01     | -     |
| BRAZILIAN EXTERIOR PLACARDS AND MARKINGS - WINGS .....                      | 11-PP-25-01     | -     |
| BRAZILIAN INTERIOR PLACARDS AND MARKINGS - CABIN .....                      | 11-PP-32-01     | -     |
| BRAZILIAN INTERIOR PLACARDS AND MARKINGS - CABIN DOORS .....                | 11-PP-38-01     | -     |
| BRAZILIAN INTERIOR PLACARDS AND MARKINGS - FLIGHT COMPARTMENT .....         | 11-PP-31-01     | -     |
| BREATHER PAD-SEPARATOR .....  | 77-11-00-01     | -093  |
| BREATHER VENT ASSY-OVERBOARD OIL BREATHER .....                             | 71-70-00-01     | -178  |
| BREATHER VENT ASSY .....  | 71-70-00-02     | -075  |
| BRITISH INTERIOR PLACARDS AND MARKINGS - CABIN .....                        | 11-G-38-01      | -     |
| BRITISH INTERIOR PLACARDS AND MARKINGS - FLIGHT COMPARTMENT .....           | 11-G-31-01      | -     |
| BRUSH BLOCK ASSY-PROPELLER DEICE .....                                      | 30-60-00-02     | -012  |
| BRUSH BLOCK-PROPELLER .....   | 61-10-00-01     | -019  |
| BULB-CHART LIGHTS .....   | 33-20-00-01     | -030  |
| BULB-CIRCUIT BREAKER PANEL LIGHT .....                                      | 33-10-00-03     | -008  |
| BULB-POST LIGHT .....   | 33-20-00-04     | -002  |
| BULB-WING NAV LIGHT .....   | 33-41-00-01     | -014  |
| BULKHEAD .....  | 25-52-00-02A    | -238  |
| BULKHEAD .....  | 25-52-00-02A    | -339  |
| BULKHEAD .....  | 25-52-00-02A    | -413  |
| BULKHEAD ASSEMBLY - FS 166.45 .....   | 53-13-03-01     | -     |
| BULKHEAD ASSY .....   | 25-52-00-02A    | -234  |
| BULKHEAD ASSY .....   | 25-52-00-02A    | -335  |
| BULKHEAD ASSY .....   | 25-52-00-02A    | -409  |
| BULKHEAD ASSY .....   | 25-52-00-02A    | -452  |
| BULKHEAD FITTING .....  | 71-70-00-02     | -019  |
| BUMPER LH ONLY .....  | 53-30-01-02     | -097  |
| BUNGEE ASSY-NOSE GEAR STEERING FSO 2643065-2 .....                          | 32-50-00-01     | -001  |
| BUSHING .....   | 26-10-00-02     | -005  |
| BUSHING ASSY .....  | 25-52-00-02A    | -322  |
| BUSHING ASSY .....  | 25-52-00-02A    | -397  |
| BUSHING ASSY-NOSE GEAR STEERING .....                                       | 53-10-00-01     | -305  |

**C**

|  |             |   |
|--|-------------|---|
| CABIN EQUIPMENT AND ACCESSORIES .....                                  | 25-22-00-01 | - |
| CABIN FLOOR COVERING AND CARPET INSTALLATION - PASSENGER VERSION ..... | 25-28-00-04 | - |
| CABIN FLOOR COVERING INSTALLATION .....                                | 25-28-00-03 | - |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE | CH | SEC | SUBJ | FIG | ITEM |
|--------------|----|-----|------|-----|------|
|--------------|----|-----|------|-----|------|

**C** Continued

|   |              |  |  |  |       |
|---|--------------|--|--|--|-------|
| CABIN FLOOR COVERING INSTALLATION - NOT APPLICABLE TO 208B PASSENGER                      |              |  |  |  |       |
| VERSION .....   | 25-28-00-01  |  |  |  | -     |
| CABIN FLOOR COVERING INSTALLATION - PASSENGER VERSION .....                               | 25-28-00-02  |  |  |  | -     |
| CABIN FLOORBOARDS .....   | 53-20-00-01  |  |  |  | -     |
| CABIN FLOORBOARDS .....   | 53-20-00-02  |  |  |  | -     |
| CABIN FLOORBOARDS - 208B PASSENGER VERSION .....  | 53-20-00-03  |  |  |  | -     |
| CABIN HEATING AND DEFROSTING SYSTEM .....   | 21-22-00-01  |  |  |  | -     |
| CABIN HEATING AND DEFROSTING SYSTEM .....   | 21-22-00-01A |  |  |  | -     |
| CABIN HEATING AND DEFROSTING SYSTEM .....   | 21-22-01-01  |  |  |  | -     |
| CABIN HEATING AND DEFROSTING SYSTEM - PASSENGER VERSION .....                             | 21-22-02-01  |  |  |  | -     |
| CABIN LIGHTING INSTALLATION .....   | 33-20-00-01  |  |  |  | -     |
| CABIN PLYWOOD FLOORBOARDS .....   | 53-20-01-01  |  |  |  | -     |
| CABIN PLYWOOD FLOORBOARDS .....   | 53-20-01-02  |  |  |  | -     |
| CABIN PLYWOOD FLOORBOARDS - 5/8 INCH .....  | 53-20-01-03  |  |  |  | -     |
| CABIN SIDEWALL UPHOLSTERY - HARD INTERIOR - PASSENGER VERSION .....                       | 25-23-02-06  |  |  |  | -     |
| CABIN SIDEWALL UPHOLSTERY - PASSENGER VERSION .....                                       | 25-23-02-05  |  |  |  | -     |
| CABIN SIDEWALLS UPHOLSTERY .....  | 25-23-02-01  |  |  |  | -     |
| CABIN SIDEWALLS UPHOLSTERY .....  | 25-23-02-03  |  |  |  | -     |
| CABIN SIDEWALLS UPHOLSTERY .....  | 25-23-02-04  |  |  |  | -     |
| CABIN SIDEWALLS UPHOLSTERY HARD INTERIOR .....  | 25-23-02-02  |  |  |  | -     |
| CABIN TOP UPHOLSTERY .....  | 25-23-00-01  |  |  |  | -     |
| CABIN TOP UPHOLSTERY .....  | 25-23-00-03  |  |  |  | -     |
| CABIN TOP UPHOLSTERY - PASSENGER VERSION .....  | 25-23-01-01  |  |  |  | -     |
| CABIN TOP UPHOLSTERY WITH HARD INTERIOR .....   | 25-23-00-02  |  |  |  | -     |
| CABIN WINDOWS INSTALLATION .....  | 56-20-00-01  |  |  |  | -     |
| CABIN WINDOWS INSTALLATION PASSENGER VERSION .....  | 56-20-00-02  |  |  |  | -     |
| CABLE ASSY-SEAT BELT RESTRAINT .....  | 25-21-01-01  |  |  |  | -089  |
| CABLE ASSY .....  | 26-10-00-02  |  |  |  | -002  |
| CABLE ASSY .....  | 26-10-00-02  |  |  |  | -003  |
| CABLE ASSY-DOOR PULL .....  | 52-10-01-01  |  |  |  | -048  |
| CABLE ASSY-PASSENGER DOOR STEP .....  | 52-10-02-01  |  |  |  | -002  |
| CABLE ASSY CONTACTOR TO BATTERY .....   | 24-50-02-01  |  |  |  | -157  |
| CABLE ASSY CONTACTOR TO BATTERY USED WITH 300 AMP STARTER/GENERATOR .....                 | 24-50-02-01  |  |  |  | -158  |
| CABLE ASSY CONTACTOR TO BATTERY USED WITH 300 AMP STARTER/GENERATOR .....                 | 24-50-02-01  |  |  |  | -161  |
| CABLE ASSY CONTACTOR TO EXTERNAL POWER RECPT .....  | 24-50-02-01  |  |  |  | -163  |
| CABLE ASSY CONTACTOR TO EXTERNAL POWER RECPT USED WITH 300 AMP<br>STARTER/GENERATOR ..... | 24-50-02-01  |  |  |  | -164  |
| CABLE ASSY CONTACTOR TO EXTERNAL POWER RECPT USED WITH 300 AMP<br>STARTER/GENERATOR ..... | 24-50-02-01  |  |  |  | -167  |
| CABLE ASSY CONTACTOR TO STARTER/GENERATOR .....   | 24-50-02-01  |  |  |  | -151  |
| CABLE ASSY CONTACTOR TO STARTER/GENERATOR USED WITH 300 AMP<br>STARTER/GENERATOR .....    | 24-50-02-01  |  |  |  | -152  |
| CABLE ASSY CONTACTOR TO STARTER/GENERATOR USED WITH 300 AMP<br>STARTER/GENERATOR .....    | 24-50-02-01  |  |  |  | -155  |
| CABLE-BATTERY TO BATTERY CONTACTOR .....  | 24-34-00-01  |  |  |  | -099  |
| CABLE-BATTERY TO GENERATOR .....  | 24-34-00-01  |  |  |  | -097  |
| CABLE-FIRE DETECTOR .....   | 26-10-00-01  |  |  |  | -001  |
| CAM BLOCK .....   | 25-52-00-02A |  |  |  | -328  |
| CAM BLOCK .....   | 25-52-00-02A |  |  |  | -403  |
| CAN .....   | 71-70-00-02  |  |  |  | -002  |
| CAN ASSEMBLY-OIL .....  | 71-70-00-02  |  |  |  | -001  |
| CAN ASSY-EPA .....  | 73-10-00-01  |  |  |  | -001  |
| CAN ASSY-EPA .....  | 73-10-00-02  |  |  |  | -001  |
| CANADIAN INTERIOR PLACARDS AND MARKINGS - FLIGHT COMPARTMENT .....                        | 11-C-31-01   |  |  |  | -     |
| CAP ASSY-FUEL FILLER .....  | 28-10-01-01  |  |  |  | -001  |
| CAP ASSY-FUEL FILLER .....  | 28-10-01-01  |  |  |  | -011  |
| CARGO BARRIER ASSY FSO 2613334-61 .....   | 25-51-01-01  |  |  |  | -002  |
| CARGO BARRIER ASSY FSO 2613334-60 .....   | 25-51-01-02  |  |  |  | -002  |
| CARGO BARRIER ASSY FSO 2613334-60 .....   | 25-51-01-02  |  |  |  | -002A |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE  | CH SEC SUBJ FIG | ITEM  |
|---|-----------------|-------|
| <b>C</b> Continued  |                 |       |
| CARGO BARRIER ASSY FSO 2613534-6                                      | 25-51-01-03     | -001  |
| CARGO BARRIER ASSY  | 25-51-01-03     | -001A |
| CARGO BARRIER INSTALLATION  | 25-51-01-01     | -     |
| CARGO BARRIER INSTALLATION  | 25-51-01-02     | -     |
| CARGO DOOR ASSY-UPPER USED WITH AIR DEFLECTOR FSO 2617057-61          | 52-31-00-01     | -018  |
| CARGO DOOR ASSY-UPPER FSO 2617057-62                                  | 52-31-00-02     | -010D |
| CARGO DOOR ASSY-UPPER   | 52-31-00-02     | -010E |
| CARGO DOOR ASSY-LOWER FSO 2617058-50                                  | 52-31-01-01     | -007B |
| CARGO DOOR ASSY-LOWER 208B AND 208 WITH CARGO TIE DOWN FSO 2617058-47 | 52-31-01-01     | -010  |
| CARGO DOOR INSTALLATION - LOWER                                       | 52-31-01-01     | -     |
| CARGO DOOR INSTALLATION - UPPER                                       | 52-31-00-01     | -     |
| CARGO DOOR INSTALLATION - UPPER NOT USED ON PASSENGER VERSION         | 52-31-00-02     | -     |
| CARGO DOOR JAMB STRUCTURE   | 53-13-02-01     | -     |
| CARGO DOOR WINDOWS  | 56-30-00-02     | -     |
| CARGO NET ASSY FSO 2601540-8  | 25-52-00-03     | -001  |
| CARGO PARTITION INSTALLATION  | 25-51-02-02     | -     |
| CARGO PARTITION INSTALLATION - NOT APPLICABLE TO PASSENGER VERSION    | 25-51-02-01     | -     |
| CARGO PARTITION INSTALLATION WITH CARGO TIEDOWN                       | 25-51-02-03     | -     |
| CARGO POD AND LANDING GEAR DEICE SYSTEM                               | 30-10-03-01     | -     |
| CARGO POD AND LANDING GEAR DEICE SYSTEM                               | 30-10-03-02     | -     |
| CARGO POD BOND ASSY   | 25-52-00-02A    | -152  |
| CARGO POD INSTALLATION  | 25-52-00-01     | -     |
| CARGO POD INSTALLATION  | 25-52-00-02     | -     |
| CARGO POD INSTALLATION  | 28-21-00-01     | -331  |
| CARGO TIE DOWN STRUCTURE COMPONENTS                                   | 53-15-00-02     | -     |
| CARGO TIE DOWN STRUCTURE COMPONENTS CARGOMASTER                       | 53-15-00-01     | -     |
| CARGO TIEDOWN INSTALLATION  | 25-51-03-01     | -     |
| CARPET ASSY-BAGGAGE COMPARTMENT                                       | 25-28-00-03     | -001  |
| CARPET ASSY-BAGGAGE COMPARTMENT                                       | 25-28-00-04     | -001  |
| CASE ASSY-SMOKE GOGGLES   | 35-15-00-01     | -012  |
| CENTER CARGO POD ASSEMBLY   | 25-52-00-02A    | -375  |
| CENTER CARGO POD BOND ASSY  | 25-52-00-02A    | -377  |
| CENTER FUSELAGE SKINS AND COMPONENTS                                  | 53-30-01-01     | -     |
| CENTER FUSELAGE SKINS AND COMPONENTS                                  | 53-30-01-02     | -     |
| CENTER FUSELAGE STRUCTURE   | 53-12-00-01     | -     |
| CENTER FUSELAGE STRUCTURE   | 53-12-00-02     | -     |
| CHAIN-FWD AND AFT INFLIGHT MOVEABLE DOOR                              | 52-32-00-02     | -023  |
| CHAIN GUARD   | 27-30-03-02A    | -001  |
| CHAIN GUARD   | 27-30-03-02A    | -001A |
| CHANNEL SUPPORT   | 71-70-00-02     | -009  |
| CHARGE VALVE-AIR CONDITIONER DISCHARGE LINE                           | 21-51-00-01     | -169  |
| CHARGE VALVE-AIR CONDITIONER SUCTION LINE                             | 21-51-00-01     | -170  |
| CHART HOLDER ASSY   | 27-10-01-03     | -031B |
| CHART HOLDER ASSY   | 27-10-01-05     | -039  |
| CHART LIGHT FSO RL6843  | 33-20-00-01     | -024  |
| CHART LIGHT   | 33-20-00-01     | -024A |
| CHART LIGHT-LED FC016   | 33-20-00-01     | -025  |
| CHART LIGHT-LED FC017   | 33-20-00-01     | -026  |
| CHART LIGHT-LED FF003   | 33-20-00-01     | -027  |
| CHECK VALVE-FUEL  | 28-22-00-01     | -084  |
| CHECK VALVE   | 79-20-00-03     | -092  |
| CHECK VALVE ASSY-LH EVAPORATOR  | 21-51-03-01     | -007  |
| CHECK VALVE ASSY-RH EVAPORATOR  | 21-51-03-01     | -008  |
| CHECK VALVE ASSY  | 30-10-02-06     | -252  |
| CHECK VALVE ASSY  | 30-10-02-07     | -252  |
| CHINESE EXTERIOR PLACARDS AND MARKING - COWLING                       | 11-B-24-01      | -     |
| CHINESE EXTERIOR PLACARDS AND MARKINGS - EMPENNAGE AND REAR BAGGAGE   | 11-B-23-01      | -     |
| CHINESE EXTERIOR PLACARDS AND MARKINGS - FUSELAGE                     | 11-B-22-01      | -     |
| CHINESE EXTERIOR PLACARDS AND MARKINGS - WINGS                        | 11-B-25-01      | -     |
| CHINESE INTERIOR PLACARDS AND MARKINGS - CABIN                        | 11-B-32-01      | -     |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE  | CH           | SEC | SUBJ | FIG | ITEM  |
|---|--------------|-----|------|-----|-------|
| <b>C Continued</b>  |              |     |      |     |       |
| CHINESE INTERIOR PLACARDS AND MARKINGS - CABIN DOORS .....        | 11-B-38-01   |     |      |     | -     |
| CHINESE INTERIOR PLACARDS AND MARKINGS - FLIGHT COMPARTMENT ..... | 11-B-31-01   |     |      |     | -     |
| CHIP DETECTOR ACCS & PROP RED GEAR BOX DRAINS .....               | 79-30-00-01  |     |      |     | -025  |
| CHIP DETECTOR INDICATOR-SPERRY AUTOPILOT .....                    | 79-30-00-01  |     |      |     | -029  |
| CHORD ASSY-WINDSHIELD DE-ICE STOW LH ONLY .....                   | 25-23-02-04  |     |      |     | -027  |
| CIRCUIT BOARD ASSY-ANNUNCIATOR .....                              | 33-10-00-02  |     |      |     | -009A |
| CIRCUIT BREAKER PANEL LIGHTING INSTALLATION .....                 | 33-10-00-03  |     |      |     | -     |
| CIRCUIT BREAKER-ELECTRICAL POWER BOX .....                        | 24-50-02-01  |     |      |     | -235  |
| CIRCUIT BREAKERS .....  | 24-50-01-02  |     |      |     | -     |
| CIRCUIT BREAKERS .....  | 24-50-01-03  |     |      |     | -     |
| CLAMP .....   | 71-70-00-02  |     |      |     | -094  |
| CLAMP BOLT-DRYER .....  | 21-51-00-01B |     |      |     | -002  |
| CLAMP BOLT .....  | 71-70-00-02  |     |      |     | -011  |
| CLIP .....  | 24-21-00-01  |     |      |     | -007  |
| CLIP .....  | 24-21-00-01  |     |      |     | -008  |
| CLIP .....  | 24-21-00-01  |     |      |     | -009  |
| CLIP .....  | 55-20-00-02  |     |      |     | -097A |
| CLOSEOUT ASSY-ENGINE TRUSS FSO 2650132-31 .....                   | 71-60-01-02  |     |      |     | -026  |
| CLOSEOUT ASSY-ENGINE TRUSS REF 2650132 .....                      | 71-60-01-02  |     |      |     | -026A |
| CLOSEOUT ASSY-ENGINE TRUSS .....                                  | 71-60-01-02  |     |      |     | -026B |
| CLOSEOUT PANEL-ENGINE TRUSS .....                                 | 71-60-01-02  |     |      |     | -026C |
| CLOSEOUT PLATE .....  | 25-52-00-02A |     |      |     | -460  |
| COAT HANGER .....   | 25-23-02-01  |     |      |     | -018  |
| COAT HANGER .....   | 25-23-02-01  |     |      |     | -077  |
| COAT HANGER .....   | 25-23-02-02  |     |      |     | -077  |
| COAT HANGER .....   | 25-23-02-05  |     |      |     | -016  |
| COAT HANGER .....   | 25-23-02-05  |     |      |     | -077  |
| COAT HANGER .....   | 25-23-02-06  |     |      |     | -105  |
| COCKPIT PITOT/STATIC SYSTEM .....                                 | 34-10-02-01  |     |      |     | -     |
| COCKPIT VOICE AND DATA RECORDER .....                             | 31-30-00-02  |     |      |     | -001  |
| COCKPIT VOICE AND DATA RECORDER .....                             | 31-30-00-02A |     |      |     | -001  |
| COIL ASSEMBLY-LH EVAPORATOR .....                                 | 21-51-03-03  |     |      |     | -003  |
| COIL ASSEMBLY-RH EVAPORATOR .....                                 | 21-51-03-03  |     |      |     | -004  |
| COIL ASSY-EVAPORATOR .....  | 21-51-03-04  |     |      |     | -002  |
| COIL CORD ASSY-CONTROL WHEEL .....                                | 27-10-01-03  |     |      |     | -022  |
| COIL CORD ASSY-CONTROL WHEEL .....                                | 27-10-01-03  |     |      |     | -022A |
| COMBINATION HEADSET AND MICROPHONE INSTALLATION- .....            | 23-50-03-01  |     |      |     | -     |
| COMPASS INSTALLATION .....  | 34-21-00-01  |     |      |     | -     |
| COMPRESSOR-AIR CONDITONER FSO SD5H14C4527 .....                   | 21-51-01-01  |     |      |     | -001  |
| COMPRESSOR ASSEMBLY .....   | 21-51-01-02  |     |      |     | -001  |
| COMPRESSOR ASSEMBLY .....   | 21-51-01-02A |     |      |     | -001  |
| COMPRESSOR DRIVE ASSEMBLY FSO 2601566-22 .....                    | 21-51-01-02  |     |      |     | -082  |
| COMPRESSOR DRIVE ASSEMBLY FSO 2601566-22 .....                    | 21-51-01-02  |     |      |     | -082A |
| COMPRESSOR DRIVE ASSY FSO 2601188-204 .....                       | 21-51-01-01  |     |      |     | -075A |
| COMPRESSOR MOUNT-FWD .....  | 21-51-01-02  |     |      |     | -022  |
| COMPRESSOR MOUNT .....  | 21-51-01-02  |     |      |     | -078  |
| COMPRESSOR MOUNT-FWD .....  | 21-51-01-02A |     |      |     | -022  |
| COMPRESSOR MOUNT .....  | 21-51-01-02A |     |      |     | -078  |
| COMPRESSOR MOUNT ASSEMBLY FSO 2601566-24 .....                    | 21-51-01-02  |     |      |     | -075  |
| COMPRESSOR MOUNT ASSEMBLY FSO 2601566-24 .....                    | 21-51-01-02A |     |      |     | -075  |
| COMPRESSOR WASHRING INSTALLATION .....                            | 71-41-00-01  |     |      |     | -     |
| COMPUTER AMPLIFIER INSTALLATION .....                             | 34-11-03-01  |     |      |     | -     |
| CONDENSER ASSY-AIR CONDITIONER .....                              | 21-51-02-01  |     |      |     | -001A |
| CONTACTOR-INTERNAL START .....                                    | 24-50-02-01  |     |      |     | -021  |
| CONTACTOR-BATTERY .....   | 24-50-02-01  |     |      |     | -025  |
| CONTACTOR-EXTERNAL POWER .....                                    | 24-50-02-01  |     |      |     | -027  |
| CONTACTOR-GENERATOR .....   | 24-50-02-01  |     |      |     | -026  |
| CONTROL-CABIN HEAT .....  | 21-22-00-01  |     |      |     | -077  |
| CONTROL-CABIN HEAT .....  | 21-22-00-01A |     |      |     | -077  |
| CONTROL-DEFROST ALT FOR S1241-58 .....                            | 21-22-01-01  |     |      |     | -006  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE   | CH SEC SUBJ FIG | ITEM  |
|--|-----------------|-------|
| <b>C</b> Continued   |                 |       |
| CONTROL-DEFROST .....  | 21-22-01-01     | -006A |
| CONTROL-CABIN HEAT .....   | 21-22-01-01     | -022  |
| CONTROL-DEFROST ALT FOR S1241-58 .....                                   | 21-22-02-01     | -006  |
| CONTROL-DEFROST .....  | 21-22-02-01     | -006A |
| CONTROL-CABIN HEAT .....   | 21-22-02-01     | -077  |
| CONTROL-CABIN HEAT .....   | 21-22-02-01A    | -077  |
| CONTROL ASSY-FUEL CONDITION .....  | 76-10-01-01     | -013  |
| CONTROL ARM ASSY-FLAP .....  | 27-50-01-02     | -040A |
| CONTROL ASSY-FRESH AIR ALT FOR S1241-59 .....                            | 21-21-00-01     | -033  |
| CONTROL ASSY-FRESH AIR ALT FOR S1241-50 .....                            | 21-21-00-01     | -033A |
| CONTROL ASSY-LH FRESH AIR WITH FAN .....                                 | 21-21-04-01     | -011  |
| CONTROL ASSY-RH FRESH AIR WITH FAN .....                                 | 21-21-04-01     | -012  |
| CONTROL ASSY-DEFROST ALT FOR S1241-58 .....                              | 21-22-00-01     | -006  |
| CONTROL ASSY-DEFROST .....   | 21-22-00-01     | -006A |
| CONTROL ASSY-DEFROST ALT FOR S1241-58 .....                              | 21-22-00-01A    | -006  |
| CONTROL ASSY-DEFROST .....   | 21-22-00-01A    | -006A |
| CONTROL ASSY-DEFROST ALT FOR S1241-58 .....                              | 21-22-02-01A    | -006  |
| CONTROL ASSY-DEFROST .....   | 21-22-02-01A    | -007  |
| CONTROL ASSY-BLEED AIR FSO S1241-57 .....                                | 21-41-00-01     | -021  |
| CONTROL ASSY-BLEED AIR .....   | 21-41-00-01     | -021A |
| CONTROL ASSY-DEFROST ALT FOR S1241-58 .....                              | 24-50-00-01     | -031  |
| CONTROL ASSY-DEFROST .....   | 24-50-00-01     | -031A |
| CONTROL ASSY .....   | 25-52-00-02A    | -019  |
| CONTROL ASSY-FUEL SHUTOFF .....  | 28-21-00-01     | -229  |
| CONTROL ASSY-FUEL SHUTOFF .....  | 28-21-00-02     | -229  |
| CONTROL ASSY-DUEL FUEL SHUTOFF .....                                     | 28-21-00-02     | -229A |
| CONTROL ASSY-FUEL RESERVOIR DRAIN VALVE WITH CARGO POD .....             | 28-22-00-01     | -160  |
| CONTROL ASSY-POWER .....   | 76-10-01-01     | -010A |
| CONTROL ASSY-PROPELLER .....   | 76-10-01-01     | -012  |
| CONTROL ASSY-EMERGENCY POWER .....                                       | 76-10-01-01B    | -006  |
| CONTROL ASSY-MANUAL OVERRIDE 06970 .....                                 | 76-10-01-01B    | -007  |
| CONTROL ASSY-PROPELLER CONTROL 06970 .....                               | 76-10-01-01B    | -008  |
| CONTROL ASSY-CONDITION CONTROL .....                                     | 76-10-01-01B    | -009  |
| CONTROL ASSY-CABIN AIR/HEAT .....  | 24-50-00-01     | -032  |
| CONTROL ASSY-CABIN HEAT .....  | 24-50-00-01     | -030  |
| CONTROL ASSY-PARKING BRAKE .....   | 32-42-00-01     | -001  |
| CONTROL ASSY-RUDDER LOCK .....   | 27-70-00-01     | -093  |
| CONTROL BOX-FIRE DETECTOR UB002 .....                                    | 26-10-00-01     | -075  |
| CONTROL COLUMN INSTALLATION .....  | 27-10-01-01     | -     |
| CONTROL LOCK ASSY FSO 2660055-1 .....                                    | 10-10-00-01     | -015  |
| CONTROL LOCK ASSY .....  | 10-10-00-01     | -015A |
| CONTROL LOCK ASSY FSO 2660055-1 .....                                    | 10-10-00-02     | -031  |
| CONTROL LOCK ASSY .....  | 10-10-00-02     | -031A |
| CONTROL LOCK ASSY FSO 2660055-1 .....                                    | 10-10-00-03     | -032  |
| CONTROL LOCK ASSY .....  | 10-10-00-03     | -033  |
| CONTROL LOCK ASSY .....  | 10-10-00-03     | -033A |
| CONTROL UNIT ASSY-GENERATOR BC001 .....                                  | 24-31-00-01     | -001  |
| CONTROL VALVE ASSY-TEMPERATURE .....                                     | 21-41-00-01     | -154  |
| CONTROL VALVE ASSY-TEMPERATURE .....                                     | 24-50-00-01     | -033  |
| CONTROL WHEEL .....  | 27-10-01-05     | -005  |
| CONTROL WHEEL AND SWITCHES INSTALLATION .....                            | 27-10-01-02     | -     |
| CONTROL WHEEL AND SWITCHES INSTALLATION .....                            | 27-10-01-03     | -     |
| CONTROL WHEEL AND SWITCHES INSTALLATION .....                            | 27-10-01-05     | -     |
| CONTROL WHEEL AND SWITCHES INSTALLATION - CAT II .....                   | 27-10-01-04     | -     |
| CONTROL WHEEL ASSY-PILOT FSO 2660063-1 .....                             | 27-10-01-05     | -001  |
| CONTROL WHEEL ASSY-PILOT WITH AUTOPILOT .....                            | 27-10-01-05     | -002  |
| CONTROL WHEEL ASSY-COPILOT FSO 2660063-2 .....                           | 27-10-01-05     | -003  |
| CONTROL WHEEL ASSY-COPILOT WITH AUTOPILOT SPARES ORDER 2660063-200 ..... | 27-10-01-05     | -004  |
| CONTROL WHEEL ASSY-COPILOT WITH AUTOPILOT SPARES .....                   | 27-10-01-05     | -004A |
| CONTROL-FUEL SELECTOR .....  | 28-23-00-01     | -079  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE  | CH           | SEC | SUBJ | FIG | ITEM  |
|---|--------------|-----|------|-----|-------|
| <b>C Continued</b>  |              |     |      |     |       |
| CONTROLLER, MODE SELECTOR AND ACCESSORY UNIT INSTALLATION | 22-10-00-01  |     |      |     | -     |
| CONVERTER ASSY-LH VENT                                    | 21-21-03-02  |     |      |     | -106  |
| CONVERTER ASSY-RH VENT                                    | 21-21-03-02  |     |      |     | -107  |
| CONVERTER ASSY-VENT LH                                    | 21-21-01-01  |     |      |     | -156  |
| CONVERTER ASSY-VENT RH                                    | 21-21-01-01  |     |      |     | -157  |
| CONVERTER ASSY-LH VENT                                    | 21-21-01-02  |     |      |     | -029  |
| CONVERTER ASSY-RH VENT                                    | 21-21-01-02  |     |      |     | -030  |
| CONVERTER ASSY-LH VENT                                    | 21-21-01-03  |     |      |     | -175  |
| CONVERTER ASSY-RH VENT                                    | 21-21-01-03  |     |      |     | -176  |
| CONVERTER ASSY-LH VENT                                    | 21-21-02-01  |     |      |     | -081  |
| CONVERTER ASSY-RH VENT                                    | 21-21-02-01  |     |      |     | -082  |
| CONVERTER ASSY-VENT LH                                    | 21-21-03-01  |     |      |     | -081A |
| CONVERTER ASSY-VENT RH                                    | 21-21-03-01  |     |      |     | -082A |
| CONVERTER ASSY-LH VENT                                    | 21-21-03-03  |     |      |     | -178  |
| CONVERTER ASSY-RH VENT                                    | 21-21-03-03  |     |      |     | -179  |
| CORD ASSY-WINDSHIELD DE-ICE STOW LH ONLY                  | 25-23-02-03  |     |      |     | -025  |
| COURTESY LIGHT-LH FL004                                   | 33-45-00-01A |     |      |     | -001  |
| COURTESY LIGHT-RH FR004                                   | 33-45-00-01A |     |      |     | -002  |
| COURTESY LIGHT INSTALLATION - WING                        | 33-45-00-01  |     |      |     | -     |
| COVER-AVIONICS MOUNTING PLATE                             | 25-23-02-05  |     |      |     | -098A |
| COVER-LH  | 25-52-00-02A |     |      |     | -005  |
| COVER-RH  | 25-52-00-02A |     |      |     | -006  |
| COVER   | 25-52-00-02A |     |      |     | -010  |
| COVER   | 25-52-00-02A |     |      |     | -015  |
| COVER   | 25-52-00-02A |     |      |     | -023  |
| COVER   | 25-52-00-02A |     |      |     | -077  |
| COVER   | 25-52-00-02A |     |      |     | -083  |
| COVER   | 25-52-00-02A |     |      |     | -095  |
| COVER   | 25-52-00-02A |     |      |     | -096  |
| COVER   | 25-52-00-02A |     |      |     | -097  |
| COVER-LH  | 25-52-00-02A |     |      |     | -100  |
| COVER-RH  | 25-52-00-02A |     |      |     | -101  |
| COVER-LH  | 33-45-00-01A |     |      |     | -008  |
| COVER-RH  | 33-45-00-01A |     |      |     | -009  |
| COVER-TERMINAL  | 80-10-01-01  |     |      |     | -011  |
| COVER ASSY-CONTROL COLUMN                                 | 25-10-03-01  |     |      |     | -075A |
| COVER ASSY  | 25-52-00-02A |     |      |     | -022  |
| COVER ASSY  | 25-52-00-02A |     |      |     | -094  |
| COVER ASSY-LH   | 33-45-00-01A |     |      |     | -006  |
| COVER ASSY-RH   | 33-45-00-01A |     |      |     | -007  |
| COVER ASSY-ENGINE INLET LH                                | 10-10-00-01  |     |      |     | -004  |
| COVER ASSY-SLIP 3 PASSENGER SEAT                          | 25-21-01-01  |     |      |     | -180  |
| COVER ASSY-SLIP BENCH SEAT                                | 25-21-00-03  |     |      |     | -172  |
| COVER ASSY-SLIP PASSENGER SEAT                            | 25-21-00-01  |     |      |     | -108  |
| COVER ASSY-SLIP PASSENGER SEAT                            | 25-21-00-02  |     |      |     | -103  |
| COVER ASSY-SLIP PILOT AND COPILOT SEAT                    | 25-10-00-02  |     |      |     | -099  |
| COVER PLATE-ELEVATOR                                      | 55-20-00-02  |     |      |     | -097C |
| COVER-FLOOR VINYL BAGGAGE COMPARTMENT                     | 25-28-00-03  |     |      |     | -002  |
| COVER-FLOOR VINYL BAGGAGE COMPARTMENT                     | 25-28-00-04  |     |      |     | -002  |
| COVER-LENS LH   | 33-40-00-01  |     |      |     | -028  |
| COVER-LENS LH   | 33-40-00-01  |     |      |     | -030  |
| COVER-LENS RH   | 33-40-00-01  |     |      |     | -029  |
| COVER-LENS RH   | 33-40-00-01  |     |      |     | -031  |
| COWL ASSEMBLY - LOWER LH USED WITH AIR CONDITIONING       | 71-10-00-04  |     |      |     | -     |
| COWL ASSY-LOWER RH W/O CARGO POD FSO 2652032-201          | 71-10-00-02  |     |      |     | -003  |
| COWL ASSY-LOWER LH FSO 2652031-202                        | 71-10-00-02  |     |      |     | -153A |
| COWL ASSY-LOWER LH FSO 2652031-202                        | 71-10-00-02  |     |      |     | -154  |
| COWL ASSY-LOWER LH FSO 2652031-5                          | 71-10-00-02  |     |      |     | -154B |
| COWL ASSY-FSO 2652031-209                                 | 71-10-00-04  |     |      |     | -004  |
| COWL ASSY-FSO 2652031-6                                   | 71-10-00-04  |     |      |     | -004A |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE                             | CH SEC SUBJ FIG | ITEM  |
|--|-----------------|-------|
| <b>C</b> Continued                       |                 |       |
| COWL DECK ASSY .....                     | 53-30-00-01     | -010  |
| COWL DECK ASSY .....                     | 53-30-00-02     | -009  |
| COWL DECK ASSY .....                     | 53-30-00-03     | -008  |
| COWL DECK ASSY .....                     | 53-30-00-04     | -010  |
| COWL DECK COOLING FANS .....             | 21-50-00-02     | -     |
| COWL HANGER ASSY-FORWARD LOWER .....     | 71-20-00-01     | -091B |
| CREW AND PASSENGER DOOR WINDOWS .....    | 56-30-00-01     | -     |
| CREW DOOR ASSEMBLY .....                 | 52-10-00-01     | -     |
| CREW DOOR ASSY-LH FSO 2617122-201 .....  | 52-10-00-01     | -007B |
| CREW DOOR ASSY-LH .....                  | 52-10-00-01     | -007D |
| CREW DOOR ASSY-RH FSO 2617122-202 .....  | 52-10-00-01     | -014A |
| CREW DOOR ASSY-RH .....                  | 52-10-00-01     | -014B |
| CREW DOOR STRUCTURE ASSY-LH .....        | 52-10-00-01     | -226  |
| CREW DOOR STRUCTURE ASSY-RH .....        | 52-10-00-01     | -227  |
| CREW STEP ASSEMBLY .....                 | 52-61-00-01     | -     |
| CUFF ASSY-LH WING STRUT LWR .....        | 57-10-04-01     | -005B |
| CUFF ASSY-RH WING STRUT LWR .....        | 57-10-04-01     | -010B |
| CUP HOLDER-PILOT AND COPILOT .....       | 25-22-00-01     | -001  |
| CVR ADAPTER .....                        | 31-30-00-02     | -024  |
| CVR ADAPTER .....                        | 31-30-00-02A    | -026  |
| CYLINDER AND REGULATOR ASSY-OXYGEN ..... | 35-01-00-01     | -001  |
| CYLINDER AND REGULATOR ASSY-OXYGEN ..... | 35-01-00-02     | -001  |

**D**

|   |              |       |
|---|--------------|-------|
| DATA CONCENTRATOR UNIT-GSD 41 ALT FOR 011-01457-00 (MOD0) ..... | 31-30-00-02  | -011  |
| DATA CONCENTRATOR UNIT-GSD 41 ALT FOR 011-01457-00 (MOD0) ..... | 31-30-00-02A | -013  |
| DC POWER OUTLET INSTALLATION - CABIN .....                      | 24-30-00-03  | -     |
| DE-ICER STRUT .....   | 30-10-01-01  | -095  |
| DE-ICER STRUT ALT FOR 29S7D5175-31 .....                        | 30-10-01-01  | -095A |
| DE-ICER WING LH-INBD .....                                      | 30-10-01-01  | -087  |
| DE-ICER WING LH-OUTBD .....                                     | 30-10-01-01  | -091  |
| DE-ICER WING RH-INBD .....                                      | 30-10-01-01  | -089  |
| DE-ICER WING RH-OUTBD .....                                     | 30-10-01-01  | -093  |
| DE-ICER-CARGO POD .....   | 30-10-03-02  | -034  |
| DECAL-RUDDER LOCK .....   | 11-N-31-01   | -150  |
| DEFLECTOR ASSY-AIR FSO 2601277-36 .....                         | 52-34-00-01  | -001  |
| DEFLECTOR ASSY-CARGO DOOR AIR .....                             | 52-34-00-01  | -001B |
| DEFLECTOR ASSY-CARGO DOOR AIR .....                             | 52-34-00-01  | -001C |
| DEICE COMPONENTS - STABILIZER .....                             | 30-10-02-01  | -     |
| DEICE COMPONENTS - WING .....                                   | 30-10-01-01  | -     |
| DEICE SYSTEM .....  | 30-10-00-01  | -     |
| DEICE SYSTEM .....  | 30-10-00-02  | -     |
| DEICER HORIZONTAL STABILIZER .....                              | 30-10-02-01  | -021  |
| DEICER MAIN GEAR FAIRING LH .....                               | 30-10-03-02  | -099  |
| DEICER MAIN GEAR FAIRING RH .....                               | 30-10-03-02  | -100  |
| DEICER MLG FAIRING-LH .....                                     | 30-10-03-01  | -099  |
| DEICER MLG FAIRING-RH .....                                     | 30-10-03-01  | -100  |
| DEICER VERTICAL FIN .....                                       | 30-10-02-01  | -019  |
| DIAPHRAGM ASSY FSO 2614058-5 .....                              | 25-10-00-02A | -079  |
| DIMMING ASSY .....  | 33-10-00-01  | -001  |
| DIMMING ASSY UC009 .....  | 33-10-00-01  | -001A |
| DIMMING ASSY UC010 .....  | 33-10-00-01  | -001B |
| DIMMING ASSY .....  | 33-10-00-01  | -002  |
| DIMMING ASSY .....  | 33-10-00-01  | -002A |
| DIRECTIONAL ANTENNAS .....                                      | 34-50-05-01  | -     |
| DIRECTIONAL GYRO ALT FOR C661053-0103 .....                     | 34-10-00-01  | -173  |
| DIRECTIONAL GYRO ALT FOR C661053-0103 .....                     | 34-10-00-02  | -028  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE   | CH | SEC | SUBJ | FIG | ITEM  |
|--|----|-----|------|-----|-------|
| <b>D Continued</b>   |    |     |      |     |       |
| DIRECTIONAL GYRO ALT FOR C661053-0103 .....                    | 34 | 10  | 00   | 03  | -024  |
| DIVERTER VALVE ASSEMBLIES - BLEED AIR .....                    | 21 | 41  | 02   | 01  | -     |
| DME ANTENNA INSTALLATION .....                                 | 34 | 51  | 14   | 02  | -     |
| DME/TRANSPONDER ANTENNA INSTALLATION .....                     | 34 | 51  | 14   | 01  | -     |
| DOME-PROPELLER .....   | 61 | 10  | 00   | 01  | -001  |
| DOME LIGHT-PASSENGER DOOR AND CABIN .....                      | 33 | 20  | 00   | 01  | -075  |
| DOME LIGHT-CABIN .....   | 33 | 20  | 00   | 01  | -076  |
| DOOR ASSY-FRESH AIR LH .....                                   | 21 | 21  | 00   | 01  | -028  |
| DOOR ASSY-FRESH AIR RH .....                                   | 21 | 21  | 00   | 01  | -029  |
| DOOR ASSY-GLOVE BOX .....                                      | 25 | 10  | 04   | 01  | -008  |
| DOOR ASSY-GLOVE BOX .....                                      | 25 | 10  | 04   | 01  | -008A |
| DOOR ASSY DOOR ASSY-ELT .....                                  | 25 | 25  | 00   | 01  | -022  |
| DOOR ASSY-REAR WALL FSO 2615031-201 .....                      | 25 | 25  | 00   | 01  | -033  |
| DOOR ASSY-ELT .....  | 25 | 25  | 00   | 02  | -018  |
| DOOR ASSY-ELT .....  | 25 | 25  | 00   | 05  | -022  |
| DOOR ASSY-FWD .....  | 25 | 52  | 00   | 02A | -162  |
| DOOR ASSY-CENTER FWD .....                                     | 25 | 52  | 00   | 02A | -193  |
| DOOR ASSY-CENTER AFT .....                                     | 25 | 52  | 00   | 02A | -312  |
| DOOR ASSY-AFT .....  | 25 | 52  | 00   | 02A | -387  |
| DOOR ASSY-LH UPPER COWL .....                                  | 71 | 10  | 00   | 01  | -006  |
| DOOR ASSY RECIRCULATE .....                                    | 21 | 41  | 02   | 01  | -013  |
| DOOR ASSY-DIVERTER .....                                       | 21 | 41  | 02   | 01  | -022  |
| DOOR ASSY-ELT .....  | 25 | 25  | 00   | 06  | -017  |
| DOOR ASSY-LH WING .....  | 57 | 11  | 01   | 01  | -021  |
| DOOR ASSY-PASSENGER UPPER .....                                | 52 | 10  | 01   | 01  | -013B |
| DOOR ASSY-PASSENGER UPPER FSO 2617087-43 .....                 | 52 | 10  | 01   | 01  | -013C |
| DOOR ASSY-RH WING .....  | 57 | 11  | 01   | 01  | -022  |
| DOOR BOND ASSY-FWD .....                                       | 25 | 52  | 00   | 02A | -166  |
| DOOR BOND ASSY-CENTER FWD .....                                | 25 | 52  | 00   | 02A | -197  |
| DOOR DOUBLER-FWD .....   | 25 | 52  | 00   | 02A | -157  |
| DOOR DOUBLER-CENTER .....                                      | 25 | 52  | 00   | 02A | -188  |
| DOOR DOUBLER-FWD .....   | 25 | 52  | 00   | 02A | -307  |
| DOOR DOUBLER-AFT .....   | 25 | 52  | 00   | 02A | -382  |
| DOOR DOUBLER ASSY-FWD .....                                    | 25 | 52  | 00   | 02A | -153  |
| DOOR DOUBLER ASSY-CENTER .....                                 | 25 | 52  | 00   | 02A | -184  |
| DOOR EXTENDER-CARGO DOOR GAS SPRING .....                      | 52 | 31  | 00   | 01  | -002D |
| DOOR EXTENDER ASSY-GAS SPRING .....                            | 52 | 10  | 01   | 01  | -001  |
| DOOR EXTENDER ASSY-CARGO DOOR GAS SPRING FSO 2115040-206 ..... | 52 | 31  | 00   | 01  | -002  |
| DOOR EXTENDER ASSY-CARGO DOOR GAS SPRING FSO 2115040-206 ..... | 52 | 31  | 00   | 01  | -002A |
| DOOR EXTENDER ASSY-CARGO DOOR GAS SPRING SPARES .....          | 52 | 31  | 00   | 01  | -002B |
| DOOR EXTENDER ASSY-CARGO DOOR GAS SPRING FSO 2611236-3 .....   | 52 | 31  | 00   | 01  | -002C |
| DOOR EXTENDER ASSY-GAS SPRING .....                            | 52 | 31  | 00   | 02  | -001  |
| DOOR HANDLE ASSY-LOWER PASSENGER .....                         | 52 | 10  | 02   | 02  | -001  |
| DOOR HANDLE ASSY-LOWER CARGO DOOR .....                        | 52 | 31  | 01   | 02  | -001  |
| DOOR INFLIGHT MOVEABLE OPERATING MECHANISM .....               | 52 | 32  | 00   | 02  | -     |
| DOOR INSTALLATION - INFLIGHT MOVEABLE .....                    | 52 | 32  | 00   | 01  | -     |
| DOOR LATCH ASSY .....  | 25 | 52  | 00   | 02A | -326  |
| DOOR LATCH ASSY .....  | 25 | 52  | 00   | 02A | -401  |
| DOOR SEAL-FWD .....  | 25 | 52  | 00   | 02A | -161  |
| DOOR SEAL-CENTER .....   | 25 | 52  | 00   | 02A | -192  |
| DOOR SEAL-FWD .....  | 25 | 52  | 00   | 02A | -311  |
| DOOR SEAL-AFT .....  | 25 | 52  | 00   | 02A | -386  |
| DOORPOST ASSY LWR LH FSO 2613116-33 .....                      | 53 | 10  | 01   | 01  | -094  |
| DOORPOST ASSY-RH LWR FSO 2613116-34 .....                      | 53 | 10  | 01   | 01  | -095  |
| DOORPOST ASSY-LH UPPER FSO 2613116-35 .....                    | 53 | 10  | 01   | 01  | -103  |
| DOORPOST ASSY-RH UPPER FSO 2613116-36 .....                    | 53 | 10  | 01   | 01  | -104  |
| DORSAL ASSY-TAILCONE .....                                     | 53 | 50  | 00   | 01  | -001  |
| DORSAL ASSY-TAILCONE .....                                     | 53 | 50  | 00   | 01  | -003B |
| DOUBLER SHOULDER HARNESS-LH .....                              | 25 | 21  | 01   | 01  | -020  |
| DOUBLER SHOULDER HARNESS RH .....                              | 25 | 21  | 01   | 01  | -024  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE | CH | SEC | SUBJ | FIG | ITEM |
|--------------|----|-----|------|-----|------|
|--------------|----|-----|------|-----|------|

**D** Continued

|  |              |       |
|--|--------------|-------|
| DOUBLER-ELEVATOR.....  | 55-20-00-02  | -097B |
| DOWN SPOUT ASSY-CARGO POD.....                                     | 53-30-00-01  | -083  |
| DOWN SPOUT ASSY-CARGO POD.....                                     | 53-30-01-01  | -174  |
| DOWN SPOUT ASSY-CARGO POD NOT APPLICABLE TO PASSENGER VERSION..... | 53-30-01-02  | -188  |
| DRAIN CAN ASSY-F.C.U. LUBE OIL.....                                | 71-70-00-01  | -010  |
| DRAIN CAN ASSY.....  | 71-70-00-02  | -108  |
| DRAIN CAN WELD ASSY.....   | 71-70-00-02  | -109  |
| DRAIN TUBE-CARGO POD.....  | 25-52-00-01  | -234  |
| DRAIN TUBE-CARGO POD.....  | 25-52-00-02  | -323  |
| DRAIN TUBE.....  | 25-52-00-02A | -038  |
| DRAIN TUBE ASSY.....   | 71-70-00-02  | -016  |
| DRAIN TUBE WELD ASSY-FUEL DRAIN CARGO POD.....                     | 25-52-00-02  | -316  |
| DRAIN TUBE WELD ASSY.....  | 25-52-00-02A | -247  |
| DRAIN VALVE-FUEL.....  | 28-21-00-01  | -168  |
| DRAIN VALVE-STATIC SOURCE.....                                     | 34-11-00-01  | -163  |
| DRAIN VALVE-STATIC SOURCE.....                                     | 34-11-01-01  | -011  |
| DRAIN VALVE-FUEL.....  | 57-11-01-01  | -161  |
| DRAIN VALVE.....   | 71-70-00-02  | -020  |
| DRAIN VALVE-EPA CAN.....   | 73-10-00-01  | -004  |
| DRIP PAN-TKS TANK ASSY FSO 2601523-17.....                         | 30-10-02-08  | -075  |
| DRIP RAIL-LH CM2974-3.....   | 53-30-01-02  | -085  |
| DRIP RAIL-LH CM2974-3.....   | 53-30-01-02  | -085A |
| DRIP RAIL-RH CM2974-3.....   | 53-30-01-02  | -086  |
| DRIP RAIL-RH CM2974-3.....   | 53-30-01-02  | -086A |
| DRIVE ASSY - INFLIGHT MOVABLE DOOR.....                            | 52-32-00-02  | -075  |
| DRIVE PULLEY ASSY-ALTERNATOR FSO 2601271-18.....                   | 24-36-01-01  | -078  |
| DRIVE SHAFT FSO 2601566-23.....                                    | 21-51-01-02  | -089  |
| DRIVE SHAFT FSO 2601566-23.....                                    | 21-51-01-02  | -089A |
| DRIVE SHAFT FSO 2601566-23.....                                    | 21-51-01-02A | -087  |
| DRIVE SHAFT FSO 2601566-23.....                                    | 21-51-01-02A | -087A |
| DUCT ASSY-SECONDARY EXHAUST EJECTOR FSO 2654008-206.....           | 78-10-00-02  | -001  |
| DUCT ASSY-SECONDARY EXHAUST EJECTOR FSO 2654030-210.....           | 78-10-00-03  | -001  |

**E**

|  |              |      |
|--|--------------|------|
| EDGE GUARD.....  | 25-52-00-02A | -158 |
| EDGE GUARD.....  | 25-52-00-02A | -189 |
| EDGE GUARD.....  | 25-52-00-02A | -308 |
| EDGE GUARD.....  | 25-52-00-02A | -383 |
| EJECTOR.....   | 37-10-00-01  | -017 |
| ELECTRIC CLOCK.....  | 31-00-00-01  | -007 |
| ELECTRIC CLOCK.....  | 31-00-00-02  | -004 |
| ELECTRIC CLOCK.....  | 31-00-00-03  | -003 |
| ELECTRIC POWER BOX INSTALLATION.....                       | 24-50-02-01  | -    |
| ELECTRICAL ASSEMBLY-PRESSURE SWITCH.....                   | 79-30-00-04  | -001 |
| ELECTRICAL MONITORING.....                                 | 24-37-00-01  | -    |
| ELECTRICAL TORQUE INDICATING SYSTEM.....                   | 77-12-00-01  | -    |
| ELEVATOR ACTUATOR ASSY-TRIM TAB FSO 2661215-9.....         | 27-30-02-03  | -001 |
| ELEVATOR ELECTRIC TRIM ACTUATOR INSTALLATION.....          | 27-30-03-01  | -    |
| ELEVATOR INSTALLATION.....                                 | 55-20-00-01  | -    |
| ELEVATOR INSTALLATION.....                                 | 55-20-00-02  | -    |
| ELEVATOR TRIM CONTROL SYSTEM.....                          | 27-30-02-01  | -    |
| ELEVATOR TRIM TAB ACTUATOR ASSEMBLY.....                   | 27-30-02-03  | -    |
| ELEVATOR TRIM TAB ACTUATOR ASSEMBLY.....                   | 27-30-02-04  | -    |
| ELEVATOR TRIM WHEEL INSTALLATION.....                      | 27-30-02-01  | -001 |
| ELEVATOR TRIM WHEEL INSTALLATION.....                      | 27-30-02-02  | -    |
| ELT-ARTEX C406-2.....                                      | 25-60-00-06  | -001 |
| EMBLEM-EXTERIOR CESSNA SUPERCARGOMASTER FSO 133180-01..... | 11-N-22-01   | -003 |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE | CH | SEC | SUBJ | FIG | ITEM |
|--------------|----|-----|------|-----|------|
|--------------|----|-----|------|-----|------|

**E** Continued

|  |             |       |  |  |  |
|--|-------------|-------|--|--|--|
| EMERGENCY LOCATOR TRANSMITTER INSTALLATION . . . . .   | 25-60-00-01 | -     |  |  |  |
| EMERGENCY LOCATOR TRANSMITTER INSTALLATION - FRENCH CERTIFIED AIRPLANES-. . . . .                  | 25-60-00-04 | -     |  |  |  |
| EMERGENCY LOCATOR TRANSMITTER INSTALLATION - POINTER 3000 . . . . .                                | 25-60-00-02 | -     |  |  |  |
| EMERGENCY LOCATOR TRANSMITTER INSTALLATION - POINTER 3000-11 . . . . .                             | 25-60-00-03 | -     |  |  |  |
| EMERGENCY LOCATOR TRANSMITTER INSTALLATION - SOCATA ELT-90 FRENCH<br>CERTIFIED AIRPLANES . . . . . | 25-60-00-05 | -     |  |  |  |
| EMERGENCY LOCATOR TRANSMITTER INSTALLATION-ARTEX 110-406 . . . . .                                 | 25-60-00-06 | -     |  |  |  |
| ENCODING ALTIMETER IN-HG . . . . .   | 34-10-00-01 | -014  |  |  |  |
| ENCODING ALTIMETER . . . . .   | 34-10-00-01 | -075A |  |  |  |
| ENCODING ALTIMETER INDICATOR . . . . .   | 34-10-00-02 | -020A |  |  |  |
| END PLATE . . . . .  | 71-70-00-02 | -003  |  |  |  |
| END PLATE . . . . .  | 71-70-00-02 | -004  |  |  |  |
| ENGINE ASSY-TURBO PROPELLER 600SHP . . . . .   | 71-00-01-01 | -001  |  |  |  |
| ENGINE ASSY-TURBO PROPELLER 675SHP . . . . .   | 71-00-01-01 | -002  |  |  |  |
| ENGINE ASSY-TURBO PROPELLER 867SHP . . . . .   | 71-00-01-01 | -003  |  |  |  |
| ENGINE CONTROL QUADRANT INSTALLATION . . . . .   | 76-10-01-02 | -     |  |  |  |
| ENGINE CONTROLS . . . . .  | 76-10-01-01 | -     |  |  |  |
| ENGINE EXHAUST DUCT INSTALLATION WITH CARGO POD . . . . .  | 78-10-00-03 | -     |  |  |  |
| ENGINE EXHAUST DUCT INSTALLATION WITH CARGO POD . . . . .  | 78-10-00-04 | -     |  |  |  |
| ENGINE EXHAUST DUCT INSTALLATION WITHOUT CARGO POD . . . . .                                       | 78-10-00-02 | -     |  |  |  |
| ENGINE INSTALLATION . . . . .  | 71-00-01-01 | -     |  |  |  |
| ENGINE MOUNT ASSY FSO 2651023-23 . . . . .   | 71-20-00-01 | -001  |  |  |  |
| ENGINE MOUNT ASSY FSO 2651023-23 . . . . .   | 71-20-00-01 | -001A |  |  |  |
| ENGINE MOUNT ASSY FSO 2651040-2 . . . . .  | 71-20-00-01 | -001B |  |  |  |
| ENGINE MOUNT WELD ASSY . . . . .   | 71-20-00-01 | -001C |  |  |  |
| ENGINE MOUNTING . . . . .  | 71-20-00-01 | -     |  |  |  |
| ENGINE OIL COOLING SYSTEM - LARGE . . . . .  | 79-20-00-02 | -     |  |  |  |
| ENGINE OIL COOLING SYSTEM - SMALL . . . . .  | 79-20-00-01 | -     |  |  |  |
| EPA CAN INSTALLATION . . . . .   | 73-10-00-01 | -     |  |  |  |
| EPA CAN INSTALLATION . . . . .   | 73-10-00-02 | -     |  |  |  |
| ESCUTCHEON-RH GRIP PILOT . . . . .   | 27-10-01-05 | -015  |  |  |  |
| ESCUTCHEON-LH GRIP COPILOT . . . . .   | 27-10-01-05 | -016  |  |  |  |
| EVAPORATOR ASSEMBLIES - WING MOUNTED . . . . .   | 21-51-03-03 | -     |  |  |  |
| EVAPORATOR ASSEMBLY - AFT . . . . .  | 21-51-03-04 | -     |  |  |  |
| EVAPORATOR INSTALLATION - AFT MOUNTED . . . . .  | 21-51-03-02 | -     |  |  |  |
| EVAPORATOR INSTALLATION - WING MOUNTED . . . . .   | 21-51-03-01 | -     |  |  |  |
| EXCITER ASSY-IGNITION REMANUFACTURED . . . . .   | 74-10-00-01 | -001  |  |  |  |
| EXHAUST DUCT ASSY-PRIMARY . . . . .  | 78-10-00-01 | -001C |  |  |  |
| EXHAUST PANEL . . . . .  | 79-20-00-03 | -114  |  |  |  |
| EXHAUST PANEL ASSY . . . . .   | 79-20-00-03 | -112  |  |  |  |
| EXTENSION-FAIRING USED WITH LONG CHORD RUDDER . . . . .  | 53-50-01-01 | -017  |  |  |  |
| EXTENSION-FAIRING USED WITH LONG CHORD RUDDER . . . . .  | 53-50-01-01 | -017A |  |  |  |
| EXTERNAL POWER SYSTEM COMPONENTS . . . . .   | 24-40-00-01 | -     |  |  |  |
| EXTINGUISHER AND BRACKET ASSY-FIRE . . . . .   | 26-20-01-01 | -006  |  |  |  |
| EXTINGUISHER-FIRE . . . . .  | 26-20-01-01 | -001  |  |  |  |
| EXTINGUISHER-FIRE FSO C352CS . . . . .   | 26-20-01-02 | -001A |  |  |  |
| EXTINGUISHER-FIRE . . . . .  | 26-20-01-02 | -001B |  |  |  |

**F**

|  |              |      |  |  |  |
|--|--------------|------|--|--|--|
| FAIRING ASSY . . . . .                   | 25-52-00-02A | -001 |  |  |  |
| FAIRING ASSY . . . . .                   | 53-30-01-03  | -020 |  |  |  |
| FAIRING ASSY - AFT . . . . .             | 53-30-01-03  | -015 |  |  |  |
| FAIRING ASSY - FWD . . . . .             | 53-30-01-03  | -001 |  |  |  |
| FAIRING BOND ASSY . . . . .              | 25-52-00-02A | -451 |  |  |  |
| FAST ETM PROCESSOR YT009 . . . . .       | 77-30-00-02  | -001 |  |  |  |
| FEEDBACK COLLAR ASSY . . . . .           | 61-11-00-01  | -023 |  |  |  |
| FENCE-AILERON LH .040 2024 T42 . . . . . | 57-60-00-01  | -077 |  |  |  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE   | CH          | SEC | SUBJ | FIG | ITEM  |
|--|-------------|-----|------|-----|-------|
| <b>F</b> Continued                                   |             |     |      |     |       |
| FENCE-AILERON RH .040 2024 T42                       | 57-60-00-01 |     |      |     | -078  |
| FILLET ASSY  | 30-60-10-01 |     |      |     | -012  |
| FILTER-BETA  | 33-10-00-02 |     |      |     | -090  |
| FILTER-VACUUM AIR                                    | 34-23-00-01 |     |      |     | -025  |
| FILTER-FOAM  | 34-23-00-02 |     |      |     | -027  |
| FILTER-VACUUM AIR                                    | 34-24-00-01 |     |      |     | -024  |
| FILTER-FOAM VACUUM RELIEF VALVE                      | 34-24-00-01 |     |      |     | -028  |
| FILTER-VACUUM AIR                                    | 34-24-00-02 |     |      |     | -027  |
| FILTER-FOAM VACUUM RELIEF VALVE                      | 34-24-00-02 |     |      |     | -031  |
| FILTER ELEMENT ASSY-SEPARATOR                        | 77-12-00-01 |     |      |     | -093  |
| FILTER-FOAM-ALT FORC482001-0202                      | 34-23-00-02 |     |      |     | -027A |
| FILTER-FOAM VACUUM RELIEF VALVE                      | 34-23-00-01 |     |      |     | -029  |
| FILTER-FOAM VACUUM RELIEF VALVE-ALT FOR C482001-0202 | 34-23-00-01 |     |      |     | -029A |
| FILTER-VACUUM AIR-VACUUM AIR ALT FOR C294502-0201    | 34-24-00-01 |     |      |     | -024A |
| FILTER-VACUUM AIR-VACUUM AIR ALT FOR C295402-0201    | 34-24-00-02 |     |      |     | -027A |
| FIRE DETECTION CABLE                                 | 26-10-00-02 |     |      |     | -001  |
| FIRE DETECTION SYSTEM                                | 26-10-00-01 |     |      |     | -     |
| FIRE EXTINGUISHER ASSY-CABIN, 2.5                    | 26-20-01-03 |     |      |     | -001  |
| FIRE EXTINGUISHER INSTALLATION                       | 26-20-01-01 |     |      |     | -     |
| FIRE EXTINGUISHER INSTALLATION                       | 26-20-01-02 |     |      |     | -     |
| FIRESEAL-ENGINE MOUNT FSO 2650131-24                 | 71-60-01-02 |     |      |     | -076  |
| FIRESEAL-ENGINE MOUNT                                | 71-60-01-02 |     |      |     | -076A |
| FIRESEAL-ENGINE MOUNT FSO 2650131-26                 | 71-60-01-02 |     |      |     | -091  |
| FIRESEAL-ENGINE MOUNT                                | 71-60-01-02 |     |      |     | -091A |
| FIRESEAL-FORWARD LH FSO 2650131-22                   | 71-60-01-02 |     |      |     | -151  |
| FIRESEAL-FORWARD LH REF 2650131                      | 71-60-01-02 |     |      |     | -151A |
| FIRESEAL-FORWARD LH                                  | 71-60-01-02 |     |      |     | -151B |
| FIRESEAL-FOWARD RH                                   | 71-60-01-02 |     |      |     | -158  |
| FIRESEAL-AFT LH                                      | 71-60-01-02 |     |      |     | -161  |
| FIRESEAL-AFT LH                                      | 71-60-01-02 |     |      |     | -161A |
| FIRESEAL-AFT RH                                      | 71-60-01-02 |     |      |     | -169  |
| FIRESEAL ASSEMBLY-ENGINE MOUNT FSO 2650131-23        | 71-60-01-02 |     |      |     | -075  |
| FIRESEAL ASSEMBLY-ENGINE MOUNT                       | 71-60-01-02 |     |      |     | -075A |
| FIRESEAL ASSEMBLY-FORWARD LH FSO 2650131-22          | 71-60-01-02 |     |      |     | -150  |
| FIRESEAL ASSEMBLY-FORWARD LH REF 2650131             | 71-60-01-02 |     |      |     | -150A |
| FIRESEAL ASSEMBLY-FORWARD LH                         | 71-60-01-02 |     |      |     | -150B |
| FIRESEAL ASSY-ENGINE MOUNT FSO 2650131-24            | 71-60-01-02 |     |      |     | -090  |
| FIRESEAL ASSY-ENGINE MOUNT                           | 71-60-01-02 |     |      |     | -090A |
| FIRESEAL ASSY-FOWARD RH                              | 71-60-01-02 |     |      |     | -157  |
| FIRESEAL ASSY-AFT LH                                 | 71-60-01-02 |     |      |     | -160  |
| FIRESEAL ASSY-AFT RH                                 | 71-60-01-02 |     |      |     | -168  |
| FIREWALL INSTALLATION                                | 53-10-00-01 |     |      |     | -     |
| FIREWALL SHUT OFF VALVE ASSY-CABIN HEAT              | 21-41-02-02 |     |      |     | -015  |
| FIREWALL SHUT OFF VALVE ASSY-CABIN RETURN            | 21-41-02-02 |     |      |     | -002  |
| FIREWALL SHUTOFF VALVE ASSEMBLIES                    | 21-41-02-02 |     |      |     | -     |
| FIS RECEIVER AND ANTENNA INSTALLATION                | 34-58-00-01 |     |      |     | -     |
| FITTING  | 25-22-00-02 |     |      |     | -008  |
| FITTING-CARGO TIE DOWN USE WITH 5000 LB BELT         | 25-51-03-01 |     |      |     | -010  |
| FITTING  | 71-70-00-02 |     |      |     | -005  |
| FITTING ASSY   | 25-22-00-02 |     |      |     | -007  |
| FITTING-AFT LH STABILIZER ATTACH                     | 53-14-00-01 |     |      |     | -263  |
| FITTING-AFT RH STABILIZER ATTACH                     | 53-14-00-01 |     |      |     | -264  |
| FITTING-FWD LH STABILIZER ATTACH                     | 53-14-00-01 |     |      |     | -261  |
| FITTING-FWD RH STABILIZER ATTACH                     | 53-14-00-01 |     |      |     | -262  |
| FITTING-LH STABILIZER ATTACH                         | 53-14-00-01 |     |      |     | -252  |
| FITTING-RH STABILIZER ATTACH                         | 53-14-00-01 |     |      |     | -253  |
| FLAP ACTUATOR SWITCH ASSEMBLY                        | 27-50-01-03 |     |      |     | -     |
| FLAP ASSEMBLY - SKIN                                 | 57-50-00-03 |     |      |     | -     |
| FLAP ASSEMBLY - STRUCTURE                            | 57-50-00-02 |     |      |     | -     |
| FLAP ASSY-LH   | 57-50-00-01 |     |      |     | -003  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE   | CH | SEC | SUBJ | FIG | ITEM  |
|--|----|-----|------|-----|-------|
| <b>F Continued</b>   |    |     |      |     |       |
| FLAP ASSY-RH .....   | 57 | 50  | 00   | 01  | -010  |
| FLAP BELLCRANK ASSY-RH INBD FSO 2622311-16 .....                     | 27 | 50  | 01   | 04  | -003  |
| FLAP BELLCRANK ASSY-RH INBD .....                                    | 27 | 50  | 01   | 04  | -003A |
| FLAP CONTROL SYSTEM .....  | 27 | 50  | 01   | 01  | -     |
| FLAP CONTROL SYSTEM - WING .....                                     | 27 | 50  | 01   | 04  | -     |
| FLAP INDICATOR INSTALLATION .....                                    | 27 | 50  | 01   | 02  | -     |
| FLAP INSTALLATION .....  | 57 | 50  | 00   | 01  | -     |
| FLAP TRACK-OUTBOARD .375 2024 T3 FSO 2622075-6 .....                 | 57 | 10  | 02   | 04  | -082  |
| FLAP TRACK-OUTBOARD .375 2024 T3 .....                               | 57 | 10  | 02   | 04  | -083  |
| FLAP TRACK-INBD .375 2024 T42 FSO 2622075-4 .....                    | 57 | 10  | 02   | 01  | -100  |
| FLASHER ASSY-FLASHING BEACON .....                                   | 33 | 43  | 00   | 01  | -012  |
| FLASHING BEACON LIGHT INSTALLATION .....                             | 33 | 43  | 00   | 01  | -     |
| FLIGHT HOUR RECORDER INSTALLATION .....                              | 31 | 00  | 00   | 04  | -     |
| FLOORBOARD ACCESS PANELS .....                                       | 53 | 21  | 00   | 01  | -     |
| FLOORBOARD ACCESS PANELS - NOT APPLICABLE TO PASSENGER VERSION ..... | 53 | 21  | 00   | 02  | -     |
| FLOORBOARD ACCESS PANELS - PASSENGER VERSION .....                   | 53 | 21  | 00   | 03  | -     |
| FLOW CONTROL VALVE INSTALLATION .....                                | 21 | 41  | 01   | 01  | -     |
| FLOW CONTROL VALVE INSTALLATION .....                                | 21 | 41  | 01   | 02  | -     |
| FLOW VALVE DEICE .....   | 30 | 10  | 01   | 01  | -005  |
| FLUID TANK & EQUIPMENT PACK REF 13120-02 FSO S2800-1314 .....        | 30 | 10  | 02   | 08  | -001  |
| FLUID TANK & EQUIPMENT PACK REF 13120-19 .....                       | 30 | 10  | 02   | 08  | -001A |
| FLUID TANK & EQUIPMENT PALLET .....                                  | 30 | 10  | 02   | 08  | -001B |
| FLUX DETECTOR INSTALLATION .....                                     | 34 | 20  | 00   | 01  | -     |
| FM ANTENNA INSTALLATION .....  | 23 | 10  | 01   | 02  | -     |
| FM TRANSCEIVER INSTALLATION .....                                    | 23 | 10  | 01   | 01  | -     |
| FOOT REST ASSY-PILOT .....   | 53 | 20  | 00   | 01  | -048B |
| FOOT REST ASSY-PILOT .....   | 53 | 20  | 00   | 01  | -048C |
| FOOT REST ASSY-PILOT .....   | 53 | 20  | 00   | 01  | -048D |
| FOOT REST ASSY-PILOT .....   | 53 | 20  | 00   | 01  | -048E |
| FOOT REST ASSY-PILOT .....   | 53 | 20  | 00   | 03  | -042D |
| FOOT REST ASSY-PILOT .....   | 53 | 20  | 00   | 03  | -042E |
| FORWARD CABIN TOP COMPONENTS .....                                   | 53 | 10  | 02   | 01  | -     |
| FORWARD CABIN TOP COMPONENTS .....                                   | 53 | 10  | 02   | 02  | -     |
| FORWARD CABIN TOP COMPONENTS .....                                   | 53 | 10  | 02   | 03  | -     |
| FORWARD CABIN TOP COMPONENTS .....                                   | 53 | 10  | 02   | 04  | -     |
| FORWARD CARRY THRU STRUCTURE .....                                   | 53 | 13  | 03   | 02  | -     |
| FORWARD CARRY-THRU STRUCTURE .....                                   | 53 | 13  | 03   | 03  | -     |
| FORWARD FUSELAGE SKINS AND COMPONENTS .....                          | 53 | 30  | 00   | 01  | -     |
| FORWARD FUSELAGE SKINS AND COMPONENTS .....                          | 53 | 30  | 00   | 02  | -     |
| FORWARD FUSELAGE STRUCTURE .....                                     | 53 | 10  | 01   | 01  | -     |
| FORWARD FUSELAGE STRUCTURE .....                                     | 53 | 10  | 01   | 02  | -     |
| FORWARD PANEL .....  | 79 | 20  | 00   | 03  | -107  |
| FORWARD PANEL ASSY .....   | 79 | 20  | 00   | 03  | -106  |
| FORWARD VENTILATION SYSTEM .....                                     | 21 | 21  | 00   | 01  | -     |
| FRAME ASSY .....   | 25 | 10  | 00   | 02A | -080  |
| FRENCH INTERIOR PLACARDS AND MARKINGS - CABIN .....                  | 11 | F   | 32   | 01  | -     |
| FRONT SPAR ASSY-STABILIZER FWD .....                                 | 55 | 10  | 00   | 01  | -012  |
| FUEL DISTRIBUTION SYSTEM .....                                       | 28 | 21  | 00   | 01  | -     |
| FUEL DISTRIBUTION SYSTEM .....                                       | 28 | 21  | 00   | 02  | -     |
| FUEL FILLER CAP INSTALLATION .....                                   | 28 | 10  | 01   | 01  | -     |
| FUEL FILTER ASSY .....   | 28 | 21  | 00   | 01  | -150  |
| FUEL FILTER ASSY .....   | 28 | 21  | 00   | 02  | -150  |
| FUEL FLOW INDICATOR INSTALLATION .....                               | 73 | 30  | 00   | 01  | -     |
| FUEL INDICATING SYSTEM .....   | 28 | 41  | 00   | 01  | -     |
| FUEL QTY INDICATOR LH & RH .....                                     | 28 | 41  | 00   | 01  | -029  |
| FUEL QTY INDICATOR LH & RH .....                                     | 28 | 41  | 00   | 01  | -029A |
| FUEL RESERVOIR COMPONENTS .....                                      | 28 | 22  | 00   | 01  | -     |
| FUEL SELECTOR CONTROLS .....   | 28 | 23  | 00   | 01  | -     |
| FUEL SELECTORS OFF WARNING SYSTEM .....                              | 28 | 42  | 01   | 01  | -     |
| FUEL SENSOR .....  | 28 | 41  | 00   | 02  | -     |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE | CH | SEC | SUBJ | FIG | ITEM |
|--------------|----|-----|------|-----|------|
|--------------|----|-----|------|-----|------|

**F** Continued

|  |              |       |
|--|--------------|-------|
| FUEL SHUTOFF VALVE-FIREWALL .....      | 28-23-01-01  | -027  |
| FUEL SHUTOFF VALVE-FIREWALL .....      | 28-23-01-01  | -027A |
| FUEL SHUTOFF VALVES .....              | 28-23-01-01  | -     |
| FUEL TOTALIZER INDICATING SYSTEM ..... | 73-32-00-01  | -     |
| FUEL TOTALIZER INDICATOR .....         | 73-32-00-01  | -012  |
| FUEL TRANSMITTER MID-INBOARD .....     | 28-41-00-01  | -004  |
| FUEL TRANSMITTER MID-OUTBOARD .....    | 28-41-00-01  | -006  |
| FUEL VENTILATION SYSTEM .....          | 28-10-03-01  | -     |
| FWD CARGO POD ASSEMBLY-.....           | 25-52-00-02A | -150  |

**G**

|  |              |       |
|--|--------------|-------|
| G1000 ADF INSTALLATION .....                                     | 34-50-01-05  | -     |
| G1000 OIL INDICATING .....                                       | 79-30-00-03  | -     |
| GA56 GPS ANTENNA STUD-GARMIN LH GNS 430 .....                    | 34-55-07-02  | -001  |
| GAGE-VOLT AMMETER .....  | 24-37-00-01  | -001  |
| GAGE-PROP DEICE AMMETER .....                                    | 31-00-00-01  | -001  |
| GAGE-PROP DE-ICE AMMETER .....                                   | 31-00-00-02  | -001  |
| GAGE-PROP DEICE AMMETER .....                                    | 31-00-00-03  | -001  |
| GAGE-OUTSIDE AIR TEMPERATURE .....                               | 34-12-00-01  | -001  |
| GAGE-PITOT AMMETER .....   | 31-00-00-01  | -003  |
| GAGE-PITOT AMMETER .....   | 31-00-00-02  | -003  |
| GAGE-PITOT AMMETER .....   | 31-00-00-03  | -002  |
| GAGE-PITOT AMMETER .....   | 34-10-00-04  | -030  |
| GAGE-SUCTION .....   | 34-10-00-03  | -027  |
| GARMIN DISPLAY UNIT (GDU) INSTALLATION .....                     | 34-60-00-01  | -     |
| GARMIN GPS ANTENNA INSTALLATION .....                            | 34-55-07-02  | -     |
| GARMIN GTX 330 INSTALLATION WITH OR WITHOUT POD .....            | 34-51-16-01  | -     |
| GARMIN GTX-327 INSTALLATION .....                                | 34-51-15-01  | -     |
| GARMIN GTX-33 TRANSPONDER INSTALLATION WITH OR WITHOUT POD ..... | 34-51-17-01  | -     |
| GARMIN INTERGRATED AVIONICS UNIT INSTALLATION - GIA 63 .....     | 34-56-04-01  | -     |
| GAS GENERATOR RPM INDICATOR SYSTEM .....                         | 77-14-00-01  | -     |
| GASKET .....   | 21-51-01-02  | -081  |
| GASKET .....   | 21-51-01-02A | -081  |
| GASKET-WING INSPECTION LIGHT .....                               | 33-44-00-03  | -003  |
| GAUGE-SUCTION .....  | 31-00-00-01  | -005  |
| GDC-74A AIR DATA COMPUTER INSTALLATION .....                     | 34-14-00-01  | -     |
| GDL 69A WEATHER DATA LINK INSTALLATION .....                     | 34-45-00-02  | -     |
| GEA-71 ENGINE INTERFACE UNIT INSTALLATION .....                  | 77-40-00-01  | -     |
| GENERATOR CONTROL UNIT ASSEMBLY .....                            | 24-31-00-01  | -     |
| GENERATOR-STARTER .....  | 80-10-01-01  | -002  |
| GENERATOR-STARTER .....  | 80-10-01-01  | -008A |
| GENERATOR-STARTER .....  | 80-10-01-01  | -010D |
| GENERATOR-STARTER ASSY .....                                     | 80-10-01-02  | -001  |
| GENERATOR-STARTER KIT .....                                      | 80-10-01-01  | -006A |
| GENERATOR-STARTER KIT FSO 200SGL153Q-1 .....                     | 80-10-01-01  | -010A |
| GENERATOR-STARTER KIT .....                                      | 80-10-01-01  | -010B |
| GENERATOR-TACH ALT FOR 9912034-1 .....                           | 77-13-00-01  | -003  |
| GENERATOR-TACH ALT FOR 9910378-1 .....                           | 77-13-00-01  | -003A |
| GENERATOR-TACH ALT FOR 9912034-1 .....                           | 77-14-00-01  | -003  |
| GENERATOR-TACH ALT FOR 9910378-1 .....                           | 77-14-00-01  | -003A |
| GLARESHIELD ASSY FSO 2615200-1 .....                             | 31-00-00-01  | -034  |
| GLARESHIELD ASSY SPARES .....                                    | 31-00-00-01  | -034A |
| GLARESHIELD ASSY FSO 2615200-1 .....                             | 31-00-00-02  | -078C |
| GLARESHIELD ASSY .....   | 31-00-00-02  | -078D |
| GLARESHIELD ASSY SPARES FSO 2615200-201 .....                    | 31-00-00-03  | -013A |
| GLARESHIELD ASSY SPARES .....                                    | 31-00-00-03  | -013B |
| GLOVE BOX INSTALLATION .....                                     | 25-10-04-01  | -     |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE  | CH           | SEC | SUBJ | FIG | ITEM  |
|---|--------------|-----|------|-----|-------|
| <b>G Continued</b>  |              |     |      |     |       |
| GMC 710 AFCS MODE CONTROLLER . . . . .                                  | 22-10-00-02  |     |      |     | -     |
| GMU 44 MAGNETOMETER INSTALLATION . . . . .                              | 34-22-00-01  |     |      |     | -     |
| GOVERNOR-PROPELLER OVERSPEED ALT FOR 210792 . . . . .                   | 61-20-01-01  |     |      |     | -001A |
| GOVERNOR-PROPELLER OVERSPEED SPARES AND ALT FOR D210507 . . . . .       | 61-20-01-01  |     |      |     | -002  |
| GPS ANTENNA INSTALLATION . . . . .                                      | 34-55-07-01  |     |      |     | -     |
| GPS ANTENNA INSTALLATION . . . . .                                      | 34-55-07-03  |     |      |     | -     |
| GPS KLN-89B INSTALLATION . . . . .                                      | 34-55-06-01  |     |      |     | -     |
| GPS KLN-94 INSTALLATION . . . . .                                       | 34-55-08-01  |     |      |     | -     |
| GPS TNL-2000T INSTALLATION . . . . .                                    | 34-55-04-01  |     |      |     | -     |
| GPS TNL-2000T OR TNL-3000T ANTENNA INSTALLATION . . . . .               | 34-55-05-01  |     |      |     | -     |
| GPS/LORAN TNL-3000T INSTALLATION . . . . .                              | 34-55-02-01  |     |      |     | -     |
| GPS1/XM ANTENNA-LH . . . . .  | 34-55-07-03  |     |      |     | -001  |
| GPS2 ANTENNA-RH . . . . .   | 34-55-07-03  |     |      |     | -002  |
| GRAPHIC SIGN-LED NO SMOKING/FASTEN SEAT BELTS ALT FOR 9002-03 . . . . . | 33-20-00-01  |     |      |     | -001C |
| GRAPHIC SIGN-LED NO SMOKING/FASTEN SEAT BELTS . . . . .                 | 33-20-00-01  |     |      |     | -001E |
| GREASE FITTING . . . . .  | 32-20-00-01  |     |      |     | -238  |
| GRILL ASSY-AIR CONDITIONER . . . . .                                    | 21-51-03-01  |     |      |     | -001  |
| GRILL ASSY-AIR CONDITIONER . . . . .                                    | 21-51-03-02  |     |      |     | -001  |
| GROMMET . . . . .   | 71-10-00-01  |     |      |     | -003A |
| GROUND POWER MONITOR . . . . .  | 24-50-02-01  |     |      |     | -030  |
| GROUND STRAP-ALTERNATOR . . . . .                                       | 24-36-01-01  |     |      |     | -015  |
| GROUND STRAP-ENGINE . . . . .   | 71-00-01-01  |     |      |     | -088  |
| GROUND STRAP-EXTERNAL POWER . . . . .                                   | 24-40-00-01  |     |      |     | -019  |
| GROUND STUD-ALT 9256010-1 . . . . .                                     | 31-30-00-02  |     |      |     | -021  |
| GROUND STUD-ALT 9256010-1 . . . . .                                     | 31-30-00-02A |     |      |     | -023  |
| GROUND STUD ASSEMBLY-ALT FOR 6318104-2 . . . . .                        | 77-30-00-02  |     |      |     | -010A |
| GROUND STUD ASSY-STORMSCOPE . . . . .                                   | 34-40-00-01  |     |      |     | -006  |
| GROUND STUD ASSY-STORMSCOPE USED WITH G1000 . . . . .                   | 34-40-00-01  |     |      |     | -013  |
| GROUND STUD ASSY-STORMSCOPE ALT FOR 6318104-2 . . . . .                 | 34-40-00-01  |     |      |     | -014  |
| GROUND STUD INSTALLATION . . . . .                                      | 77-30-00-02  |     |      |     | -010  |
| GROUNDING STRAP-FWD . . . . .   | 25-52-00-02A |     |      |     | -232  |
| GROUNDING STRAP-CENTER . . . . .  | 25-52-00-02A |     |      |     | -233  |
| GSA 80 ROLL SERVO . . . . .   | 22-10-03-01A |     |      |     | -001  |
| GSA 80 YAW SERVO . . . . .  | 22-10-05-01A |     |      |     | -001  |
| GSA 81 PITCH SERVO . . . . .  | 22-10-04-01A |     |      |     | -001  |
| GSA 81 TRIM SERVO . . . . .   | 27-30-03-02A |     |      |     | -011  |
| GSA-81 TORQUE SERVO . . . . .   | 22-10-04-01A |     |      |     | -005  |
| GSA-81 TORQUE SERVO . . . . .   | 22-10-04-01A |     |      |     | -005A |
| GSM-85A SERVO MOUNT . . . . .   | 22-10-04-01A |     |      |     | -006  |
| GSM-85A SERVO MOUNT . . . . .   | 22-10-04-01A |     |      |     | -006A |
| GSM85 SERVO MOUNT 011-00894-14 (MOD 1 ONLY) . . . . .                   | 27-30-03-02A |     |      |     | -012  |
| GTX-327 TRANSPONDER . . . . .   | 34-51-15-01  |     |      |     | -003  |
| GTX330 MODE-S TRANSPONDER-GARMIN . . . . .                              | 34-51-16-01  |     |      |     | -001  |
| GUARD . . . . .   | 33-10-01-01  |     |      |     | -007  |
| GUIDE ASSY-NOSE GEAR STEERING . . . . .                                 | 53-10-01-02  |     |      |     | -012  |
| GUIDE ASSY-NOSE GEAR STEERING . . . . .                                 | 53-10-01-02  |     |      |     | -012A |
| GUIDE ASSY-NOSE GEAR STEERING . . . . .                                 | 53-10-01-02  |     |      |     | -012B |
| GUTTER . . . . .  | 25-52-00-02A |     |      |     | -041  |
| GUTTER-CARGO POD FWD .040 6061 T6 . . . . .                             | 53-30-00-01  |     |      |     | -082A |
| GUTTER-CARGO POD .040 6061 T6 . . . . .                                 | 53-30-01-01  |     |      |     | -173  |
| GWX 68 WEATHER RADAR INSTALLATION . . . . .                             | 34-45-00-01  |     |      |     | -     |
| GYRO-HORIZON . . . . .  | 34-10-00-04  |     |      |     | -018  |
| GYRO FILTER ASSY-VACUUM AIR . . . . .                                   | 34-23-00-02  |     |      |     | -018  |
| GYRO INSTALLATION . . . . .   | 34-24-00-03  |     |      |     | -     |
| GYRO INSTALLATION - VACUUM- . . . . .                                   | 34-24-00-02  |     |      |     | -     |
| GYRO-DIRECTIONAL ("AIR-DRIVEN") FSO C661053-0103 . . . . .              | 34-10-00-04  |     |      |     | -023B |
| GYRO-DIRECTIONAL ("AIR-DRIVEN") . . . . .                               | 34-10-00-04  |     |      |     | -023C |
| GYRO-DIRECTIONAL (ELECTRIC) . . . . .                                   | 34-10-00-04  |     |      |     | -023  |
| GYRO-HORIZON . . . . .  | 34-10-00-02  |     |      |     | -026A |
| GYROS INSTALLATION . . . . .  | 34-23-00-01  |     |      |     | -     |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE | CH | SEC | SUBJ | FIG | ITEM |
|--------------|----|-----|------|-----|------|
|--------------|----|-----|------|-----|------|

**G** Continued

|  |             |   |
|--|-------------|---|
| GYROS INSTALLATION .....                   | 34-23-00-02 | - |
| GYROS INSTALLATION - RH FLIGHT PANEL ..... | 34-24-00-01 | - |

**H**

|   |              |       |
|---|--------------|-------|
| HANDLE-INBOARD CREW DOOR FSO 2617094-8 .....                                | 52-10-00-02  | -001  |
| HANDLE-INBOARD CREW DOOR .....  | 52-10-00-02  | -001A |
| HANDLE-OUTBOARD CREW DOOR FSO 2617094-7 .....                               | 52-10-00-02  | -104  |
| HANDLE-OUTBOARD CREW DOOR .....   | 52-10-00-02  | -104A |
| HANDLE-OUTBOARD UPPER PASSENGER DOOR FSO 2617094-8 .....                    | 52-10-01-02  | -089  |
| HANDLE-OUTBOARD UPPER PASSENGER DOOR .....                                  | 52-10-01-02  | -089A |
| HANDLE-CARGO DOOR OUTBOARD FSO 2617094-8 .....                              | 52-31-00-03  | -031  |
| HANDLE-CARGO DOOR OUTBOARD .....  | 52-31-00-03  | -031A |
| HANDLE-VENT WINDOW LH ONLY .....  | 56-30-00-01  | -025  |
| HANDLE-HINGE ALIGNMENT .....  | 71-60-01-01  | -106  |
| HANDLE ASSY-RUDDER LOCK .....   | 27-70-00-01  | -001  |
| HANDLE ASSY-INBOARD UPPER PASSENGER DOOR .....                              | 52-10-01-02  | -001  |
| HANDLE ASSY-CARGO DOOR INBOARD .....  | 52-31-00-03  | -001  |
| HANGER-HEADLINER .....  | 53-14-00-01  | -095  |
| HANGER ASSEMBLY-INBOARD .....   | 78-10-00-05  | -006  |
| HANGER ASSY-CENTER .....  | 78-10-00-05  | -024  |
| HAT ASSY .....  | 31-30-00-02  | -005  |
| HAT ASSY .....  | 31-30-00-02A | -007  |
| HEADLINER ASSY .....  | 25-23-00-01  | -002  |
| HEADLINER ASSY USED WITH CARGO TIE DOWN .....                               | 25-23-00-01  | -003  |
| HEADLINER ASSY FSO 2615114-36 .....   | 25-23-01-01  | -001  |
| HEADLINER ASSY-COCKPIT .....  | 25-23-00-02  | -001  |
| HEADLINER ASSY-COCKPIT .....  | 25-23-00-03  | -001C |
| HEADREST ASSY-SEAT .....  | 25-10-00-02  | -025  |
| HEADREST ASSY .....   | 25-21-00-01  | -077A |
| HEADREST ASSY .....   | 25-21-00-02  | -098  |
| HEADREST ASSY .....   | 25-21-00-03  | -077A |
| HEADREST ASSY-SEAT .....  | 25-10-00-01  | -152  |
| HEAT SHIELD BOND ASSY .....   | 25-52-00-02  | -107  |
| HEAT SHIELD BOND ASSY FSO 2601396-7 .....                                   | 25-52-00-02  | -107A |
| HEAT SHIELD BOND ASSY FSO 2601396-200 AND 2601396-204 .....                 | 25-52-00-02  | -107B |
| HEAT SHIELD BOND ASSY FOR SPARES ONLY .....                                 | 25-52-00-02  | -107C |
| HEAT SHIELD BOND ASSY FOR SPARES .....                                      | 25-52-00-02  | -107D |
| HEAT SHIELD BOND ASSY .....   | 25-52-00-02A | -225  |
| HEAT SHIELD BOND ASSY FSO 2601396-7 .....                                   | 25-52-00-02A | -225A |
| HEAT SHIELD BOND ASSY FSO 2601396-204 AND 2601396-200 .....                 | 25-52-00-02A | -225B |
| HEAT SHIELD BOND ASSY FOR SPARES .....                                      | 25-52-00-02A | -225C |
| HEAT SINK-PRIMARY AND SECONDARY CONSOLE LIGHTING .....                      | 33-20-00-04  | -004  |
| HEATER AND DEFROSTER VALVE ASSEMBLIES .....                                 | 21-22-03-01  | -     |
| HINGE-DOOR UPR FWD .....  | 52-31-01-01  | -014A |
| HINGE-AFT FIRESEAL .....  | 71-60-01-02  | -162  |
| HINGE ASSY .....  | 25-52-00-02A | -167  |
| HINGE ASSY .....  | 25-52-00-02A | -316  |
| HINGE ASSY .....  | 25-52-00-02A | -391  |
| HINGE ASSY-PASSENGER DOOR UPR .....   | 52-10-01-01  | -018  |
| HINGE ASSY-PASSENGER DOOR LOWER .....                                       | 52-10-02-01  | -159  |
| HINGE ASSY-CARGO DOOR UPPER NOT USED WITH AIR DEFLECTOR FSO 2617018-9 ..... | 52-31-00-01  | -098  |
| HINGE ASSY-ELEVATOR .....   | 55-10-00-01  | -035  |
| HINGE ASSY-ELEVATOR SS 0.00 .....   | 55-10-00-02  | -077  |
| HINGE ASSY-ELEVATOR SS 55.00 .....  | 55-10-00-02  | -082  |
| HINGE ASSY-WING ASSY ATTACH HOISTING FWD .....                              | 57-10-00-01  | -030  |
| HINGE ASSY-WING ASSY ATTACH HOISTING AFT REPLACES 2 WASHERS .....           | 57-10-00-01  | -039  |
| HINGE ASSY-COWL DOOR .....  | 71-10-00-01  | -011  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE | CH | SEC | SUBJ | FIG | ITEM |
|--------------|----|-----|------|-----|------|
|--------------|----|-----|------|-----|------|

**H** Continued

|   |             |       |
|---|-------------|-------|
| HINGE BRACKET ASSY SS 55.00                                     | 55-20-00-02 | -090A |
| HOLDER ASSY-APPROACH PLATE                                      | 27-10-01-03 | -031  |
| HORIZONTAL GYRO ALT FOR C661076-0101                            | 34-10-00-01 | -154  |
| HORIZONTAL GYRO ALT FOR C661076-0102                            | 34-10-00-01 | -154A |
| HORIZONTAL STABILIZER INSTALLATION                              | 55-10-00-01 | -     |
| HORIZONTAL STABILIZER INSTALLATION                              | 55-10-00-02 | -     |
| HORN-ELEVATOR TRIM TAB  | 55-20-00-01 | -166  |
| HORN-ELEVATOR TRIM TAB  | 55-20-00-02 | -166  |
| HORN ASSY-STALL WARNING   | 27-31-00-01 | -018  |
| HOSE  | 71-70-00-02 | -023  |
| HOSE  | 71-70-00-02 | -077  |
| HOSE  | 71-70-00-02 | -086  |
| HOSE  | 71-70-00-02 | -093  |
| HOSE  | 71-70-00-02 | -096  |
| HOSE  | 71-70-00-02 | -103  |
| HOSE ASSY TEE AT FIREWALL TO BRAKE CYLINDER FSO S3309C0112-000D | 32-41-00-01 | -016A |
| HOSE ASSY BRAKE CYL TO PARKING BRAKE VALVE                      | 32-41-00-01 | -085C |
| HOSE ASSY BRAKE CYL TO PARKING BRAKE VALVE                      | 32-41-00-01 | -086C |
| HOSE ASSY   | 71-70-00-02 | -048  |
| HOURLMETER  | 31-00-00-02 | -157  |
| HOURLMETER EI001  | 31-00-00-04 | -001  |
| HOURLMETER-FLIGHT RECORDER                                      | 31-00-00-01 | -019  |
| HSI GYRO USED WITH 400B AUTOPILOT OR 400B IFCS                  | 34-10-00-01 | -176  |

**I**

|   |             |       |
|---|-------------|-------|
| ICE DETECT ASSY                                   | 33-10-00-06 | -001  |
| ICE DETECTOR LIGHT INSTALLATION                   | 33-44-00-01 | -     |
| ICE DETECTOR LIGHT INSTALLATION                   | 33-44-00-02 | -     |
| IGNITION EXCITER INSTALLATION                     | 74-10-00-01 | -     |
| INDICATOR-FLAP                                    | 27-50-01-02 | -042  |
| INDICATOR-STANDBY ALTERNATOR OVERHEAT             | 31-00-00-01 | -004  |
| INDICATOR-VERTICAL SPEED                          | 34-10-00-01 | -193  |
| INDICATOR-VERTICAL SPEED                          | 34-10-00-02 | -024  |
| INDICATOR-VERTICAL SPEED                          | 34-10-00-03 | -017  |
| INDICATOR-TORQUE                                  | 34-10-00-03 | -035  |
| INDICATOR-VERTICAL SPEED                          | 34-10-00-04 | -015  |
| INDICATOR EI003                                   | 34-24-00-03 | -001  |
| INDICATOR-ELECTRICAL TORQUE                       | 77-12-00-01 | -001  |
| INDICATOR-PROP RPM                                | 77-13-00-01 | -001A |
| INDICATOR-PERCENT RPM                             | 77-14-00-01 | -001A |
| INDICATOR-INTER-TURBINE TEMPERATURE FSO 2606012-2 | 77-21-00-01 | -001  |
| INDICATOR-INTER-TURBINE TEMPERATURE               | 77-21-00-01 | -001A |
| INDICATOR-OIL TEMP/OIL PRESS FSO 2606015-4        | 79-30-00-01 | -001  |
| INDICATOR-OIL TEMP/OIL PRESS FSO 2606015-4        | 79-30-00-01 | -001A |
| INDICATOR-OIL TEMP/OIL PRESS                      | 79-30-00-01 | -001B |
| INDICATOR ASSY-NOSE GEAR SHOCK STRUT              | 32-20-00-03 | -121  |
| INDICATOR ASSY-ELEVATOR TRIM                      | 27-30-02-02 | -008  |
| INDICATOR ASSY-RUDDER TRIM                        | 27-20-02-01 | -002  |
| INDICATOR-AIRSPPEED                               | 34-10-00-02 | -001  |
| INDICATOR-AIRSPPEED                               | 34-10-00-03 | -001  |
| INDICATOR-AIRSPPEED                               | 34-10-00-04 | -001  |
| INDICATOR-CHIP DETECTOR SPERRY AUTOPILOT          | 31-00-00-01 | -004A |
| INDICATOR-FUEL FLOW                               | 34-10-00-03 | -040  |
| INDICATOR-FUEL FLOW                               | 73-30-00-01 | -001  |
| INDICATOR-FUEL QUANTITY                           | 34-10-00-03 | -041  |
| INDICATOR-INTER TURBINE TEMP                      | 34-10-00-03 | -037  |
| INDICATOR-OIL PRESS/OIL TEMP                      | 34-10-00-03 | -039  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE | CH SEC SUBJ FIG | ITEM |
|--------------|-----------------|------|
|--------------|-----------------|------|

I Continued

|   |              |       |
|---|--------------|-------|
| INDICATOR-PERCENT RPM .....   | 34-10-00-03  | -038  |
| INDICATOR-PROP RPM .....  | 34-10-00-03  | -036  |
| INDICATOR-TRUE AIRSPEED .....   | 34-10-00-01  | -001A |
| INDICATOR-TRUE AIRSPEED .....   | 34-10-00-02  | -006A |
| INDUCTION AIR PLENUM INSTALLATION .....   | 71-60-01-01  | -     |
| INERTIAL SEPARATOR ACTUATOR INSTALLATION .....  | 71-60-00-02  | -     |
| INERTIAL SEPARATOR INSTALLATION .....   | 71-60-00-01  | -     |
| INLET PLUG ASSY-ENGINE LH .....   | 10-10-00-03  | -001  |
| INLET PLUG ASSY-OIL .....   | 10-10-00-03  | -016  |
| INSERT .....  | 21-51-01-02  | -079  |
| INSERT .....  | 21-51-01-02A | -079  |
| INSPECTION PLATE RH .020 2024 T3 FSO 2621012-58 .....   | 57-10-04-01  | -025  |
| INSTRUMENT PANEL ASSY-G1000 FSO 2613470-37 .....  | 53-22-01-06  | -001  |
| INSTRUMENT PANEL ASSY-G1000 FSO 2613470-37 .....  | 53-22-01-06  | -001A |
| INSTRUMENT PANEL ASSY-G1000 .....   | 53-22-01-06  | -001B |
| INSTRUMENT PANEL ASSY-G1000 .....   | 53-22-01-06  | -001C |
| INSTRUMENT PANEL ASSY-G1000 .....   | 53-22-01-06  | -001D |
| INSTRUMENT PANEL ASSY-G1000 .....   | 53-22-01-06  | -001E |
| INSTRUMENT PANEL EQUIPMENT - APPLICABLE TO CARGOMASTER NOT APPLICABLE TO<br>CAT II AIRPLANES .....  | 31-00-00-02  | -     |
| INSTRUMENT PANEL EQUIPMENT - CAT II AIRPLANES .....   | 31-00-00-03  | -     |
| INSTRUMENT PANEL EQUIPMENT- NOT APPLICABLE TO CARGOMASTER .....                                     | 31-00-00-01  | -     |
| INSTRUMENT PANEL INDICATORS - APPLICABLE TO CARGOMASTER NOT APPLICABLE TO<br>CAT II AIRPLANES ..... | 34-10-00-02  | -     |
| INSTRUMENT PANEL INDICATORS - APPLICABLE TO CAT II AIRPLANES .....                                  | 34-10-00-03  | -     |
| INSTRUMENT PANEL INDICATORS NOT APPLICABLE TO CARGOMASTER .....                                     | 34-10-00-01  | -     |
| INSTRUMENT PANEL LIGHTING INSTALLATION .....  | 33-10-00-01  | -     |
| INSTRUMENT PANEL STRUCTURE .....  | 53-22-01-01  | -     |
| INSTRUMENT PANEL STRUCTURE .....  | 53-22-01-05  | -     |
| INSTRUMENT PANEL STRUCTURE - CAT II AIRPLANES .....   | 53-22-01-04  | -     |
| INSTRUMENT PANEL STRUCTURE USED WITH KFC150 AUTOPILOT .....   | 53-22-01-03  | -     |
| INSTRUMENT PANEL STRUCTURE USED WITH KFC250 AUTOPILOT .....   | 53-22-01-02  | -     |
| INSULATION - 208 PASSENGER VERSION .....  | 25-80-00-04  | -     |
| INSULATION - CARGO VERSION .....  | 25-80-00-05  | -     |
| INSULATOR .....   | 33-10-00-05  | -005  |
| INTER-TURBINE TEMPERATURE INDICATOR .....   | 77-21-00-01  | -     |
| INTERNAL SCREW .....  | 27-10-03-03  | -017  |
| INVERTER-500VA UT002 .....  | 24-21-00-01  | -003  |
| INVERTER PLATE ASSEMBLY .....   | 24-21-00-01  | -005  |

J

|   |             |      |
|---|-------------|------|
| JACK PAD-LH .....                           | 32-10-00-01 | -099 |
| JACK PAD-RH .....                           | 32-10-00-01 | -100 |
| JACK POINT .....                            | 32-20-00-01 | -239 |
| JAMB-LH UPPER CREW DOOR .040 2024 T42 ..... | 53-10-01-02 | -021 |
| JAMB-RH UPPER CREW DOOR .040 2024 T42 ..... | 53-10-01-02 | -022 |

K

|  |             |      |
|--|-------------|------|
| KDR 510 VDL RECEIVER (FIS) .....   | 34-58-00-01 | -001 |
| KICK GUARD COVER-C/B PANEL FSO 2613411-4 .....                               | 24-50-01-01 | -075 |
| KING ADF LOOP AND SENSE ANTENNA INSTALLATION - USED WITH KING KR87 ADF ..... | 34-50-01-04 | -    |
| KING ADF RADIO INSTALLATION .....  | 34-50-01-01 | -    |
| KING ADF RADIO INSTALLATION WITH KI-227 ADF INDICATOR .....                  | 34-50-01-03 | -    |
| KING ADF RADIO INSTALLATION WITH RMI .....                                   | 34-50-01-02 | -    |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE | CH | SEC | SUBJ | FIG | ITEM |
|--------------|----|-----|------|-----|------|
|--------------|----|-----|------|-----|------|

**K** Continued

|   |              |      |
|---|--------------|------|
| KING AUDIO/INTERCOM WITH KR-21 MARKER BEACON INSTALLATION - (TYPES KMA24H-70 AUDIO PANEL AND KR-21 MARKER BEACON) ..... | 23-50-00-02  | -    |
| KING AUDIO/INTERCOM/MARKER BEACON PANEL INSTALLATION - TYPE KMA24 .....   | 23-50-00-01  | -    |
| KING AUTOPILOT GYRO INSTALLATION AND SLAVING ACCESSORY - KAP 150 AND KFC 150 .....                                      | 34-23-00-03  | -    |
| KING DME INSTALLATION - TYPE KN63 .....   | 34-51-12-01  | -    |
| KING DME INSTALLATION - TYPE KN63 .....   | 34-51-13-01  | -    |
| KING HF RADIO ANTENNA INSTALLATION - TYPE KHF 950 .....   | 34-50-00-04  | -    |
| KING INSTALLATION KIT .....   | 27-10-01-05  | -038 |
| KING KHF950 RADIO INSTALLATION .....  | 23-10-00-01  | -    |
| KING NAV SWITCH INSTALLATION .....  | 34-53-00-01  | -    |
| KING NAV/COM RADIO INSTALLATION - TYPE KX165 .....  | 34-50-01-06  | -    |
| KING RADAR ALTIMETER INSTALLATION - TYPE KRA-10A .....  | 34-10-00-07  | -    |
| KING RADAR ALTIMETER INSTALLATION - TYPE KRA-415 FED-X ONLY-.....   | 34-10-00-08  | -    |
| KING RMI INSTALLATION - TYPE KI229 .....  | 34-52-01-01  | -    |
| KING RNAV RADIO INSTALLATION - KNS81 .....  | 34-50-03-01  | -    |
| KING SECOND RMI INSTALLATION .....  | 34-52-02-01  | -    |
| KING TRANSPONDER - KT73 .....   | 34-51-08-01  | -    |
| KING TRANSPONDER INSTALLATION - KT70 .....  | 34-51-04-01  | -    |
| KING TRANSPONDER INSTALLATION - KT70 SECOND TRANSPONDER .....   | 34-51-06-01  | -    |
| KING TRANSPONDER INSTALLATION - KT71 .....  | 34-51-05-01  | -    |
| KING TRANSPONDER INSTALLATION - KT79 .....  | 34-51-03-01  | -    |
| KING VHF COMM RADIO INSTALLATION - KY196 .....  | 34-54-00-01  | -    |
| KNOB-AILERON TRIM .....   | 27-10-03-02  | -008 |
| KNOB-AILERON TRIM .....   | 27-10-03-02A | -009 |
| KNOB-EMERGENCY POWER LEVER .....  | 76-10-01-02  | -075 |
| KNOB ASSY .....   | 27-10-01-05  | -030 |
| KNOB ASSY-MAPLIGHT POTENTIOMETER .....  | 33-10-00-04  | -007 |
| KNOB ASSY-OXYGEN CONTROL .....  | 35-14-00-01  | -075 |
| KNOB-OXYGEN CONTROL .....   | 35-14-00-01  | -076 |
| KTA-870 TAS RECEIVER INSTALLATION .....   | 34-50-04-01  | -    |

**L**

|   |              |      |
|---|--------------|------|
| L-BAND ANTENNA-AFT LH AND RH .....        | 34-50-05-01  | -075 |
| L-BAND ANTENNA-AFT LH AND RH .....        | 34-51-14-02  | -075 |
| LAMP .....                                | 27-10-01-05  | -025 |
| LAMP-LOWER INSTRUMENT PANEL LIGHT .....   | 33-10-00-01  | -080 |
| LAMP-CONTROL WHEEL MAPLIGHT .....         | 33-10-00-04  | -002 |
| LAMP-FUEL TANK SELECTOR LIGHT .....       | 33-20-00-01  | -017 |
| LAMP-OXYGEN CONTROL LIGHT .....           | 33-20-00-01  | -019 |
| LAMP-PASSENGER DOOR AND CABIN LIGHT ..... | 33-20-00-01  | -080 |
| LAMP-CARGO DOOR LIGHT .....               | 33-20-00-01  | -087 |
| LAMP-TAIL NAVIGATION .....                | 33-41-00-02  | -007 |
| LAMP ASSY FLASHING BEACON FV001 .....     | 33-43-00-01  | -001 |
| LAMP-JUMP LIGHT .....                     | 52-32-00-02  | -099 |
| LAMP-WING COURTESY LIGHT .....            | 33-45-00-01  | -018 |
| LANDING AND TAXI LIGHT INSTALLATION ..... | 33-40-00-01  | -    |
| LATCH-INDUCTION AIR PANEL .....           | 71-60-01-01  | -179 |
| LATCH ASSY-DOOR RESTRAINT .....           | 25-10-02-01  | -075 |
| LATCH ASSY-DOOR RESTRAINT .....           | 25-10-02-01A | -025 |
| LATCH ASSY-DOOR RESTRAINT .....           | 25-23-02-04  | -092 |
| LATCH ASSY-DOOR RESTRAINT .....           | 25-23-03-01  | -021 |
| LATCH HANDLE .....                        | 25-52-00-02A | -324 |
| LATCH HANDLE .....                        | 25-52-00-02A | -399 |
| LATCH HANDLE ASSY .....                   | 25-52-00-02A | -323 |
| LATCH HANDLE ASSY .....                   | 25-52-00-02A | -398 |
| LATCH MECHANISM - CREW DOOR .....         | 52-10-00-02  | -    |
| LATCH MECHANISM - LOWER CARGO DOOR .....  | 52-31-01-02  | -    |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE | CH | SEC | SUBJ | FIG | ITEM |
|--------------|----|-----|------|-----|------|
|--------------|----|-----|------|-----|------|

L Continued

|  |              |       |
|--|--------------|-------|
| LATCH MECHANISM - LOWER PASSENGER DOOR                 | 52-10-02-02  | -     |
| LATCH MECHANISM - UPPER CARGO DOOR                     | 52-31-00-03  | -     |
| LATCH MECHANISM - UPPER PASSENGER DOOR                 | 52-10-01-02  | -     |
| LED ANTI COLLISION LIGHT FV001                         | 33-43-00-01A | -001  |
| LED LIGHT-LANDING LH FL005                             | 33-40-00-01A | -001  |
| LED LIGHT-LANDING LH FL005                             | 33-40-00-01A | -001A |
| LED LIGHT-LANDING RH FR005                             | 33-40-00-01A | -002  |
| LED LIGHT-LANDING RH FR005                             | 33-40-00-01A | -002A |
| LED LIGHT-TAXI LH FL006                                | 33-40-00-01A | -003  |
| LED LIGHT-TAXI LH FL006                                | 33-40-00-01A | -003A |
| LED LIGHT-TAXI RH FR006                                | 33-40-00-01A | -004  |
| LED LIGHT-TAXI RH FR006                                | 33-40-00-01A | -004A |
| LED PANEL-STANDBY FLAPS UC012                          | 33-10-01-01  | -001  |
| LED PANEL-LH SIDEWALL SWITCHES UC016                   | 33-10-01-01  | -003  |
| LED PANEL-LH SIDEWALL CIRCUIT BREAKERS UC015           | 33-10-01-01  | -005  |
| LED PANEL-THROTTLE UC019                               | 33-10-01-01  | -009  |
| LED PANEL-FUEL SELECTOR WITHOUT OXYGEN UC013           | 33-10-01-01  | -013  |
| LED PANEL-FUEL SELECTOR WITH OXYGEN UC014              | 33-10-01-01  | -015  |
| LED WINGTIP LIGHT-LH FL003                             | 33-41-00-01A | -001  |
| LED WINGTIP LIGHT-RH FR003                             | 33-41-00-01A | -002  |
| LENS-ICE DETECTOR LIGHT                                | 33-44-00-02  | -011  |
| LENS ASSY-LH LANDING AND TAXI LIGHT                    | 33-40-00-01  | -017  |
| LENS ASSY-LH LANDING AND TAXI LIGHT                    | 33-40-00-01  | -018  |
| LENS-JUMP LIGHT AMBER                                  | 52-32-00-02  | -097  |
| LENS-JUMP LIGHT GREEN                                  | 52-32-00-02  | -098  |
| LENS-JUMP LIGHT RED                                    | 52-32-00-02  | -096  |
| LENS-LH  | 33-40-00-01  | -024  |
| LENS-RH  | 33-40-00-01  | -025  |
| LENS-WING NAV LIGHT LH                                 | 33-41-00-01  | -012  |
| LENS-WING NAV LIGHT RH                                 | 33-41-00-01  | -013  |
| LEVEL SENDER   | 30-10-02-06  | -028  |
| LEVEL SENDER   | 30-10-02-07  | -028  |
| LEVEL SWITCH   | 30-10-02-06  | -024  |
| LEVEL SWITCH   | 30-10-02-07  | -024  |
| LEVER-OXYGEN CONTROL                                   | 35-14-00-01  | -029  |
| LEVER-OXYGEN CONTROL                                   | 35-14-00-01  | -174  |
| LIFT TRANSDUCER UL003                                  | 27-31-00-01  | -008  |
| LIGHT ASSY-INDICATOR BATTERY OVERHEAT                  | 33-10-00-02  | -093  |
| LIGHT-FUEL TANK SELECTORS                              | 33-20-00-01  | -016  |
| LIGHT-OXYGEN CONTROL                                   | 33-20-00-01  | -018  |
| LIGHT ASSEMBLY-CABIN ALT FOR B3550                     | 33-20-00-01  | -076B |
| LIGHT ASSY-INDICATOR CHIP DETECTOR                     | 33-10-00-02  | -077  |
| LIGHT ASSY-INDICATOR STDBY ELEC PWR INOP               | 33-10-00-02  | -079  |
| LIGHT ASSY-INDICATOR WINDSHIELD ANTI-ICE               | 33-10-00-02  | -081  |
| LIGHT ASSY-INDICATOR DEICE PRESSURE                    | 33-10-00-02  | -083  |
| LIGHT ASSY-INDICATOR INVERTER INOP                     | 33-10-00-02  | -087  |
| LIGHT ASSY-CIRCUIT BREAKER PANEL                       | 33-10-00-03  | -001  |
| LIGHT ASSY-CARGO DOOR                                  | 33-20-00-01  | -085  |
| LIGHT ASSY-OAT GAGE                                    | 33-20-00-01  | -100  |
| LIGHT ASSY-PASSENGER READING                           | 33-20-00-03  | -002A |
| LIGHT ASSY-WING NAVIGATION AND STROBE LH FSO S3100-526 | 33-41-00-01  | -001  |
| LIGHT ASSY-WING NAVIGATION AND STROBE RH FSO S3100-527 | 33-41-00-01  | -002  |
| LIGHT ASSY-INDICATOR A/P OFF-A/P B.C.                  | 33-10-00-02  | -075  |
| LIGHT ASSY-INDICATOR BATTERY HOT                       | 33-10-00-02  | -095  |
| LIGHT ASSY-INDICATOR BETA                              | 33-10-00-02  | -089  |
| LIGHT ASSY-INDICATOR GENERATOR OVERHEAT                | 33-10-00-02  | -091  |
| LIGHT ASSY-INDICATOR STDBY ELECT PWR ON                | 33-10-00-02  | -085  |
| LIGHT ASSY-LANDING                                     | 33-40-00-01  | -001  |
| LIGHT ASSY-PASSENGER READING                           | 33-20-00-02  | -006  |
| LIGHT ASSY-PRIMARY AND SECONDARY CONSOLE               | 33-20-00-04  | -008  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE | CH | SEC | SUBJ | FIG | ITEM |
|--------------|----|-----|------|-----|------|
|--------------|----|-----|------|-----|------|

**L** Continued

|  |              |       |
|--|--------------|-------|
| LIGHT ASSY-TAIL NAVIGATION .....   | 33-41-00-02  | -001  |
| LIGHT ASSY-TAIL NAVIGATION .....   | 33-41-00-02  | -001A |
| LIGHT ASSY-TAIL NAVIGATION .....   | 33-41-00-02  | -003A |
| LIGHT ASSY-TAXI .....  | 33-40-00-01  | -002  |
| LIGHT SPACER-LH .....  | 33-41-00-01A | -003  |
| LIGHT SPACER-RH .....  | 33-41-00-01A | -004  |
| LINE ASSY .....  | 25-52-00-02A | -020  |
| LINE ASSY .....  | 71-70-00-02  | -025  |
| LINE ASSY .....  | 71-70-00-02  | -037  |
| LINE ASSY .....  | 71-70-00-02  | -038  |
| LINE ASSY-S/G DRAIN .....  | 71-70-00-02  | -088  |
| LINE ASSY .....  | 71-70-00-02  | -110  |
| LINER ASSY-NOSE GEAR SUPPORT .....   | 32-20-00-01  | -236C |
| LOCK ASSY-LH CREW DOOR .....   | 52-10-00-02  | -100  |
| LOCK ASSY-DOOR .....   | 52-10-01-02  | -085  |
| LOCK ASSY-CARGO DOOR .....   | 52-31-00-03  | -033  |
| LOGO-CONTROL WHEEL .....   | 11-N-31-01   | -002  |
| LOGO-CONTROL WHEEL 25TH ANNIVERSARY .....  | 11-N-31-01   | -002C |
| LOGO - CESSNA-EXTERIOR AFT OF CARGO DOOR SUPERCARGOMASTER ALT FOR<br>0505103-1 ..... | 11-N-22-01   | -004  |
| LOGO EXTERIOR 25TH ANV. ....   | 11-N-22-01   | -005  |
| LOGO MASK - CARAVAN .....  | 11-N-23-01   | -012  |
| LORAN C KLN-88 INSTALLATION .....  | 34-55-00-01  | -     |
| LORAN KLN-88 ANTENNA INSTALLATION .....  | 34-55-01-01  | -     |
| LORAN TNL-3000 ANTENNA INSTALLATION .....  | 34-55-03-01  | -     |
| LORAN-C ARNAV R-40 ILS INSTALLATION .....  | 34-30-02-01  | -     |
| LORAN-C R-40 ILS ANTENNA INSTALLATION .....  | 34-30-02-02  | -     |
| LOUVER ASSY-AIR CONDITIONER .....  | 21-51-03-02  | -026  |
| LOW FUEL INDICATOR LIGHT .....   | 28-41-00-01  | -028  |
| LOWER BAND FSO 2650133-23 .....  | 71-60-01-02  | -176  |
| LOWER BAND ASSY FSO 2650133-24 .....   | 71-60-01-02  | -175  |
| LOWER CENTER FUSELAGE STRUCTURE .....  | 53-13-01-01  | -     |
| LOWER CENTER FUSELAGE STRUCTURE .....  | 53-13-01-02  | -     |
| LOWER COWL INSTALLATION .....  | 71-10-00-02  | -     |
| LOWER FORWARD FUSELAGE STRUCTURE .....   | 53-11-00-01  | -     |
| LOWER INSTRUMENT PANEL EQUIPMENT .....   | 24-50-00-01  | -     |

**M**

|   |             |       |
|---|-------------|-------|
| MAIN LANDING GEAR BULKHEAD STRUCTURE .....      | 53-13-03-04 | -     |
| MAIN LANDING GEAR FAIRINGS INSTALLATION .....   | 32-10-01-01 | -     |
| MAIN LANDING GEAR INSTALLATION .....            | 32-10-00-01 | -     |
| MAIN WHEEL BRAKE ASSEMBLY .....                 | 32-40-00-03 | -     |
| MANIFOLD ASSY-DEICE .....                       | 30-10-01-01 | -002  |
| MAP CLIP ASSY .....                             | 27-10-01-05 | -039A |
| MAPLIGHT - CONTROL WHEEL .....                  | 33-10-00-04 | -     |
| MARKER BEACON ANTENNA INSTALLATION .....        | 34-30-01-01 | -     |
| MASK-EXTERIOR .....                             | 11-N-22-01  | -006  |
| MASK-FEDEX .....                                | 11-N-22-01  | -150  |
| MASK-FEDEX FEEDER .....                         | 11-N-22-01  | -151  |
| MASK-EXTERIOR LOGO .....                        | 11-N-23-01  | -007  |
| MASK AND LINE ASSY WITH REGULATOR AND MIC ..... | 35-10-00-05 | -082  |
| MASK AND LINE ASSY WITH REGULATOR AND MIC ..... | 35-10-00-05 | -090  |
| MASK AND LINE ASSY WITH REGULATOR AND MIC ..... | 35-15-00-01 | -007A |
| MASK AND LINE ASSY-PASSENGER .....              | 35-15-00-01 | -002  |
| MASK AND LINE ASSY-PILOT OXYGEN WITH MIC .....  | 35-15-00-01 | -001  |
| MASK-LH FEDEX PROP DANGER .....                 | 11-N-22-01  | -155  |
| MASK-RH FEDEX PROP DANGER .....                 | 11-N-22-01  | -156  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE | CH | SEC | SUBJ | FIG | ITEM |
|--------------|----|-----|------|-----|------|
|--------------|----|-----|------|-----|------|

**M** Continued

|   |              |       |
|---|--------------|-------|
| MASTER CYLINDER ASSY-BRAKE .....  | 32-41-01-01  | -001  |
| METERING PIN ASSY-NOSE GEAR .....                                       | 32-20-00-02  | -021  |
| METERING PIN ASSY-NOSE GEAR FSO 2640318-2 .....                         | 32-20-00-03  | -024  |
| METERING PIN ASSY-NOSE GEAR .....                                       | 32-20-00-03  | -024B |
| MEXICAN EXTERIOR PLACARDS AND MARKINGS - CABIN DOORS .....              | 11-XA-28-01  | -     |
| MEXICAN EXTERIOR PLACARDS AND MARKINGS - COWLING .....                  | 11-XA-24-01  | -     |
| MEXICAN EXTERIOR PLACARDS AND MARKINGS - EMPENNAGE AND REAR BAGGAGE ... | 11-XA-23-01  | -     |
| MEXICAN EXTERIOR PLACARDS AND MARKINGS - FUSELAGE .....                 | 11-XA-22-01  | -     |
| MEXICAN EXTERIOR PLACARDS AND MARKINGS - LANDING GEAR .....             | 11-XA-27-01  | -     |
| MEXICAN EXTERIOR PLACARDS AND MARKINGS - TKS .....                      | 11-XA-22-02  | -     |
| MEXICAN EXTERIOR PLACARDS AND MARKINGS - TKS .....                      | 11-XA-25-02  | -     |
| MEXICAN EXTERIOR PLACARDS AND MARKINGS - WINGS .....                    | 11-XA-25-01  | -     |
| MEXICAN INTERIOR PLACARDS AND MARKINGS - CABIN .....                    | 11-XA-32-01  | -     |
| MEXICAN INTERIOR PLACARDS AND MARKINGS - CABIN DOORS .....              | 11-XA-38-01  | -     |
| MICROPHONE-CVR .....  | 31-30-00-02  | -022  |
| MICROPHONE-CVR .....  | 31-30-00-02A | -024  |
| MICROPHONE .....  | 35-15-00-01  | -010  |
| MICROPHONE INSTALLATION - HANDHELD .....                                | 23-50-02-01  | -     |
| MIXER-MUFFLER ASSY .....  | 21-41-00-01  | -103  |
| MIXER-MUFFLER ASSY .....  | 21-41-00-01  | -107  |
| MODULAR BRUSH ASSY-PROPELLER DEICE .....                                | 30-60-00-01  | -001  |
| MOTOR ASSY-EVAPORATOR .....   | 21-51-03-04  | -009  |
| MOTOR ASSY-EVAPORATOR .....   | 21-51-03-04  | -009A |
| MOTOR ASSY-FLAP ACTUATOR ALT FOR C145-552T SPARE FOR C301002-0104 ..... | 27-50-01-01  | -015A |
| MOTOR-EVAPORATOR BLOWER-LH AND RH .....                                 | 21-51-03-03  | -011A |
| MOUNT .....   | 77-30-00-02  | -004  |
| MOUNT WELD ASSY FSO 2650121-121 .....                                   | 79-20-00-03  | -012  |
| MOUNT WELD ASSY FSO 2650121-121 .....                                   | 79-20-00-03  | -012A |
| MOUNT WELD ASSY .....   | 79-20-00-03  | -012B |
| MOUNTING PLATE .....  | 25-22-00-02  | -002  |
| MOUNTING PLATE-FIRE EXTINGUISHER .....                                  | 26-20-01-03  | -006  |
| MOUNTING PLATE ASSEMBLY .....   | 25-22-00-02  | -001  |
| MOUNTING RACK-GRS 77 AHRS .....   | 34-25-00-01  | -002  |
| MOUNTING RACK-GRS 79 AHRS .....   | 34-25-00-01  | -002A |

**N**

|   |              |       |
|---|--------------|-------|
| NAMEPLATE-AIRCRAFT IDENTIFICATION .....                 | 11-B-22-01   | -001  |
| NAMEPLATE-EXTERIOR AIRCRAFT IDENTIFICATION .....        | 11-B-23-01   | -001  |
| NAMEPLATE-AIRCRAFT IDENTIFICATION .....                 | 11-LQ-22-01  | -008  |
| NAMEPLATE-EXTERIOR AIRCRAFT IDENTIFICATION .....        | 11-LQ-23-01  | -003  |
| NAMEPLATE-AIRCRAFT IDENTIFICATION ALT FOR S2807-1 ..... | 11-N-22-01   | -001  |
| NAMEPLATE-EXTERIOR AIRCRAFT IDENTIFICATION .....        | 11-N-23-01   | -001  |
| NAMEPLATE-OWNER IDENTIFICATION .....                    | 11-N-24-01   | -001  |
| NAMEPLATE-AIRCRAFT IDENTIFICATION .....                 | 11-PP-22-01  | -001  |
| NAMEPLATE-EXTERIOR AIRCRAFT IDENTIFICATION .....        | 11-PP-23-01  | -001  |
| NAMEPLATE-AIRCRAFT IDENTIFICATION .....                 | 11-XA-22-01  | -075  |
| NAMEPLATE-EXTERIOR AIRCRAFT IDENTIFICATION .....        | 11-XA-23-01  | -001  |
| NAMEPLATE-AIR CONDITIONER .....                         | 21-51-01-02  | -006  |
| NAMEPLATE-AIR CONDITIONER .....                         | 21-51-01-02A | -006  |
| NARCO WEATHER RADAR INSTALLATION - TYPE KWX56 .....     | 34-44-00-01  | -     |
| NET ASSY-CARGO BARRIER CTR FSO 2613337-20 .....         | 25-51-01-01  | -020  |
| NET ASSY-CARGO BARRIER SIDE .....                       | 25-51-01-01  | -021  |
| NET ASSY-CARGO BARRIER CTR FSO 2613337-20 .....         | 25-51-01-02  | -022  |
| NET ASSY-CARGO BARRIER CTR SPARES .....                 | 25-51-01-02  | -022A |
| NET ASSY-CARGO BARRIER OUTBD .....                      | 25-51-01-02  | -023  |
| NOSE CAP AND COWL BULKHEAD INSTALLATION .....           | 71-10-01-01  | -     |
| NOSE CAP ASSY-RH .....                                  | 71-10-01-01  | -013  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE | CH | SEC | SUBJ | FIG | ITEM |
|--------------|----|-----|------|-----|------|
|--------------|----|-----|------|-----|------|

**N** Continued

|  |             |       |
|--|-------------|-------|
| NOSE CAP/INDUCTION INLET ASSY-LH .....     | 71-10-01-01 | -001  |
| NOSE GEAR FAIRING PANEL INSTALLATION ..... | 71-10-00-03 | -     |
| NOSE GEAR INSTALLATION .....               | 32-20-00-01 | -     |
| NOSE GEAR SHIMMY DAMPENER ASSEMBLY .....   | 32-20-01-01 | -     |
| NOSE GEAR SHOCK STRUT ASSEMBLY .....       | 32-20-00-02 | -     |
| NOSE GEAR SHOCK STRUT ASSEMBLY .....       | 32-20-00-03 | -     |
| NOSE GEAR STEERING .....                   | 32-50-00-01 | -     |
| NOSE GEAR STRUT ASSY .....                 | 32-20-00-03 | -003A |
| NOZZLE ASSY-DEFROST LH .....               | 21-22-01-01 | -086  |
| NOZZLE ASSY-DEFROST RH .....               | 21-22-01-01 | -088  |
| NOZZLE ASSY-LH DEFROST .....               | 21-22-02-01 | -181  |
| NOZZLE ASSY-RH DEFROST .....               | 21-22-02-01 | -183  |
| NUTPLATE .....                             | 53-15-00-02 | -075  |

**O**

|  |              |       |
|--|--------------|-------|
| OIL BREATHER AND ENGINE DRAINS INSTALLATION .....                    | 71-70-00-01  | -     |
| OIL COOLER ASSY .....  | 79-20-00-01  | -001A |
| OIL COOLER-LARGE .....   | 79-20-00-02  | -001  |
| OIL COOLER .....   | 79-20-00-03  | -001  |
| OIL INDICATING .....   | 79-30-00-01  | -     |
| OIL PRESSURE SWITCH .....  | 79-30-00-01  | -011  |
| OIL PRESSURE SWITCH UN025 .....                                      | 79-30-00-04  | -002  |
| ORIFICE ASSY .....   | 77-11-00-02  | -031  |
| ORIFICE ASSY .....   | 77-11-00-02  | -053  |
| ORIFICE ASSY .....   | 79-30-00-04  | -009  |
| OUTER PANEL .....  | 79-20-00-03  | -117  |
| OUTER PANEL ASSY .....   | 79-20-00-03  | -116  |
| OUTLET ASSY-OVERHEAD VENT AND LIGHT .....                            | 21-21-03-02  | -016  |
| OUTLET ASSY-OVERHEAD VENT AND LIGHT FSO 2615124-71 .....             | 21-21-03-03  | -085  |
| OUTLET ASSY-CABIN HEAT .....   | 21-22-01-01  | -075  |
| OUTLET ASSY-STANDBY ALTERNATOR DRAIN .....                           | 24-36-01-01  | -173  |
| OUTLET ASSY-AIR .....  | 53-22-01-05  | -004A |
| OUTLET ASSY-OXYGEN .....   | 35-13-00-01  | -001  |
| OUTSIDE AIR TEMP GAGE INSTALLATION .....                             | 34-12-00-01  | -     |
| OVERHEAD VENTILATION SYSTEM .....                                    | 21-21-03-01  | -     |
| OVERHEAD VENTILATION SYSTEM - 208 .....                              | 21-21-02-01  | -     |
| OVERHEAD VENTILATION SYSTEM PASSENGER VERSION .....                  | 21-21-03-02  | -     |
| OVERHEAD VENTILATION SYSTEM PASSENGER VERSION .....                  | 21-21-03-03  | -     |
| OVERHEAD VENTILATION SYSTEM WITH AIR CONDITIONING .....              | 21-21-01-03  | -     |
| OVERHEAD VENTILATION SYSTEM WITH AIR CONDITIONING .....              | 21-21-01-04  | -     |
| OVERHEAD VENTILATION SYSTEM WITHOUT AIR CONDITIONING .....           | 21-21-01-01  | -     |
| OVERHEAD VENTILATION SYSTEM WITHOUT AIR CONDITIONING .....           | 21-21-01-02  | -     |
| OVERHEAT SWITCH SN008 .....  | 24-36-02-01A | -001  |
| OXYGEN CONTROL INSTALLATION .....                                    | 35-14-00-01  | -     |
| OXYGEN CYLINDER AND REGULATOR INSTALLATION - 116.95 CUBIC FOOT ..... | 35-01-00-02  | -     |
| OXYGEN CYLINDER AND REGULATOR INSTALLATION - 50.67 CUBIC FOOT .....  | 35-01-00-01  | -     |
| OXYGEN FILLER VALVE INSTALLATION .....                               | 35-11-00-01  | -     |
| OXYGEN FILLER VALVE INSTALLATION .....                               | 35-11-00-02  | -     |
| OXYGEN GAGE ASSY .....   | 35-14-00-01  | -004  |
| OXYGEN MASKS AND LINES .....   | 35-15-00-01  | -     |
| OXYGEN OUTLET VALVE ASSEMBLIES .....                                 | 35-13-00-01  | -     |
| OXYGEN SYSTEM - 10 PORT .....  | 35-10-01-01  | -     |
| OXYGEN SYSTEM - 10 PORT .....  | 35-10-01-02  | -     |
| OXYGEN SYSTEM - 13 PORT PASSENGER VERSION .....                      | 35-10-01-03  | -     |
| OXYGEN SYSTEM - 14 PORT PASSENGER VERSION .....                      | 35-10-01-04  | -     |
| OXYGEN SYSTEM - 2 PORT .....   | 35-10-00-01  | -     |
| OXYGEN SYSTEM - 2 PORT .....   | 35-10-00-02  | -     |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE | CH | SEC | SUBJ | FIG | ITEM |
|--------------|----|-----|------|-----|------|
|--------------|----|-----|------|-----|------|

O Continued

|  |             |   |
|--|-------------|---|
| OXYGEN SYSTEM - 2 PORT .....                   | 35-10-00-03 | - |
| OXYGEN SYSTEM - 2 PORT PASSENGER VERSION ..... | 35-10-00-04 | - |
| OXYGEN SYSTEM - 2 PORT PASSENGER VERSION ..... | 35-10-00-05 | - |

P

|   |              |       |
|---|--------------|-------|
| PAD-ARMREST .....                                     | 52-61-00-01  | -108  |
| PAN ASSY-OIL DRIP .....                               | 27-50-01-01  | -188  |
| PANEL .....   | 25-52-00-02A | -002  |
| PANEL .....   | 53-22-01-05  | -003  |
| PANEL-UPPER .....                                     | 71-60-00-01  | -039A |
| PANEL-RH .....  | 71-60-01-02  | -080  |
| PANEL-UPPER .....                                     | 71-60-01-02  | -088  |
| PANEL ASSEMBLY-LOWER .....                            | 71-60-01-02  | -001  |
| PANEL ASSY-CIRCUIT BREAKER FSO 2613181-19 .....       | 24-50-01-01  | -002  |
| PANEL ASSY-CIRCUIT BREAKER .....                      | 24-50-01-01  | -002A |
| PANEL ASSY-CIRCUIT BREAKER .....                      | 24-50-01-01A | -001  |
| PANEL ASSY-CIRCUIT BREAKER .....                      | 24-50-01-01A | -002  |
| PANEL ASSY-CIRCUIT BREAKER .....                      | 24-50-01-01A | -003  |
| PANEL ASSY-WINDSHIELD ANTI-ICE .....                  | 30-40-00-01  | -002  |
| PANEL ASSY .....                                      | 53-22-01-05  | -105  |
| PANEL ASSY FSO 2613462-13 .....                       | 53-22-01-05  | -106  |
| PANEL ASSY-TKS .....                                  | 53-22-01-05  | -107B |
| PANEL ASSY-AIR INDUCTION PLENUM .....                 | 71-60-01-01  | -013A |
| PANEL ASSY-LOWER LH FSO 2650132-27 .....              | 71-60-01-02  | -017  |
| PANEL ASSY-LOWER LH REF 2650132 .....                 | 71-60-01-02  | -017A |
| PANEL ASSY-LOWER LH .....                             | 71-60-01-02  | -017B |
| PANEL ASSY-RH .....                                   | 71-60-01-02  | -079  |
| PANEL ASSY-UPPER .....                                | 71-60-01-02  | -087  |
| PANEL ASSY-INSTRUMENT .....                           | 53-22-01-05  | -003C |
| PANEL ASSY-LH FLIGHT .....                            | 53-22-01-05  | -006A |
| PANEL ASSY-OIL COOLER AFT LOWER .....                 | 79-20-00-01  | -110  |
| PANEL ASSY-OIL COOLER LOWER FORWARD .....             | 79-20-00-01  | -034  |
| PANEL ASSY-RADIO .....                                | 53-22-01-05  | -022A |
| PANEL ASSY-RH FLIGHT .....                            | 53-22-01-05  | -012A |
| PANEL CLOSEOUT .....                                  | 25-23-00-02  | -039  |
| PANEL CLOSEOUT .....                                  | 25-23-00-03  | -042  |
| PANEL SUPPORT ASSY - LH .....                         | 53-22-01-06  | -084A |
| PANEL SUPPORT ASSY - RH .....                         | 53-22-01-06  | -085A |
| PANEL WELD ASSY .....                                 | 71-60-01-02  | -011  |
| PANEL WELD ASSY .....                                 | 71-60-01-02  | -011A |
| PARKING AND STORAGE EQUIPMENT .....                   | 10-10-00-01  | -     |
| PARKING AND STORAGE EQUIPMENT .....                   | 10-10-00-02  | -     |
| PARKING AND STORAGE EQUIPMENT .....                   | 10-10-00-03  | -     |
| PARKING BRAKE INSTALLATION .....                      | 32-42-00-01  | -     |
| PARTITION ASSY .....                                  | 25-51-02-02  | -002A |
| PARTITION ASSY .....                                  | 25-51-02-02  | -002B |
| PARTITION ASSY .....                                  | 25-51-02-03  | -002A |
| PARTITION ASSY .....                                  | 25-51-02-03  | -002B |
| PARTITION ASSY-CARGO .....                            | 25-51-02-01  | -002A |
| PARTITION ASSY-CARGO .....                            | 25-51-02-01  | -002B |
| PASSENGER AND CARGO DOOR UPHOLSTERY .....             | 25-23-03-01  | -     |
| PASSENGER DOOR AND STEP INSTALLATION - LOWER .....    | 52-10-02-01  | -     |
| PASSENGER DOOR ASSY-LOWER FSO 2617091-36 .....        | 52-10-02-01  | -154  |
| PASSENGER DOOR ASSY-LOWER FSO 2617091-36 .....        | 52-10-02-01  | -154A |
| PASSENGER DOOR INSTALLATION - UPPER .....             | 52-10-01-01  | -     |
| PASSENGER DOOR JAMB STRUCTURE PASSENGER VERSION ..... | 53-13-02-02  | -     |
| PASSENGER READING LIGHT INSTALLATION .....            | 33-20-00-02  | -     |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE | CH | SEC | SUBJ | FIG | ITEM |
|--------------|----|-----|------|-----|------|
|--------------|----|-----|------|-----|------|

**P** Continued

|  |              |       |
|--|--------------|-------|
| PASSENGER READING LIGHT INSTALLATION . . . . .               | 33-20-00-03  | -     |
| PASSENGER SEAT UPHOLSTERY AND STRUCTURE ASSEMBLY . . . . .   | 25-21-00-02A | -     |
| PEDESTAL ASSEMBLY - PILOT AND COPILOT SEAT . . . . .         | 25-10-00-03  | -     |
| PEDESTAL STRUCTURE . . . . .                                 | 53-22-00-01  | -     |
| PILOT AND COPILOT DOOR UPHOLSTERY . . . . .                  | 25-10-02-01  | -     |
| PILOT AND COPILOT DOOR UPHOLSTERY . . . . .                  | 25-10-02-01A | -     |
| PITCH ACTUATOR INSTALLATION . . . . .                        | 27-30-01-02  | -     |
| PITCH SERVO INSTALLATION . . . . .                           | 22-10-04-01A | -     |
| PITCH SERVO INSTALLATION - KING AUTOPILOT . . . . .          | 22-10-04-01  | -     |
| PITCH TRIM ACTUATOR INSTALLATION - KING AUTOPILOT . . . . .  | 27-30-03-02  | -     |
| PITCH TRIM SERVO INSTALLATION . . . . .                      | 27-30-03-02A | -     |
| PITOT SYSTEM - RH FLIGHT PANEL . . . . .                     | 34-11-01-01  | -     |
| PITOT TUBE-STATIC HEATED FSO S2625-4 . . . . .               | 34-11-02-01  | -013  |
| PITOT TUBE-STATIC HEATED . . . . .                           | 34-11-02-01  | -013A |
| PITOT TUBE INSTALLATION . . . . .                            | 34-11-02-01  | -     |
| PITOT/STATIC SYSTEM-RERER TO NOTE 1 . . . . .                | 34-11-00-01  | -     |
| PLACARD-ELT SWITCH OPERATION . . . . .                       | 11-F-32-01   | -001  |
| PLACARD-RUDDER GUSTLOCK BLACK LETTERING . . . . .            | 11-LQ-23-01  | -001  |
| PLACARD-WARNING CARGO DOOR . . . . .                         | 11-N-22-01   | -154  |
| PLACARD-TKS OPERATIONS LIMIT . . . . .                       | 11-N-22-02   | -076  |
| PLACARD-STANDBY ALTERNATOR . . . . .                         | 11-N-24-01   | -003  |
| PLACARD-LOAD SHED CENTRAL . . . . .                          | 11-N-24-01   | -004  |
| PLACARD-ALTERNATOR CONTROL UNIT . . . . .                    | 11-N-24-01   | -007  |
| PLACARD-ALTERNATOR CONTROL UNIT . . . . .                    | 11-N-24-01   | -007A |
| PLACARD-PRESSURIZED OIL TANK . . . . .                       | 11-N-24-01   | -008  |
| PLACARD-ENGINE OIL CAPACITY . . . . .                        | 11-N-24-01   | -009  |
| PLACARD-GENERATOR CONTACTOR . . . . .                        | 11-N-24-01   | -012  |
| PLACARD-BATTERY CONTACTOR . . . . .                          | 11-N-24-01   | -013  |
| PLACARD-EXTERNAL POWER CONTACTOR . . . . .                   | 11-N-24-01   | -075  |
| PLACARD-EXTERNAL START CONTACTOR . . . . .                   | 11-N-24-01   | -076  |
| PLACARD-GROUND POWER MONITOR . . . . .                       | 11-N-24-01   | -077  |
| PLACARD-INTERNAL START CONTACTOR . . . . .                   | 11-N-24-01   | -078  |
| PLACARD-STATIC SOURCE DRAIN VALVE ZONE . . . . .             | 11-N-24-01   | -083  |
| PLACARD-RELAY BOX . . . . .                                  | 11-N-24-01   | -150  |
| PLACARD-RELAY BOX . . . . .                                  | 11-N-24-01   | -151  |
| PLACARD-OPERATIONAL LIMITATIONS VFR FSO 0505087-40 . . . . . | 11-N-31-01   | -003  |
| PLACARD-OPERATIONAL LIMITATIONS IFR FSO 0505087-41 . . . . . | 11-N-31-01   | -004  |
| PLACARD-OPERATIONAL LIMITATIONS KNOWN ICING . . . . .        | 11-N-31-01   | -005  |
| PLACARD-OPERATIONAL LIMITATIONS KNOWN ICING . . . . .        | 11-N-31-01   | -006  |
| PLACARD-MAP LIGHT . . . . .                                  | 11-N-31-01   | -008  |
| PLACARD-ALTERNATE STATIC SOURCE . . . . .                    | 11-N-31-01   | -009  |
| PLACARD-ALTERNATE STATIC SOURCE . . . . .                    | 11-N-31-01   | -009A |
| PLACARD-PEDESTAL CABIN HEAT . . . . .                        | 11-N-31-01   | -010  |
| PLACARD-BAGGAGE SHELVES . . . . .                            | 11-N-31-01   | -076  |
| PLACARD-FIRE DETECT . . . . .                                | 11-N-31-01   | -077  |
| PLACARD-AMMETER . . . . .                                    | 11-N-31-01   | -078  |
| PLACARD-MAXIMUM AIRSPEED . . . . .                           | 11-N-31-01   | -079  |
| PLACARD-MANEUVER SPEED . . . . .                             | 11-N-31-01   | -080  |
| PLACARD-ALTERNATE STATIC SOURCE . . . . .                    | 11-N-31-01   | -081  |
| PLACARD-SENSOR SYSTEM POWER ON . . . . .                     | 11-N-31-01   | -082  |
| PLACARD-OFF . . . . .  | 11-N-31-01   | -083  |
| PLACARD-TIRE PRESSURE . . . . .                              | 11-N-31-01   | -151A |
| PLACARD-TIRE PRESSURE . . . . .                              | 11-N-31-01   | -152  |
| PLACARD-208B TIRE PRESSURE . . . . .                         | 11-N-31-01   | -153  |
| PLACARD-PEDESTAL RUDDER TRIM . . . . .                       | 11-N-31-01   | -154  |
| PLACARD-PEDESTAL RUDDER TRIM . . . . .                       | 11-N-31-01   | -155  |
| PLACARD-VERIFY FUEL SELECTOR ON . . . . .                    | 11-N-31-01   | -156  |
| PLACARD-COMPASS DEV WITH AIR CONDITIONING . . . . .          | 11-N-31-01   | -157  |
| PLACARD-COMPASS DEV WITH ANTI-ICE PANEL . . . . .            | 11-N-31-01   | -158  |
| PLACARD-TORQUE SETTING WITH AIR CONDITIONING . . . . .       | 11-N-31-01   | -225  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE   | CH         | SEC | SUBJ | FIG | ITEM  |
|--|------------|-----|------|-----|-------|
| <b>P</b> Continued   |            |     |      |     |       |
| PLACARD-TORQUE SETTING 675 SHP WITH AIR CONDITIONING ..... | 11-N-31-01 |     |      |     | -226  |
| PLACARD-TORQUE SETTING 675 SHP WITH AIR CONDITIONING ..... | 11-N-31-01 |     |      |     | -227  |
| PLACARD-TORQUE SETTING 867 SHP WITH AIR CONDITIONING ..... | 11-N-31-01 |     |      |     | -227A |
| PLACARD-RUDDER LOCK PULL .....                             | 11-N-31-01 |     |      |     | -228  |
| PLACARD-FUEL CONTAMINATION WARNING .....                   | 11-N-31-01 |     |      |     | -229  |
| PLACARD-SEAT STOP LATCH WARNING .....                      | 11-N-31-01 |     |      |     | -230  |
| PLACARD-PHONE BLACK LETTERS .....                          | 11-N-31-01 |     |      |     | -232  |
| PLACARD-MIC BLACK LETTERS .....                            | 11-N-31-01 |     |      |     | -234  |
| PLACARD-MIC AND PHONE .....                                | 11-N-31-01 |     |      |     | -235  |
| PLACARD-MIC AND PHONE .....                                | 11-N-31-01 |     |      |     | -235A |
| PLACARD-AUXILIARY INPUT .....                              | 11-N-31-01 |     |      |     | -236  |
| PLACARD-NAV 1/NAV 2/RMI .....                              | 11-N-31-01 |     |      |     | -237  |
| PLACARD-A/P ROLL TRIM .....                                | 11-N-31-01 |     |      |     | -238  |
| PLACARD-LOCK .....   | 11-N-31-01 |     |      |     | -239  |
| PLACARD-600 SHP .....                                      | 11-N-31-01 |     |      |     | -240  |
| PLACARD-675 SHP .....                                      | 11-N-31-01 |     |      |     | -241  |
| PLACARD-LOW VACUUM .....                                   | 11-N-31-01 |     |      |     | -300  |
| PLACARD-STANDBY FLAP MOTOR .....                           | 11-N-31-01 |     |      |     | -301  |
| PLACARD-CAUTION CARGO DOOR .....                           | 11-N-31-01 |     |      |     | -302  |
| PLACARD-OPERATING SPEED CARGO DOOR .....                   | 11-N-31-01 |     |      |     | -303  |
| PLACARD-AIR CONDITIONING .....                             | 11-N-31-01 |     |      |     | -304  |
| PLACARD-LIGHTS BRT .....                                   | 11-N-31-01 |     |      |     | -305  |
| PLACARD-CABIN HEAT .....                                   | 11-N-31-01 |     |      |     | -306  |
| PLACARD-OVERSPEED GOVERNOR .....                           | 11-N-31-01 |     |      |     | -375  |
| PLACARD-PARKING BRAKE .....                                | 11-N-31-01 |     |      |     | -376  |
| PLACARD-VENT .....   | 11-N-31-01 |     |      |     | -377  |
| PLACARD-ALT STATIC AIR .....                               | 11-N-31-01 |     |      |     | -378  |
| PLACARD-DEICE/ANTI-ICE .....                               | 11-N-31-01 |     |      |     | -380  |
| PLACARD-INERTIAL SEPARATOR .....                           | 11-N-31-01 |     |      |     | -381  |
| PLACARD-RPM 600 SHP .....                                  | 11-N-31-01 |     |      |     | -382  |
| PLACARD-LIGHTS .....                                       | 11-N-31-01 |     |      |     | -383  |
| PLACARD-DEICE .....  | 11-N-31-01 |     |      |     | -384  |
| PLACARD-POWER SOURCE .....                                 | 11-N-31-01 |     |      |     | -385  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -450  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -451  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -452  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -452A |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -453  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -454  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -454A |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -455  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -456  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -457  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -458  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -459  |
| PLACARD-CIRCUIT BREAKER PANEL CAT II AIRPLANES .....       | 11-N-31-01 |     |      |     | -460  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -461  |
| PLACARD-CIRCUIT BREAKER PANEL CAT II AIRPLANES .....       | 11-N-31-01 |     |      |     | -462  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -525  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -526  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -527  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -528  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -529  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -529A |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -530  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -531  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -532  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -533  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -534  |
| PLACARD-CIRCUIT BREAKER PANEL .....                        | 11-N-31-01 |     |      |     | -535  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE | CH | SEC | SUBJ | FIG | ITEM |
|--------------|----|-----|------|-----|------|
|--------------|----|-----|------|-----|------|

**P** Continued

|  |             |  |  |  |       |
|--|-------------|--|--|--|-------|
| PLACARD-CIRCUIT BREAKER PANEL .....                                  | 11-N-31-01  |  |  |  | -535A |
| PLACARD-CIRCUIT BREAKER PANEL .....                                  | 11-N-31-01  |  |  |  | -536  |
| PLACARD-CIRCUIT BREAKER PANEL CAT II AIRPLANES .....                 | 11-N-31-01  |  |  |  | -537  |
| PLACARD-CIRCUIT BREAKER PANEL .....                                  | 11-N-31-01  |  |  |  | -538  |
| PLACARD-CIRCUIT BREAKER PANEL .....                                  | 11-N-31-01  |  |  |  | -539  |
| PLACARD-CIRCUIT BREAKER PANEL .....                                  | 11-N-31-01  |  |  |  | -540  |
| PLACARD-CIRCUIT BREAKER PANEL .....                                  | 11-N-31-01  |  |  |  | -541  |
| PLACARD-CIRCUIT BREAKER PANEL .....                                  | 11-N-31-01  |  |  |  | -542  |
| PLACARD-CIRCUIT BREAKER PANEL .....                                  | 11-N-31-01  |  |  |  | -600  |
| PLACARD-CIRCUIT BREAKER PANEL CAT II AIRPLANES .....                 | 11-N-31-01  |  |  |  | -601  |
| PLACARD-CIRCUIT BREAKER PANEL .....                                  | 11-N-31-01  |  |  |  | -602  |
| PLACARD-CIRCUIT BREAKER PANEL .....                                  | 11-N-31-01  |  |  |  | -603  |
| PLACARD-CIRCUIT BREAKER PANEL .....                                  | 11-N-31-01  |  |  |  | -604  |
| PLACARD-CIRCUIT BREAKER PANEL CAT II AIRPLANES .....                 | 11-N-31-01  |  |  |  | -605  |
| PLACARD-CIRCUIT BREAKER PANEL .....                                  | 11-N-31-01  |  |  |  | -606  |
| PLACARD-CIRCUIT BREAKER PANEL WITH FDR/CVR .....                     | 11-N-31-01  |  |  |  | -607  |
| PLACARD-CIRCUIT BREAKER PANEL WITH FDR/CVR .....                     | 11-N-31-01  |  |  |  | -608  |
| PLACARD-CIRCUIT BREAKER PANEL .....                                  | 11-N-31-01  |  |  |  | -675  |
| PLACARD-TKS OPERATION LIMITS .....                                   | 11-N-31-02  |  |  |  | -075  |
| PLACARD-ICING CONDITIONS IN FLIGHT FSO 2605084-3 .....               | 11-N-31-02  |  |  |  | -076  |
| PLACARD-WINDSHIELD ANTI-ICE OFF .....                                | 11-N-31-02  |  |  |  | -077  |
| PLACARD-BAGGAGE COMPARTMENT .....                                    | 11-N-32-01  |  |  |  | -001  |
| PLACARD-PARTITION NET .....  | 11-N-32-01  |  |  |  | -005  |
| PLACARD-PARTITION NET .....  | 11-N-32-01  |  |  |  | -006  |
| PLACARD-WARNING CARGO DOOR .....                                     | 11-N-32-01  |  |  |  | -007  |
| PLACARD-UPPER CARGO DOOR .....                                       | 11-N-38-01  |  |  |  | -001  |
| PLACARD-UPPER PASSENGER DOOR .....                                   | 11-N-38-01  |  |  |  | -002  |
| PLACARD-LH CREW DOOR .....   | 11-N-38-01  |  |  |  | -003  |
| PLACARD-RH CREW DOOR .....   | 11-N-38-01  |  |  |  | -004  |
| PLACARD-LOCK OPERATION .....   | 11-N-38-01  |  |  |  | -005  |
| PLACARD-LOCK OVERRIDE .....  | 11-N-38-01  |  |  |  | -007  |
| PLACARD-LWR CARGO DOOR .....   | 11-N-38-01  |  |  |  | -075  |
| PLACARD-LWR PASSENGER DOOR .....                                     | 11-N-38-01  |  |  |  | -076  |
| PLACARD-GAS SPRING .....   | 11-N-38-01  |  |  |  | -079  |
| PLACARD-GAS SPRING .....   | 11-N-38-01  |  |  |  | -079A |
| PLACARD-UPPER CARGO DOOR FSO 2605062-12 .....                        | 11-PP-38-01 |  |  |  | -001  |
| PLACARD-UPPER PASSENGER DOOR FSO 2605062-13 .....                    | 11-PP-38-01 |  |  |  | -002  |
| PLACARD-LH CREW DOOR FSO 2605062-14 .....                            | 11-PP-38-01 |  |  |  | -003  |
| PLACARD-TKS FILLER CAP .....   | 11-XA-22-02 |  |  |  | -001  |
| PLACARD-TKS OPERATION LIMIT .....                                    | 11-XA-22-02 |  |  |  | -002  |
| PLACARD-SERIAL AND PART NUMBER .....                                 | 32-20-00-01 |  |  |  | -237  |
| PLACARD - ELT LOCATION BLACK LETTERS FSO S4526-1 .....               | 11-N-23-01  |  |  |  | -003  |
| PLACARD - ELT LOCATION BLACK LETTERS SPARES .....                    | 11-N-23-01  |  |  |  | -003A |
| PLACARD ASSY-BRAKE FLUID RESERVOIR .....                             | 11-N-24-01  |  |  |  | -002  |
| PLACARD ASSY-RUDDER LOCK FSO S3815-2 .....                           | 11-N-24-01  |  |  |  | -005  |
| PLACARD ASSY-FUEL CAPACITY OUTBD FUEL FILLER FSO S3723-16 .....      | 11-N-25-01  |  |  |  | -004  |
| PLACARD ASSY-FUEL CAPACITY INBD FUEL FILLER FSO S3723-9 .....        | 11-N-25-01  |  |  |  | -006  |
| PLACARD ASSY-RUDDER LOCK CAUTION FSO S3815-2 .....                   | 11-N-27-01  |  |  |  | -002  |
| PLACARD ASSY-TOW LIMIT WARNING FSO S3815-3 .....                     | 11-N-27-01  |  |  |  | -005  |
| PLACARD ASSY-TUG TOW FSO S3815-4 .....                               | 11-N-27-01  |  |  |  | -006  |
| PLACARD ASSY-CARGO DOOR BLACK LETTERS FSO S3814-4 .....              | 11-N-28-01  |  |  |  | -001  |
| PLACARD ASSY-CARGO DOOR WHITE LETTERS FSO S3814-4 .....              | 11-N-28-01  |  |  |  | -003  |
| PLACARD ASSY-UPR HALF PASSENGER DOOR BLACK LETTERS FSO S3814-5 ..... | 11-N-28-01  |  |  |  | -004  |
| PLACARD ASSY-PASSENGER DOOR WHITE LETTERS FSO S3814-5 .....          | 11-N-28-01  |  |  |  | -006  |
| PLACARD ASSY-LH CREW DOOR BLACK LETTERS FSO S3814-6 .....            | 11-N-28-01  |  |  |  | -007  |
| PLACARD ASSY-LH CREW DOOR WHITE LETTERS FSO S3814-6 .....            | 11-N-28-01  |  |  |  | -009  |
| PLACARD ASSY-RH CREW DOOR BLACK LETTERS FSO S3814-7 .....            | 11-N-28-01  |  |  |  | -010  |
| PLACARD ASSY-RH CREW DOOR WHITE LETTERS FSO S3814-7 .....            | 11-N-28-01  |  |  |  | -012  |
| PLACARD ASSY-LOWER PASSENGER DOOR BLACK LETTER FSO S3814-3 .....     | 11-N-28-01  |  |  |  | -013  |
| PLACARD ASSY-LOWER PASSENGER DOOR WHITE LETTER FSO S3814-3 .....     | 11-N-28-01  |  |  |  | -015  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE   | CH SEC SUBJ FIG | ITEM  |
|--|-----------------|-------|
| <b>P</b> Continued                                       |                 |       |
| PLACARD ASSY-CARGO DOOR BLACK LETTERS FSO S3814-8        | 11-N-28-01      | -075  |
| PLACARD ASSY-LOCK OPERATION                              | 11-N-38-01      | -006  |
| PLACARD ASSY-LOCK OVERRIDE                               | 11-N-38-01      | -008  |
| PLACARD ASSY-LWR PASSENGER DOOR FSO S3814-3              | 11-N-38-01      | -077  |
| PLACARD ASSY-FWD CARGO COMPARTMENT FSO 2605062-42        | 11-PP-22-01     | -002  |
| PLACARD ASSY-FWD CARGO COMPARTMENT FSO 2605062-6         | 11-PP-22-02     | -003  |
| PLACARD ASSY-EXTERNAL POWER FSO 2605062-23               | 11-PP-24-01     | -001  |
| PLACARD ASSY-FUEL FILTER FSO 2605062-22                  | 11-PP-24-01     | -002  |
| PLACARD ASSY-FUEL FILL CAPACITY INBD FSO 2605062-28      | 11-PP-25-01     | -001  |
| PLACARD ASSY-FUEL FILL CAPACITY OUTBD FSO 2605062-50     | 11-PP-25-01     | -002  |
| PLACARD ASSY-TURN LIMIT FSO 2605062-24                   | 11-PP-27-01     | -001  |
| PLACARD ASSY-ON SIDE OF NOSE LANDING GEAR FSO 2605062-32 | 11-PP-27-01     | -004  |
| PLACARD ASSY-PASSENGER DOOR FSO 2605062-48               | 11-PP-28-01     | -001  |
| PLACARD ASSY-LH CREW DOOR FSO 2605062-47                 | 11-PP-28-01     | -002  |
| PLACARD ASSY BAGGAGE COMPARTMENT FSO 2605062-49          | 11-PP-32-01     | -001  |
| PLACARD ASSY-ELT SWITCH OPERATION FSO 2605062-31         | 11-PP-32-01     | -002  |
| PLACARD ASSY-ELT FSO 2605062-21                          | 11-PP-32-01     | -003  |
| PLACARD ASSY-OXYGEN FILLER DOOR FSO S3816-3              | 11-N-23-01      | -005  |
| PLACARD ASSY-AFT COMPARTMENT ZONE 924                    | 11-N-22-01      | -083  |
| PLACARD ASSY-BATTERY BOX                                 | 11-N-24-01      | -084  |
| PLACARD ASSY-BATTERY                                     | 11-XA-24-01     | -007  |
| PLACARD ASSY-BRAKE FLUID RESERVOIR                       | 11-LQ-24-01     | -004  |
| PLACARD ASSY-BRAKE FLUID RESERVOIR                       | 11-XA-24-01     | -003  |
| PLACARD ASSY-CTR-FWD COMPARTMENT ZONE 922 AND 923        | 11-N-22-01      | -081  |
| PLACARD ASSY-DOOR LOCKED FSO S3814-2                     | 11-N-22-01      | -077  |
| PLACARD ASSY-DOOR OPEN FSO S3814-1                       | 11-N-22-01      | -075  |
| PLACARD ASSY-DOOR WARNING LOWER PASSENGER                | 11-XA-38-01     | -076  |
| PLACARD ASSY-ELT LOCATION                                | 11-XA-23-01     | -002  |
| PLACARD ASSY-EPA CAN                                     | 11-XA-24-01     | -006  |
| PLACARD ASSY-EXIT SIGN                                   | 11-LQ-38-01     | -076  |
| PLACARD ASSY-EXTERNAL POWER                              | 11-B-24-01      | -005  |
| PLACARD ASSY-EXTERNAL POWER                              | 11-XA-24-01     | -001  |
| PLACARD ASSY-FLUX VALVE FSO S3816-5                      | 11-N-25-01      | -001  |
| PLACARD ASSY-FLUX VALVE                                  | 11-XA-25-01     | -003  |
| PLACARD ASSY-FUEL CAP INBOARD                            | 11-LQ-25-01     | -001  |
| PLACARD ASSY-FUEL CAP OUTBOARD                           | 11-LQ-25-01     | -003  |
| PLACARD ASSY-FUEL FILTER FSO S3816-4                     | 11-N-24-01      | -081  |
| PLACARD ASSY-FUEL FILTER                                 | 11-XA-24-01     | -005  |
| PLACARD ASSY-FWD COMPARTMENT ZONE 921                    | 11-N-22-01      | -079  |
| PLACARD ASSY-JET A FUEL                                  | 11-XA-25-01     | -002  |
| PLACARD ASSY-JET FUEL                                    | 11-XA-25-01     | -001  |
| PLACARD ASSY-LH CREW DOOR                                | 11-LQ-38-01     | -001  |
| PLACARD ASSY-LH CREW DOOR                                | 11-XA-28-01     | -001  |
| PLACARD ASSY-LOCK OPERATION                              | 11-XA-38-01     | -004  |
| PLACARD ASSY-LOCK OVERRIDE                               | 11-XA-38-01     | -002  |
| PLACARD ASSY-LOWER PASSENGER DOOR                        | 11-XA-28-01     | -005  |
| PLACARD ASSY-LOWER PASSENGER DOOR WARNING                | 11-B-38-01      | -154  |
| PLACARD ASSY-LOWER PASSENGER DOOR WARNING                | 11-B-38-01      | -154A |
| PLACARD ASSY-OXYGEN FILL DOOR                            | 11-XA-23-01     | -003  |
| PLACARD ASSY-PASSENGER DOOR                              | 11-XA-28-01     | -004  |
| PLACARD ASSY-POD DOOR LOCKED FWD, CENTER, AFT 208        | 11-XA-22-01     | -007  |
| PLACARD ASSY-RH CREW DOOR                                | 11-LQ-38-01     | -003  |
| PLACARD ASSY-RH CREW DOOR                                | 11-XA-28-01     | -002  |
| PLACARD ASSY-RUDDER LOCK                                 | 11-XA-23-01     | -004  |
| PLACARD ASSY-RUDDER LOCK CAUTION                         | 11-XA-27-01     | -003  |
| PLACARD ASSY-TOW LIMIT                                   | 11-XA-27-01     | -002  |
| PLACARD ASSY-TUG TOW                                     | 11-XA-27-01     | -001  |
| PLACARD ASSY-UPPER CARGO DOOR                            | 11-XA-28-01     | -003  |
| PLACARD LOCATIONS  | 11-00-00-01     | -     |
| PLACARD SET-COMPASS CORRECTION                           | 11-N-31-01      | -075  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE   | CH          | SEC | SUBJ | FIG | ITEM  |
|--|-------------|-----|------|-----|-------|
| <b>P</b> Continued   |             |     |      |     |       |
| PLACARD-A JET FUEL ONLY . . . . .                                | 11-N-25-01  |     |      |     | -008  |
| PLACARD-AIR CONDITIONING . . . . .                               | 11-G-31-01  |     |      |     | -006  |
| PLACARD-AIR DEFLECTOR UPPER CABIN DOOR . . . . .                 | 11-B-38-01  |     |      |     | -153  |
| PLACARD-AIR DEFLECTOR UPPER CABIN DOOR . . . . .                 | 11-B-38-01  |     |      |     | -153A |
| PLACARD-AIRSTAIR DOOR USED WITH INFLIGHT MOVEABLE DOOR . . . . . | 11-N-22-01  |     |      |     | -153  |
| PLACARD-AIRSTAIR DOOR . . . . .                                  | 11-N-38-01  |     |      |     | -080  |
| PLACARD-CAA-SEAT POSITION . . . . .                              | 11-G-38-01  |     |      |     | -001  |
| PLACARD-CABIN LIGHTS . . . . .                                   | 11-B-32-01  |     |      |     | -003  |
| PLACARD-DOOR OPERATION . . . . .                                 | 11-B-38-01  |     |      |     | -004  |
| PLACARD-DOOR OPERATION . . . . .                                 | 11-XA-38-01 |     |      |     | -001  |
| PLACARD-DOOR OPERATION . . . . .                                 | 11-XA-38-01 |     |      |     | -003  |
| PLACARD-DOOR OPERATION LOWER CARGO DOOR . . . . .                | 11-XA-38-01 |     |      |     | -005  |
| PLACARD-DOOR OPERATION LOWER PASSENGER . . . . .                 | 11-XA-38-01 |     |      |     | -077  |
| PLACARD-DOOR OPERATION UPPER CARGO DOOR . . . . .                | 11-XA-38-01 |     |      |     | -006  |
| PLACARD-DOOR OPERATION UPPER PASSENGER . . . . .                 | 11-XA-38-01 |     |      |     | -075  |
| PLACARD-ELT FSO 1205085-10 . . . . .                             | 11-N-32-01  |     |      |     | -003  |
| PLACARD-ELT FSO 1205085-10 . . . . .                             | 11-N-32-01  |     |      |     | -004  |
| PLACARD-ELT . . . . .  | 11-N-32-01  |     |      |     | -004A |
| PLACARD-ELT . . . . .  | 11-XA-32-01 |     |      |     | -001  |
| PLACARD-ELT . . . . .  | 11-XA-32-01 |     |      |     | -003  |
| PLACARD-ELT LOCATION . . . . .                                   | 11-B-32-01  |     |      |     | -011  |
| PLACARD-ELT POSITION . . . . .                                   | 11-XA-32-01 |     |      |     | -002  |
| PLACARD-ELT SWITCH . . . . .                                     | 11-B-32-01  |     |      |     | -006  |
| PLACARD-ELT SWITCH OPERATION . . . . .                           | 11-N-32-01  |     |      |     | -002  |
| PLACARD-EMERGENCY DOOR EXIT . . . . .                            | 11-LQ-28-01 |     |      |     | -076  |
| PLACARD-EMERGENCY DOOR OPEN . . . . .                            | 11-LQ-28-01 |     |      |     | -077  |
| PLACARD-EMERGENCY DOOR PUSH . . . . .                            | 11-LQ-28-01 |     |      |     | -075  |
| PLACARD-EMERGENCY EXIT DOOR . . . . .                            | 11-B-38-01  |     |      |     | -078  |
| PLACARD-EMERGENCY LOCATOR . . . . .                              | 11-B-32-01  |     |      |     | -005  |
| PLACARD-EMERGENCY LOCATOR . . . . .                              | 11-B-32-01  |     |      |     | -010  |
| PLACARD-EMERGENCY OPEN DOOR . . . . .                            | 11-B-38-01  |     |      |     | -079  |
| PLACARD-EMERGENCY PUSH DOOR . . . . .                            | 11-B-38-01  |     |      |     | -080  |
| PLACARD-ENGINE OIL CAPACITY . . . . .                            | 11-B-24-01  |     |      |     | -004  |
| PLACARD-ENGINE OIL CAPACITY . . . . .                            | 11-XA-24-01 |     |      |     | -002  |
| PLACARD-EPA CAN WHITE LETTERING . . . . .                        | 11-N-24-01  |     |      |     | -010  |
| PLACARD-EPA CAN BLACK LETTERING . . . . .                        | 11-N-24-01  |     |      |     | -011  |
| PLACARD-EXIT SIGN ASSY . . . . .                                 | 11-B-38-01  |     |      |     | -077  |
| PLACARD-EXIT SIGN ASSY- . . . . .                                | 11-B-38-01  |     |      |     | -077A |
| PLACARD-EXTERNAL POWER FSO S3816-2 . . . . .                     | 11-N-24-01  |     |      |     | -079  |
| PLACARD-FUEL . . . . .   | 11-G-31-01  |     |      |     | -004  |
| PLACARD-GAS SPRING DISPOSAL PROCEDURE . . . . .                  | 11-XA-38-01 |     |      |     | -007  |
| PLACARD-JET FUEL . . . . .                                       | 11-LQ-25-01 |     |      |     | -004  |
| PLACARD-LH CREW DOOR . . . . .                                   | 11-B-38-01  |     |      |     | -001  |
| PLACARD-LH CREW DOOR . . . . .                                   | 11-LQ-28-01 |     |      |     | -001  |
| PLACARD-LH CREW DOOR . . . . .                                   | 11-LQ-38-01 |     |      |     | -002  |
| PLACARD-LIFE VEST . . . . .                                      | 11-B-32-01  |     |      |     | -009  |
| PLACARD-LIFE VEST . . . . .                                      | 11-B-32-01  |     |      |     | -009A |
| PLACARD-LIGHT SWITCH . . . . .                                   | 11-B-32-01  |     |      |     | -001  |
| PLACARD-LOAD LIMITS . . . . .                                    | 11-B-32-01  |     |      |     | -007  |
| PLACARD-LOCK OVERRIDE . . . . .                                  | 11-B-38-01  |     |      |     | -002  |
| PLACARD-LOWER DOOR . . . . .                                     | 11-LQ-38-01 |     |      |     | -006  |
| PLACARD-LOWER PASSENGER DOOR . . . . .                           | 11-B-38-01  |     |      |     | -151  |
| PLACARD-LOWER PASSENGER DOOR . . . . .                           | 11-B-38-01  |     |      |     | -152  |
| PLACARD-LOWER PASSENGER DOOR . . . . .                           | 11-LQ-38-01 |     |      |     | -077  |
| PLACARD-LOWER PASSENGER DOOR . . . . .                           | 11-LQ-38-01 |     |      |     | -078  |
| PLACARD-LWR CARGO DOOR . . . . .                                 | 11-B-38-01  |     |      |     | -076  |
| PLACARD-MAGNETIC COMPASS . . . . .                               | 11-G-31-01  |     |      |     | -005  |
| PLACARD-MANEUVER SPEED . . . . .                                 | 11-N-31-01  |     |      |     | -379  |
| PLACARD-MIC WHITE LETTERS . . . . .                              | 11-N-31-01  |     |      |     | -233  |
| PLACARD-OIL TANK . . . . .                                       | 11-LQ-24-01 |     |      |     | -003  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE  | CH SEC SUBJ FIG | ITEM  |
|---|-----------------|-------|
| <b>P</b> Continued  |                 |       |
| PLACARD-OIL TANK .....  | 11-XA-24-01     | -004  |
| PLACARD-OPERATIONAL LIMITATIONS IFR .....   | 11-G-31-01      | -002  |
| PLACARD-OPERATIONAL LIMITATIONS KNOWN ICING .....                                     | 11-G-31-01      | -003  |
| PLACARD-OPERATIONAL LIMITATIONS VFR .....   | 11-G-31-01      | -001  |
| PLACARD-OXYGEN FILL DOOR .....  | 11-LQ-28-01     | -005  |
| PLACARD-PASSENGER DOOR .....  | 11-LQ-28-01     | -004  |
| PLACARD-PHO NE WHITE LETTERS .....  | 11-N-31-01      | -231  |
| PLACARD-POD DOOR LOCKED .....   | 11-LQ-22-01     | -002  |
| PLACARD-POD DOOR OPEN .....   | 11-LQ-22-01     | -001  |
| PLACARD-RH CREW DOOR .....  | 11-B-38-01      | -003  |
| PLACARD-RH CREW DOOR .....  | 11-LQ-38-01     | -004  |
| PLACARD-RUDDER GUST LOCK FSO S4498-9 .....  | 11-N-23-01      | -009  |
| PLACARD-RUDDER GUST LOCK SPARES .....   | 11-N-23-01      | -009A |
| PLACARD-RUDDER GUST LOCK FSO 2605062-33 .....   | 11-PP-23-01     | -003  |
| PLACARD-RUDDER LOCK CAUTION .....   | 11-LQ-24-01     | -001  |
| PLACARD-SEAT BELT .....   | 11-B-32-01      | -008  |
| PLACARD-SEAT BELT .....   | 11-B-32-01      | -008A |
| PLACARD-SEAT POSITION .....   | 25-21-02-01     | -013  |
| PLACARD-SEAT STOP LATCH WARNING .....   | 11-LQ-31-01     | -001  |
| PLACARD-SEAT TRACK LIMIT .....  | 11-LQ-38-01     | -075  |
| PLACARD-SOLVENT CAUTION-LH AND RH .....   | 11-XA-25-02     | -001  |
| PLACARD-TKS FILLER CAP-WITH FARING .....  | 11-N-22-02      | -075  |
| PLACARD-TKS FILLER CAP-WITH FARING .....  | 11-N-22-02      | -075A |
| PLACARD-TKS FILLER CAP-WITH FARING .....  | 11-N-22-02      | -075B |
| PLACARD-TKS KNOWN ICING PARTIAL TKS ONLY .....  | 11-N-31-02      | -078  |
| PLACARD-TOW LIMIT WARNING .....   | 11-LQ-24-01     | -002  |
| PLACARD-TUG TOW FRONT FORK .....  | 11-LQ-27-01     | -001  |
| PLACARD-UPPER CARGO DOOR .....  | 11-LQ-28-01     | -003  |
| PLACARD-UPPER CARGO DOOR .....  | 11-LQ-38-01     | -005  |
| PLACARD-UPPER PASSENGER DOOR .....  | 11-B-38-01      | -150  |
| PLACARD-UPPER PASSENGER DOOR .....  | 11-LQ-38-01     | -079  |
| PLACARD-UPR CARGO DOOR .....  | 11-B-38-01      | -075  |
| PLACARD-WEIGHT LIMIT AFT COMPARTMENT .....  | 11-LQ-22-01     | -007  |
| PLACARD-WEIGHT LIMIT CENTER COMPARTMENT .....   | 11-LQ-22-01     | -003  |
| PLACARD-WEIGHT LIMIT CENTER COMPARTMENT AFT .....                                     | 11-LQ-22-01     | -006  |
| PLACARD-WEIGHT LIMIT CENTER COMPARTMENT FORWARD .....                                 | 11-LQ-22-01     | -004  |
| PLACARD-WEIGHT LIMIT FORWARD COMPARTMENT .....  | 11-LQ-22-01     | -005  |
| PLACARDS AVAILABLE FOR SPARES OR OPTIONAL EQUIPMENT INSTALLATION AS<br>REQUIRED ..... | 11-N-31-01      | -001  |
| PLATE .....   | 11-N-22-01      | -009  |
| PLATE-LH .....  | 25-10-04-02     | -013  |
| PLATE-RH .....  | 25-10-04-02     | -014  |
| PLATE ASSY-SWITCH ATTACH .....  | 76-10-01-02     | -112A |
| PLATE ASSY-STRIKE RUDDER LOCK .....   | 55-40-00-03     | -108  |
| PLATE-LANDING LIGHT .....   | 33-40-00-01A    | -013  |
| PLATE-TAXI LIGHT-LH AND RH .....  | 33-40-00-01A    | -014  |
| PLATE-TAXI LIGHT-LH AND RH .....  | 33-40-00-01A    | -014A |
| PLENUM-HEATER DUCT LH FORWARD CENTER .....  | 21-22-02-01     | -157  |
| PLENUM-HEATER DUCT RH FORWARD CENTER .....  | 21-22-02-01     | -158  |
| PLENUM ASSY .....   | 80-10-01-03     | -006  |
| PLUG-BATTERY .....  | 24-34-00-01     | -096A |
| PLUG ASSY-WINDOW .....  | 56-21-00-01     | -001  |
| PLUG ASSY-WINDOW .....  | 56-21-00-02     | -001  |
| POCKET ASSY-SEAT BACK .....   | 25-10-00-02     | -040  |
| POD ASSY-WEATHER RADAR .....  | 34-45-00-01     | -013  |
| POD ASSY-WEATHER RADAR .....  | 34-45-00-01     | -013A |
| POROUS PANEL VERTICAL FIN STABILIZER FSO 13102-75 .....                               | 30-10-02-02     | -002  |
| POROUS PANEL-LH HORIZONTAL STABILIZER FSO 13102-73 .....                              | 30-10-02-02     | -010  |
| POROUS PANEL-LH OUTBOARD WING FSO 13102-61 .....                                      | 30-10-02-02     | -075  |
| POROUS PANEL-LH CENTER WING FSO 13102-63 .....  | 30-10-02-02     | -077  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE   | CH SEC SUBJ FIG | ITEM  |
|--|-----------------|-------|
| <b>P</b> Continued   |                 |       |
| POROUS PANEL-RH CENTER WING FSO 13102-64                         | 30-10-02-02     | -078  |
| POROUS PANEL-RH CENTER WING WITH RADAR FSO 13102-66              | 30-10-02-02     | -079  |
| POROUS PANEL-RH CENTER WING WITH RADAR ALT 13102-126             | 30-10-02-02     | -079A |
| POROUS PANEL-RH CENTER WING WITH RADAR ALT FOR 13102-66          | 30-10-02-02     | -079B |
| POROUS PANEL-LH INBOARD WING FSO 13102-107                       | 30-10-02-02     | -080  |
| POROUS PANEL-LH INBOARD WING 1.2MM ALT FOR 13102-127             | 30-10-02-02     | -080B |
| POROUS PANEL-LH INBOARD WING 1.2MM ALT FOR 13102-107             | 30-10-02-02     | -080C |
| POROUS PANEL-RH INBOARD WING FSO 13102-108                       | 30-10-02-02     | -081  |
| POROUS PANEL-RH INBOARD WING SPARES ORDER 13102-108              | 30-10-02-02     | -081A |
| POROUS PANEL-RH INBOARD WING 1.2MM ALT FOR 13102-128             | 30-10-02-02     | -081B |
| POROUS PANEL-RH INBOARD WING 1.2MM ALT FOR 13102-108             | 30-10-02-02     | -081C |
| POROUS PANEL-LH STRUT FSO 13102-69                               | 30-10-02-02     | -082  |
| POROUS PANEL-RH STRUT FSO 13102-70                               | 30-10-02-02     | -083  |
| POST LIGHT ASSY  | 33-10-00-01     | -156  |
| POST LIGHT ASSY-FLAP SWITCHES FC003                              | 33-20-00-01     | -022  |
| POST LIGHT ASSY-PRIMARY AND SECONDARY CONSOLE                    | 33-20-00-04     | -001  |
| POTENTIOMETER-MAPLIGHT   | 33-10-00-04     | -004  |
| POTENTIOMETER ASSY-VOLTMETER ADJUSTMENT USED ON 2670120-1 ASSY   | 24-37-00-01     | -010  |
| POWER CONTROLLER CLIP ASSY                                       | 24-20-00-01     | -004  |
| POWER CONVERTER ASSY UC006                                       | 24-30-00-03     | -002  |
| POWER LEVER  | 76-10-01-01B    | -082  |
| POWER SUPPLY-NAV AND STROBE LIGHT FSO S3100-534                  | 33-41-00-01     | -004  |
| POWER SUPPLY-NAV AND STROBE LIGHT SPARES ONLY                    | 33-41-00-01     | -004A |
| PRESSURE REGULATOR FSO 1H75-21                                   | 36-10-00-02     | -004A |
| PRESSURE REGULATOR   | 36-10-00-02     | -005  |
| PRESSURE REGULATOR - ENGINE BLEED AIR                            | 36-10-00-01     | -     |
| PRESSURE REGULATOR - ENGINE BLEED AIR INSTALLATION               | 36-10-00-02     | -     |
| PRESSURE SWITCH-AIR CONDITIONING                                 | 21-51-00-01     | -021A |
| PRESSURE SWITCH-CONDITIONER PRESSURE                             | 21-51-00-01     | -089  |
| PRESSURE SWITCH  | 30-10-02-06     | -239  |
| PRESSURE SWITCH  | 30-10-02-07     | -239  |
| PRESSURE SWITCH-DEICE SYSTEM                                     | 30-10-03-01     | -018  |
| PRESSURE SWITCH-DEICE SYSTEM                                     | 30-10-03-02     | -018  |
| PRESSURE SWITCH-AIRSPPEED DIFFERENTIAL                           | 34-11-00-01     | -075B |
| PRESSURE SWITCH-AIRSPPEED DIFFERENTIAL                           | 34-11-00-01     | -076  |
| PRESSURE SWITCH-AIRSPPEED DIFFERENTIAL LWR                       | 34-11-00-01     | -076A |
| PRESSURE SWITCH-AIRSPPEED DIFFERENTIAL ALT FOR 251500-0141-1     | 34-11-00-01     | -077  |
| PRESSURE SWITCH-AIRSPPEED DIFFERENTIAL LWR ALT FOR 251500-0141-1 | 34-11-00-01     | -077A |
| PRESSURE TRANSDUCER UN005 ALT FOR P265-5037-2                    | 79-30-00-02     | -019  |
| PRESSURE TRANSDUCER UN005 ALT FOR P165-5281-1                    | 79-30-00-02     | -019A |
| PRIMARY AND SECONDARY CONSOLE LIGHTING INSTALLATION              | 33-20-00-04     | -     |
| PRIMARY EXHAUST DUCT INSTALLATION                                | 78-10-00-01     | -     |
| PROCESSOR-WX500 STORMSCOPE REF 805-11500-001(MOD C)              | 34-40-00-01     | -022  |
| PROP ANCHOR ASSY SPARES FSO 2684005-17                           | 10-10-00-01     | -012  |
| PROP ANCHOR ASSY SPARES FSO 2684005-17                           | 10-10-00-01     | -012A |
| PROP ANCHOR ASSY SPARES  | 10-10-00-01     | -012B |
| PROP ANCHOR ASSY FSO 2684005-17                                  | 10-10-00-02     | -030  |
| PROP ANCHOR ASSY SPARES FSO 2684005-17                           | 10-10-00-02     | -030A |
| PROP ANCHOR ASSY SPARES  | 10-10-00-02     | -030B |
| PROP ANCHOR ASSY FSO 2684005-17                                  | 10-10-00-03     | -031  |
| PROP ANCHOR ASSY FSO 2684005-17                                  | 10-10-00-03     | -031A |
| PROP ANCHOR ASSY FSO 2684005-17                                  | 10-10-00-03     | -031B |
| PROP ANCHOR ASSY FSO 2684005-17                                  | 10-10-00-03     | -031C |
| PROPELLER AND SPINNER INSTALLATION - MCCAULEY                    | 61-11-00-01     | -     |
| PROPELLER AND SPINNER INSTALLATION 675HP - HARTZELL              | 61-10-00-01     | -     |
| PROPELLER ASSY-NON DEICED MCCAULEY                               | 61-11-00-01     | -001  |
| PROPELLER ASSY-3 BLADED HARTZELL                                 | 61-10-00-01     | -008  |
| PROPELLER DEICE INSTALLATION - HARTZELL                          | 30-60-00-01     | -     |
| PROPELLER DEICE INSTALLATION - MCCAULEY                          | 30-60-00-02     | -     |
| PROPELLER OVERSPEED GOVERNOR INSTALLATION                        | 61-20-01-01     | -     |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE | CH | SEC | SUBJ | FIG | ITEM |
|--------------|----|-----|------|-----|------|
|--------------|----|-----|------|-----|------|

**P** Continued

|  |              |       |
|--|--------------|-------|
| PROPELLER RPM INDICATING SYSTEM . . . . .            | 77-13-00-01  | -     |
| PUBLIC ADDRESS SPEAKER INSTALLATION - 208 . . . . .  | 23-50-04-01  | -     |
| PUBLIC ADDRESS SPEAKER INSTALLATION - 208 . . . . .  | 23-50-04-01A | -     |
| PUBLIC ADDRESS SPEAKER INSTALLATION - 208B . . . . . | 23-50-05-01  | -     |
| PUBLIC ADDRESS SPEAKER INSTALLATION - 208B . . . . . | 23-50-05-01A | -     |
| PULLEY . . . . .                                     | 21-51-01-02  | -091  |
| PULLEY . . . . .                                     | 21-51-01-02A | -093  |
| PUMP ASSY . . . . .                                  | 30-10-02-06  | -020  |
| PUMP ASSY . . . . .                                  | 30-10-02-07  | -020  |
| PUMP-EJECTOR . . . . .                               | 28-22-00-01  | -081  |
| PUMP-EJECTOR . . . . .                               | 28-22-00-01  | -081A |
| PUSHROD ARM ASSY-ELEVATOR . . . . .                  | 55-20-00-01  | -010  |

**Q**

|  |             |       |
|--|-------------|-------|
| QUADRANT ASSY-ENGINE CONTROL WITH "GO AROUND" SWITCH . . . . .                     | 76-10-01-02 | -001  |
| QUADRANT ASSY-ENGINE CONTROL WITHOUT "GO AROUND" SWITCH FSO C299514-0107 . . . . . | 76-10-01-02 | -001A |
| QUARTZ CHRONOMETER . . . . .   | 31-00-00-02 | -004A |

**R**

|   |              |      |
|---|--------------|------|
| RADAR-GWX 68 WEATHER UR800 FSO S3100-538 . . . . .  | 34-45-00-01  | -001 |
| RADAR ALTIMETER INSTALLATION . . . . .  | 34-10-00-08A | -    |
| RADIO COOLING INSTALLATION - KING RADIOS . . . . .  | 21-20-01-01  | -    |
| RADIO COOLING INSTALLATION - KING RADIOS . . . . .  | 21-20-01-02  | -    |
| RADIO COOLING INSTALLATION - SPERRY RADIOS . . . . .                                      | 21-20-00-01  | -    |
| READING LIGHT FZ003 . . . . .   | 33-20-00-03A | -002 |
| REAR CARGO COMPARTMENT WALL UPHOLSTERY . . . . .  | 25-25-00-01  | -    |
| REAR CARGO COMPARTMENT WALL UPHOLSTERY - CARGOMASTER . . . . .                            | 25-25-00-03  | -    |
| REAR CARGO COMPARTMENT WALL UPHOLSTERY - HARD INTERIOR . . . . .                          | 25-25-00-02  | -    |
| REAR CARGO COMPARTMENT WALL UPHOLSTERY - NOT APPLICABLE TO PASSENGER<br>VERSION . . . . . | 25-25-00-04  | -    |
| REAR CARGO COMPARTMENT WALL UPHOLSTERY - PASSENGER VERSION . . . . .                      | 25-25-00-05  | -    |
| REAR CARGO COMPARTMENT WALL UPHOLSTERY - PASSENGER VERSION . . . . .                      | 25-25-00-06  | -    |
| RECEIVER-GRT10 XM REMOTE . . . . .  | 44-20-00-01  | -001 |
| RECEIVER DRYER ASSY . . . . .   | 21-51-00-01  | -008 |
| RECEPTACLE PLATE ASSY-LH . . . . .  | 24-20-00-01  | -010 |
| RECEPTACLE PLATE ASSY-RH . . . . .  | 24-20-00-01  | -013 |
| RECEPTACLE PLATE CLIP-LH FWD . . . . .  | 24-20-00-01  | -011 |
| RECEPTACLE PLATE CLIP-LH AFT . . . . .  | 24-20-00-01  | -012 |
| RECEPTACLE PLATE CLIP-RH FWD . . . . .  | 24-20-00-01  | -014 |
| RECEPTACLE PLATE CLIP-RH AFT . . . . .  | 24-20-00-01  | -015 |
| RECEPTACLE-GROUND SERVICE . . . . .   | 24-40-00-01  | -013 |
| REGULATOR-OXYGEN . . . . .  | 35-01-00-01  | -003 |
| REGULATOR ASSY-OXYGEN . . . . .   | 35-01-00-02  | -002 |
| REGULATOR ASSY-PRESSURE FSO SK208-70 . . . . .  | 36-10-00-01  | -001 |
| RELAY-FIRE DETECTION . . . . .  | 26-10-00-01  | -089 |
| RELAY-FUEL PRESSURE . . . . .   | 28-21-00-01  | -106 |
| RELAY ASSY-DEICE SYSTEM . . . . .   | 30-10-03-01  | -101 |
| RELAY ASSY-DEICE SYSTEM . . . . .   | 30-10-03-02  | -101 |
| RELAY ASSY-FUEL PUMP . . . . .  | 28-21-00-01  | -115 |
| RELAY ASSY-FUEL PUMP . . . . .  | 28-21-00-02  | -116 |
| RELAY ASSY-TRIM ACTUATOR . . . . .  | 27-30-03-01  | -018 |
| RELAY BOX ASSY . . . . .  | 24-50-02-01  | -002 |
| RELAY-FUEL SELECTOR OFF WARNING . . . . .   | 28-42-01-01  | -012 |
| RELAY-INFLIGHT MOVEABLE DOOR . . . . .  | 52-32-00-02  | -081 |
| RELIEF TUBE ASSY FSO 5619193-4 . . . . .  | 38-30-01-01  | -012 |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE  | CH SEC SUBJ FIG | ITEM  |
|---|-----------------|-------|
| <b>R Continued</b>  |                 |       |
| RELIEF TUBE INSTALLATION .....                            | 38-30-01-01     | -     |
| REMOTE ACCESSORY BOX - KING AUTOPILOT INSTALLATION .....  | 22-10-09-01     | -     |
| REMOTE GYRO INSTALLATION - KING TYPE KG 102A .....        | 34-23-00-04     | -     |
| REMOTE MOUNT RACK .....                                   | 31-30-00-02     | -012  |
| REMOTE MOUNT RACK .....                                   | 31-30-00-02A    | -014  |
| RESERVOIR ASSY-FUEL .....                                 | 28-22-00-01     | -004  |
| RESERVOIR ASSY-BRAKE FLUID .....                          | 32-41-00-01     | -002  |
| RESERVOIR ASSY-OVERBOARD .....                            | 30-10-01-01     | -013  |
| RESTRAINING NET INSTALLATION - CARGO DOOR .....           | 25-51-00-01     | -     |
| RESTRAINT ASSY .....                                      | 25-10-05-02     | -016  |
| RESTRAINT ASSY .....                                      | 25-21-00-02B    | -017  |
| RESTRAINT SYSTEM-RH .....                                 | 25-21-00-02     | -094  |
| RESTRAINT SYSTEM-LH .....                                 | 25-21-00-03     | -093  |
| RESTRAINT SYSTEM-RH .....                                 | 25-21-00-03     | -095  |
| RESTRICTOR .....  | 79-30-00-04     | -010  |
| RETAINER .....  | 33-40-00-01     | -032  |
| RETAINER .....  | 33-45-00-01A    | -010  |
| RETAINER-SEAL LOWER RH .....                              | 71-60-01-01     | -238  |
| RETAINER-CONTROL CABLE .....                              | 76-10-01-01B    | -094  |
| RETAINER .....  | 76-10-01-01B    | -109  |
| RETAINER ASSY .....                                       | 71-60-01-02     | -025  |
| RETAINER ASSY FSO 2650132-33 .....                        | 71-60-01-02     | -033  |
| RETAINER ASSY REF 2650132 .....                           | 71-60-01-02     | -033A |
| RETAINER ASSY .....                                       | 71-60-01-02     | -033B |
| RETAINING RING .....                                      | 33-45-00-01A    | -004  |
| RETAINING RING ASSY .....                                 | 33-45-00-01A    | -003  |
| RETURN SPRING ASSY-BRAKE .....                            | 32-41-02-01     | -001  |
| RH FLIGHT PANEL INDICATORS .....                          | 34-10-00-04     | -     |
| RING ASSY-SLIP-PROPELLER DEICE .....                      | 30-60-00-02     | -011  |
| RING DOUBLER ASSY-WING INSPECTION LIGHT .....             | 33-44-00-03     | -004  |
| ROD ASSY .....  | 30-40-00-01     | -002A |
| ROLL ACTUATOR INSTALLATION .....                          | 27-10-02-03     | -     |
| ROLL SERVO AUTOPILOT INSTALLATION .....                   | 22-10-03-01A    | -     |
| ROLL SERVO AUTOPILOT INSTALLATION - KING AUTOPILOTS ..... | 22-10-03-01     | -     |
| RUDDER ASSY FSO 2633000-204 .....                         | 55-40-00-01     | -003  |
| RUDDER ASSY FSO 2633000-203 .....                         | 55-40-00-02     | -004  |
| RUDDER ASSY FSO 2633000-203 .....                         | 55-40-00-03     | -002  |
| RUDDER ASSY FSO 2633000-41 .....                          | 55-40-00-04     | -004  |
| RUDDER ASSY FSO 2633000-41 .....                          | 55-40-00-05     | -002  |
| RUDDER ASSY FSO 2633000-41 .....                          | 55-40-00-05     | -002A |
| RUDDER ASSY .....   | 55-40-00-05     | -002C |
| RUDDER ASSY FSO 2633063-28 .....                          | 55-40-00-07     | -002  |
| RUDDER ASSY FSO 2633063-28 .....                          | 55-40-00-07     | -002A |
| RUDDER ASSY FSO 2633063-28 .....                          | 55-40-00-07     | -002B |
| RUDDER ASSY FSO 2633063-28 .....                          | 55-40-00-07     | -002C |
| RUDDER ASSY FSO 2633063-28 .....                          | 55-40-00-07     | -002D |
| RUDDER ASSY FSO 2633063-28 .....                          | 55-40-00-07     | -002F |
| RUDDER ASSY .....   | 55-40-00-07     | -002G |
| RUDDER CONTROL LOCK INSTALLATION .....                    | 27-70-00-01     | -     |
| RUDDER CONTROL SYSTEM .....                               | 27-20-01-01     | -     |
| RUDDER GUST LOCK INSTALLATION .....                       | 27-70-00-02     | -     |
| RUDDER HINGE ASSY-LWR .....                               | 55-30-00-04     | -018  |
| RUDDER HINGE ASSY-UPPER .....                             | 55-30-00-04     | -014  |
| RUDDER INSTALLATION .....                                 | 55-40-00-01     | -     |
| RUDDER INSTALLATION - 208 .....                           | 55-40-00-02     | -     |
| RUDDER INSTALLATION - 208 .....                           | 55-40-00-03     | -     |
| RUDDER INSTALLATION - 208B .....                          | 55-40-00-04     | -     |
| RUDDER INSTALLATION - 208B .....                          | 55-40-00-05     | -     |
| RUDDER INSTALLATION LONG CHORD - 208 .....                | 55-40-00-06     | -     |
| RUDDER INSTALLATION LONG CHORD - 208 .....                | 55-40-00-07     | -     |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE | CH | SEC | SUBJ | FIG | ITEM |
|--------------|----|-----|------|-----|------|
|--------------|----|-----|------|-----|------|

**R** Continued

|   |             |      |
|---|-------------|------|
| RUDDER PEDALS INSTALLATION .....  | 27-20-02-02 | -    |
| RUDDER STRIKE PLATE .....   | 55-40-00-07 | -108 |
| RUDDER TRIM CONTROL SYSTEM .....  | 27-20-02-01 | -    |
| RUSSIAN EXTERIOR PLACARDS AND MARKINGS - CABIN .....                      | 11-RA-32-01 | -    |
| RUSSIAN EXTERIOR PLACARDS AND MARKINGS - CABIN DOORS .....                | 11-RA-28-01 | -    |
| RUSSIAN EXTERIOR PLACARDS AND MARKINGS - EMPENNAGE AND REAR BAGGAGE ..... | 11-RA-23-01 | -    |
| RUSSIAN EXTERIOR PLACARDS AND MARKINGS - FLIGHT COMPARTMENT .....         | 11-RA-31-01 | -    |
| RUSSIAN EXTERIOR PLACARDS AND MARKINGS - FUSELAGE .....                   | 11-RA-22-01 | -    |
| RUSSIAN EXTERIOR PLACARDS AND MARKINGS - TKS .....                        | 11-RA-25-01 | -    |

**S**

|   |              |       |
|---|--------------|-------|
| SADDLE .....  | 71-70-00-02  | -010  |
| SANDEN COMPRESSOR .....                                     | 21-51-01-02  | -005  |
| SANDEN COMPRESSOR .....                                     | 21-51-01-02A | -005  |
| SCREW-LH FLIGHT PANEL ASSY ATTACH .....                     | 53-22-01-05  | -007  |
| SCREW .....   | 71-70-00-02  | -053  |
| SCUFF PLATE-LH STANDARD .....                               | 25-10-03-01  | -001  |
| SCUFF PLATE-RH STANDARD .....                               | 25-10-03-01  | -002  |
| SCUFF PLATE-LH CREW DOOR FSO 2615182-1 .....                | 25-10-03-01  | -032  |
| SCUFF PLATE-LH CREW DOOR .....                              | 25-10-03-01  | -032A |
| SCUFF PLATE-RH CREW DOOR FSO 2615182-2 .....                | 25-10-03-01  | -034  |
| SCUFF PLATE-RH CREW DOOR .....                              | 25-10-03-01  | -034A |
| SCUFF PLATE AND CONTROL COLUMN COVER .....                  | 25-10-03-01  | -     |
| SCUFF PLATE ASSY-LH STANDARD FSO 2615052-13 .....           | 25-10-03-01  | -021  |
| SCUFF PLATE ASSY-RH STANDARD FSO 2615052-12 .....           | 25-10-03-01  | -024  |
| SCUFF PLATE ASSY-LH FORWARD FSO 2615052-13 .....            | 25-28-00-04  | -030  |
| SCUFF PLATE ASSY-RH FORWARD 2615052-12 .....                | 25-28-00-04  | -031  |
| SCUFF PLATE ASSY-PILOT FSO 2613195-22 .....                 | 53-20-00-01  | -048  |
| SCUFF PLATE ASSY-PILOT FSO 2613464-1 .....                  | 53-20-00-01  | -048A |
| SCUFF PLATE ASSY-CO-PILOT .040 2024 T42 FSO 2613464-2 ..... | 53-20-00-01  | -052  |
| SCUFF PLATE ASSY-PILOT FSO 2613195-200 .....                | 53-20-00-02  | -043  |
| SCUFF PLATE ASSY-COPILOT .....                              | 53-20-00-02  | -048  |
| SCUFF PLATE ASSY-COPILOT .....                              | 53-20-00-03  | -046  |
| SCUFF PLATE ASSY-PILOT FSO 2613195-200 .....                | 53-20-00-03  | -041  |
| SEAL .....  | 21-51-01-02  | -080  |
| SEAL .....  | 21-51-01-02A | -080  |
| SEAL-UPPER INDUCTION AIR BAND .....                         | 71-60-01-01  | -236  |
| SEAL-LOWER INDUCTION AIR BAND RH .....                      | 71-60-01-01  | -239  |
| SEAL-AFT .....  | 71-60-01-02  | -163  |
| SEAL .....  | 79-20-00-03  | -110  |
| SEAL-OUTER .....  | 79-20-00-03  | -118  |
| SEAL-INNER .....  | 79-20-00-03  | -128  |
| SEAL-OUTER .....  | 79-20-00-03  | -129  |
| SEAL ASSY-FIREWALL WIRE BUNDLE .....                        | 53-10-00-01  | -239  |
| SEAL ASSY-FIREWALL HEATER CONTROL .....                     | 53-10-00-01  | -241  |
| SEAL ASSY-INDUCTION AIR PLENUM .....                        | 71-60-01-01  | -001  |
| SEAL ASSY-BLEED AIR DUCT .....                              | 36-10-00-01  | -012  |
| SEAL LOWER-INNER .....                                      | 79-20-00-03  | -127  |
| SEAL RETAINER-AFT .....                                     | 71-60-01-02  | -164  |
| SEAL RETAINER .....   | 79-20-00-03  | -108  |
| SEAL RETAINER-INNER .....                                   | 79-20-00-03  | -119  |
| SEAL RETAINER-INNER .....                                   | 79-20-00-03  | -124  |
| SEAL RETAINER-OUTER .....                                   | 79-20-00-03  | -125  |
| SEAL RETAINER-INNER .....                                   | 79-20-00-03  | -126  |
| SEAL RETAINER-OUTER .....                                   | 79-20-00-03  | -130  |
| SEALER STRIP .....  | 71-60-01-02  | -078  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE   | CH           | SEC | SUBJ | FIG | ITEM  |
|--|--------------|-----|------|-----|-------|
| <b>S Continued</b>   |              |     |      |     |       |
| SEAT AND SHOULDER HARNESS INSTALLATION - 2 PASSENGER BRITISH CERTIFIED |              |     |      |     |       |
| AIRPLANES .....  | 25-21-01-02  |     |      |     | -     |
| SEAT AND SHOULDER HARNESS INSTALLATION - 3 PASSENGER .....             | 25-21-01-01  |     |      |     | -     |
| SEAT ASSEMBLY - BENCH .....  | 25-21-00-03  |     |      |     | -     |
| SEAT ASSEMBLY - PILOT AND COPILOT .....                                | 25-10-00-01  |     |      |     | -     |
| SEAT ASSEMBLY - PILOT AND COPILOT WITH ARMREST .....                   | 25-10-00-02  |     |      |     | -     |
| SEAT ASSEMBLY - PILOT AND COPILOT WITH ARMREST .....                   | 25-10-00-02A |     |      |     | -     |
| SEAT ASSEMBLY - SINGLE LH .....  | 25-21-00-01  |     |      |     | -     |
| SEAT ASSEMBLY - SINGLE RH .....  | 25-21-00-02  |     |      |     | -     |
| SEAT ASSY-2 PASSENGER FSO 2619017-1 .....                              | 25-21-01-02  |     |      |     | -002  |
| SEAT ASSY-2 PASSENGER .....  | 25-21-01-02  |     |      |     | -002A |
| SEAT ASSY-STOWABLE FSO ATFS1-01 .....                                  | 25-21-02-01  |     |      |     | -002  |
| SEAT ASSY-STOWABLE FSO 2614041-17 .....                                | 25-21-02-01  |     |      |     | -004  |
| SEAT ASSY-STOWABLE FSO 2614041-17 .....                                | 25-21-02-01  |     |      |     | -004A |
| SEAT RAIL AND TRACK INSTALLATION .....                                 | 53-40-00-01  |     |      |     | -     |
| SEAT RAIL AND TRACK INSTALLATION .....                                 | 53-40-00-02  |     |      |     | -     |
| SEAT RAIL AND TRACK INSTALLATION - PASSENGER .....                     | 53-40-00-03  |     |      |     | -     |
| SEAT RELEASE ASSY-PILOT AND COPILOT .....                              | 25-10-00-03  |     |      |     | -031  |
| SEAT RESTRAINT SYSTEM .....  | 25-21-02-01  |     |      |     | -006  |
| SEAT RESTRAINT SYSTEM -LH .....  | 25-21-00-01  |     |      |     | -096  |
| SEAT RESTRAINT SYSTEM-5 POINT PILOT & COPILOT FSO AB-CES29 .....       | 25-10-00-01  |     |      |     | -158A |
| SEAT RESTRAINT SYSTEM-5 POINT PILOT & COPILOT FSO AB-CES29 .....       | 25-10-00-01  |     |      |     | -158B |
| SEAT RESTRAINT SYSTEM-5 POINT PILOT & COPILOT FSO AB-CES29 .....       | 25-10-00-02  |     |      |     | -088  |
| SEAT RESTRAINT SYSTEM-5 POINT PILOT & COPILOT FSO AB-CES29 .....       | 25-10-00-02  |     |      |     | -088A |
| SEAT RESTRAINT SYSTEM-5 POINT PILOT & COPILOT FSO AB-CES29 .....       | 25-10-00-02  |     |      |     | -088B |
| SEAT RESTRAINT SYSTEM-LH & CTR .....                                   | 25-21-01-01  |     |      |     | -005  |
| SEAT RESTRAINT-RH .....  | 25-21-01-01  |     |      |     | -006  |
| SEAT TRACK ASSY-LH OUTBD S2617-1 .....                                 | 53-20-00-02  |     |      |     | -122  |
| SEAT TRACK ASSY-RH OUTBD S2617-1 .....                                 | 53-20-00-02  |     |      |     | -123  |
| SECOND TRANSPONDER ANTENNA INSTALLATION - FED-X ONLY .....             | 34-51-02-01  |     |      |     | -     |
| SELECTOR VALVE ASSY-ALT STATIC SOURCE .....                            | 34-11-00-01  |     |      |     | -151  |
| SENSOR-BATTERY TEMP NICAD ONLY .....                                   | 24-34-00-01  |     |      |     | -012  |
| SEPARATOR ASSY-INERTIAL .....  | 71-60-00-01  |     |      |     | -002A |
| SEPARATOR ASSY-TORQUE VENT .....                                       | 77-11-00-01  |     |      |     | -091  |
| SEPARATOR ASSY .....   | 77-11-00-02  |     |      |     | -043  |
| SEPARATOR ASSY-TORQUE VENT .....                                       | 77-12-00-01  |     |      |     | -091  |
| SHAFT-FSO 2601204-201 .....  | 25-52-00-02A |     |      |     | -325  |
| SHAFT-FSO 2601204-201 .....  | 25-52-00-02A |     |      |     | -400  |
| SHELF .....  | 77-30-00-02  |     |      |     | -017  |
| SHELF ASSY-GRS 77 AHRS .....   | 34-25-00-01  |     |      |     | -004  |
| SHELF ASSY-GRS 77 AHRS .....   | 34-25-00-01  |     |      |     | -004A |
| SHELF ASSY .....   | 77-30-00-02  |     |      |     | -016  |
| SHELF SUPPORT-AFT .....  | 77-30-00-02  |     |      |     | -018  |
| SHELF SUPPORT-FWD .....  | 77-30-00-02  |     |      |     | -019  |
| SHIM MOUNT ATTACH .....  | 21-51-01-02  |     |      |     | -026  |
| SHIM MOUNT ATTACH .....  | 21-51-01-02A |     |      |     | -026  |
| SHIMMY DAMPENER ASSY-NOSE GEAR .....                                   | 32-20-01-01  |     |      |     | -001D |
| SHOCK STRUT ASSY-NOSE GEAR FSO 2643100-200 .....                       | 32-20-00-02  |     |      |     | -001  |
| SHOCK STRUT ASSY-NOSE GEAR TALL FORK FSO 2643100-201 .....             | 32-20-00-02  |     |      |     | -002  |
| SHROUD-AFT .....   | 79-20-00-03  |     |      |     | -105  |
| SHROUD-UPPER ASSY .....  | 79-20-00-04  |     |      |     | -010  |
| SHROUD-INBD AFT ASSY .....   | 79-20-00-04  |     |      |     | -022  |
| SHROUD-INBD FWD ASSY .....   | 79-20-00-04  |     |      |     | -030  |
| SHROUD ASSEMBLY .....  | 79-20-00-04  |     |      |     | -001  |
| SHROUD ASSY .....  | 79-20-00-03  |     |      |     | -046  |
| SHROUD ASSY-LOWER OIL VALVE .....                                      | 79-20-00-03  |     |      |     | -076  |
| SHROUD ASSY-ALTERNATOR .....   | 24-36-02-02  |     |      |     | -001  |
| SHUNT ASSY RZ005 .....   | 24-50-02-01  |     |      |     | -083  |
| SHUTOFF VALVE-FUEL .....   | 30-10-02-06  |     |      |     | -236  |
| SHUTOFF VALVE-FUEL .....   | 30-10-02-07  |     |      |     | -236  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE   | CH SEC SUBJ FIG | ITEM  |
|--|-----------------|-------|
| <b>S Continued</b>   |                 |       |
| SIGHT GAUGE FLOAT BALL .....   | 30-10-02-06     | -010  |
| SIGNAL CONDITIONER INSTALLATION .....                                  | 28-40-00-01     | -     |
| SIGNAL CONDITIONER-FUEL TOTALIZER .....                                | 73-32-00-01     | -001  |
| SILKSCREEN ASSY-WEIGHT LIMIT AFT CENTER COMPARTMENT 208B .....         | 11-XA-22-01     | -004  |
| SILKSCREEN ASSY-WEIGHT LIMIT AFT COMPARTMENT 208 .....                 | 11-XA-22-01     | -005  |
| SILKSCREEN ASSY-WEIGHT LIMIT CENTER COMPARTMENT 208 .....              | 11-XA-22-01     | -002  |
| SILKSCREEN ASSY-WEIGHT LIMIT FWD CENTER COMPARTMENT 208B .....         | 11-XA-22-01     | -003  |
| SILKSCREEN ASSY-WEIGHT LIMIT FWD COMPARTMENT .....                     | 11-XA-22-01     | -001  |
| SKIN .....   | 25-52-00-02A    | -075  |
| SKIN-WING UPR LH .040 2024 T42 .....                                   | 57-11-00-01     | -001  |
| SKYWATCH ANTENNA INSTALLATION .....                                    | 34-40-00-03     | -     |
| SLAVING ACCESSORY UNIT INSTALLATION .....                              | 22-10-02-01     | -     |
| SMOKE GOGGLES .....  | 35-15-00-01     | -011  |
| SOLENOID VALVE .....   | 30-10-02-06     | -249  |
| SOLENOID VALVE .....   | 30-10-02-07     | -249  |
| SONALERT-WARNING HORN FSO SC628PR UC003 .....                          | 28-42-01-01     | -024  |
| SONALERT SIGNAL FSO SC628ANPR UC004 .....                              | 28-42-01-01     | -024B |
| SONALERT SIGNAL UC004 .....  | 28-42-01-01     | -024C |
| SOUNDPROOFING - 208 PASSENGER VERSION .....                            | 25-80-00-01     | -     |
| SOUNDPROOFING - 208B PASSENGER VERSION .....                           | 25-80-00-03     | -     |
| SOUNDPROOFING - CARGO VERSION .....                                    | 25-80-00-02     | -     |
| SPACER .....   | 21-51-01-02     | -094  |
| SPACER .....   | 21-51-01-02A    | -091  |
| SPACER .....   | 25-22-00-02     | -010  |
| SPACER .....   | 71-60-01-02     | -152  |
| SPACER .....   | 71-70-00-02     | -112  |
| SPACER .....   | 71-70-00-02     | -113  |
| SPACER .....   | 71-70-00-02     | -114  |
| SPACER .....   | 71-70-00-02     | -115  |
| SPEAKER ASSY .....   | 23-50-04-01     | -012  |
| SPEAKER INSTALLATION .....   | 23-50-01-01     | -     |
| SPERRY 300 DME INSTALLATION - TYPE RT-377A .....                       | 34-51-09-01     | -     |
| SPERRY 400 DME INSTALLATION - TYPE R-477A .....                        | 34-51-10-01     | -     |
| SPERRY 400 GLIDESLOPE INSTALLATION - TYPE R-443B .....                 | 34-30-00-01     | -     |
| SPERRY 400 RMI INSTALLATION TYPE IN-404A .....                         | 34-52-00-01     | -     |
| SPERRY 400B IFCS INSTALLATION - TYPE IF-550A .....                     | 34-56-02-01     | -     |
| SPERRY 400B NAVOMATIC INSTALLATION - TYPE AF-550A .....                | 34-56-03-01     | -     |
| SPERRY 400B SLAVED GYRO INSTALLATION .....                             | 34-57-01-01     | -     |
| SPERRY 400B UNSLAVED GYRO INSTALLATION .....                           | 34-57-00-01     | -     |
| SPERRY 800 ENCODING ALTIMETER INSTALLATION WITH ALTITUDE ALERTER ..... | 34-10-00-06     | -     |
| SPERRY ADF RADIO INSTALLATION .....                                    | 34-50-00-01     | -     |
| SPERRY AREA NAVIGATION RADIO INSTALLATION 400 - TYPE RN-479A .....     | 34-50-02-01     | -     |
| SPERRY AUDIO/INTERCOM/MARKER BEACON PANEL INSTALLATION .....           | 23-50-00-03     | -     |
| SPERRY NAV/COM RADIO INSTALLATIONS .....                               | 34-50-00-05     | -     |
| SPERRY SLAVED HSI INSTALLATION - 400B IFCS .....                       | 34-57-03-01     | -     |
| SPERRY SLAVED HSI INSTALLATION 400B AUTOPILOT .....                    | 34-57-02-01     | -     |
| SPERRY TRANSPONDER INSTALLATION 400 - TYPE RT-459A .....               | 34-51-00-01     | -     |
| SPOILER ASSY LH WING .....   | 57-70-00-01     | -001  |
| SPOILER ASSY RH WING .....   | 57-70-00-01     | -002  |
| SSCVR MOUNT .....  | 31-30-00-02     | -002  |
| SSCVR MOUNT .....  | 31-30-00-02A    | -002  |
| STABILIZER ASSY-HORIZONTAL FSO 2632000-48 .....                        | 55-10-00-01     | -001  |
| STABILIZER ASSY-HORIZONTAL FSO 2632000-48 .....                        | 55-10-00-02     | -001  |
| STABILIZER ASSY-HORIZONTAL FSO 2632000-48 .....                        | 55-10-00-02     | -001A |
| STABILIZER ASSY-HORIZONTAL FSO 2632000-48 .....                        | 55-10-00-02     | -001B |
| STABILIZER ASSY-HORIZONTAL .....                                       | 55-10-00-02     | -001C |
| STABILIZER ASSY-HORIZONTAL .....                                       | 55-10-00-02     | -001D |
| STABILIZER SKINS AND FAIRINGS .....                                    | 55-10-01-01     | -     |
| STALL DETECTOR .....   | 27-31-00-01     | -003  |
| STALL WARNING SYSTEM .....   | 27-31-00-01     | -     |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE   | CH           | SEC | SUBJ | FIG | ITEM  |
|--|--------------|-----|------|-----|-------|
| <b>S</b> Continued   |              |     |      |     |       |
| STANDBY ALTERNATOR INSTALLATION . . . . .  | 24-36-01-01  |     |      |     | -     |
| STANDBY ALTERNATOR OVERHEAT WARNING SYSTEM - BRITISH CERTIFIED AIRPLANES . . . . . | 24-36-02-01  |     |      |     | -     |
| STANDBY ALTERNATOR RELAY ASSY . . . . .  | 24-36-00-01  |     |      |     | -009  |
| STANDBY ALTERNATOR SHROUD INSTALLATION - BRITISH CERTIFIED AIRPLANES . . . . .     | 24-36-02-02  |     |      |     | -     |
| STANDBY ELECTRICAL SYSTEM . . . . .  | 24-36-00-01  |     |      |     | -     |
| STARTER/GENERATOR INSTALLATION . . . . .   | 80-10-01-01  |     |      |     | -     |
| STARTER/GENERATOR INSTALLATION - 300 AMP . . . . .                                 | 80-10-01-02  |     |      |     | -     |
| STATIC WICK DISCHARGE INSTALLATION . . . . .                                       | 23-60-00-01  |     |      |     | -     |
| STENCIL-CARGOMASTER ZONE 251 AND 252 . . . . .                                     | 11-N-22-01   |     |      |     | -007  |
| STENCIL-SUPER CARGOMASTER . . . . .  | 11-N-22-01   |     |      |     | -008  |
| STEP ASSY-PASSENGER DOOR UPPER . . . . .   | 52-10-02-01  |     |      |     | -110  |
| STEP ASSY-PASSENGER DOOR MIDDLE . . . . .  | 52-10-02-01  |     |      |     | -111  |
| STEP ASSY-CREW . . . . .   | 52-61-00-01  |     |      |     | -003  |
| STIFFENER . . . . .  | 25-52-00-02A |     |      |     | -092  |
| STIFFENER . . . . .  | 25-52-00-02A |     |      |     | -093  |
| STIFFENER . . . . .  | 25-52-00-02A |     |      |     | -414  |
| STIFFENER . . . . .  | 79-20-00-03  |     |      |     | -122  |
| STINGER AND FAIRING ASSEMBLY . . . . .   | 53-50-01-01  |     |      |     | -     |
| STINGER ASSY-PASSENGER VERSION . . . . .   | 53-50-01-01  |     |      |     | -004  |
| STORAGE CASE ASSY-WINDSHIELD DEICE PANEL . . . . .                                 | 30-40-00-01  |     |      |     | -087  |
| STORMSCOPE AND SKYWATCH INSTALLATION . . . . .                                     | 34-40-00-02  |     |      |     | -     |
| STORMSCOPE INSTALLATION . . . . .  | 34-40-00-01  |     |      |     | -     |
| STOWABLE SEAT INSTALLATION . . . . .   | 25-21-02-01  |     |      |     | -     |
| STRAINER ASSY-FUEL . . . . .   | 28-21-00-01  |     |      |     | -001  |
| STRAINER ASSY-FUEL . . . . .   | 28-21-00-02  |     |      |     | -001  |
| STRAINER ASSY-FUEL . . . . .   | 28-21-00-02  |     |      |     | -001A |
| STRAINER ASSY . . . . .  | 30-10-02-06  |     |      |     | -254  |
| STRAINER ASSY . . . . .  | 30-10-02-07  |     |      |     | -254  |
| STRAINER WELD ASSY . . . . .   | 30-10-02-06  |     |      |     | -258  |
| STRAINER WELD ASSY . . . . .   | 30-10-02-07  |     |      |     | -258  |
| STRAP . . . . .  | 25-52-00-02A |     |      |     | -231  |
| STRAP . . . . .  | 25-52-00-02A |     |      |     | -334  |
| STRAP ASSY SHOULDER HARNESS-LH . . . . .   | 25-21-01-01  |     |      |     | -018  |
| STRAP ASSY SHOULDER HARNESS-RH . . . . .   | 25-21-01-01  |     |      |     | -022  |
| STRAP ASSY SHOULDER HARNESS-LH . . . . .   | 25-21-01-01  |     |      |     | -017  |
| STRAP ASSY SHOULDER HARNESS-RH . . . . .   | 25-21-01-01  |     |      |     | -021  |
| STRAP ASSY-SHOULDER HARNESS LH . . . . .   | 25-21-01-02  |     |      |     | -014  |
| STRAP ASSY-SHOULDER HARNESS RH . . . . .   | 25-21-01-02  |     |      |     | -015  |
| STRAP SHOULDER HARNESS-LH . . . . .  | 25-21-01-01  |     |      |     | -019  |
| STRAP SHOULDER HARNESS-RH . . . . .  | 25-21-01-01  |     |      |     | -023  |
| STREAMER ASSY . . . . .  | 10-10-00-02  |     |      |     | -008  |
| STREAMER ASSY . . . . .  | 10-10-00-03  |     |      |     | -009  |
| STRIKE PLATE ASSY-RUDDER LOCK . . . . .  | 55-40-00-05  |     |      |     | -105  |
| STRIKER PLATE . . . . .  | 25-52-00-02A |     |      |     | -159  |
| STRIKER PLATE . . . . .  | 25-52-00-02A |     |      |     | -160  |
| STRIKER PLATE . . . . .  | 25-52-00-02A |     |      |     | -190  |
| STRIKER PLATE . . . . .  | 25-52-00-02A |     |      |     | -191  |
| STRIKER PLATE . . . . .  | 25-52-00-02A |     |      |     | -309  |
| STRIKER PLATE . . . . .  | 25-52-00-02A |     |      |     | -310  |
| STRIKER PLATE . . . . .  | 25-52-00-02A |     |      |     | -384  |
| STRIKER PLATE . . . . .  | 25-52-00-02A |     |      |     | -385  |
| STRIP ASSY-LH . . . . .  | 25-52-00-02A |     |      |     | -003  |
| STRIP ASSY-RH . . . . .  | 25-52-00-02A |     |      |     | -004  |
| STRUCTURE ASSY-WING LH FSO 2622000-119 . . . . .                                   | 57-10-01-01  |     |      |     | -005  |
| STRUCTURE ASSY-WING LH . . . . .   | 57-10-01-01  |     |      |     | -005A |
| STRUCTURE ASSY-WING RH FSO 2622000-120 . . . . .                                   | 57-10-01-01  |     |      |     | -006  |
| STRUCTURE ASSY-WING RH . . . . .   | 57-10-01-01  |     |      |     | -006A |
| STRUT ASSY-LH WING FSO 2621000-21 . . . . .  | 57-10-04-01  |     |      |     | -076A |
| STRUT ASSY-RH WING FSO 2621000-22 . . . . .  | 57-10-04-01  |     |      |     | -078A |
| SUMP ASSY . . . . .  | 57-11-01-01  |     |      |     | -155  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE  | CH SEC SUBJ FIG | ITEM  |
|---|-----------------|-------|
| <b>S Continued</b>  |                 |       |
| SUNVISOR INSTALLATION .....   | 25-10-01-01     | -     |
| SUPPORT-TENSIONER .....   | 21-51-01-02     | -007  |
| SUPPORT .....   | 21-51-01-02     | -018  |
| SUPPORT-TENSIONER .....   | 21-51-01-02A    | -007  |
| SUPPORT .....   | 21-51-01-02A    | -018  |
| SUPPORT-ANTENNA LH .....  | 55-30-00-02     | -113A |
| SUPPORT-ANTENNA RH .....  | 55-30-00-02     | -114A |
| SUPPORT ASSEMBLY .....  | 79-20-00-03     | -097  |
| SUPPORT ASSY-COMPRESSOR DRIVE FSO 2601189-11 .....                                      | 21-51-01-01     | -093A |
| SUPPORT ASSY-COMPRESSOR DRIVE USED ON 300 AMP STARTER/GENERATOR FSO<br>2650189-11 ..... | 21-51-01-01     | -093E |
| SUPPORT BRACKET ASSY .....  | 71-70-00-02     | -008  |
| SUPPORT PLATE .....   | 28-23-00-01     | -162  |
| SUPPORT PLATE ASSY .....  | 28-23-00-01     | -161  |
| SUPPORTS-EJECTOR DUCT HANGER .....  | 78-10-00-04     | -225  |
| SWITCH-VENTILATION FAN .....  | 21-21-04-01     | -019  |
| SWITCH-VENTILATION FAN SC020 .....  | 21-21-04-01     | -019A |
| SWITCH-VENTILATION FAN SC021 .....  | 21-21-04-01     | -019B |
| SWITCH SI029 .....  | 24-21-00-01     | -001  |
| SWITCH-BATTERY .....  | 24-50-01-01     | -015  |
| SWITCH-MAINTENANCE .....  | 24-50-01-01     | -016  |
| SWITCH-STARTER-GENERATOR .....  | 24-50-01-01     | -017  |
| SWITCH-AUX FUEL PUMP .....  | 24-50-01-01     | -018  |
| SWITCH-STARTER .....  | 24-50-01-01     | -019  |
| SWITCH-IGNITION .....   | 24-50-01-01     | -020  |
| SWITCH-STANDBY POWER .....  | 24-50-01-01     | -021  |
| SWITCH-FIRE DETECTOR .....  | 26-10-00-01     | -087  |
| SWITCH- MIC .....   | 27-10-01-02     | -019  |
| SWITCH-ELECTRIC TRIM .....  | 27-10-01-02     | -021  |
| SWITCH- PITCH SYNC .....  | 27-10-01-02     | -025  |
| SWITCH-TRANSPONDER IDENTIFICATION .....   | 27-10-01-02     | -026  |
| SWITCH-COPILOT INTERPHONE .....   | 27-10-01-03     | -153  |
| SWITCH .....  | 27-10-01-05     | -018A |
| SWITCH .....  | 27-10-01-05     | -019A |
| SWITCH-FLAP MOTOR STANDBY .....   | 27-50-01-01     | -184  |
| SWITCH-FLAP MOTOR STANDBY .....   | 27-50-01-01     | -185  |
| SWITCH-LOW FUEL LEVEL .....   | 28-22-00-01     | -095  |
| SWITCH-LOW FUEL LEVEL LH SL002 .....  | 28-41-00-01     | -020  |
| SWITCH-LOW FUEL LEVEL RH SR002 .....  | 28-41-00-01     | -020A |
| SWITCH-FUEL SELECTOR OFF WARNING LH & RH .....  | 28-42-01-01     | -002  |
| SWITCH-PROP OVERSPEED .....   | 31-00-00-01     | -014  |
| SWITCH-TEST FIRE DETECT-UP FUEL SELECT OFF-DN SI031 .....                               | 31-00-00-01A    | -076  |
| SWITCH-OVERSPEED GOVERNOR PUSH TO TEST SI006 .....                                      | 31-00-00-01A    | -077  |
| SWITCH-PROP OVERSPEED .....   | 31-00-00-02     | -006  |
| SWITCH-PROP OVERSPEED .....   | 31-00-00-03     | -005  |
| SWITCH-ANNUNCIATOR PANEL LAMP TEST .....  | 33-10-00-02     | -001  |
| SWITCH-FIRE DETECT TEST .....   | 33-10-00-02     | -001A |
| SWITCH-ANNUNCIATOR PANEL NIGHT-DAY .....  | 33-10-00-02     | -002  |
| SWITCH-CARGO DOOR/PASSENGER DOOR AND CABIN LIGHT .....                                  | 33-20-00-01     | -089  |
| SWITCH-CARGO DOOR AND CABIN LIGHTS .....  | 33-20-00-01     | -090  |
| SWITCH-LOW VACUUM FSO SL-PSF109-1 .....   | 34-23-00-02     | -017A |
| SWITCH-LOW VACUUM FSO SL-PSF109-1 .....   | 34-24-00-01     | -029A |
| SWITCH-LOW VACUUM FSO SL-PSF109-1 .....   | 34-24-00-02     | -032A |
| SWITCH-LOW VACUUM .....   | 34-24-00-02     | -032B |
| SWITCH-HOURMETER .....  | 57-11-01-01     | -096  |
| SWITCH-BETA SN004 .....   | 61-20-00-01     | -001  |
| SWITCH-GO-AROUND .....  | 76-10-01-02     | -080  |
| SWITCH-EMERGENCY POWER LEVER .....  | 76-10-01-02     | -109  |
| SWITCH & NUT-MIC .....  | 27-10-01-03     | -017A |
| SWITCH & NUT-TRANSPONDER IDENTIFICATION .....   | 27-10-01-03     | -019A |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE | CH | SEC | SUBJ | FIG | ITEM |
|--------------|----|-----|------|-----|------|
|--------------|----|-----|------|-----|------|

**S** Continued

|   |              |       |
|---|--------------|-------|
| SWITCH AND CIRCUIT PANEL INSTALLATION . . . . .                         | 24-50-01-01  | -     |
| SWITCH AND CIRCUIT PANEL INSTALLATION . . . . .                         | 24-50-01-01A | -     |
| SWITCH ASSY-VOLT/AMMETER . . . . .                                      | 24-37-00-01  | -007  |
| SWITCH ASSY STALL WARNING HORN DISC . . . . .                           | 27-31-00-01  | -075  |
| SWITCH ASSY-CARGO DOOR UNLOCKED LH SC015 . . . . .                      | 52-71-00-01  | -001  |
| SWITCH ASSY-PASSENGER DOOR UNLOCKED RH SF003 . . . . .                  | 52-71-00-01  | -003  |
| SWITCH ASSY-FLAP ACTUATOR FSO 2662021-4 . . . . .                       | 27-50-01-03  | -004A |
| SWITCH PANEL ASSEMBLY . . . . .   | 31-00-00-01A | -     |
| SWITCH PANEL ASSY . . . . .   | 31-00-00-01A | -001  |
| SWITCH PANEL ASSY . . . . .   | 31-00-00-01A | -001A |
| SWITCH-AIR CONDITIONING ALT FOR 4TL1-1 AND MS24525-21 . . . . .         | 24-50-00-01  | -034  |
| SWITCH-AIR CONDITIONING BLOWER . . . . .                                | 24-50-00-01  | -037  |
| SWITCH-AP TRIM DISC SPERRY AUTOPILOT ONLY . . . . .                     | 27-10-01-02  | -020  |
| SWITCH-AUDIO MIC-NAT AA97 . . . . .                                     | 23-50-07-01  | -001  |
| SWITCH-CABIN HEATER . . . . .   | 24-50-00-01  | -028  |
| SWITCH-COPILOT INTERPHONE . . . . .                                     | 27-10-01-02  | -077  |
| SWITCH-DEICE PRESSURE . . . . .   | 30-10-01-01  | -018  |
| SWITCH-EXIT SIGN . . . . .  | 24-50-00-01  | -005A |
| SWITCH-FUEL PRESSURE . . . . .  | 28-21-00-01  | -096A |
| SWITCH-FUEL PRESSURE SC012 . . . . .                                    | 28-21-00-02  | -096A |
| SWITCH-INFLIGHT MOVEABLE DOOR . . . . .                                 | 52-32-00-02  | -086  |
| SWITCH-INFLIGHT MOVEABLE DOOR AFT LH DOOR JAMB . . . . .                | 52-32-00-02  | -089  |
| SWITCH-JUMP LIGHT . . . . .   | 52-32-00-02  | -100  |
| SWITCH-LIMIT LOWER INFLIGHT MOVEABLE DOOR FSO BZ-2RW825551-A2 . . . . . | 52-32-00-02  | -117  |
| SWITCH-LIMIT LOWER INFLIGHT MOVEABLE DOOR . . . . .                     | 52-32-00-02  | -117A |
| SWITCH-LIMIT UPPER INFLIGHT MOVEABLE DOOR . . . . .                     | 52-32-00-02  | -109  |
| SWITCH-LOW VACUUM FSO SL-PSF109-1 . . . . .                             | 34-23-00-01  | -030  |
| SWITCH-PRIMARY AND SECONDARY CONSOLE LIGHT . . . . .                    | 33-20-00-04  | -007  |
| SWITCH-PUSH BUTTON PASSENGER READING LIGHT . . . . .                    | 33-20-00-03  | -007  |
| SWITCH-READING LIGHT . . . . .  | 33-20-00-02  | -008  |
| SWITCH-STANDBY ALTERNATOR OVERHEAT SN006 . . . . .                      | 24-36-02-01  | -001  |
| SWITCH-TEMPERATURE BLEED AIR . . . . .                                  | 21-41-00-01  | -014  |

**T**

|  |             |      |
|--|-------------|------|
| TAB ACTUATOR ASSY-AILERON TRIM . . . . .                           | 27-10-03-03 | -005 |
| TAIL NAVIGATION LIGHT INSTALLATION . . . . .                       | 33-41-00-02 | -    |
| TAILCONE DORSAL ASSEMBLY . . . . .                                 | 53-50-00-01 | -    |
| TAILCONE FLOORBOARD AND SHELF INSTALLATION - ARTEX ELT . . . . .   | 53-20-02-02 | -    |
| TAILCONE FLOORBOARD INSTALLATION . . . . .                         | 53-20-02-01 | -    |
| TAILCONE SHELF ASSEMBLY . . . . .                                  | 53-20-05-01 | -    |
| TAILCONE SKINS AND COMPONENTS . . . . .                            | 53-30-02-01 | -    |
| TAILCONE STRINGERS AND COMPONENTS . . . . .                        | 53-14-00-03 | -    |
| TAILCONE STRUCTURE . . . . .                                       | 53-14-00-01 | -    |
| TAILCONE STRUCTURE - NOT APPLICABLE TO PASSENGER VERSION . . . . . | 53-14-00-02 | -    |
| TANK AND EQUIPMENT ASSY . . . . .                                  | 30-10-02-06 | -001 |
| TANK AND EQUIPMENT ASSY . . . . .                                  | 30-10-02-07 | -001 |
| TANK ASSY . . . . .  | 30-10-02-06 | -006 |
| TANK ASSY . . . . .  | 30-10-02-07 | -006 |
| TAS DIRECTIONAL ANTENNA . . . . .                                  | 34-50-05-01 | -001 |
| TEMP CONTROLLER-WINDSHIELD ANTI-ICE . . . . .                      | 30-40-00-01 | -077 |
| THERMOSTAT-TEMP TL001 . . . . .                                    | 27-31-00-01 | -015 |
| THREADED ROD . . . . .   | 25-22-00-02 | -009 |
| THREE POINT AND 400 ENCODING ALTIMETER INSTALLATION . . . . .      | 34-10-00-05 | -    |
| TIE DOWN ASSY PASSENGER VERSION . . . . .                          | 53-30-02-01 | -021 |
| TIMER-DEICE . . . . .  | 30-10-01-01 | -041 |
| TIMER BOX . . . . .  | 30-10-02-06 | -246 |
| TIMER BOX . . . . .  | 30-10-02-07 | -246 |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE  | CH SEC SUBJ FIG | ITEM  |
|---|-----------------|-------|
| <b>T</b> Continued  |                 |       |
| TIMER LITE-CABIN/COURTESY LIGHTS .....  | 33-20-00-01     | -093  |
| TIMER-PROPELLER DEICE .....   | 30-60-00-01     | -026  |
| TIMER-PROPELLER DEICE MECHANICAL FSO C-45133 .....  | 30-60-00-02     | -018  |
| TIP ASSY-STABILIZER FSO 2632011-19 .....  | 55-10-00-02     | -189  |
| TIP ASSY-STABILIZER .....   | 55-10-00-02     | -189A |
| TIP ASSY-FIN W/O BEACON .....   | 55-30-00-01     | -096  |
| TIP ASSY-EXTENDED FIN W/O BEACON .....  | 55-30-00-01     | -097  |
| TIP ASSY-FIN WITH FLASHING BEACON .....   | 55-30-00-01     | -118  |
| TIP ASSY-EXTENDED FIN WITH FLASHING BEACON .....  | 55-30-00-01     | -119  |
| TIP ASSY-EXTENDED FIN W/O FLASHING BEACON .....   | 55-30-00-02     | -096  |
| TIP ASSY-EXTENDED FIN W/FLASHING BEACON FSO 2631035-9 .....                               | 55-30-00-02     | -115  |
| TIP ASSY-WING LH .032 2024 T42 .....  | 57-30-00-01     | -001  |
| TIP ASSY-WING RH .032 2024 T42 .....  | 57-30-00-01     | -002  |
| TIP ASSY-FIN W/O FLASHING BEACON .....  | 55-30-00-03     | -097A |
| TIP ASSY-VERTICAL FIN W/FLASHING BEACON FSO 2631039-15 .....                              | 55-30-00-03     | -096A |
| TIP ASSY-VERTICAL FIN-W/FLASHING BEACON FSO 2631039-15 .....                              | 55-30-00-04     | -096A |
| TIP ASSY-VERTICAL FIN-FSO 2631039-15 .....  | 55-30-00-04     | -096B |
| TIP ASSY-VERTICAL FIN .....   | 55-30-00-04     | -096C |
| TIP ASSY-VERTICAL FIN-W/O FLASHING BEACON .....   | 55-30-00-04     | -097A |
| TKS ACCESSORY PALLET .....  | 30-10-02-06     | -225  |
| TKS ACCESSORY PALLET .....  | 30-10-02-07     | -225  |
| TKS COMPONENTS - WING AND TAIL PANEL INSTALLATION .....                                   | 30-10-02-02     | -     |
| TKS FAIRING INSTALLATION .....  | 53-30-01-03     | -     |
| TKS FIREWALL FORWARD INSTALLATION .....   | 30-10-02-05     | -     |
| TKS FLUID TANK & EQUIPMENT PACK INSTALLATION .....  | 30-10-02-08     | -     |
| TKS FUEL SUMP INSTALLATION - FAIRING .....  | 28-22-01-01     | -     |
| TKS OIL INDICATING .....  | 79-30-00-02     | -     |
| TKS VORTEX GENERATOR INSTALLATION .....   | 30-10-02-02A    | -     |
| TKS WINDSHIELD ICE DETECT LIGHT INSTALLATION .....  | 33-10-00-06     | -     |
| TKS WINDSHIELD SPRAYBAR INSTALLATION .....  | 30-40-01-01     | -     |
| TORQUE INDICATOR MECHANICAL .....   | 77-11-00-01     | -002A |
| TORQUE INDICATOR EI005 .....  | 77-11-00-02     | -001  |
| TRANSMISSION ASSY & JACK SCREW .....  | 27-50-01-01     | -011  |
| TRANSMITTER-FUEL INBOARD .....  | 28-41-00-01     | -001  |
| TRANSMITTER-FUEL INBOARD .....  | 28-41-00-01     | -001A |
| TRANSMITTER-FUEL OUTBOARD .....   | 28-41-00-01     | -002  |
| TRANSMITTER-TORQUE PRESSURE .....   | 77-12-00-01     | -016  |
| TRANSMITTER-FUEL FLOW .....   | 73-32-00-01     | -006  |
| TRANSPONDER-GTX 33 #1 ALT FOR 011-00779-10 (HD MOD 2 ONLY) ALT FOR S3100-515 .....        | 34-51-17-01     | -001  |
| TRANSPONDER-GTX 33 #1 ALT FOR 011-00779-10 (MOD 1 & 2 ONLY) .....                         | 34-51-17-01     | -001A |
| TRANSPONDER-GTX 33 ES #1 OPTION ALT FOR 011-00779-30(MOD 1 & 2 ONLY) .....                | 34-51-17-01     | -001B |
| TRANSPONDER-GTX 33 #2 ALT FOR 011-00779-10 (HD MOD 2 ONLY) OPTION ALT FOR S3100-515 ..... | 34-51-17-01     | -002  |
| TRANSPONDER-GTX 33 #2 ALT FOR 011-00779-10 (MOD 1 & 2 ONLY) OPTION .....                  | 34-51-17-01     | -002A |
| TRANSPONDER-GTX 33 ES #2 OPTION ALT FOR 011-00779-30(MOD 1 & 2 ONLY) .....                | 34-51-17-01     | -002B |
| TRIM TAB ASSY-ELEVATOR LH .016 2024 T3 .....  | 55-20-00-02     | -152  |
| TRIM TAB ASSY-ELEVATOR LH .016 2024 T42 .....   | 55-20-00-01     | -152  |
| TRIM TAB ASSY-ELEVATOR RH .016 2024 T3 .....  | 55-20-00-02     | -153  |
| TRIM TAB ASSY-ELEVATOR RH .016 2024 T42 .....   | 55-20-00-01     | -153  |
| TRIM WHEEL ASSY-AILERON .....   | 27-10-03-02     | -001  |
| TRIM WHEEL ASSY-AILERON .....   | 27-10-03-02A    | -001  |
| TRUNNION ASSY-LH MAIN GEAR FSO 2641012-15 .....   | 32-10-00-01     | -003  |
| TRUNNION ASSY-RH MAIN GEAR FSO 2641012-16 .....   | 32-10-00-01     | -004  |
| TUBE .....  | 71-70-00-02     | -105  |
| TUBE ASSY-FUEL ECOLOGY .....  | 28-21-00-03     | -010  |
| TUBE ASSY-FUEL ECOLOGY .....  | 28-21-00-03     | -016  |
| TUBE ASSY-FUEL ECOLOGY .....  | 28-21-00-03     | -017  |
| TUBE ASSY-FUEL ECOLOGY .....  | 28-21-00-03     | -023  |
| TUBE ASSY-LH AND RH FSO 2651024-10 .....  | 71-20-00-01     | -091A |
| TUBE ASSY .....   | 71-70-00-02     | -022  |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE | CH | SEC | SUBJ | FIG | ITEM |
|--------------|----|-----|------|-----|------|
|--------------|----|-----|------|-----|------|

**T** Continued

|   |             |       |
|---|-------------|-------|
| TUBE ASSY-FUEL MAIN DRAIN.....                      | 71-70-00-02 | -050  |
| TUBE ASSY-S/G DRAIN .....                           | 71-70-00-02 | -098  |
| TUBE ASSY.....                                      | 71-70-00-02 | -106  |
| TUBE ASSY-PRESSURE.....                             | 77-11-00-02 | -010  |
| TUBE ASSY-VENT .....                                | 77-11-00-02 | -012  |
| TUBE ASSY-TORQUE GAUGE.....                         | 77-11-00-02 | -018  |
| TUBE ASSY-TORQUE GAUGE.....                         | 77-11-00-02 | -019  |
| TUBE ASSY-TORQUE GAUGE.....                         | 77-11-00-02 | -030  |
| TUBE ASSY.....                                      | 77-11-00-02 | -035  |
| TUBE ASSY.....                                      | 79-20-00-03 | -044  |
| TUBE ASSY.....                                      | 79-20-00-03 | -087  |
| TUBE ASSY.....                                      | 79-20-00-03 | -088  |
| TUBE ASSY.....                                      | 79-20-00-03 | -093  |
| TUBE ASSY.....                                      | 79-20-00-03 | -096  |
| TUBE ASSY-LH FSO 2651024-10.....                    | 71-20-00-01 | -090  |
| TUBE ASSY-RH FSO 2651024-10.....                    | 71-20-00-01 | -091  |
| TUBE WELD ASSY.....                                 | 71-60-01-02 | -012  |
| TURN & BANK INDICATOR C661003-0506 1394T100-7A..... | 34-10-00-01 | -092  |
| TURN & BANK INDICATOR C661003-0506 1394T100-7A..... | 34-10-00-01 | -093  |
| TURN COORDINATOR ALT FOR 1394T100-7B.....           | 34-10-00-01 | -093A |
| TURN COORDINATOR ALT FOR 1394T100-7A.....           | 34-10-00-01 | -093B |
| TURN COORDINATOR ALT FOR 1394T100-7B.....           | 34-10-00-02 | -014A |
| TURN COORDINATOR ALT FOR 1394T100-7A.....           | 34-10-00-02 | -014B |
| TURN COORDINATOR ALT FOR 1394T100-7B.....           | 34-10-00-03 | -010A |
| TURN COORDINATOR ALT FOR 1394T100-7A.....           | 34-10-00-03 | -010B |
| TURN COORDINATOR FSO 1394T100-7B.....               | 34-10-00-04 | -004A |
| TURN COORDINATOR.....                               | 34-10-00-04 | -004B |

**U**

|   |              |      |
|---|--------------|------|
| U.S. EXTERIOR PLACARDS AND MARKINGS - CABIN DOORS.....                | 11-N-28-01   | -    |
| U.S. EXTERIOR PLACARDS AND MARKINGS - COWLING.....                    | 11-N-24-01   | -    |
| U.S. EXTERIOR PLACARDS AND MARKINGS - EMPENNAGE AND REAR BAGGAGE..... | 11-N-23-01   | -    |
| U.S. EXTERIOR PLACARDS AND MARKINGS - FUSELAGE.....                   | 11-N-22-01   | -    |
| U.S. EXTERIOR PLACARDS AND MARKINGS - LANDING GEAR.....               | 11-N-27-01   | -    |
| U.S. EXTERIOR PLACARDS AND MARKINGS - TKS.....                        | 11-N-22-02   | -    |
| U.S. EXTERIOR PLACARDS AND MARKINGS - TKS.....                        | 11-N-25-02   | -    |
| U.S. EXTERIOR PLACARDS AND MARKINGS - WINGS.....                      | 11-N-25-01   | -    |
| U.S. INTERIOR PLACARDS AND MARKINGS - CABIN.....                      | 11-N-32-01   | -    |
| U.S. INTERIOR PLACARDS AND MARKINGS - CABIN DOORS.....                | 11-N-38-01   | -    |
| U.S. INTERIOR PLACARDS AND MARKINGS - FLIGHT COMPARTMENT.....         | 11-N-31-01   | -    |
| U.S. INTERIOR PLACARDS AND MARKINGS - TKS.....                        | 11-N-31-02   | -    |
| UNION.....  | 79-30-00-04  | -011 |
| UNIVERSAL AC OUTLET ASSEMBLY-LH FWD UC017.....                        | 24-20-00-01  | -005 |
| UNIVERSAL AC OUTLET ASSEMBLY-RH FWD UF002.....                        | 24-20-00-01  | -006 |
| UNIVERSAL AC OUTLET ASSEMBLY-LH AFT UC018.....                        | 24-20-00-01  | -007 |
| UNIVERSAL AC OUTLET ASSEMBLY-RH AFT UF003.....                        | 24-20-00-01  | -008 |
| UPHOLSTERY ASSY-BOTTOM.....   | 25-10-00-02A | -075 |
| UPPER BAND ASSY.....  | 71-60-01-02  | -171 |
| UPPER CENTER FUSELAGE STRUCTURE.....                                  | 53-13-00-01  | -    |
| UPPER CENTER FUSELAGE STRUCTURE.....                                  | 53-13-00-02  | -    |
| UPPER COWLS AND DOORS INSTALLATION.....                               | 71-10-00-01  | -    |
| UPPER PANEL.....  | 79-20-00-03  | -121 |

**V**

|  |             |      |
|--|-------------|------|
| V-BELT-AIR CONDITIONER COMPRESSOR FSO 46-4686-1..... | 21-51-01-01 | -094 |
|--|-------------|------|

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE   | CH SEC SUBJ FIG | ITEM  |
|--|-----------------|-------|
| <b>V Continued</b>   |                 |       |
| V-BELT .....   | 21-51-01-02     | -102  |
| V-BELT .....   | 21-51-01-02A    | -102  |
| VACUUM SYSTEM .....  | 34-23-00-01     | -031  |
| VACUUM SYSTEM .....  | 37-10-00-01     | -     |
| VALVE-FLOW CONTROL .....                                       | 21-41-01-02     | -001A |
| VALVE-SOLENOID .....   | 21-41-01-02     | -002  |
| VALVE-AIR CONDITIONER DISCHARGE LINE .....                     | 21-51-00-01     | -235  |
| VALVE-AIR CONDITIONER SUCTION LINE .....                       | 21-51-00-01     | -239  |
| VALVE- COMPRESSOR DISCHARGE .....                              | 21-51-01-01     | -002  |
| VALVE-COMPRESSOR SUCTION .....                                 | 21-51-01-01     | -006  |
| VALVE-LH & RH EVAPORATOR EXPANSION .....                       | 21-51-03-03     | -008  |
| VALVE-EVAPORATOR EXPANSION .....                               | 21-51-03-04     | -003  |
| VALVE-EVAPORATOR EXPANSION .....                               | 21-51-03-04     | -003A |
| VALVE-EVAPORATOR EXPANSION ALT FOR 1134218 .....               | 21-51-03-04     | -003B |
| VALVE-OIL DRAIN .....  | 71-70-00-01     | -236  |
| VALVE-FLAP CHECK .....   | 79-20-00-03     | -082  |
| VALVE ASSY-WING VENT LH FSO 2611165-45 .....                   | 21-21-01-01     | -004  |
| VALVE ASSY-WING VENT RH FSO 2611165-46 .....                   | 21-21-01-01     | -005  |
| VALVE ASSY-LH WING VENT .....                                  | 21-21-01-02     | -002A |
| VALVE ASSY-RH WING VENT .....                                  | 21-21-01-02     | -003A |
| VALVE ASSY-LH WING VENT .....                                  | 21-21-01-03     | -004  |
| VALVE ASSY-RH WING VENT .....                                  | 21-21-01-03     | -006  |
| VALVE ASSY-WING VENT LH .....                                  | 21-21-01-04     | -002  |
| VALVE ASSY-WING VENT RH .....                                  | 21-21-01-04     | -003  |
| VALVE ASSY-LH WING VENT .....                                  | 21-21-02-01     | -004  |
| VALVE ASSY-RH WING VENT .....                                  | 21-21-02-01     | -007  |
| VALVE ASSY-LH WING VENT .....                                  | 21-21-03-01     | -004  |
| VALVE ASSY-RH WING VENT .....                                  | 21-21-03-01     | -007  |
| VALVE ASSY-LH WING VENT .....                                  | 21-21-03-02     | -082  |
| VALVE ASSY-RH WING VENT .....                                  | 21-21-03-02     | -084  |
| VALVE ASSY-WING VENT LH .....                                  | 21-21-03-03     | -156A |
| VALVE ASSY-WING VENT RH .....                                  | 21-21-03-03     | -157A |
| VALVE ASSY-SWING CHECK .....                                   | 28-22-00-01     | -016A |
| VALVE ASSY-FUEL DRAIN WITH CARGO POD .....                     | 28-22-00-01     | -156  |
| VALVE ASSY-SHUT OFF .....                                      | 79-20-00-03     | -037  |
| VALVE ASSY- FUEL VENT .....                                    | 28-10-03-01     | -013  |
| VALVE ASSY-DEFROSTER .....                                     | 21-22-03-01     | -078  |
| VALVE ASSY-DIVERTER .....                                      | 21-41-02-01     | -001  |
| VALVE ASSY-DRAIN EPA CAN .....                                 | 73-10-00-02     | -013  |
| VALVE ASSY-FILLER OXYGEN .....                                 | 35-11-00-01     | -002  |
| VALVE ASSY-FILLER OXYGEN .....                                 | 35-11-00-02     | -001  |
| VALVE ASSY-FLOW CONTROL .....                                  | 21-41-01-01     | -003  |
| VALVE ASSY-HEATER .....  | 21-22-03-01     | -004  |
| VALVE ASSY-PARKING BRAKE .....                                 | 32-42-00-01     | -008  |
| VALVE-DEICE .....  | 30-10-03-01     | -009  |
| VALVE-DEICE .....  | 30-10-03-02     | -009  |
| VALVE-FUEL DRAIN 1 LH & 1 RH .....                             | 28-21-00-01     | -252  |
| VALVE-FUEL DRAIN W/O CARGO POD .....                           | 28-22-00-01     | -028  |
| VALVE-SWING CHECK .....  | 28-21-00-01     | -094  |
| VALVE-SWING CHECK .....  | 28-21-00-02     | -094  |
| VALVE-VACUUM RELIEF .....                                      | 34-23-00-01     | -028  |
| VALVE-VACUUM RELIEF .....                                      | 34-23-00-02     | -026  |
| VALVE-VACUUM RELIEF .....                                      | 34-24-00-01     | -027  |
| VALVE-VACUUM RELIEF .....                                      | 34-24-00-02     | -030  |
| VARIABLE RESISTOR-PRIMARY AND SECONDARY CONSOLE LIGHTING ..... | 33-20-00-04     | -003  |
| VARISTOR ASSY-METAL OXIDE .....                                | 30-60-00-01     | -035A |
| VENT TUBE ASSY .....   | 71-70-00-02     | -014  |
| VENT TUBE ASSY .....   | 71-70-00-02     | -095  |
| VENT WINDOW ASSY LH ONLY .....                                 | 56-30-00-01     | -005A |
| VENTILATION FAN INSTALLATION .....                             | 21-21-04-01     | -     |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE  | CH           | SEC | SUBJ | FIG | ITEM  |
|---|--------------|-----|------|-----|-------|
| <b>V Continued</b>  |              |     |      |     |       |
| VERTICAL FIN ASSY .....   | 55-30-00-01  |     |      |     | -009  |
| VERTICAL FIN ASSY FSO 2631000-28 .....                          | 55-30-00-04  |     |      |     | -008B |
| VERTICAL FIN ASSY REF 2630000 .....                             | 55-30-00-04  |     |      |     | -008C |
| VERTICAL FIN ASSY .....   | 55-30-00-04  |     |      |     | -008D |
| VERTICAL FIN INSTALLATION .....                                 | 55-30-00-01  |     |      |     | -     |
| VERTICAL FIN INSTALLATION .....                                 | 55-30-00-02  |     |      |     | -     |
| VERTICAL FIN INSTALLATION .....                                 | 55-30-00-03  |     |      |     | -     |
| VERTICAL FIN INSTALLATION .....                                 | 55-30-00-04  |     |      |     | -     |
| VORTEX GENERATOR .....  | 55-10-01-01  |     |      |     | -042  |
| <b>W</b>  |              |     |      |     |       |
| WARNING HORN INSTALLATION - KAP 150 AND KFC 150 AUTOPILOT ..... | 22-40-00-01  |     |      |     | -     |
| WASHER BETWEEN GAGE AND SUPPORT ASSY .....                      | 35-14-00-01  |     |      |     | -005  |
| WASHER .....  | 76-10-01-02  |     |      |     | -003  |
| WASHRING ASSY-COMPRESSOR .....                                  | 71-41-00-01  |     |      |     | -001  |
| WBA-DELAY RELAY SMASS JC095 .....                               | 24-51-00-01  |     |      |     | -007  |
| WBA-OIL PRESSURE SWITCH-SMASSY .....                            | 79-30-00-04  |     |      |     | -003  |
| WBA-PASS DOOR SWITCH-SMASSY ZF007 .....                         | 33-20-00-01A |     |      |     | -019  |
| WEIGHT-RUDDER BALANCE .....                                     | 55-40-00-06  |     |      |     | -079A |
| WEIGHT ASSY-AILERON BALANCE .....                               | 57-60-00-01  |     |      |     | -022  |
| WEIGHT-RUDDER BALANCE .....                                     | 55-40-00-02  |     |      |     | -083A |
| WELDMENT ASSY .....   | 78-10-00-05  |     |      |     | -001  |
| WET TORQUE INDICATING SYSTEM .....                              | 77-11-00-01  |     |      |     | -     |
| WHEEL AND TIRE ASSEMBLY - MAIN GEAR .....                       | 32-40-00-01  |     |      |     | -     |
| WHEEL AND TIRE ASSEMBLY - NOSE GEAR .....                       | 32-40-00-02  |     |      |     | -     |
| WHEEL ASSY-MAIN GEAR .....                                      | 32-40-00-01  |     |      |     | -009  |
| WHEEL ASSY-NOSE GEAR ALT FOR 40-177A .....                      | 32-40-00-02  |     |      |     | -006  |
| WHEEL ASSY-NOSE GEAR ALT FOR C163001-0901 .....                 | 32-40-00-02  |     |      |     | -006A |
| WHEEL ASSY-ELEVATOR TRIM .....                                  | 27-30-02-02  |     |      |     | -002  |
| WHEEL INSTALLATION-ELEVATOR TRIM .....                          | 27-30-03-01  |     |      |     | -001  |
| WHEEL-RUDDER TRIM .....   | 27-20-02-01  |     |      |     | -005A |
| WICK-STATIC DISCHARGER AILERON LH AND RH .....                  | 23-60-00-01  |     |      |     | -016  |
| WICK-STATIC DISCHARGER ELEVATOR LH AND RH .....                 | 23-60-00-01  |     |      |     | -010  |
| WICK-STATIC DISCHARGER RUDDER .....                             | 23-60-00-01  |     |      |     | -013  |
| WICK-STATIC DISCHARGER STINGER .....                            | 23-60-00-01  |     |      |     | -007  |
| WICK-STATIC DISCHARGER USED WITH LONG CHORD RUDDER .....        | 23-60-00-01  |     |      |     | -001  |
| WINDOW-CABIN LH .....   | 56-20-00-01  |     |      |     | -006  |
| WINDOW-CABIN RH .....   | 56-20-00-01  |     |      |     | -007  |
| WINDOW-CABIN LH .....   | 56-20-00-02  |     |      |     | -011  |
| WINDOW-CABIN RH .....   | 56-20-00-02  |     |      |     | -012  |
| WINDOW-CREW DOOR LH .....                                       | 56-30-00-01  |     |      |     | -001  |
| WINDOW-CREW DOOR RH .....                                       | 56-30-00-01  |     |      |     | -002  |
| WINDOW-PASSENGER DOOR .....                                     | 56-30-00-01  |     |      |     | -038  |
| WINDOW-CARGO DOOR .....   | 56-30-00-02  |     |      |     | -001  |
| WINDOW PLUG INSTALLATION .....                                  | 56-21-00-01  |     |      |     | -     |
| WINDOW PLUG INSTALLATION - PASSENGER VERSION .....              | 56-21-00-02  |     |      |     | -     |
| WINDSHIELD ANTI-ICE INSTALLATION .....                          | 30-40-00-01  |     |      |     | -     |
| WINDSHIELD INSTALLATION .....                                   | 56-10-00-01  |     |      |     | -     |
| WINDSHIELD PUMP .....   | 30-10-02-06  |     |      |     | -242  |
| WINDSHIELD PUMP .....   | 30-10-02-07  |     |      |     | -242  |
| WING ASSY-LH .....  | 57-10-01-01  |     |      |     | -001  |
| WING ASSY-RH .....  | 57-10-01-01  |     |      |     | -002  |
| WING INSPECTION LIGHT FC009 .....                               | 33-44-00-03  |     |      |     | -001  |
| WING INSTALLATION .....   | 57-10-00-01  |     |      |     | -     |
| WING LEADING EDGE ASSEMBLIES .....                              | 57-40-00-01  |     |      |     | -     |
| WING NAVIGATION AND STROBE LIGHT INSTALLATION .....             | 33-41-00-01  |     |      |     | -     |
| WING SKINS AND COMPONENTS .....                                 | 57-11-00-01  |     |      |     | -     |

CESSNA®  
**MODEL 208**  
 ILLUSTRATED PARTS CATALOG

| NOMENCLATURE   | CH SEC SUBJ FIG | ITEM |
|--|-----------------|------|
| <b>W</b> Continued   |                 |      |
| WING SPOILER INSTALLATION .....  | 57-70-00-01     | -    |
| WING STRUCTURE ASSEMBLY .....  | 57-10-01-01     | -    |
| WING STRUCTURE COMPONENTS - FUEL BAY CENTER INBOARD.....                                       | 57-10-02-02     | -    |
| WING STRUCTURE COMPONENTS - FUEL BAY CENTER OUTBOARD.....                                      | 57-10-02-03     | -    |
| WING STRUCTURE COMPONENTS - FUEL BAY INBOARD .....   | 57-10-02-01     | -    |
| WING STRUCTURE COMPONENTS - FUEL BAY OUTBOARD.....   | 57-10-02-04     | -    |
| WING STRUT INSTALLATION.....   | 57-10-04-01     | -    |
| WING TIP INSTALLATION .....  | 57-30-00-01     | -    |
| WING TKS DOUBLER INSTALLATION WS 44.00 TO WS 104.75- .....                                     | 57-10-01-02     | -    |
| WINTER PANEL-INLET .....   | 71-10-00-04     | -091 |
| WINTER PANEL-OUTLET .....  | 71-10-00-04     | -092 |
| WIRE-OXYGEN CONTROL 192.00 IN LG BKI 208 .....   | 35-14-00-01     | -151 |
| WIRE BUNDLE ASSY CONTACTOR TO BATTERY .....  | 24-50-02-01     | -160 |
| WIRE BUNDLE ASSY CONTACTOR TO BATTERY USED WITH 300 AMP STARTER/<br>GENERATOR .....            | 24-50-02-01     | -162 |
| WIRE BUNDLE ASSY CONTACTOR TO EXTERNAL POWER RECPT .....                                       | 24-50-02-01     | -166 |
| WIRE BUNDLE ASSY CONTACTOR TO EXTERNAL POWER RECPT USED WITH 300 AMP<br>STARTER/GENERATOR..... | 24-50-02-01     | -168 |
| WIRE BUNDLE ASSY CONTACTOR TO STARTER/GENERATOR.....   | 24-50-02-01     | -154 |
| WIRE BUNDLE ASSY CONTACTOR TO STARTER/GENERATOR USED WITH 300 AMP<br>STARTER/GENERATOR.....    | 24-50-02-01     | -156 |
| WIRE HARNESS-PROPELLER DEICE .....   | 30-60-00-01     | -021 |
| WIRE HARNESS-PROPELLER DEICE .....   | 30-60-00-02     | -005 |

**Y**

|                                    |              |   |
|------------------------------------|--------------|---|
| YAW DAMPER SERVO INSTALLATION..... | 22-10-05-01  | - |
| YAW SERVO INSTALLATION .....       | 22-10-05-01A | - |