

CHAPTER

24

ELECTRICAL POWER

RECORD OF TEMPORARY REVISIONS

[illegible]

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

CHAPTER/ SECTION/ SUBJECT	START PAGE OR FIGURE	NUMBER OF PAGES	DATE
24 - TITLE		1	
24 - LIST OF EFFECTIVE PAGES	Page 1	1	Nov 29, 2022
24 - TABLE OF CONTENTS	Page 1	2	Nov 29, 2022
24-20-00	Figure 01	3	Nov 4, 2021
24-20-01	Figure 01	3	Nov 4, 2021
24-21-00	Figure 01	3	Nov 4, 2021
24-30-00	Figure 01	4	Nov 4, 2021
24-30-00	Figure 02	5	Nov 4, 2021
24-30-00	Figure 03	4	Nov 4, 2021
24-31-00	Figure 01	3	Nov 4, 2021
24-34-00	Figure 01	8	Nov 4, 2021
24-36-00	Figure 01	5	Nov 4, 2021
24-36-01	Figure 01	12	Nov 29, 2022
24-36-01	Figure 02	3	Nov 29, 2022
24-36-02	Figure 01	3	Nov 4, 2021
24-36-02	Figure 01A	3	Nov 4, 2021
24-36-02	Figure 02	4	Nov 29, 2022
24-37-00	Figure 01	3	Nov 4, 2021
24-40-00	Figure 01	4	Nov 29, 2022
24-50-00	Figure 01	8	Nov 4, 2021
24-50-01	Figure 01	7	Nov 4, 2021
24-50-01	Figure 01A	5	Nov 4, 2021
24-50-01	Figure 02	8	Nov 4, 2021
24-50-01	Figure 03	7	Nov 4, 2021
24-50-02	Figure 01	16	Nov 29, 2022
24-50-03	Figure 01	4	Nov 4, 2021
24-50-03	Figure 02	4	Nov 4, 2021
24-51-00	Figure 01	3	Nov 4, 2021
24-51-00	Figure 02	3	Nov 4, 2021
24-52-01	Figure 01	3	Nov 4, 2021
24-52-03	Figure 01	4	Nov 4, 2021
24-52-04	Figure 01	4	Nov 4, 2021
24-52-05	Figure 01	4	Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

<u>SUBJECT</u>	<u>LOCATION</u>	<u>EFFECTIVITY</u>	
		<u>START</u>	<u>END</u>
AC POWER OUTLET INSTALLATION	24-20-00 Figure 01	(208B) 5000	& ON
AVIONICS GROUNDING BLOCK INSTALLATION	24-20-01 Figure 01	(208) 0001 (208B) 0180	& ON & ON
INVERTER INSTALLATION - 500VA	24-21-00 Figure 01	(208B) 5000	& ON
DC POWER OUTLET INSTALLATION - COCKPIT	24-30-00 Figure 01	(208) 0396 (208B) 1171	& ON & ON
DC POWER OUTLET INSTALLATION - COCKPIT	24-30-00 Figure 02	(208) 0001 (208) 0001 (208B) 0001 (208B) 0001	0395 0395 1170 1170
DC POWER OUTLET INSTALLATION - CABIN	24-30-00 Figure 03	(208) 0001 (208) 0001 (208B) 0001 (208B) 0001	& ON & ON & ON & ON
GENERATOR CONTROL UNIT ASSEMBLY	24-31-00 Figure 01	(208) 0001 (208B) 0001	& ON & ON
BATTERY INSTALLATION	24-34-00 Figure 01	(208) 0001 (208B) 0001	& ON & ON
STANDBY ELECTRICAL SYSTEM	24-36-00 Figure 01	(208) 0001 (208B) 0001	& ON & ON
STANDBY ALTERNATOR INSTALLATION	24-36-01 Figure 01	(208) 0001 (208B) 0001	& ON & ON
STANDBY ALTERNATOR INSTALLATION	24-36-01 Figure 02	(208B) 5000	& ON
STANDBY ALTERNATOR OVERHEAT WARNING SYSTEM - BRITISH CERTIFIED AIRPLANES	24-36-02 Figure 01	(208) 0240 (208B) 0365	0499 1999
STARTER-GENERATOR OVERHEAT WARNING SYSTEM	24-36-02 Figure 01A	(208B) 2138	& ON
STANDBY ALTERNATOR SHROUD INSTALLATION - BRITISH CERTIFIED AIRPLANES	24-36-02 Figure 02	(208) 0259 (208) 0417 (208B) 0560	0359 0499 1999
ELECTRICAL MONITORING	24-37-00 Figure 01	(208) 0001 (208B) 0001	0499 1999
EXTERNAL POWER SYSTEM COMPONENTS	24-40-00 Figure 01	(208) 0001 (208B) 0001	& ON & ON
LOWER INSTRUMENT PANEL EQUIPMENT	24-50-00 Figure 01	(208) 0001 (208B) 0001	& ON & ON
SWITCH AND CIRCUIT PANEL INSTALLATION	24-50-01 Figure 01	(208) 0001 (208B) 0001	0499 1999
SWITCH AND CIRCUIT PANEL INSTALLATION	24-50-01 Figure 01A	(208) 0500 (208B) 2000	& ON & ON
CIRCUIT BREAKERS	24-50-01 Figure 02	(208) 0001 (208B) 0001	0499 1999
CIRCUIT BREAKERS	24-50-01 Figure 03	(208) 0500 (208B) 2000	& ON & ON
ELECTRIC POWER BOX INSTALLATION	24-50-02 Figure 01	(208) 0001 (208B) 0001	& ON & ON
AVIONICS JUNCTION BOX INSTALLATION	24-50-03 Figure 01	(208) 0001 (208B) 0001	& ON & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

<u>SUBJECT</u>	<u>LOCATION</u>	<u>EFFECTIVITY</u>	
		<u>START</u>	<u>END</u>
AVIONICS JUNCTION BOX INSTALLATION	24-50-03 Figure 02	(208) 0396 (208B) 1165	& ON & ON
FUEL PUMP RELAY INSTALLATION	24-51-00 Figure 01	(208B) 5000	& ON
P3 FLOW CONTROL VALVE RELAY INSTALLATION . .	24-51-00 Figure 02	(208B) 5000	& ON
AUTOPILOT CIRCUIT BREAKERS	24-52-01 Figure 01	(208) 0001 (208B) 0001	& ON & ON
AVIONICS CIRCUIT BREAKER PANEL INSTALLATION - USED WITH SPERRY 300 AND 400 SERIES RADIOS AND KING RADIOS	24-52-03 Figure 01	(208) 0001	0145
AVIONICS CIRCUIT BREAKER PANEL INSTALLATION - USED WITH KING RADIOS ONLY	24-52-04 Figure 01	(208) 0146 (208B) 0180	0499 1999
AVIONICS CIRCUIT BREAKER PANEL INSTALLATION	24-52-05 Figure 01	(208) 0500 (208B) 2000	& ON & ON



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

24-20-00


AC POWER OUTLET INSTALLATION
AIRPLANES (208B) 5000 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


A88098

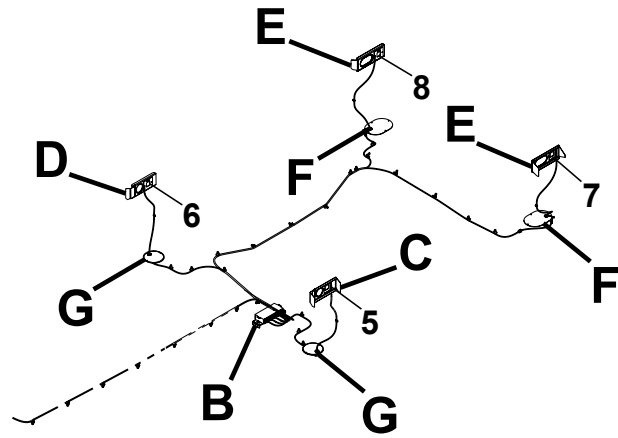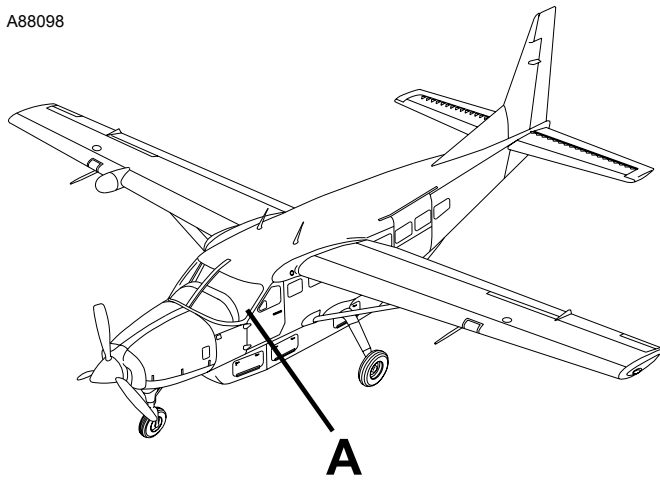


DETAIL A

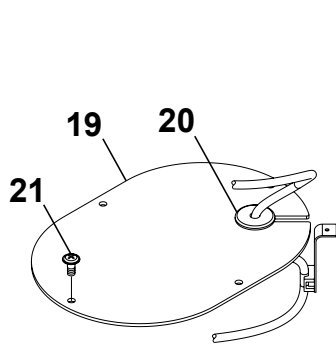


DETAIL F

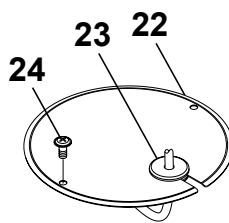


DETAIL G

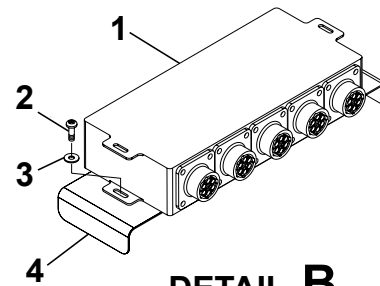

DETAIL B

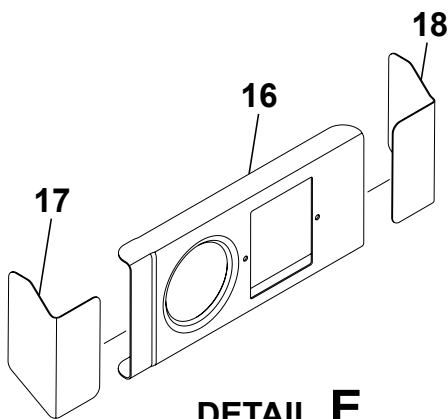


DETAIL E

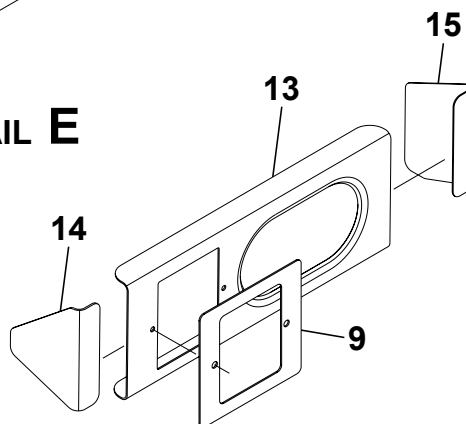

DETAIL D

AC POWER OUTLET INSTALLATION
Figure 01. (Sheet 1)

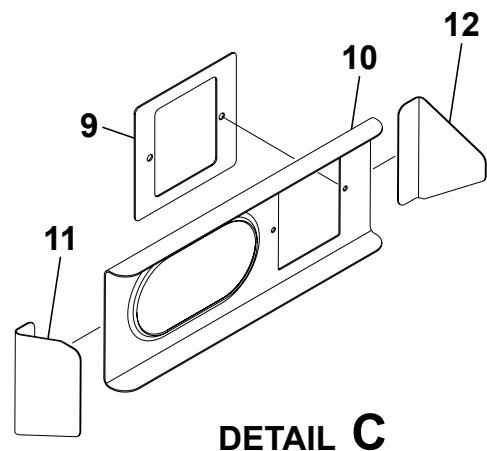

DETAIL C

2610T7004
 A2614T1478
 B2614T1478
 C2614T1478
 D2614T1478
 E2614T1478
 F2614T1478
 G2614T1478

Figure 01
 Page 2

24-20-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

AC POWER OUTLET INSTALLATION

AIRPLANES (208B) 5000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	106282-4	.	AC CONTROLLER - 1IN-4OUT BF001					MCCI	(208B) 5000 & ON	01
		.	ATTACHING PARTS							
2	MS35206-229	.	SCREW						(208B) 5000 & ON	02
3	NAS1149FN632P	.	WASHER					4W953	(208B) 5000 & ON	02
		.	--*--							
4	2670184-19	.	POWER CONTROLLER CLIP ASSEMBLY						(208B) 5000 & ON	02
5	106300-12	.	UNIVERSAL AC OUTLET ASSEMBLY - LEFT FORWARD UC017					MCCI	(208B) 5000 & ON	01
		.	NOTE: -MOUNTING HARDWARE SUPPLIED WITH OUTLET ASSEMBLY							
6	106300-12	.	UNIVERSAL AC OUTLET ASSEMBLY - RIGHT FORWARD UF002					MCCI	(208B) 5000 & ON	01
		.	NOTE: -MOUNTING HARDWARE SUPPLIED WITH OUTLET ASSEMBLY							
7	106300-12	.	UNIVERSAL AC OUTLET ASSEMBLY - LEFT AFT UC018					MCCI	(208B) 5000 & ON	01
		.	NOTE: -MOUNTING HARDWARE SUPPLIED WITH OUTLET ASSEMBLY							
8	106300-12	.	UNIVERSAL AC OUTLET ASSEMBLY - RIGHT AFT UF003					MCCI	(208B) 5000 & ON	01
		.	NOTE: -MOUNTING HARDWARE SUPPLIED WITH OUTLET ASSEMBLY							
9	2670193-1	.	ESCUTCHEON - AC OUTLET						(208B) 5000 & ON	02
10	2670184-5	.	RECEPTACLE PLATE ASSEMBLY - LEFT						(208B) 5000 & ON	01
11	2670184-7	.	RECEPTACLE PLATE CLIP - LEFT FORWARD						(208B) 5000 & ON	01
12	2670184-9	.	RECEPTACLE PLATE CLIP - LEFT AFT						(208B) 5000 & ON	01
13	2670184-5	.	RECEPTACLE PLATE ASSEMBLY - RIGHT						(208B) 5000 & ON	01
14	2670184-8	.	RECEPTACLE PLATE CLIP - RIGHT FORWARD						(208B) 5000 & ON	01
15	2670184-10	.	RECEPTACLE PLATE CLIP - RIGHT AFT						(208B) 5000 & ON	01
16	2670184-23	.	AFT RECEPTACLE PLATE ASSEMBLY - LEFT/RIGHT						(208B) 5000 & ON	02
17	2670184-21	.	AFT RECEPTACLE PLATE CLIP - LEFT/RIGHT FORWARD						(208B) 5000 & ON	02
18	2670184-22	.	AFT RECEPTACLE PLATE CLIP - LEFT/RIGHT AFT						(208B) 5000 & ON	02
19	2670184-27	.	ACCESS COVER						(208B) 5000 & ON	02
20	MS35489-36	.	GROMMET						(208B) 5000 & ON	02
		.	ATTACHING PARTS							
21	AN525-10R7	.	SCREW						(208B) 5000 & ON	04
		.	--*--							
22	2670184-28	.	ACCESS COVER						(208B) 5000 & ON	02
23	MS35489-7	.	GROMMET						(208B) 5000 & ON	02
		.	ATTACHING PARTS							
24	AN525-10R7	.	SCREW						(208B) 5000 & ON	02
		.	--*--							

- ITEM NOT ILLUSTRATED


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

24-20-01

AVIONICS GROUNDING BLOCK INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0180 & ON

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

A24256

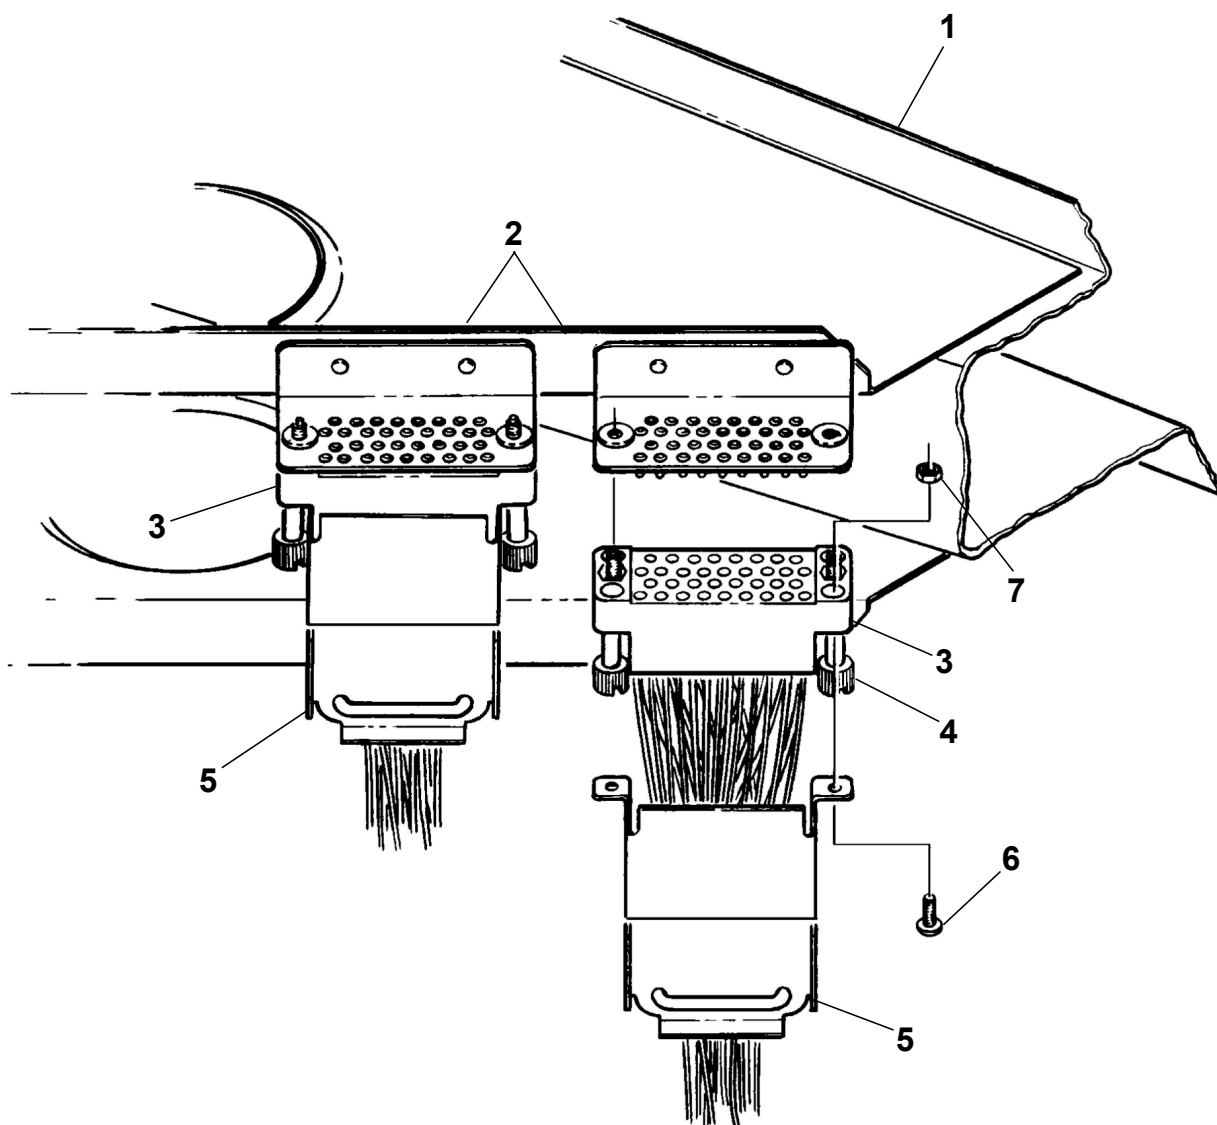

AVIONICS GROUNDING BLOCK INSTALLATION
Figure 01. (Sheet 1)

26181229

Figure 01
Page 2
24-20-01 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

AVIONICS GROUNDING BLOCK INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0180 & ON

		NOMENCLATURE								UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1		.	FIREWALL ASSEMBLY REFER TO 53-10-00 FIGURE 01								RF
2	S2527-2	.	GROUND CONNECTOR							(208) 0001 & ON (208B) 0180 & ON	02
3	S2527-1	.	GROUND BLOCK							(208) 0001 & ON (208B) 0180 & ON	02
			ATTACHING PARTS								
4	203618-1	.	JACKSCREW							00779 (208) 0001 & ON (208B) 0180 & ON	02
			--*--								
5	S2527-3	.	CLAMP							(208) 0001 & ON (208B) 0180 & ON	02
			ATTACHING PARTS								
6	AN515-3R6	.	SCREW							88044 (208) 0001 & ON (208B) 0180 & ON	02
7	AN340-3	.	NUT							88044 (208) 0001 & ON (208B) 0180 & ON	02
			--*--								
- ITEM NOT ILLUSTRATED											



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

24-21-00


INVERTER INSTALLATION - 500VA
AIRPLANES (208B) 5000 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A88064

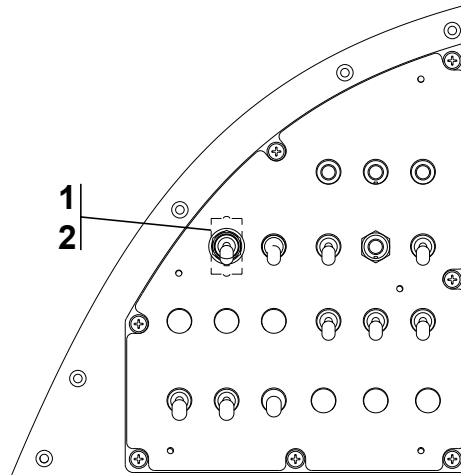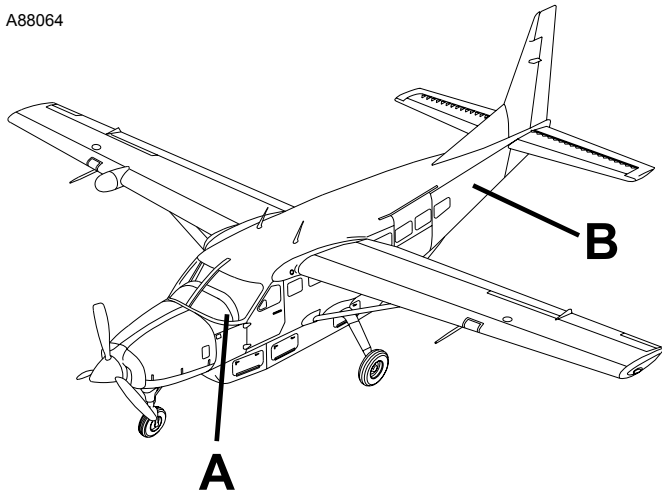

DETAIL A
 View Looking Forward

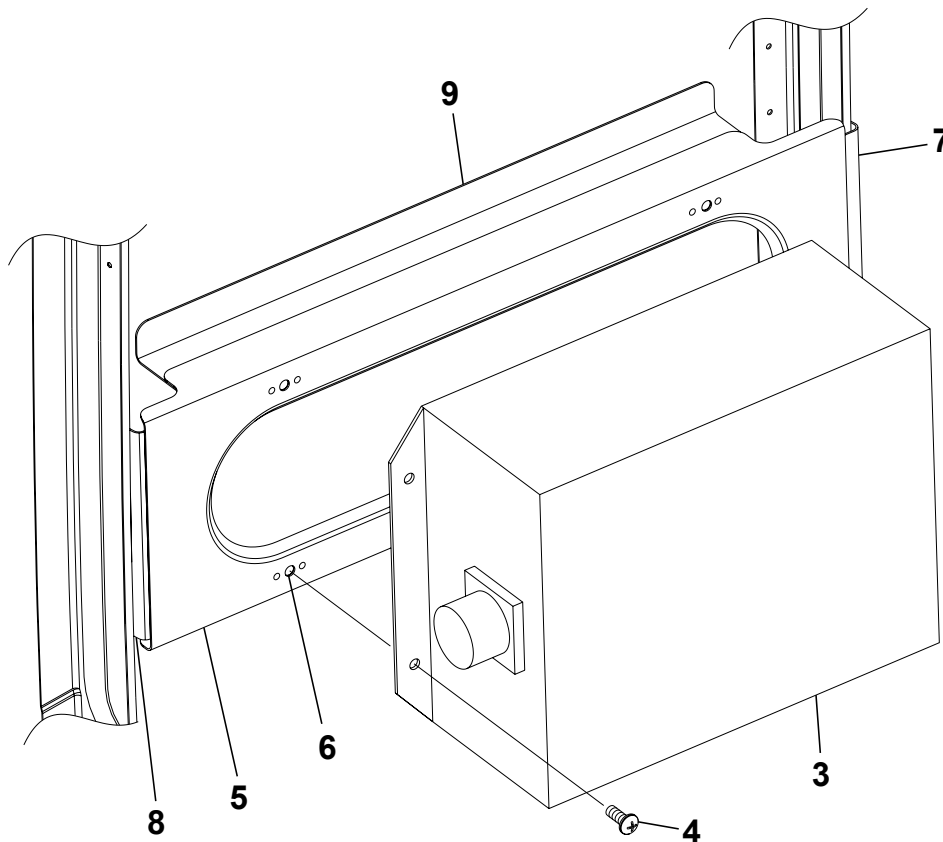

DETAIL B

INVERTER INSTALLATION - 500VA
Figure 01. (Sheet 1)

2610T7004
 A2618T1476
 B2618T1476

Figure 01
 Page 2
24-21-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

INVERTER INSTALLATION - 500VA

AIRPLANES (208B) 5000 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	S382-2	.						SWITCH SI029	91929	(208B) 5000 & ON	01
2	S2742-10	.						TIP	81640	(208B) 5000 & ON	01
3	SS50	.						INVERTER - 500VA UT002	16017	(208B) 5000 & ON	01
								ATTACHING PARTS			
4	MS35207-263	.						SCREW	80205	(208B) 5000 & ON	04
								--*--			
5	2670183-3	.						INVERTER PLATE ASSEMBLY		(208B) 5000 & ON	01
6	MS21075L3N	.						NUTPLATE		(208B) 5000 & ON	04
7	2670183-5	.	.					CLIP		(208B) 5000 & ON	01
8	2670183-6	.	.					CLIP		(208B) 5000 & ON	01
9	2670183-7	.	.					CLIP		(208B) 5000 & ON	01
- ITEM NOT ILLUSTRATED											


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

24-30-00

DC POWER OUTLET INSTALLATION - COCKPIT
AIRPLANES (208) 0396 & ON AND AIRPLANES (208B) 1171 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A59909

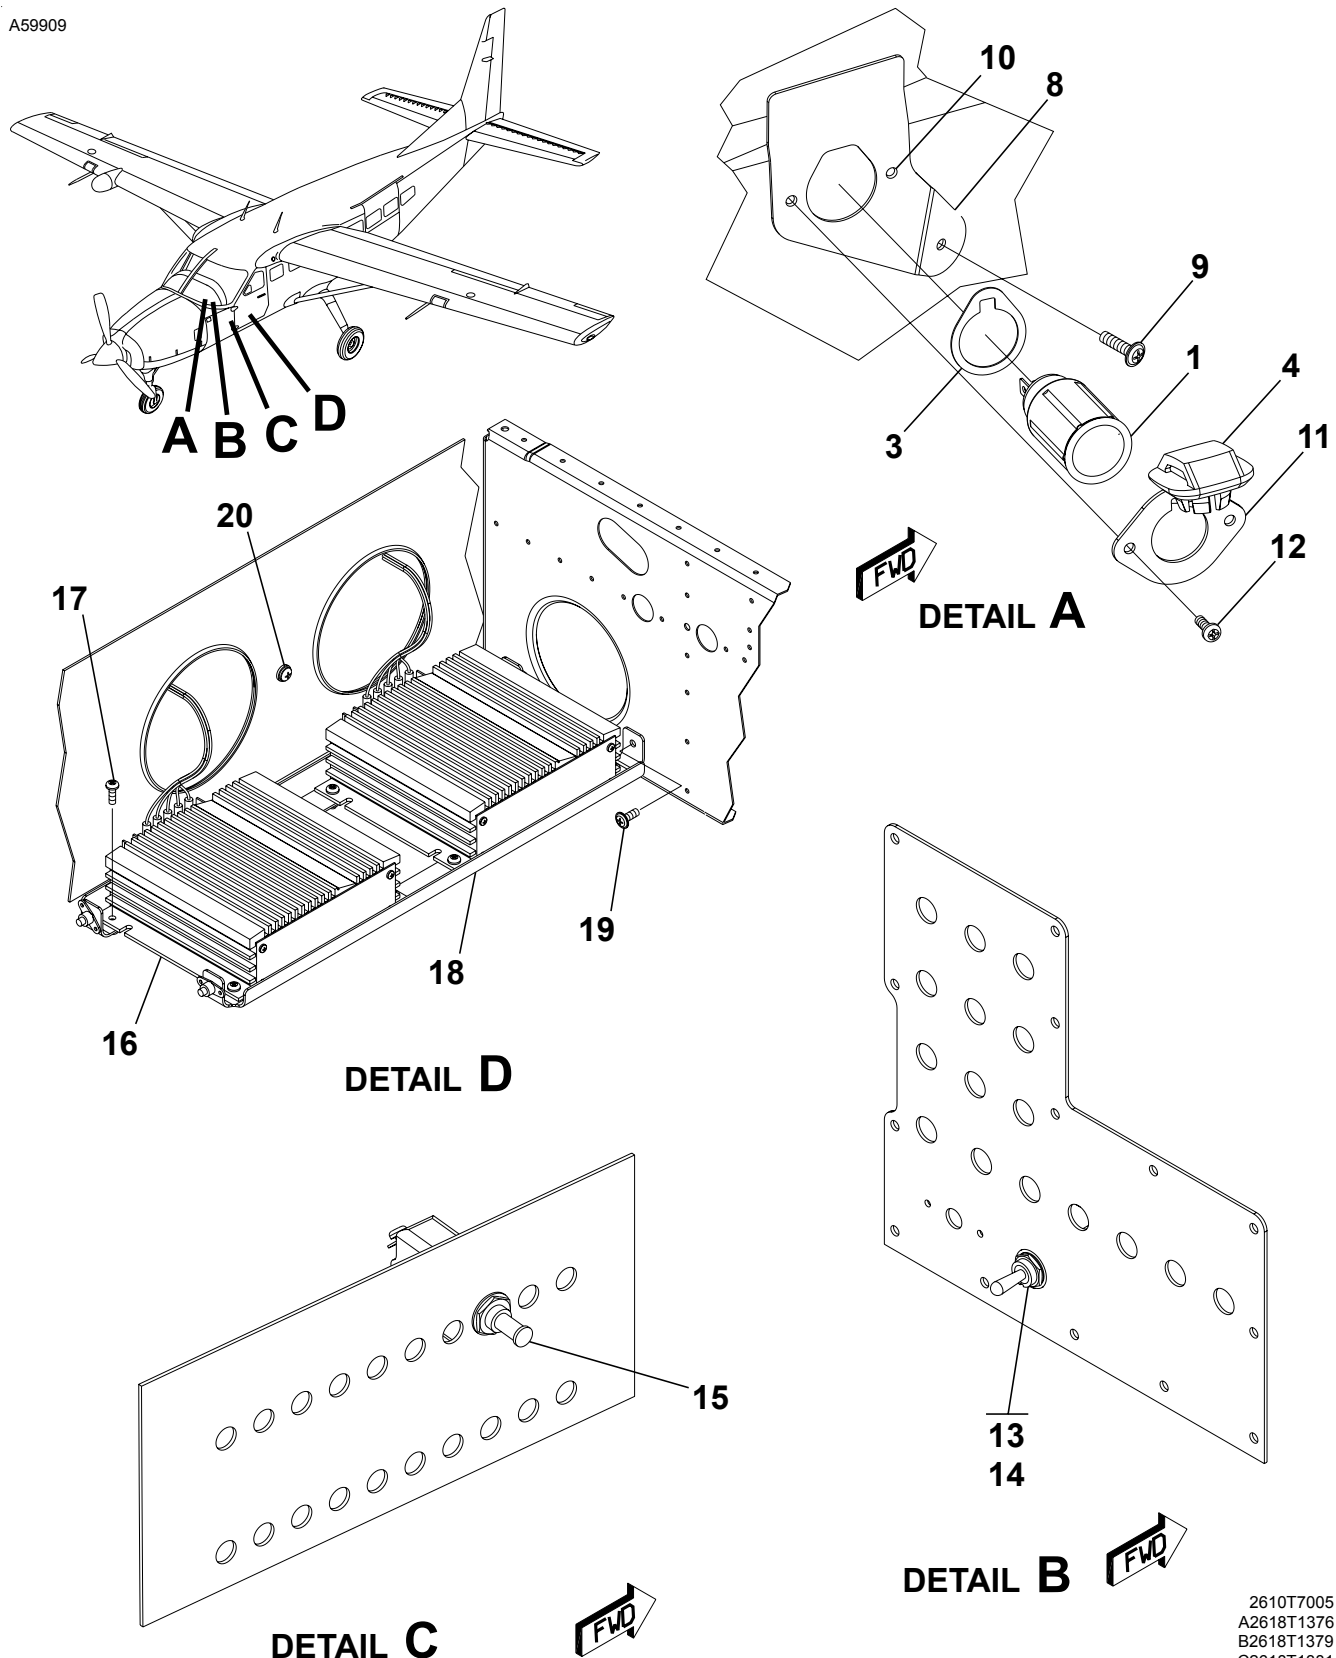

2610T7005
 A2618T1376
 B2618T1379
 C2618T1381
 D2618T1378

DC POWER OUTLET INSTALLATION - COCKPIT
Figure 01. (Sheet 1)

Figure 01
 Page 2
24-30-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

DC POWER OUTLET INSTALLATION - COCKPIT
AIRPLANES (208) 0396 & ON AND AIRPLANES (208B) 1171 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	3929038-1	.	PWR OUTLET ASSEMBLY						(208) 0396 - 0499 (208B) 1171 - 1999	01
- 2	3929038-2	.	PWR OUTLET ASSEMBLY - ZC013						(208) 0500 & ON (208B) 2000 & ON	01
3	3940451-6	.	SPACER						(208) 0396 & ON (208B) 1171 & ON	01
4	W-39623	.	POWER OUTLET CAP					5G407	(208) 0396 & ON (208B) 1171 & ON	01
- 5	3940451-7	.	BRACKET ASSEMBLY - LEFT						(208) 0396 & ON	01
- 6	3940451-8	.	BRACKET ASSEMBLY - RIGHT						(208) 0396 & ON	01
- 7	3940451-19	.	BRACKET ASSEMBLY - LEFT						(208B) 1171 & ON	01
8	3940451-20	.	BRACKET ASSEMBLY - RIGHT						(208B) 1171 & ON	01
			ATTACHING PARTS							
9	AN525-832R10	.	SCREW						(208) 0396 & ON (208B) 1171 & ON	01
			--*--							
10	MS21047L06	.	NUTPLATE						(208) 0396 & ON (208B) 1171 & ON	02
11	3940451-15	.	PLATE						(208) 0396 & ON (208B) 1171 & ON	01
			ATTACHING PARTS							
12	MS35206-228	.	SCREW					80205	(208) 0396 & ON (208B) 1171 & ON	02
			--*--							
13	MS27407-1	.	SWITCH					96906	(208) 0396 - 0499 (208B) 1171 - 1999	01
14	C15WHITE	.	CAP					95146	(208) 0396 - 0499 (208B) 1171 - 1999	01
15	S1232-510	.	CIRCUIT BREAKER						(208) 0396 - 0499 (208B) 1171 - 1999	01
16	0518021-3	.	POWER CONVERTER ASSEMBLY UC005						(208) 0396 & ON (208B) 1171 & ON	01
			ATTACHING PARTS							
17	MS35206-245	.	SCREW					0TRC3	(208) 0396 & ON (208B) 1171 & ON	04
			--*--							
18	3940451-4	.	SUPPORT ASSEMBLY						(208) 0396 & ON (208B) 1171 & ON	01
			ATTACHING PARTS							
19	AN525-10R8	.	SCREW						(208) 0396 & ON (208B) 1171 & ON	04
			--*--							
20	6318104-2	.	GROUND STUD ASSEMBLY						(208) 0396 & ON (208B) 1171 & ON	01
			ALTERNATE SPARE (INTERCHANGEABLE WITH): 9256010-1							
- 21	9256010-1	.	STUD ASSEMBLY						(208) 0396 & ON (208B) 1171 & ON	01
			ALTERNATE SPARE (INTERCHANGEABLE WITH): 6318104-2							
- 22	2677034-1	.	WIRE BUNDLE ASSEMBLY 13.8VDC AUX PWR - COCKPIT						(208) 0500 & ON (208B) 2000 & ON	01
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

DC POWER OUTLET INSTALLATION - COCKPIT
AIRPLANES (208) 0396 & ON AND AIRPLANES (208B) 1171 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 23	2677035-1	.							(208) 0500 & ON (208B) 2000 & ON	01
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG



24-30-00

DC POWER OUTLET INSTALLATION - COCKPIT

**AIRPLANES (208) 0001 THRU 0395 AND AIRPLANES (208) 0001 THRU 0395
INCORPORATING SK208-169 AND AIRPLANES (208B) 0001 THRU 1170
AND AIRPLANES (208B) 0001 THRU 1170 INCORPORATING SK208-169**


CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

A67958

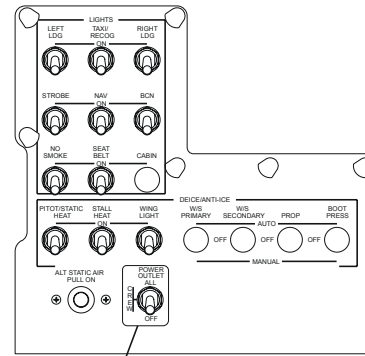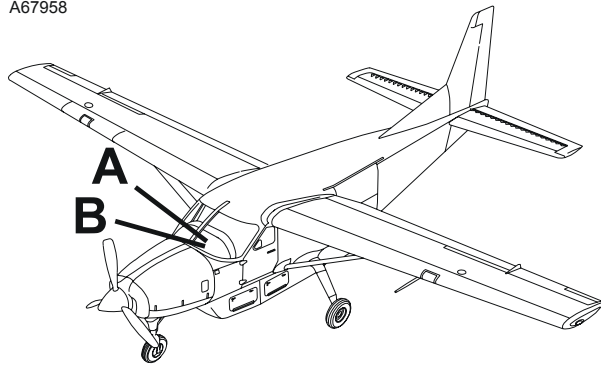

18
19

DETAIL A

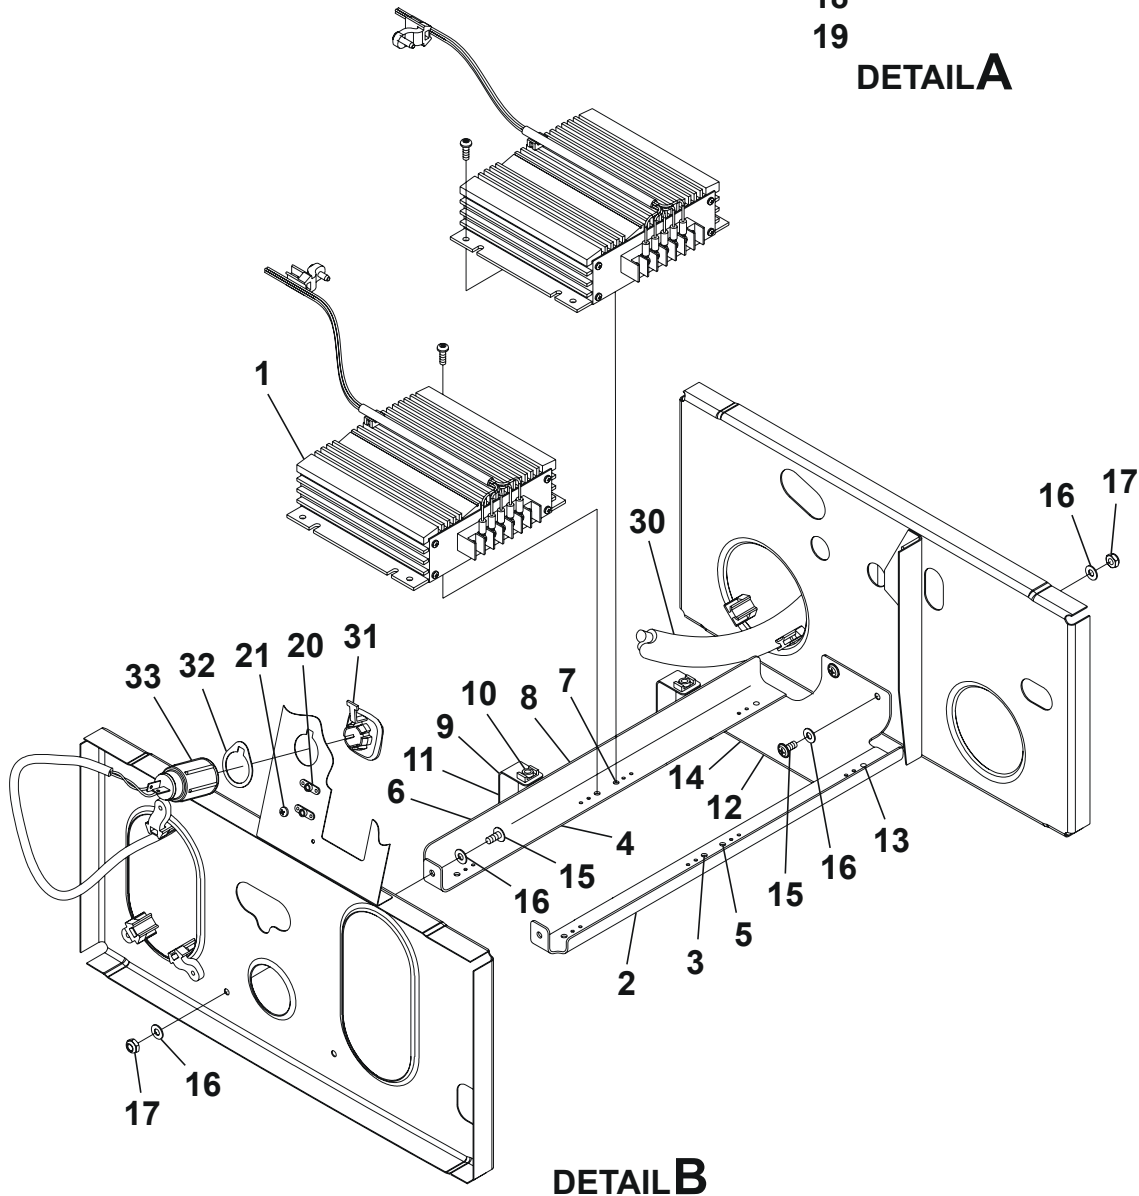

DETAIL B

DC POWER OUTLET INSTALLATION - COCKPIT
Figure 02. (Sheet 1)

2610T7007
A2618T1433
B2618T1433

Figure 02
Page 2
24-30-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

DC POWER OUTLET INSTALLATION - COCKPIT

**AIRPLANES (208) 0001 THRU 0395 AND AIRPLANES (208) 0001 THRU 0395 INCORPORATING SK208-169
 AND AIRPLANES (208B) 0001 THRU 1170 AND AIRPLANES (208B) 0001 THRU 1170 INCORPORATING
 SK208-169**

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	0518021-3	.							(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	01
2	2691015-3	.							(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	01
3	MS21051-08	.	.						(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	02
4	2691015-5	.	.						(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	01
5	MS21051-08	.							(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	02
6	2691015-4	.							(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	01
7	MS21051-08	.	.						(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	02
8	2691015-6	.	.						(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	01
9	2691015-10	.	.						(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	01
10	S1741-3	.	.	.				06383	(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	01
11	2691015-9	.	.	.					(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	01
12	2691015-8	.							(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

DC POWER OUTLET INSTALLATION - COCKPIT

**AIRPLANES (208) 0001 THRU 0395 AND AIRPLANES (208) 0001 THRU 0395 INCORPORATING SK208-169
 AND AIRPLANES (208B) 0001 THRU 1170 AND AIRPLANES (208B) 0001 THRU 1170 INCORPORATING
 SK208-169**

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
13	MS21051-08	.	.					NUTPLATE	(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	02
14	2691015-7	.	.					BRACKET	(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	01
15	AN525-10R7	.						SCREW	(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	04
16	NAS1149F0332P	.						WASHER	(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	08
17	MS21083N3	.						NUT	(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	04
18	C15WHITE	.						CAP	95146 (208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	01
19	MS27407-1	.						SWITCH	96906 (208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	01
20	MS21047L06	.						NUTPLATE	(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	02
21	MS35206-227	.						SCREW	72914 (208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	01
- 22	MS3367-1-9	.						STRAP	(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	AR
- 23	MS3367-2-9	.						STRAP	(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	05
- 24	MS35206-245	.						SCREW	0TRC3 (208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	04

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

DC POWER OUTLET INSTALLATION - COCKPIT

**AIRPLANES (208) 0001 THRU 0395 AND AIRPLANES (208) 0001 THRU 0395 INCORPORATING SK208-169
 AND AIRPLANES (208B) 0001 THRU 1170 AND AIRPLANES (208B) 0001 THRU 1170 INCORPORATING
 SK208-169**

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
- 25	S1021Z8-8	.	SCREW							(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	08
- 26	S1741-1	.	ANCHOR							(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	04
- 27	S4132-1	.	ANCHOR							(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	08
- 28	S2209-1	.	TIE							(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	14
- 29	S2562-1-30.00	.	TUBING							(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	AR
30	S2958-12-14.5	.	INSULATION TUBE							(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	01
31	W-39623	.	POWER OUTLET CAP							5G407 (208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	01
32	3940451-6	.	SPACER							(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	01
33	3929038-1	.	POWER OUTLET ASSEMBLY							(208) 0001 - 0395 (208) 0001 - 0395 (208B) 0001 - 1170 (208B) 0001 - 1170	01
- 34	3929039-1	.	CABLE ASSEMBLY 13.8VDC AUX PWR - COCKPIT							(208) 0001 - 0499 (208B) 0001 - 1999	01
- 36	3929040-1	.	CABLE ASSEMBLY 13.8VDC AUX PWR - CABIN							(208) 0001 - 0499 (208B) 0001 - 1999	01
- 38		.	PEDESTAL INSTALLATION								RF
REFER TO 53-22-00 FIGURE 01											
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG


24-30-00

DC POWER OUTLET INSTALLATION - CABIN

**AIRPLANES (208) 0001 & ON AND AIRPLANES (208) 0001 & ON
INCORPORATING SK208-169 AND AIRPLANES (208B) 0001 & ON AND
AIRPLANES (208B) 0001 & ON INCORPORATING SK208-169
AIRPLANES -0001 & ON AND-B0001 & ON INCORPORATING SK208-169.**

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A72189

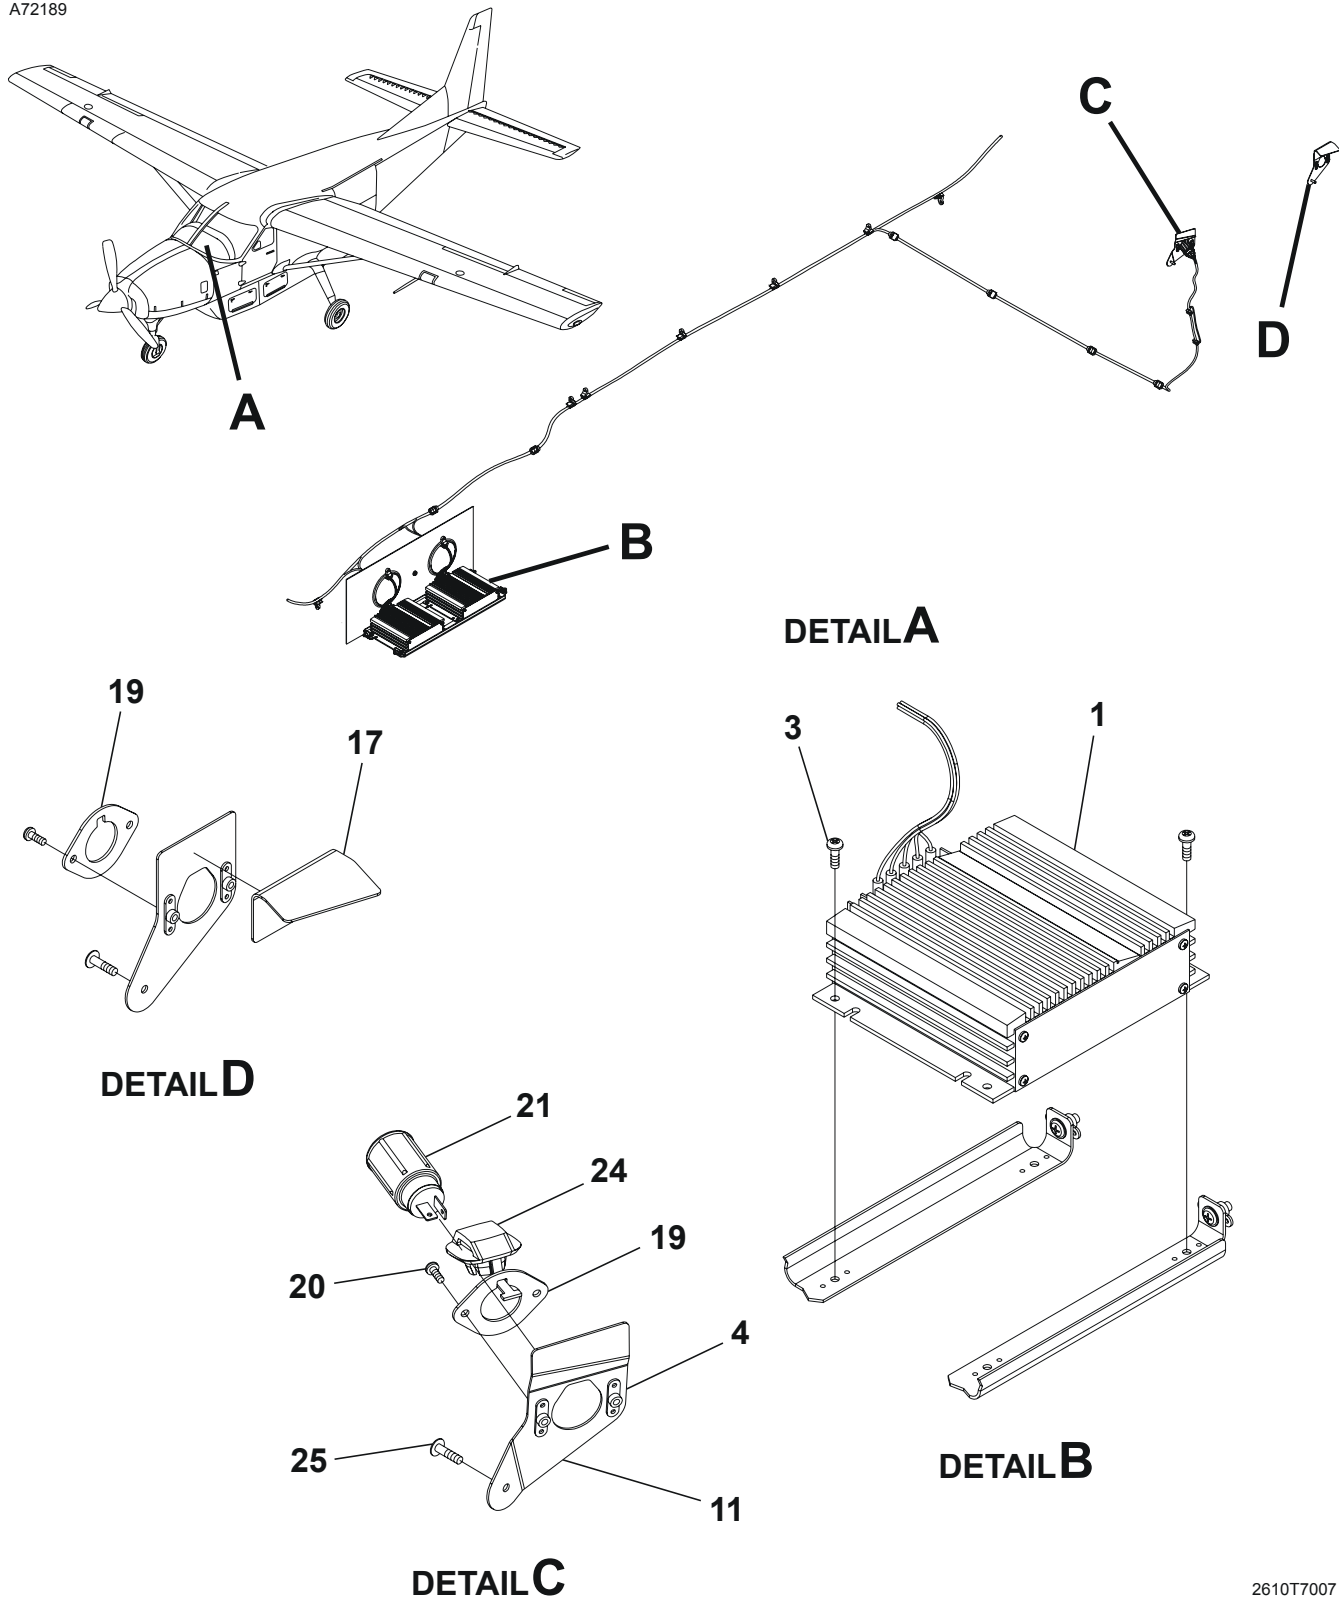

DC POWER OUTLET INSTALLATION - CABIN
Figure 03. (Sheet 1)

2610T7007
 A26141374A
 B2614T1374A
 C2614T1376A
 D2614T1376A

DC POWER OUTLET INSTALLATION - CABIN

AIRPLANES -0001 & ON AND-B0001 & ON INCORPORATING SK208-169.

Figure 03
Page 3
24-30-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

DC POWER OUTLET INSTALLATION - CABIN

**AIRPLANES (208) 0001 & ON AND AIRPLANES (208) 0001 & ON INCORPORATING SK208-169 AND
 AIRPLANES (208B) 0001 & ON AND AIRPLANES (208B) 0001 & ON INCORPORATING SK208-169**

AIRPLANES -0001 & ON AND-B0001 & ON INCORPORATING SK208-169.

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
19	3940451-15	.	PLATE						(208) 0001 & ON (208) 0001 & ON (208B) 0001 & ON (208B) 0001 & ON	02
20	MS35206-228	.	SCREW					80205	(208) 0001 & ON (208) 0001 & ON (208B) 0001 & ON (208B) 0001 & ON	04
21	3929038-1	.	POWER OUTLET ASSEMBLY						(208) 0001 - 0499 (208B) 0001 - 1999	02
- 22	3929038-2	.	POWER OUTLET ASSEMBLY - LEFT ZC014 * AIRPLANES (208) 0500 & ON NOT INCORPORATING SK208-169 * AIRPLANES (208B) 2000 & ON NOT INCORPORATING SK208-169						(208) *0500 & ON (208B) *2000 & ON	01
- 23	3929038-2	.	POWER OUTLET ASSEMBLY - RIGHT ZF006 * AIRPLANES (208) 0500 & ON NOT INCORPORATING SK208-169 * AIRPLANES (208B) 2000 & ON NOT INCORPORATING SK208-169						(208) *0500 & ON (208B) *2000 & ON	01
24	W39623	.	POWER OUTLET CAP					5G407	(208) 0001 & ON (208) 0001 & ON (208B) 0001 & ON (208B) 0001 & ON	02
25	AN525-832R10	.	SCREW						(208) 0001 & ON (208) 0001 & ON (208B) 0001 & ON (208B) 0001 & ON	02
- ITEM NOT ILLUSTRATED										



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

24-31-00

GENERATOR CONTROL UNIT ASSEMBLY
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A25044

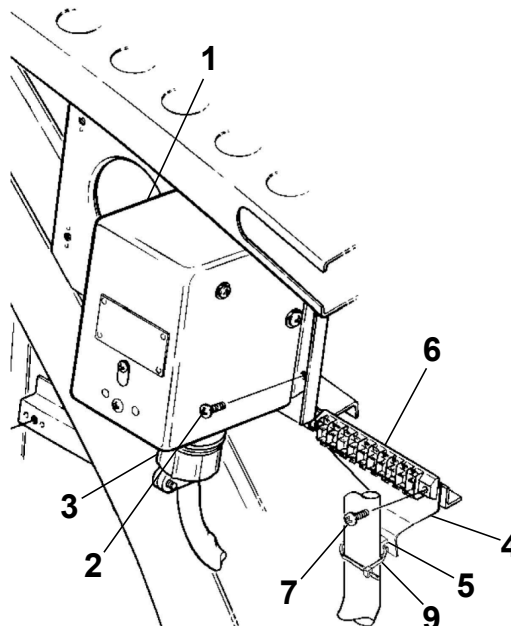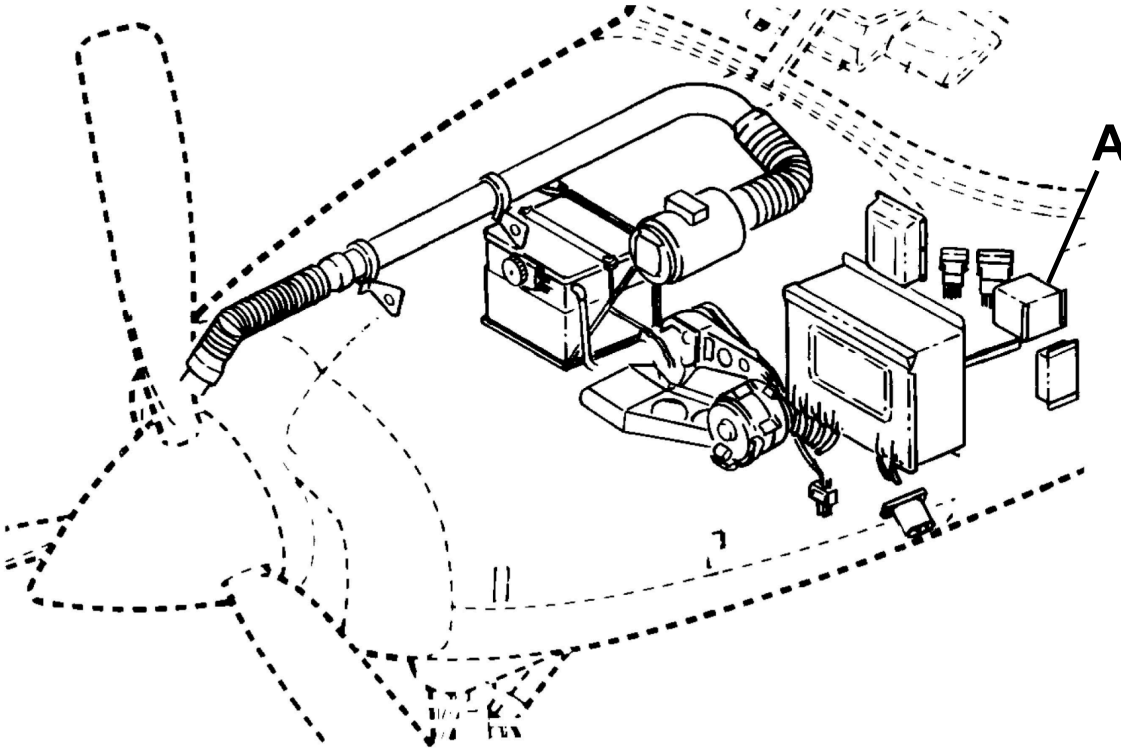

DETAIL A

GENERATOR CONTROL UNIT ASSEMBLY
Figure 01. (Sheet 1)

26582001
 A26583001A

Figure 01
 Page 2
24-31-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

GENERATOR CONTROL UNIT ASSEMBLY

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	51539-012N	.	CONTROL UNIT ASSEMBLY - GENERATOR BC001						31435	(208) 0001 & ON (208B) 0001 & ON	01
			ATTACHING PARTS								
2	MS35207-263	.	SCREW						80205	(208) 0001 & ON (208B) 0001 & ON	04
			--*--								
3	S2654-8	.	CONNECTOR ASSEMBLY - GENERATOR CONTROL UNIT							(208) 0001 & ON (208B) 0001 & ON	01
4	2613450-1	.	BRACKET ASSEMBLY - WIRE SUPPORT							(208) 0205 & ON (208B) 0265 & ON	01
5	S1741-1	.	.	ANCHOR						(208) 0205 & ON (208B) 0265 & ON	01
6	S2567-10	.	TERMINAL BLOCK							(208) 0001 & ON (208B) 0001 & ON	01
			ATTACHING PARTS								
7	MS35206-231	.	SCREW							(208) 0001 - 0204 (208B) 0001 - 0264	02
- 8	MS35206-232	.	SCREW						86887	(208) 0205 & ON (208B) 0265 & ON	02
			--*--								
9	MS3367-1-9	.	TIE STRAP							(208) 0205 & ON (208B) 0265 & ON	01
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG


24-34-00

BATTERY INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A25045

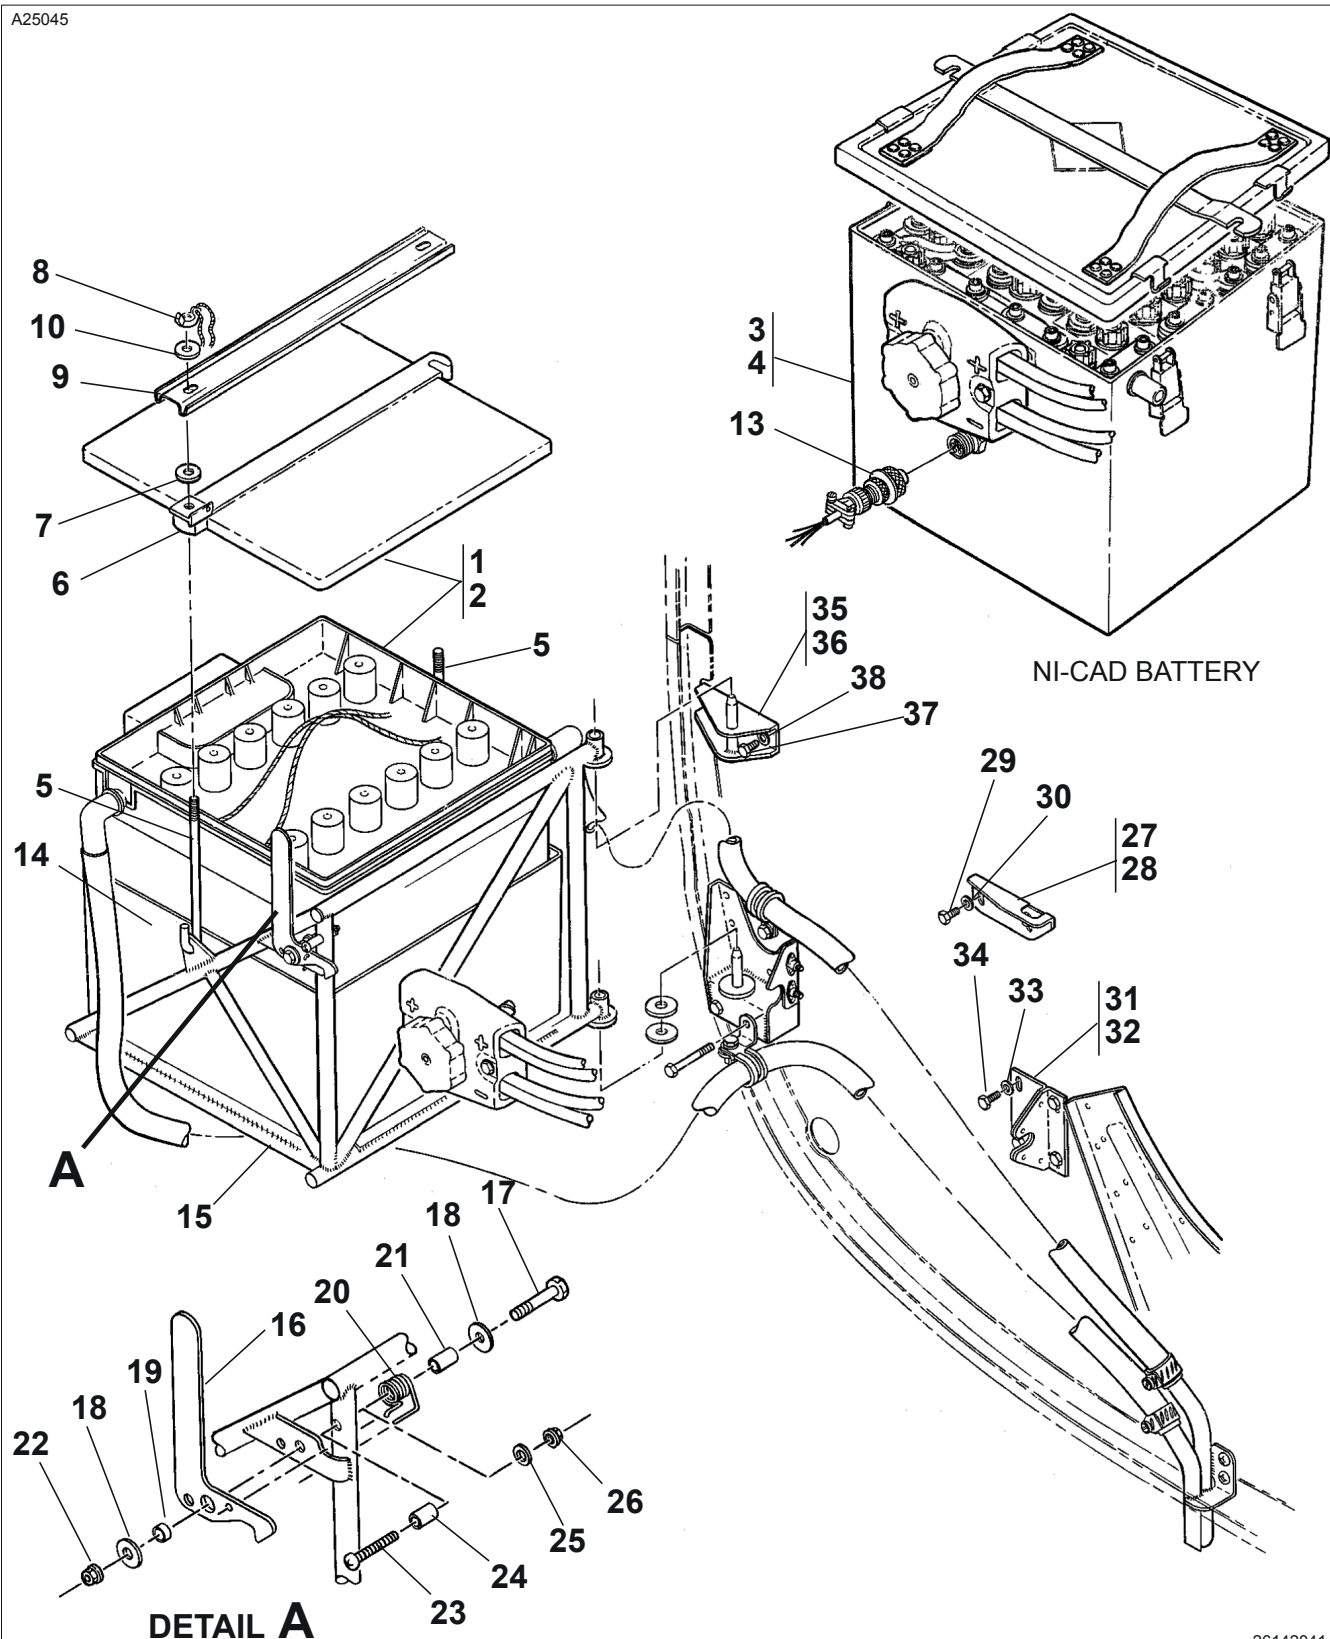

26142041
 26144009
 A26141183

BATTERY INSTALLATION
 Figure 01. (Sheet 1)

Figure 01
 Page 2
24-34-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

BATTERY INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	G6381E	.	BATTERY FOR SPARES ORDER (MUST REPLACE WITH): RG380E/40B						84375	(208) 0001 - 0239 (208B) 0001 - 0413	NP
- 1A	RG380E/40B	.	BATTERY - (40AH) SPARES REPLACEMENT FOR: G6381E ALTERNATE SPARE (INTERCHANGEABLE WITH): 9750F0538 RG-380E/40 FOR SPARES ORDER (MUST REPLACE WITH): RG-380E/44						63017	(208) 0240 & ON (208B) 0414 & ON	01
- 1B	RG-380E/40	.	BATTERY - (44AH) ALTERNATE SPARE (INTERCHANGEABLE WITH): RG380E/40B 9750F0538						63017	(208) 0240 & ON (208B) 0414 & ON	NP
- 1C	RG-380E/44	.	BATTERY - SEALED LEAD ACID SPARES REPLACEMENT FOR: RG380E/40B						63017	(208) 0240 & ON (208B) 0414 & ON	01
2	9750F0538	.	BATTERY - (37AH) ALTERNATE SPARE (INTERCHANGEABLE WITH): RG380E/40B RG-380E/40						U6335	(208) 0001 & ON (208B) 0001 & ON	NP
NOTE: HAWKER 9750F0538 SHIP BATTERIES ARE NOT AVAILABLE THRU TEXTRON AVIATION PARTS DISTRIBUTION.											
3	30994-001	.	BATTERY - MARATHON TSP410 NICAD ALTERNATE SPARE (INTERCHANGEABLE WITH): 023694-000						74025	(208) 0001 - 0499 (208B) 0001 & ON	01
4	023694-000	.	BATTERY - SAFT NICAD ALTERNATE SPARE (INTERCHANGEABLE WITH): 30994-001 ATTACHING PARTS						09052	(208) 0001 & ON (208B) 0001 & ON	01
5	2653020-1	.	TIE BOLT							(208) 0001 - 0358 (208B) 0001 - 0944	02
- 5A	2653020-2	.	TIE BOLT							(208) 0359 & ON (208B) 0945 & ON	02
6	5538330-35	.	WASHER - USED WITH NICAD BATTERY							(208) 0001 - 0499 (208B) 0001 - 1999	02
7	S1450-4-12-100	.	WASHER - USED WITH NICAD BATTERY							(208) 0001 - 0499 (208B) 0001 - 1999	02
- 7A	NAS1149F0463P	.	WASHER - USED WITH NICAD BATTERY						99321	(208) 0240 & ON (208B) 0414 & ON	02
8	AN350-4	.	NUT							(208) 0001 & ON (208B) 0001 & ON	02
9	2653034-1	.	STRAP - LEAD-ACID BATTERY							(208) 0001 & ON (208B) 0001 & ON	01
NOTE: WHEN INITIALLY ORDERING THIS PART FOR AIRPLANES PRIOR TO -0149 AND B0179 ORDER PART NUMBER AN960-416 WASHER.											
10	NAS1149F0463P	.	WASHER						99321	(208) 0001 & ON (208B) 0001 & ON	01
--*--											
- 11	40SP100	.	BATTERY CELL - MARATHON NICAD ONLY						74025	(208) 0001 & ON (208B) 0001 & ON	20
- ITEM NOT ILLUSTRATED											

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

BATTERY INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 12	29432-005	.	.	SENSOR - BATTERY TEMP NICAD ONLY					74025 (208) 0001 & ON (208B) 0001 & ON	01
- 12A	019858-000	.	.	BATTERY CELL - SAFT NICAD					09052 (208) 0001 & ON (208B) 0001 & ON	20
- 12B	0236697-000	.	.	TEMPERATURE SENSOR - SAFT NICAD					09052 (208) 0001 & ON (208B) 0001 & ON	01
13	S2654-13	.		CONNECTOR ASSEMBLY - NICAD BATTERY ONLY					(208) 0001 - 0499 (208B) 0001 - 1999	01
14	2653027-1	.		BATTERY TRAY - USED WITH GILL FLOODED LEAD ACID BATTERY					(208) 0001 - 0239 (208B) 0001 - 0413	01
15	2653026-1	.		SUPPORT ASSEMBLY FOR SPARES ORDER (MUST REPLACE WITH): 2653026-15					(208) 0001 - 0600 (208B) 0001 - 5337	NP
- 15A	2653026-15	.		SUPPORT ASSEMBLY SPARES REPLACEMENT FOR: 2653026-1					(208) 0601 & ON (208B) 5338 & ON	01
16	2653019-1	.		LATCH - BATTERY BOX					(208) 0001 & ON (208B) 0001 & ON	01
ATTACHING PARTS										
17	AN3-11A	.		BOLT					(208) 0001 & ON (208B) 0001 & ON	01
18	S1450-3-10-062C	.		WASHER					(208) 0001 & ON (208B) 0001 & ON	02
19	NAS43HT3-10	.		SPACER					(208) 0001 - 0346 (208B) 0001 - 0894	01
- 19A	NAS43HT3-8	.		SPACER					(208) 0347 & ON (208B) 0895 & ON	01
20	2653022-1	.		SPRING					(208) 0001 & ON (208B) 0001 & ON	01
21	NAS43HT3-32	.		SPACER					(208) 0001 & ON (208B) 0001 & ON	01
22	MS21043-3	.		NUT					(208) 0001 & ON (208B) 0001 & ON	01
--*--										
23	MS35207-268	.		SCREW					(208) 0001 & ON (208B) 0001 & ON	01
24	NAS43HT3-26	.		SPACER					(208) 0001 & ON (208B) 0001 & ON	01
25	NAS1149F0363P	.		WASHER				73197	(208) 0001 & ON (208B) 0001 & ON	01
26	MS21043-3	.		NUT					(208) 0001 & ON (208B) 0001 & ON	01
27	2653021-1	.		LATCH SOCKET FOR SPARES ORDER (MUST REPLACE WITH): 2653032-1					(208) 0001 & ON	01
28	2653032-1	.		LATCH SOCKET SPARES REPLACEMENT FOR: 2653021-1					(208) 0103 & ON (208B) 0001 - 2134 (208B) 2137 & ON	01
- 28A	DDA06027-1	.		LATCH SOCKET					(208B) 2135 - 2136	01

**NOTE: WHEN ORDERING DDA PART NUMBERS, ALSO PROVIDE
REFERENCE DRAWING NUMBER 2653032**

ATTACHING PARTS

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


BATTERY INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY		
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY			
29	AN3-4A	.	BOLT							80205	(208) 0001 & ON (208B) 0001 & ON	02
30	NAS1149F0363P	.	WASHER							73197	(208) 0001 & ON (208B) 0001 & ON	02
			--*--									
31	2653023-1	.	SUPPORT ASSEMBLY - LOWER FOR SPARES ORDER (MUST REPLACE WITH): 2653033-1								(208) 0001 - 0102	01
32	2653033-1	.	SUPPORT ASSEMBLY - LOWER SPARES REPLACEMENT FOR: 2653023-1								(208) 0103 - 0360 (208B) 0001 - 4999	01
- 32A	2653033-4	.	SUPPORT ASSEMBLY - LOWER								(208) 0361 & ON (208B) 5000 & ON	01
			ATTACHING PARTS									
33	AN3-4A	.	BOLT							80205	(208) 0001 & ON (208B) 0001 & ON	04
34	NAS1149F0363P	.	WASHER							73197	(208) 0001 & ON (208B) 0001 & ON	04
			--*--									
35	2653017-1	.	PINTLE ASSEMBLY - UPPER FOR SPARES ORDER (MUST REPLACE WITH): 2653017-5								(208) 0001 - 0102	01
36	2653017-5	.	PINTLE - ASSEMBLY -UPPER SPARES REPLACEMENT FOR: 2653017-1								(208) 0103 & ON (208B) 0001 & ON	01
			ATTACHING PARTS									
37	AN3-4A	.	BOLT							80205	(208) 0001 & ON (208B) 0001 & ON	03
38	NAS1149F0363P	.	WASHER							73197	(208) 0001 & ON (208B) 0001 & ON	03
			--*--									
- ITEM NOT ILLUSTRATED												

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A25046

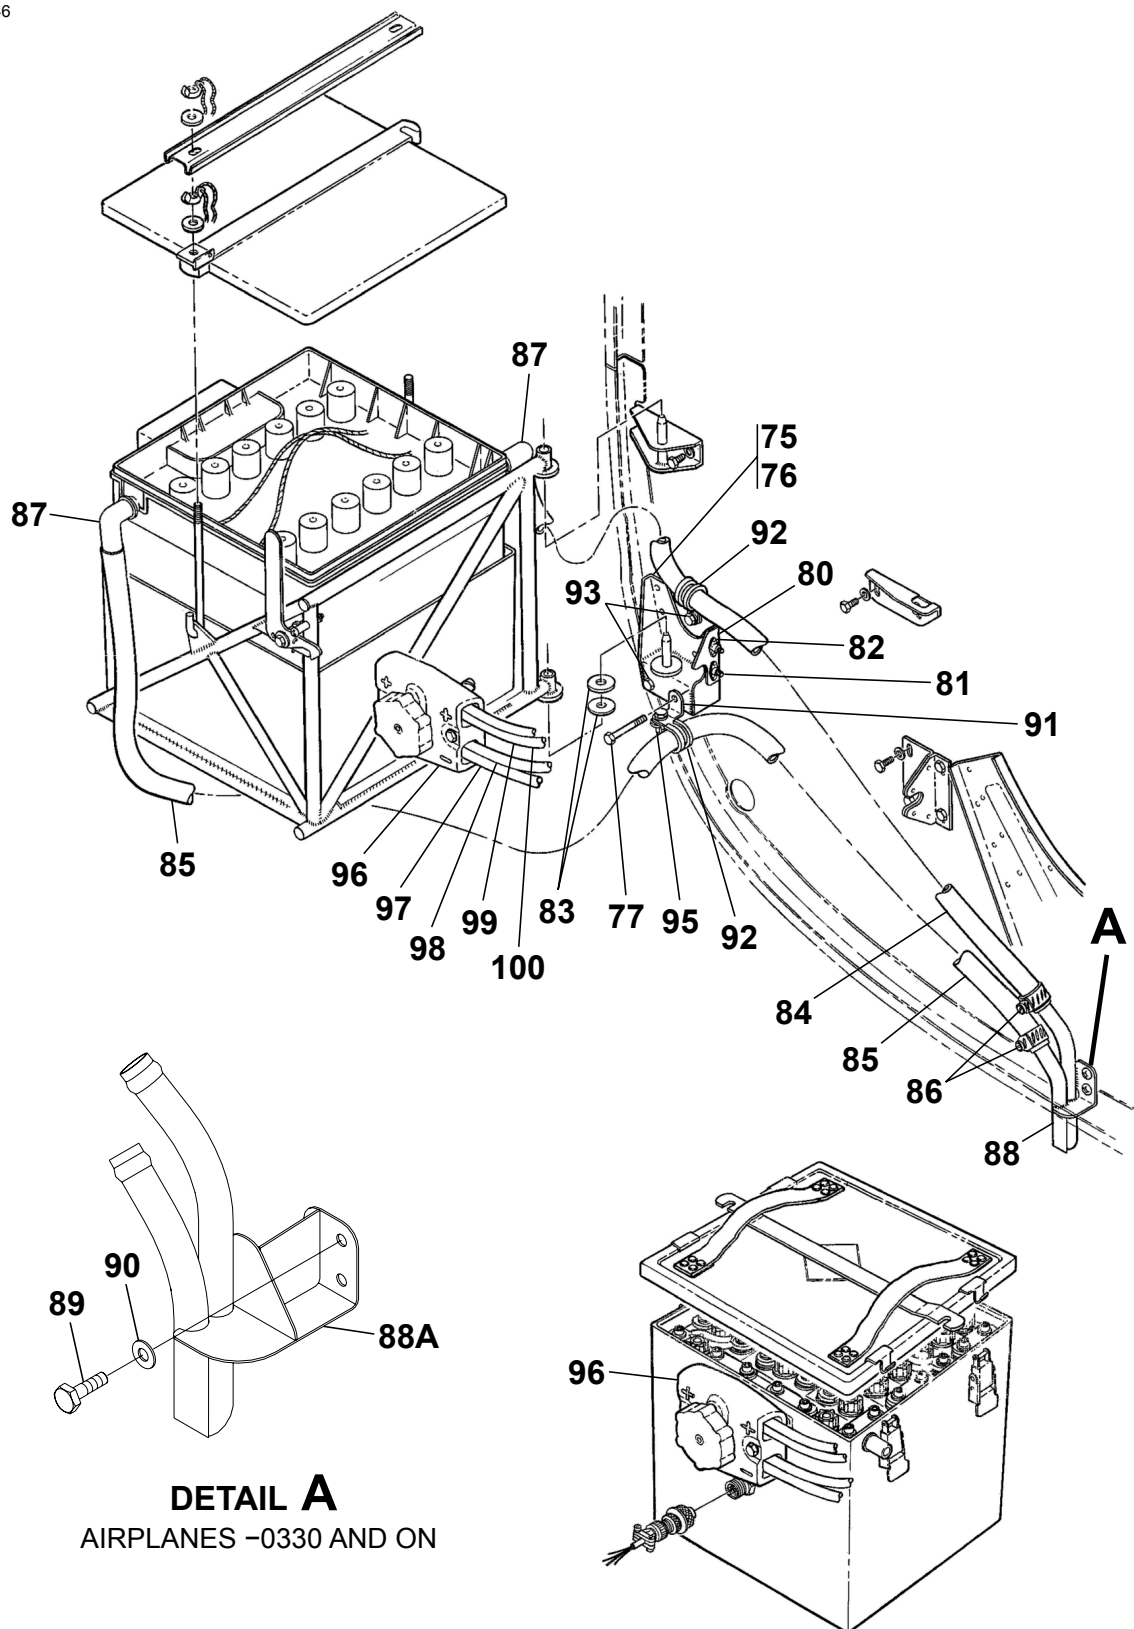

DETAIL A
 AIRPLANES -0330 AND ON

NI-CAD BATTERY

BATTERY INSTALLATION
 Figure 01. (Sheet 2)

2614R2041
 2614R4009
 A2650T1005

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

BATTERY INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
75	2653018-1	.							(208) 0001 & ON	01
76	2653018-12	.							(208) 0103 & ON (208B) 0001 & ON	01
77	AN3-17A	.							(208) 0001 & ON (208B) 0001 & ON	02
- 78	NAS1149F0363P	.						73197	(208) 0001 & ON (208B) 0001 & ON	02
- 79	MS21043-3	.							(208) 0001 & ON (208B) 0001 & ON	02
80	2653018-3	.	.						(208) 0001 & ON (208B) 0001 & ON	01
81	AN3-3A	.	.						(208) 0001 & ON (208B) 0001 & ON	02
82	MS21047L3	.	.	.				13499	(208) 0001 & ON (208B) 0001 & ON	02
83	S1450-6-16-125	.							(208) 0103 - 0360 (208B) 0001 & ON	02
- 83A	S1450-6-16-125	.							(208) 0361 & ON	01
84	2653024-2	.							(208) 0001 & ON (208B) 0001 & ON	01
85	2653024-3	.							(208) 0001 & ON (208B) 0001 & ON	01
86	S1891-6S	.							(208) 0001 & ON (208B) 0001 & ON	02
87	3621	.	.						(208) 0001 & ON (208B) 0001 & ON	02
- 87A	WX1522B	.	.						(208) 0001 & ON (208B) 0001 & ON	02
88	2650053-1	.							(208) 0001 - 0329 (208B) 0001 - 1301	01
88A	2650053-9	.							(208) 0330 - 0360	NP
- 88B	2650053-11	.							(208) 0361 & ON (208B) 1302 & ON	01
89	AN3-5A	.							(208) 0330 & ON	02
90	NAS1149F0332P	.							(208) 0330 & ON	02

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

BATTERY INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
91	S2300-24	.	BRACKET						(208) 0001 & ON (208B) 0001 & ON	01
92	MS21919DG12	.	CLAMP					58510	(208) 0001 & ON (208B) 0001 & ON	02
			ATTACHING PARTS							
93	AN3-4A	.	BOLT					80205	(208) 0001 & ON (208B) 0001 & ON	01
- 94	NAS1149F0363P	.	WASHER					73197	(208) 0001 & ON (208B) 0001 & ON	01
95	MS21042-3	.	NUT - LOWER CLAMP ONLY						(208) 0001 & ON (208B) 0001 & ON	01
			--*--							
96	S2624-1	.	PLUG - BATTERY FOR SPARES ORDER (MUST REPLACE WITH): MS25182-2						(208) 0001 & ON (208B) 0001 & ON	NP
- 96A	MS25182-2	.	PLUG - BATTERY SPARES REPLACEMENT FOR: S2624-1					96906	(208) 0001 & ON (208B) 0001 & ON	01
97	2671000PA10	.	CABLE - BATTERY TO GENERATOR						(208) 0001 & ON (208B) 0001 & ON	01
98	2671000PA9	.	CABLE - BATTERY TO GENERATOR						(208) 0001 & ON (208B) 0001 & ON	01
99	2671000PA2	.	CABLE - BATTERY TO BATTERY CONTACTOR						(208) 0001 & ON (208B) 0001 & ON	01
100	2671000PA1	.	CABLE - BATTERY TO BATTERY CONTACTOR						(208) 0001 & ON (208B) 0001 & ON	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG


24-36-00

STANDBY ELECTRICAL SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A25047

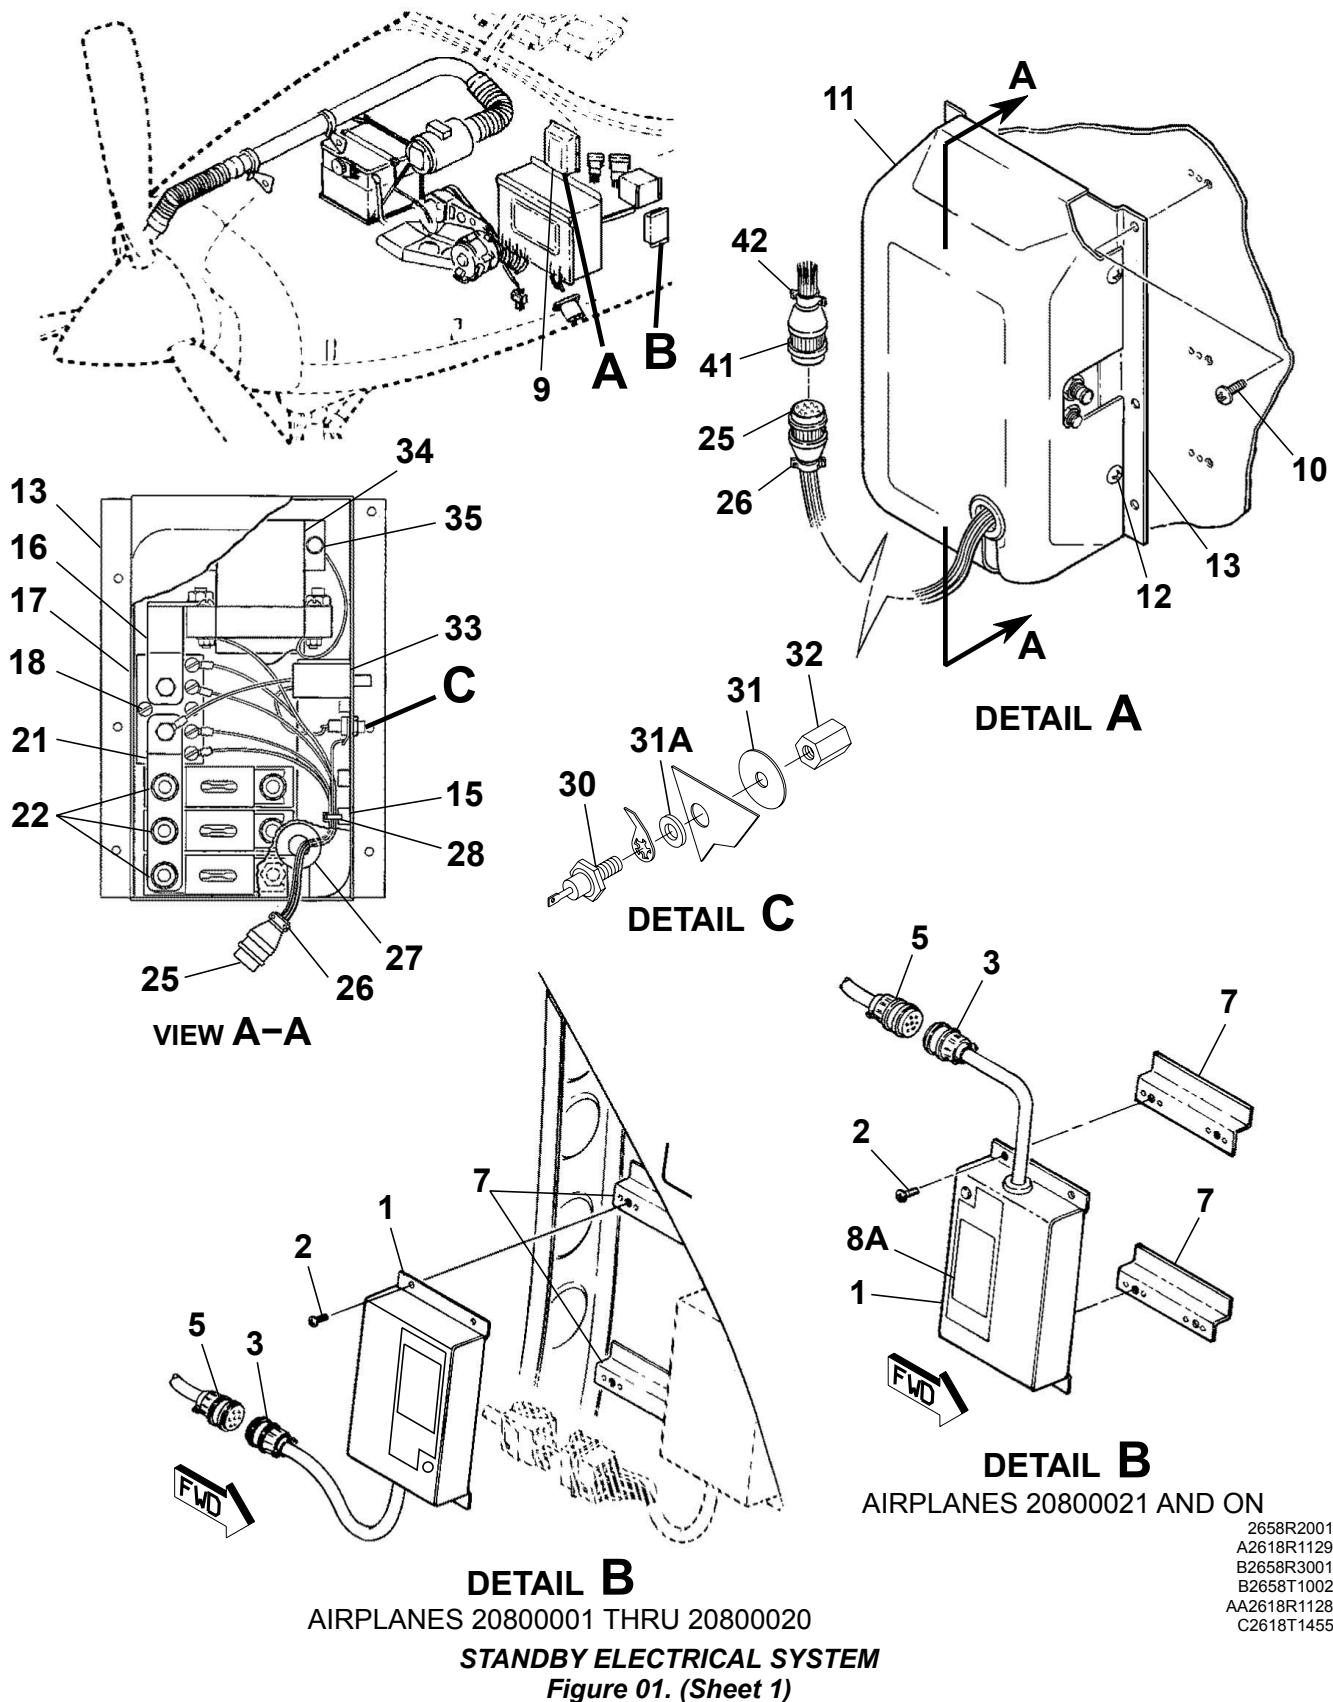

2658R2001
 A2618R1129
 B2658R3001
 B2658T1002
 AA2618R1128
 C2618T1455

STANDBY ELECTRICAL SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

STANDBY ELECTRICAL SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 13A	2670045-4	.	.	.	BASE ASSEMBLY - STANDBY ALTERNATOR USED WITH 300 AMP STARTER/GENERATOR OPTION				(208) 0001 & ON (208B) 0001 & ON	01
- 14	MS21047L3	.	.	.	NUTPLATE			13499	(208) 0001 & ON (208B) 0001 & ON	04
15	S1741-3	.	.	.	ANCHOR			06383	(208) 0001 & ON (208B) 0001 & ON	03
16	2670043-2	.	.	.	BUS BAR - CONTACTOR TO SHUNT				(208) 0001 & ON (208B) 0001 & ON	01
- 16A	2670048-5	.	.	.	BUS BAR - CONTACTOR TO SHUNT USED WITH 300 AMP STARTER/GENERATOR OPTION				(208) 0001 & ON (208B) 0001 & ON	01
- 16B	2670048-4	.	.	.	BUS BAR - CONTACTOR TO SHUNT USED WITH 300 AMP STARTER/GENERATOR OPTION				(208) 0001 & ON (208B) 0001 & ON	01
17	S2558-3	.	.	.	SHUNT ASSEMBLY				(208) 0001 & ON (208B) 0001 & ON	01
- 17A	S2558-3	.	.	.	SHUNT ASSEMBLY - USED WITH 300 AMP STARTER/ GENERATOR OPTION				(208) 0001 & ON (208B) 0001 & ON	02
18	MS35207-266	.	.	.	SCREW			71468	(208) 0001 & ON (208B) 0001 & ON	02
- 18A	MS35207-266	.	.	.	SCREW - USED WITH 300 AMP STARTER/GENERATOR OPTION			71468	(208) 0001 & ON (208B) 0001 & ON	04
- 19	NAS1149F0363P	.	.	.	WASHER			73197	(208) 0001 & ON (208B) 0001 & ON	02
- 19A	NAS1149F0363P	.	.	.	WASHER - USED WITH 300 AMP STARTER/GENERATOR OPTION			73197	(208) 0001 & ON (208B) 0001 & ON	04
- 20	MS21042L3	.	.	.	NUT			00624	(208) 0001 & ON (208B) 0001 & ON	02
- 20A	MS21042L3	.	.	.	NUT - USED WITH 300 AMP STARTER/GENERATOR OPTION			00624	(208) 0001 & ON (208B) 0001 & ON	04
					--*--					
21	2670043-1	.	.	.	BUS BAR - SHUNT TO BLOCK ASSEMBLY				(208) 0001 - 0105	01
- 21A	2670043-3	.	.	.	BUS BAR - SHUNT TO BLOCK ASSEMBLY				(208) 0106 & ON (208B) 0001 & ON	01
22	76279-1	.	.	.	BLOCK ASSEMBLY			2X920	(208) 0001 & ON (208B) 0001 & ON	03
					ATTACHING PARTS					
- 23	MS35191-274	.	.	.	SCREW				(208) 0001 & ON (208B) 0001 & ON	02
- 24	MS21042L3	.	.	.	NUT			00624	(208) 0001 & ON (208B) 0001 & ON	02
					--*--					
25	S2349-3	.	.	.	PLUG - RECEPTACLE				(208) 0001 & ON (208B) 0001 & ON	01
26	S2351-3	.	.	.	CLAMP - CONNECTOR				(208) 0001 & ON (208B) 0001 & ON	01
27	MS35489-14	.	.	.	GROMMET				(208) 0001 & ON (208B) 0001 & ON	01
28	MS3367-1-9	.	.	.	STRAP				(208) 0001 & ON (208B) 0001 & ON	01
- 29	S1781-1	.	.	.	CONNECTOR				(208) 0001 & ON (208B) 0001 & ON	01
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

STANDBY ELECTRICAL SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
30	1N3881	.	.					DIODE 6 AMP (DO4)	51589	(208) 0001 & ON (208B) 0001 & ON	01
								ATTACHING PARTS			
31	S1438-2	.	.					WASHER		(208) 0001 & ON (208B) 0001 & ON	01
31A	4702	.	.					WASHER		(208) 0001 & ON (208B) 0001 & ON	01
32	S2574-1	.	.					NUT		(208) 0001 & ON (208B) 0001 & ON	01
								--*--			
33	MS26574-5	.	.					CIRCUIT BREAKER	76374	(208) 0001 & ON (208B) 0001 & ON	01
34	6041H144A	.	.					RELAY	27192	(208) 0001 & ON (208B) 0001 & ON	01
								ATTACHING PARTS			
35	AN4-3A	.	.					BOLT		(208) 0001 & ON (208B) 0001 & ON	02
- 36	NAS1149F0463P	.	.					WASHER	99321	(208) 0001 & ON (208B) 0001 & ON	02
- 37	MS21042L4	.	.					NUT		(208) 0001 & ON (208B) 0001 & ON	02
								--*--			
- 38	MS35206-242	.	.					SCREW	72914	(208) 0001 & ON (208B) 0001 & ON	04
- 39	MS35333-38	.	.					WASHER - LOCK		(208) 0001 & ON (208B) 0001 & ON	04
- 40	NAS1149FN816P	.	.					WASHER		(208) 0001 & ON (208B) 0001 & ON	04
41	S2349-4	.						PLUG - STANDBY ALTERNATOR RELAY	00779	(208) 0001 & ON (208B) 0001 & ON	01
42	S2351-2	.						BACKSHELL - CONNECTOR	00779	(208) 0001 & ON (208B) 0001 & ON	01
- ITEM NOT ILLUSTRATED											


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

24-36-01



STANDBY ALTERNATOR INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A25048

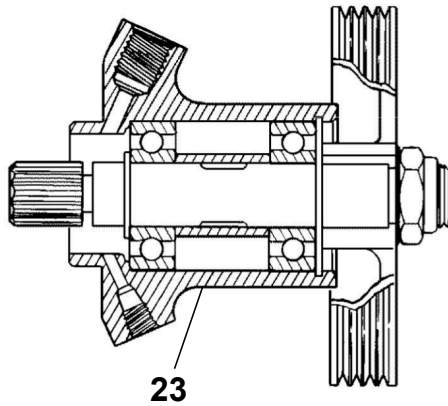


AIRPLANES 20800001 THRU 20800079

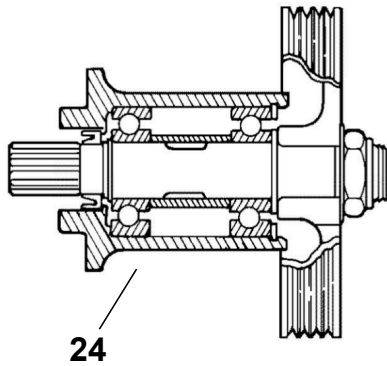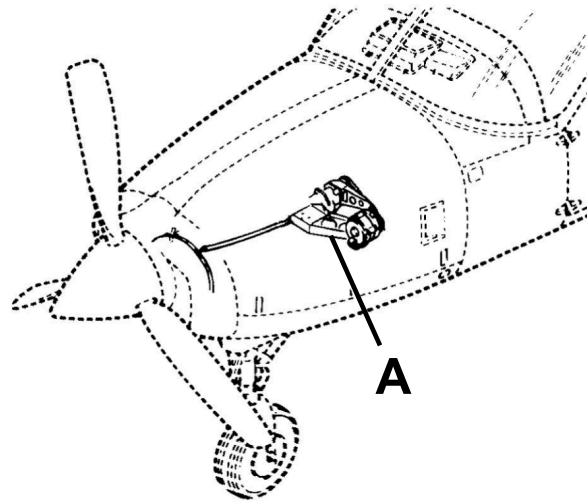

DETAIL B

AIRPLANES 20800080 THRU 20800217

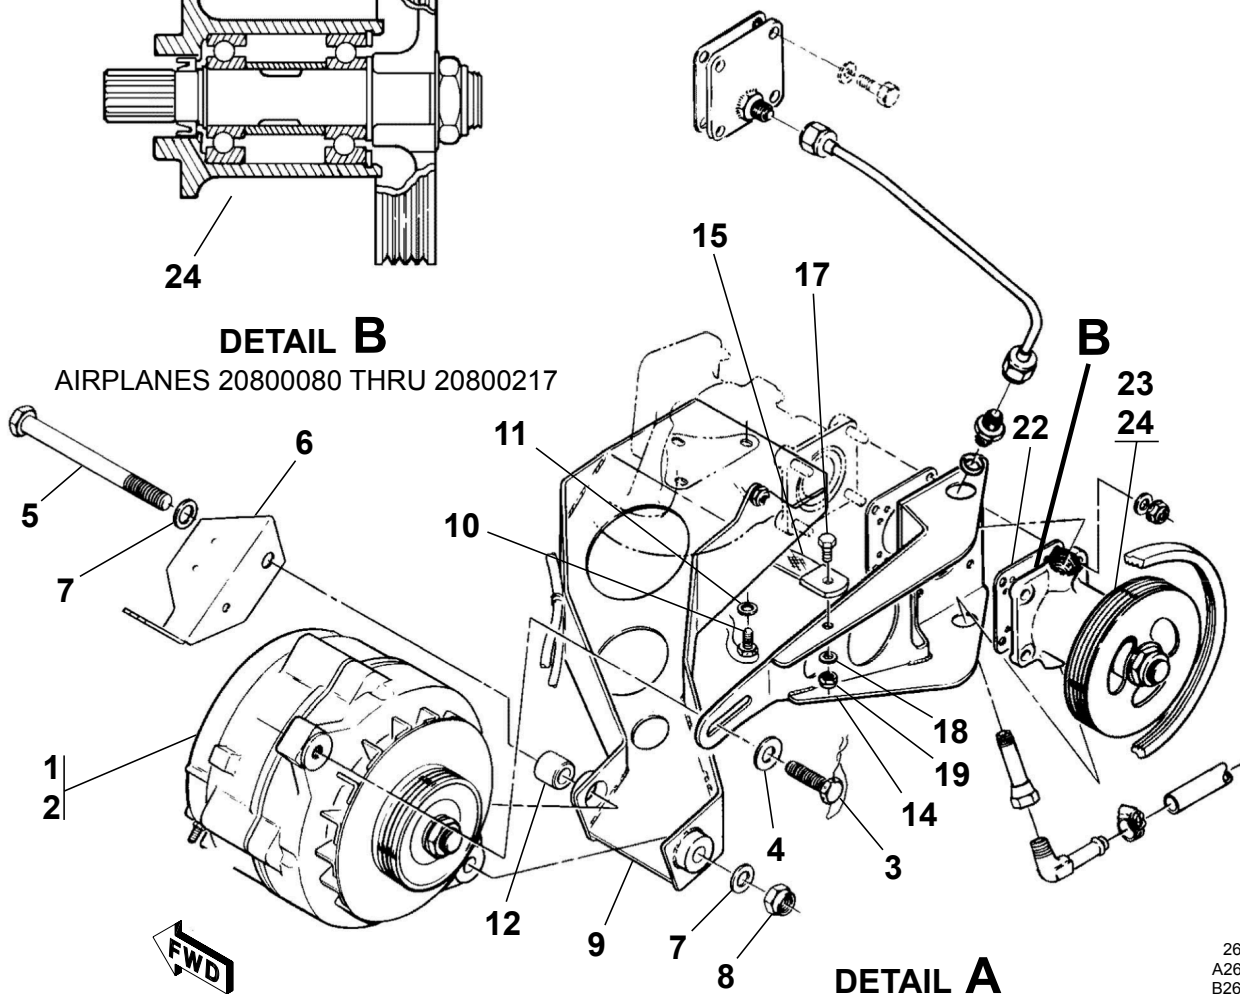

26181085
 A26183013
 B26181087
 B26181086

STANDBY ALTERNATOR INSTALLATION
 Figure 01. (Sheet 1)

Figure 01
 Page 2
24-36-01 Nov 29, 2022

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

STANDBY ALTERNATOR INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	C611505-0201	.							(208) 0001 - 0266 (208B) 0001 - 0615	NP
2	9910592-2	.							(208) 0267 & ON (208B) 0616 & ON	01
3	0750220-1	.							(208) 0001 & ON (208B) 0001 & ON	01
4	S1450-6-14-080	.							(208) 0001 & ON (208B) 0001 & ON	01
5	AN7-46A	.							(208) 0001 & ON (208B) 0001 & ON	01
6	2550105-1	.							(208) 0001 & ON (208B) 0001 & ON	01
7	NAS1149C0763R	.							(208) 0001 & ON (208B) 0001 & ON	02
8	AN363-720	.							(208) 0001 & ON (208B) 0001 & ON	01
9	2601072-14	.							(208) 0001 & ON (208B) 0001 & ON	01
10	AN4H3A	.							(208) 0001 & ON (208B) 0001 & ON	03
11	NAS1149C0432R	.							(208) 0001 & ON (208B) 0001 & ON	03
12	2601072-7	.	.						(208) 0001 & ON (208B) 0001 & ON	01
- 13	MS21069L3	.	.						(208) 0001 & ON (208B) 0001 & ON	01
14	2601072-8	.							(208) 0001 & ON (208B) 0001 & ON	01
15	0412007-16	.							(208) 0001 - 0106 (208B) 0001 - 0001	01
- 16	2671000PH33	.							(208) 0107 & ON (208B) 0002 & ON	01
17	AN3-5A	.							(208) 0001 & ON (208B) 0001 & ON	01
18	NAS1149C0332R	.							(208) 0001 & ON (208B) 0001 & ON	01
19	MS21044N3	.						4W953	(208) 0001 & ON (208B) 0001 & ON	01
- 20	AN3H4A	.							(208) 0001 - 0106 (208B) 0001 & ON	01
- 21	NAS1149C0332R	.							(208) 0001 - 0106 (208B) 0001 & ON	01
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


STANDBY ALTERNATOR INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
22	S3346-1	.	GASKET						(208) 0001 & ON (208B) 0001 & ON	02
23		.	DRIVE PULLEY ASSEMBLY - ALTERNATOR * AIRPLANES (208B) 0001 THRU 0079 NOT INCORPORATING SK208-17							RF
24	2601271-1	.	DRIVE PULLEY ASSEMBLY - ALTERNATOR ALTERNATE SPARE (INTERCHANGEABLE WITH): 2601271-202 * AIRPLANES (208) 0001 THRU 0079 INCORPORATING SK208-17						(208) 0080 - 0129 (208) *0001 - 0079 (208B) 0001 - 0086	NP
- 25	2601271-2	.	DRIVE PULLEY ASSEMBLY - ALTERNATOR ALTERNATE SPARE (INTERCHANGEABLE WITH): 2601271-202						(208) 0130 - 0185 (208B) 0087 - 0214	NP
- 26	2601271-3	.	DRIVE PULLEY ASSEMBLY - ALTERNATOR ALTERNATE SPARE (INTERCHANGEABLE WITH): 2601271-202						(208) 0186 - 0196 (208B) 0215 - 0226	NP
- 27	2601271-4	.	DRIVE PULLEY ASSEMBLY - ALTERNATOR ALTERNATE SPARE (INTERCHANGEABLE WITH): 2601271-202						(208) 0197 - 0217 (208B) 0227 - 0303	NP
- 27A	2601271-202	.	DRIVE PULLEY ASSY-KIT ALTERNATE SPARE (INTERCHANGEABLE WITH): 2601271-1 2601271-2 2601271-3 2601271-4						(208) 0001 & ON (208B) 0001 & ON	1
- 28	2601266-1	.	SPLINED COUPLING FOR SPARES ORDER (MUST REPLACE WITH): 2601266-2						(208) 0080 - 0217 (208B) 0001 - 0303	NP
- 28A	2601266-2	.	SPLINED COUPLING SPARES REPLACEMENT FOR: 2601266-1						(208) 0001 & ON (208B) 0001 & ON	1
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

A25049

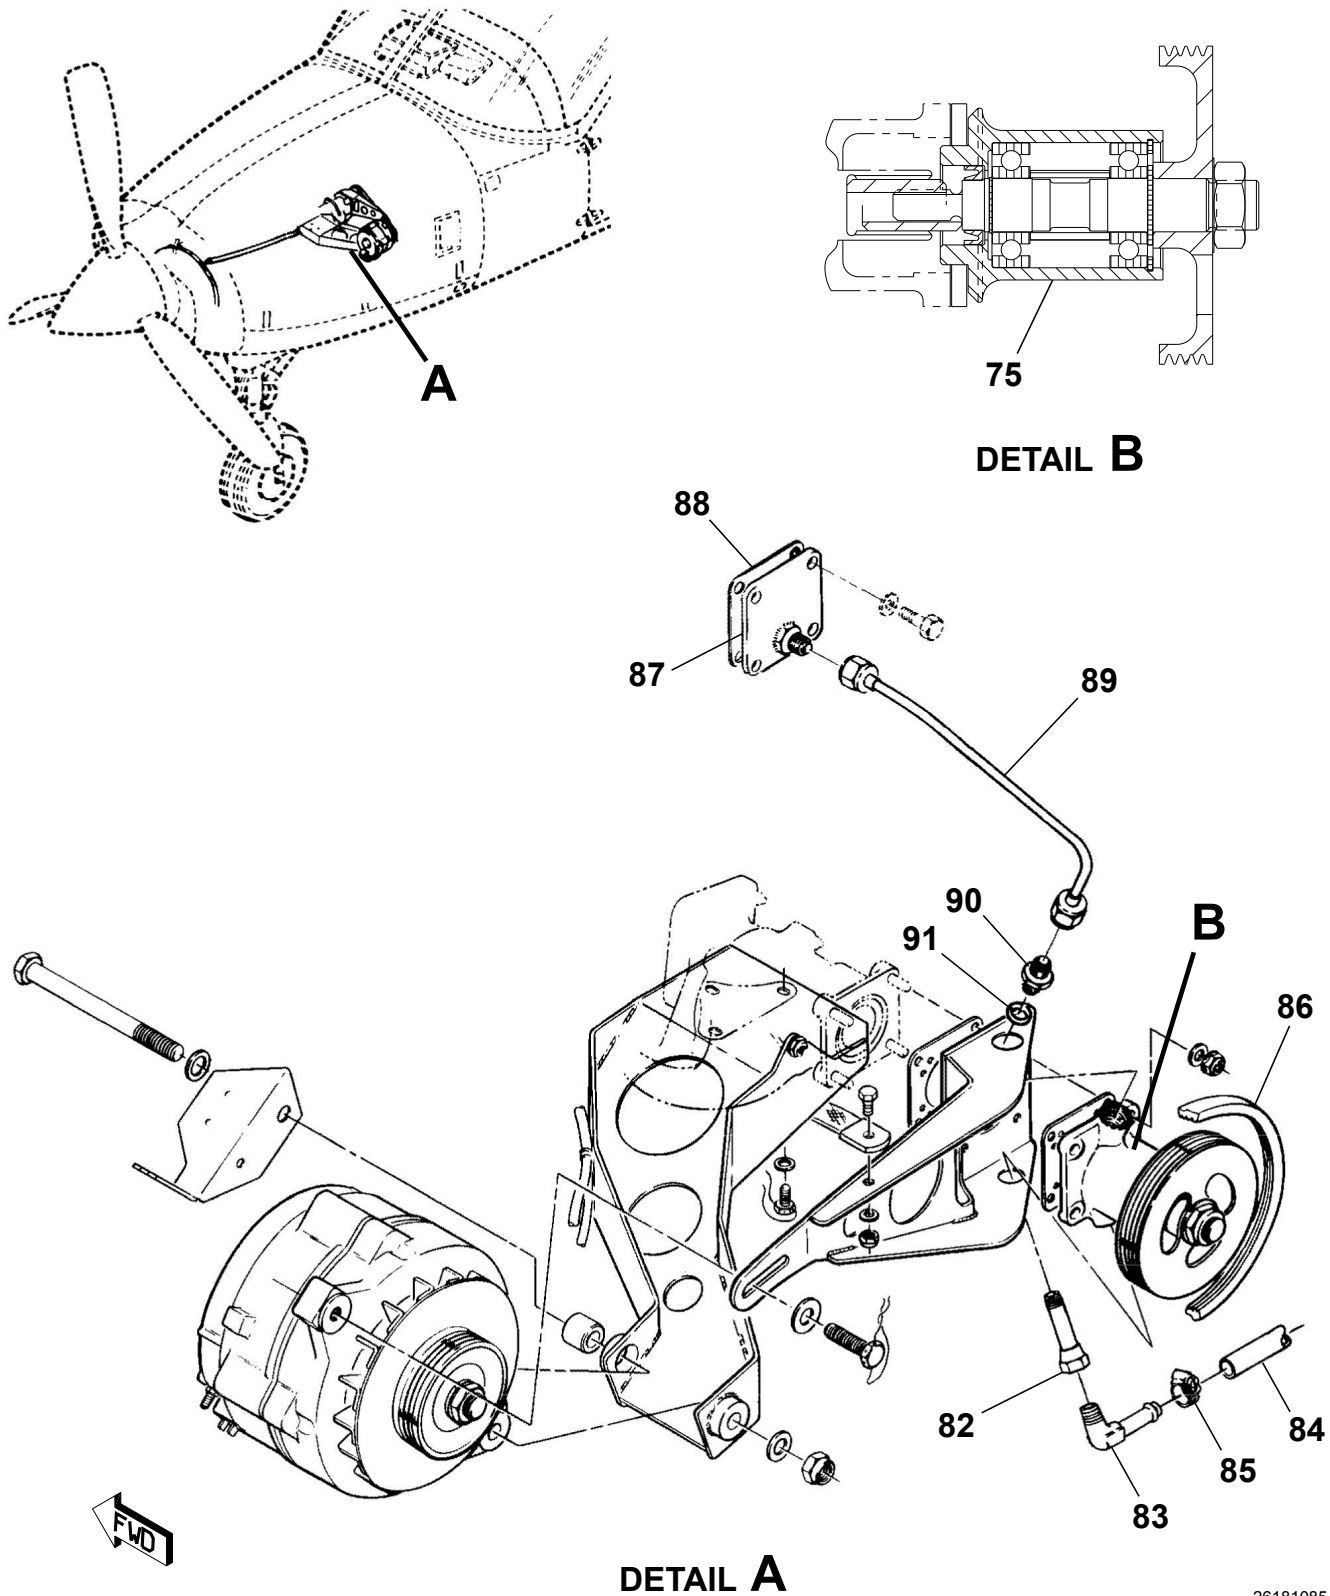

STANDBY ALTERNATOR INSTALLATION
Figure 01. (Sheet 2)

26181085
A2618R3013
B2618R1086

Figure 01
Page 6
24-36-01 Nov 29, 2022

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

STANDBY ALTERNATOR INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
75	2601271-7	.	DRIVE PULLEY ASSEMBLY - ALTERNATOR FOR SPARES ORDER: 2601271-202 * AIRPLANES (208) 0218 THRU 0241 NOT INCORPORATING SK208-122 * AIRPLANES (208B) 0304 THRU 0434 NOT INCORPORATING SK208-122						(208) *0218 - 0241 (208B) *0304 - 0434	NP
- 75A	2601271-202	.	DRIVE PULLEY ASSY-KIT SPARES ONLY FOR: 2601271-7						(208) 0001 & ON (208B) 0001 & ON	1
- 76	2601271-8	.	DRIVE PULLEY ASSEMBLY - ALTERNATOR FOR SPARES ORDER (MUST REPLACE WITH): 2650020-1						(208) 0242 - 0260 (208B) 0435 - 0597	NP
- 77	2601271-11	.	DRIVE PULLEY ASSEMBLY - ALTERNATOR FOR SPARES ORDER (MUST REPLACE WITH): 2650020-1 * AIRPLANES (208) 0001 THRU 0241 INCORPORATING SK208-122 * AIRPLANES (208B) 0001 THRU 0434 INCORPORATING SK208-122						(208) 0261 - 0341 (208) *0001 - 0241 (208B) 0598 - 0891 (208B) *0001 - 0434	NP
- 78	2601271-15	.	DRIVE PULLEY ASSEMBLY - ALTERNATOR FOR SPARES ORDER (MUST REPLACE WITH): 2650020-1						(208) 0342 - 0393 (208B) 0892 - 1156	NP
- 79	2601271-18	.	DRIVE PULLEY ASSEMBLY - ALTERNATOR						(208) 0394 - 0698 (208B) 1157 - 5760	01
- 79A	2650020-1	.	DRIVE PULLEY ASSEMBLY - ALTERNATOR SPARES REPLACEMENT FOR: 2601271-8 2601271-11 2601271-15						(208) 0699 & ON (208B) 5761 & ON	01
- 80	2601266-2	.	SPLINED COUPLING						(208) 0218 - 0393 (208B) 0304 - 1156	01
- 81	2601266-3	.	SPLINED COUPLING						(208) 0394 & ON (208B) 1157 & ON	01
82	S2685-1	.	ADAPTER NOTE: WHEN INITIALLY ORDERING THIS PART FOR AIRPLANES PRIOR TO 208-0024, ALSO ORDER PARTS AN842-4D ELBOW AND S2685-1 ADAPTER.						(208) 0001 - 0079	01
83	AN842-4D	.	ELBOW NOTE: WHEN INITIALLY ORDERING THIS PART FOR AIRPLANES PRIOR TO 208-0024, ALSO ORDER PARTS AN842-4D ELBOW AND S2685-1 ADAPTER.						(208) 0001 - 0079	01
84	S2548-4	.	HOSE - BULK ITEM NOTE: WHEN INITIALLY ORDERING THIS PART FOR AIRPLANES PRIOR TO 208-0024, ALSO ORDER PARTS AN842-4D ELBOW AND S2685-1 ADAPTER.						(208) 0001 - 0079	01
85	S2357-1	.	CLAMP NOTE: WHEN INITIALLY ORDERING THIS PART FOR AIRPLANES PRIOR TO 208-0024, ALSO ORDER PARTS AN842-4D ELBOW AND S2685-1 ADAPTER.						(208) 0001 - 0079	02
86	S2616-285K4	.	BELT - ALTERNATOR				73842		(208) 0001 & ON (208B) 0001 & ON	01
87	2601137-4	.	ADAPTER ASSEMBLY						(208) 0001 - 0079	01
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

STANDBY ALTERNATOR INSTALLATION


AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
		NOTE: WHEN INITIALLY ORDERING THIS PART FOR AIRPLANES PRIOR TO 208-0024, ALSO ORDER PARTS AN842-4D ELBOW AND S2685-1 ADAPTER.								
88	S3346-1	.	GASKET						(208) 0001 - 0079	01
		NOTE: WHEN INITIALLY ORDERING THIS PART FOR AIRPLANES PRIOR TO 208-0024, ALSO ORDER PARTS AN842-4D ELBOW AND S2685-1 ADAPTER.								
89	2600100-18	.	LINE ASSEMBLY						(208) 0001 - 0079	01
		NOTE: WHEN INITIALLY ORDERING THIS PART FOR AIRPLANES PRIOR TO 208-0024, ALSO ORDER PARTS AN842-4D ELBOW AND S2685-1 ADAPTER.								
90	AS5174D0404	.	UNION						(208) 0001 - 0079	01
		NOTE: WHEN INITIALLY ORDERING THIS PART FOR AIRPLANES PRIOR TO 208-0024, ALSO ORDER PARTS AN842-4D ELBOW AND S2685-1 ADAPTER.								
91	M83248/2-904	.	O-RING						(208) 0001 - 0079	01
		NOTE: WHEN INITIALLY ORDERING THIS PART FOR AIRPLANES PRIOR TO 208-0024, ALSO ORDER PARTS AN842-4D ELBOW AND S2685-1 ADAPTER.								

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A25050

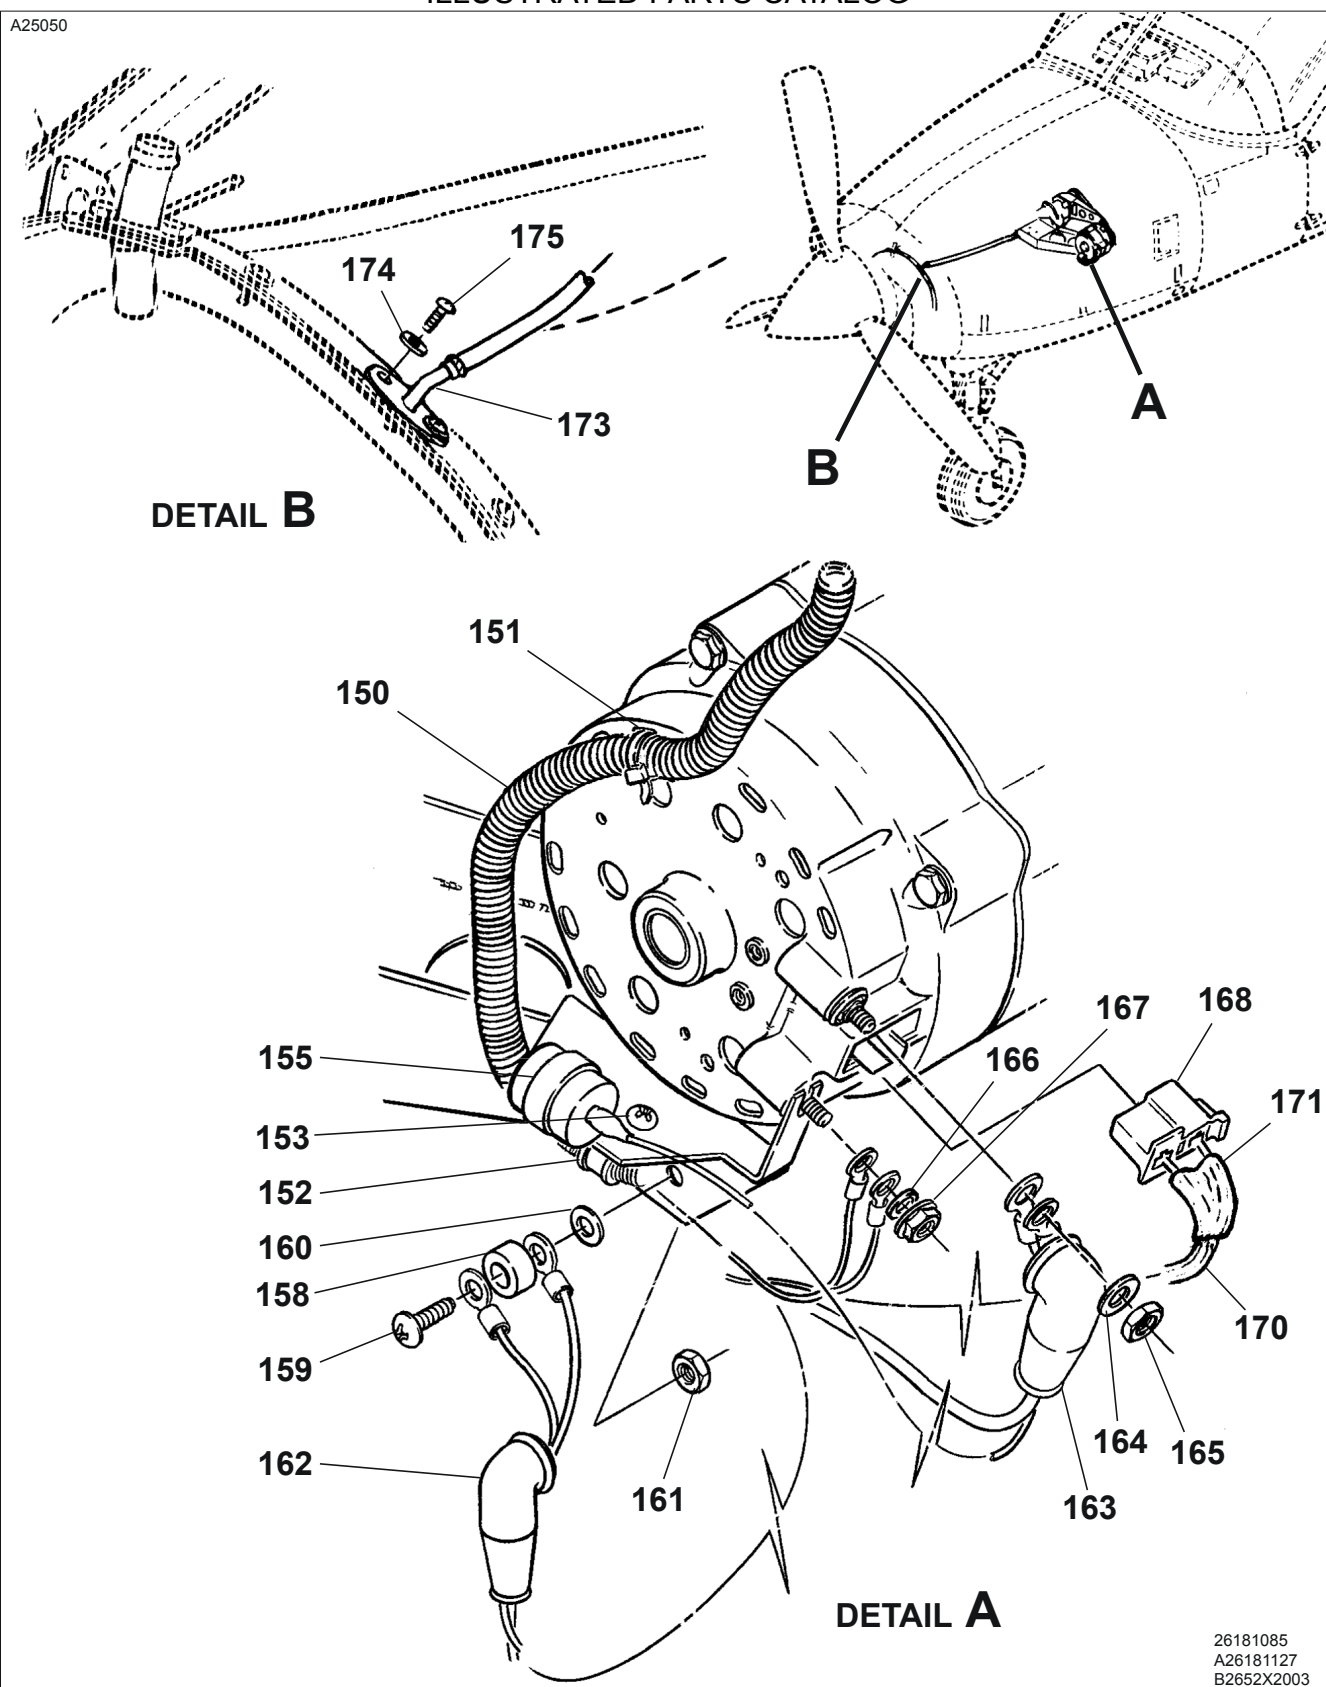

STANDBY ALTERNATOR INSTALLATION
 Figure 01. (Sheet 3)

26181085
 A26181127
 B2652X2003

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

STANDBY ALTERNATOR INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
150	S2562-2	.	TUBING						(208) 0001 & ON (208B) 0001 & ON	AR
151	MS3367-1-9	.	STA STRAP						(208) 0001 & ON (208B) 0001 & ON	AR
152	MS21919DG9	.	CLAMP						(208) 0001 & ON (208B) 0001 & ON	01
			ATTACHING PARTS							
153	MS35207-263	.	SCREW					80205	(208) 0001 & ON (208B) 0001 & ON	01
- 154	MS21044N3	.	NUT					4W953	(208) 0001 & ON (208B) 0001 & ON	01
			--*--							
155	S1915-3	.	CAPACITOR - 6.0 MF 150 VDC						(208) 0001 & ON (208B) 0001 & ON	01
			ATTACHING PARTS							
- 156	AN525-10R6	.	SCREW						(208) 0001 & ON (208B) 0001 & ON	01
- 157	MS21042L3	.	NUT					00624	(208) 0001 & ON (208B) 0001 & ON	01
			--*--							
158	83-0057	.	RESISTOR					78488	(208) 0001 & ON (208B) 0001 & ON	01
			ATTACHING PARTS							
159	S1676-5C24	.	SCREW					13764	(208) 0001 & ON (208B) 0001 & ON	01
160	S1438-2	.	WASHER						(208) 0001 & ON (208B) 0001 & ON	01
161	0425020HN	.	NUT						(208) 0001 & ON (208B) 0001 & ON	01
			--*--							
162	TC218N1V02	.	INSULATOR CAP					OMAS	(208) 0001 & ON (208B) 0001 & ON	01
163	A-A-59178-2	.	NIPPLE						(208) 0001 & ON (208B) 0001 & ON	01
164	MS35338-44	.	WASHER						(208) 0001 & ON (208B) 0001 & ON	01
165	AN340-416	.	NUT						(208) 0001 & ON (208B) 0001 & ON	01
166	AN935-10	.	WASHER						(208) 0001 & ON (208B) 0001 & ON	01
167	AN340-10	.	NUT						(208) 0001 & ON (208B) 0001 & ON	01
168	D20B-14489-KA	.	CONNECTOR					88690	(208) 0001 - 0014	01
- 169	2570101-1	.	CONNECTOR ASSEMBLY						(208) 0015 & ON (208B) 0001 & ON	01
- 169A	S2376-2	.	CONNECTOR						(208) 0015 & ON (208B) 0001 & ON	01
170	S1694-5	.	TUBING - 5.00 IN LG BULK ITEM						(208) 0015 & ON (208B) 0001 & ON	01
171	S1694-7	.	TUBING - 1.00 IN LG BULK ITEM						(208) 0015 & ON (208B) 0001 & ON	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

STANDBY ALTERNATOR INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE											UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
- 172	S1694-4	.	TUBING - 1.50 IN LG BULK ITEM							(208) 0015 & ON (208B) 0001 & ON	02
173	2601193-1	.	OUTLET ASSEMBLY - STANDBY ALTERNATOR DRAIN ATTACHING PARTS							(208) 0001 - 0079	01
174	S1450-3N10-032C	.	WASHER							(208) 0001 - 0079	02
175	MS35207-262	.	SCREW							80205 (208) 0001 - 0079	02
--*--											
- ITEM NOT ILLUSTRATED											


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

24-36-01

STANDBY ALTERNATOR INSTALLATION
AIRPLANES (208B) 5000 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A89956

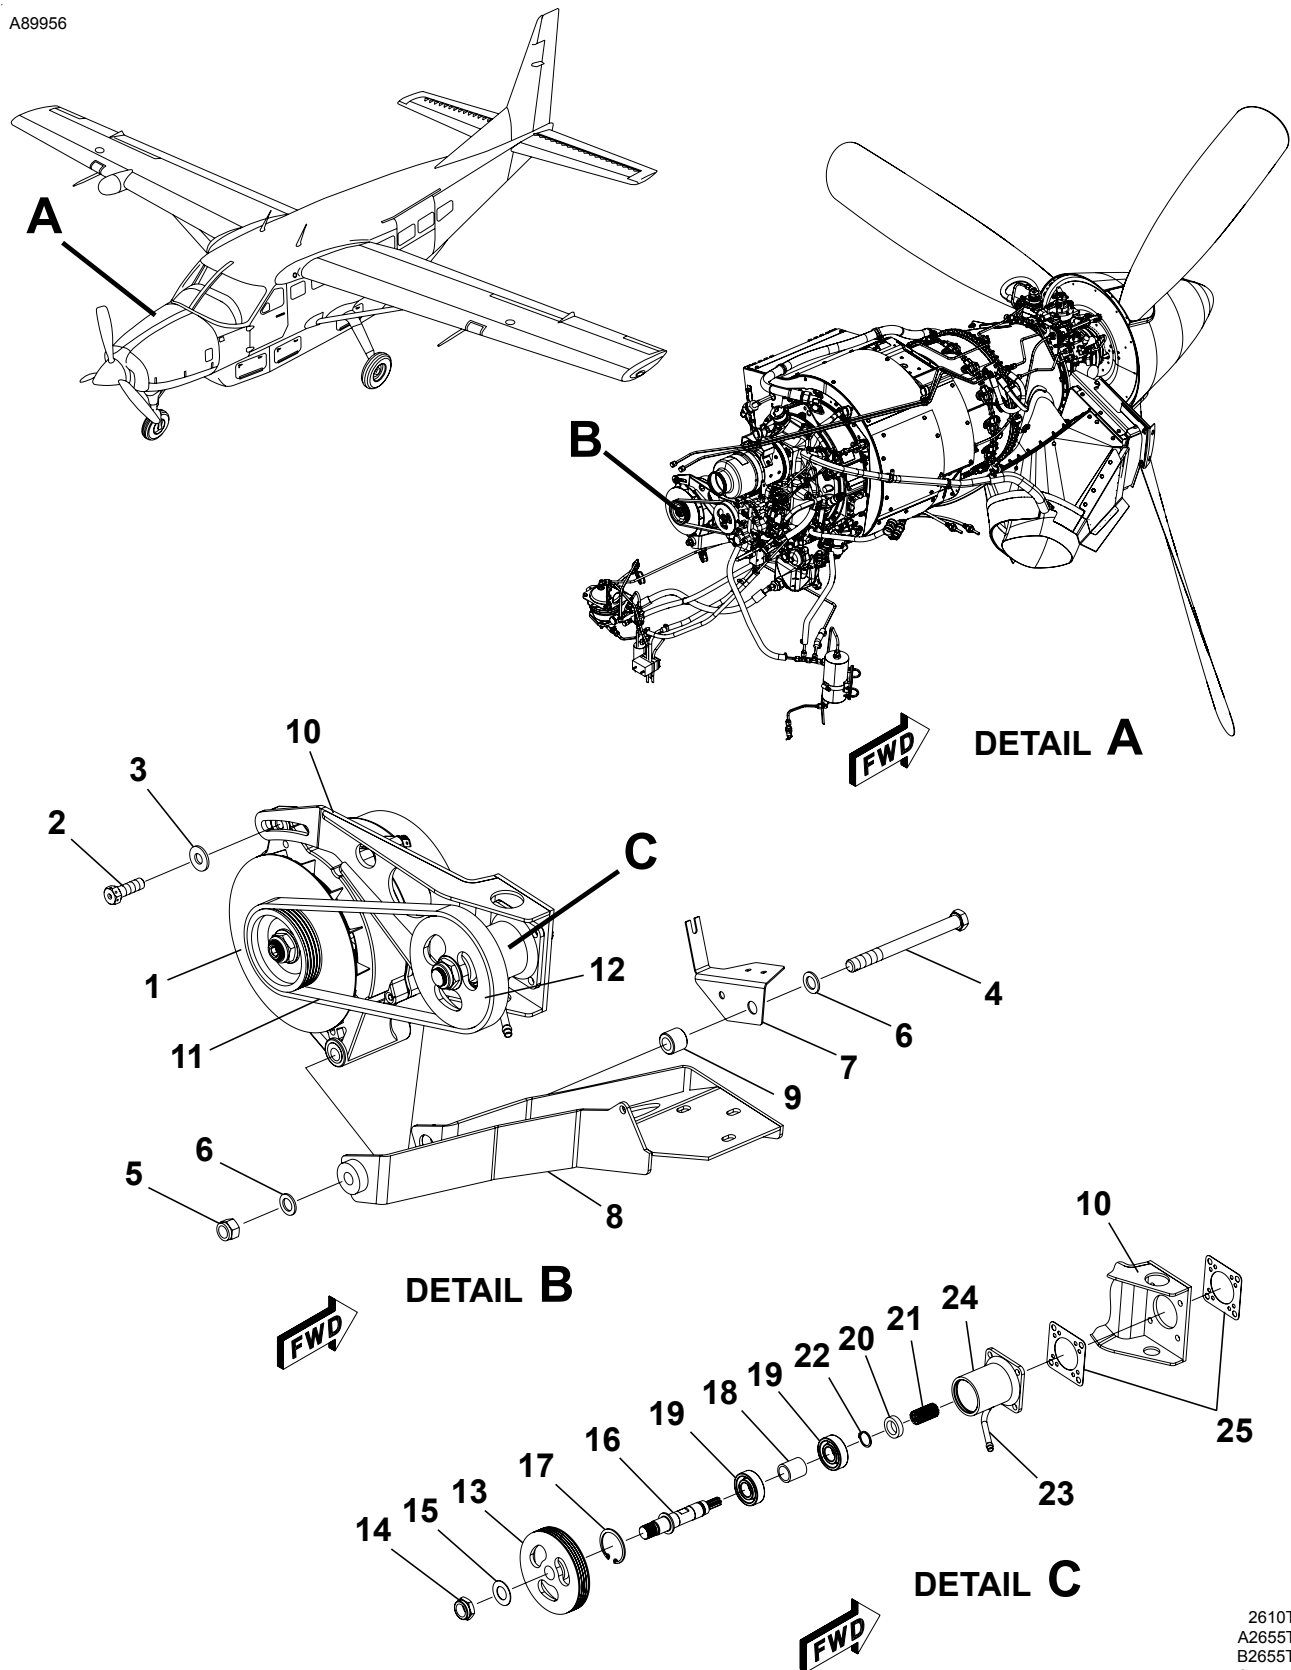

2610T7004
 A2655T1042
 B2655T1042
 C2655T1042

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

STANDBY ALTERNATOR INSTALLATION

AIRPLANES (208B) 5000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	9910592-2	.	ALTERNATOR ASSEMBLY						(208B) 5000 & ON	01
		.	ATTACHING PARTS							
2	0750220-1	.	BOLT						(208B) 5000 & ON	01
3	S1450-6-14-080	.	WASHER						(208B) 5000 & ON	01
4	AN7-46A	.	BOLT						(208B) 5000 & ON	01
5	MS20365-720C	.	NUT						(208B) 5000 & ON	01
6	NAS1149C0763R	.	WASHER						(208B) 5000 & ON	02
		.	--*--							
7	2550105-1	.	BRACKET						(208B) 5000 & ON	01
8	2601072-14	.	BRACKET ASSEMBLY						(208B) 5000 & ON	01
9	2601072-7	.	BUSHING						(208B) 5000 & ON	01
10	2601072-8	.	ARM ASSEMBLY						(208B) 5000 & ON	01
11	285K4	.	BELT					1DY25	(208B) 5000 & ON	01
12	2601271-18	.	DRIVE PULLEY ASSEMBLY						(208B) 5000 - 5760	01
- 12A	2650020-1	.	DRIVE PULLEY ASSEMBLY						(208B) 5761 & ON	01
13	2150147-4	.	PULLEY - POLY V						(208B) 5000 & ON	01
14	MS21245-L10	.	NUT						(208B) 5000 & ON	01
15	NAS1149F1032P	.	WASHER						(208B) 5000 & ON	01
16	2601265-3	.	DRIVE SHAFT						(208B) 5000 - 5760	01
- 16A	2601265-2	.	DRIVE SHAFT						(208B) 5761 & ON	01
17	MS16625-1156	.	RING						(208B) 5000 & ON	01
18	2650078-2	.	SPACER						(208B) 5000 - 5760	01
- 18A	2650021-1	.	SPACER						(208B) 5761 & ON	01
19	S2800-288	.	BEARING						(208B) 5000 - 5760	01
- 19A	S2800-1839	.	BEARING					21335	(208B) 5761 & ON	01
20	27223-7021	.	SEAL					73680	(208B) 5000 & ON	01
21	2601266-3	.	SPLINED COUPLING						(208B) 5000 & ON	01
22	MS16624-1067	.	RING						(208B) 5000 & ON	01
23	2601271-14	.	DRAIN TUBE						(208B) 5000 & ON	01
24	2601270-5	.	BEARING HOUSING						(208B) 5000 & ON	01
25	S3346-1	.	GASKET						(208B) 5000 & ON	02
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG



24-36-02

**STANDBY ALTERNATOR OVERHEAT WARNING SYSTEM -
BRITISH CERTIFIED AIRPLANES**


**AIRPLANES (208) 0240 THRU 0499 AND AIRPLANES (208B) 0365 THRU
1999**

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A25051

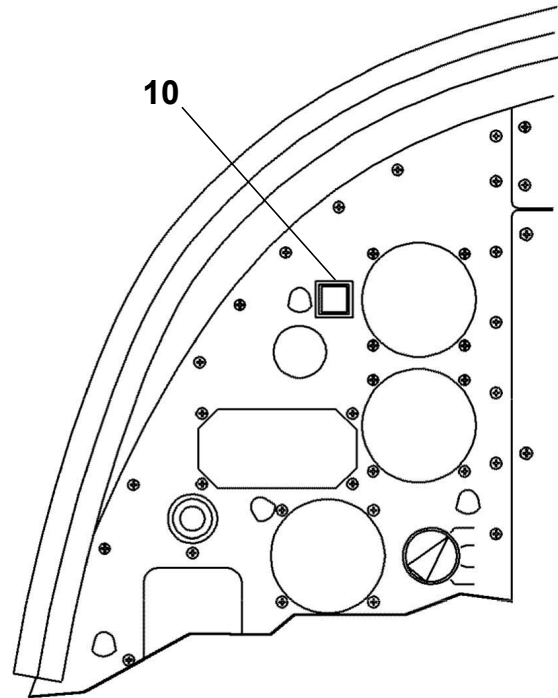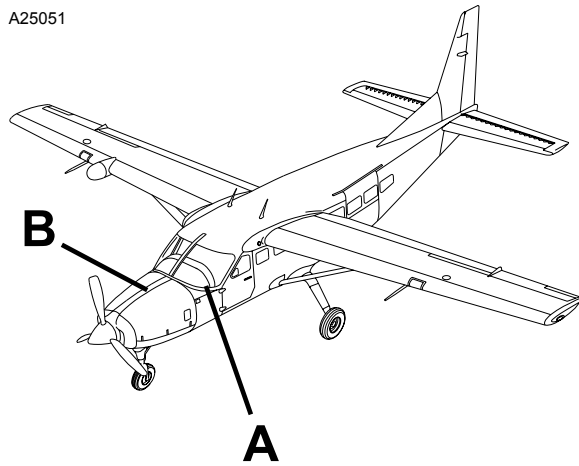

DETAIL A

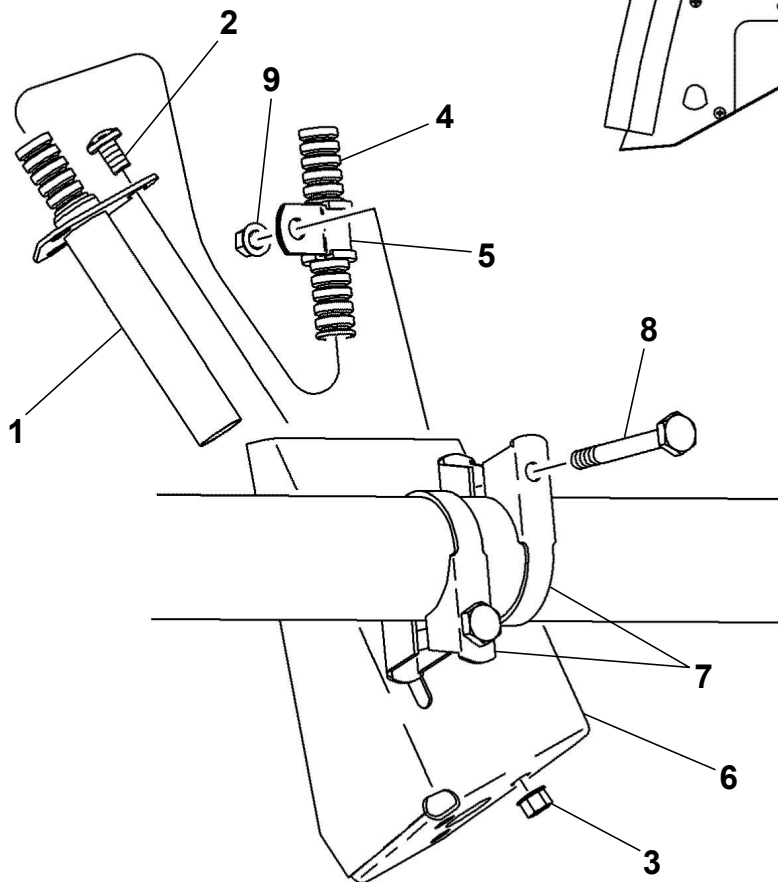

DETAIL B

STANDBY ALTERNATOR OVERHEAT WARNING SYSTEM - BRITISH CERTIFIED AIRPLANES
Figure 01. (Sheet 1)

2610T7005
 A2618T1069
 B2614T1113

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

STANDBY ALTERNATOR OVERHEAT WARNING SYSTEM - BRITISH CERTIFIED AIRPLANES

AIRPLANES (208) 0240 THRU 0499 AND AIRPLANES (208B) 0365 THRU 1999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	C8F-CR300F	.						SWITCH - STANDBY ALTERNATOR OVERHEAT SN006	93929 (208) 0240 - 0499 (208B) 0365 - 1999	01
								ATTACHING PARTS		
2	MS35207-260	.						SCREW	(208) 0240 - 0499 (208B) 0365 - 1999	03
3	MS21042-3	.						NUT	(208) 0240 - 0499 (208B) 0365 - 1999	03
								--*--		
4	S2562-1	.						TUBING BULK ITEM	(208) 0240 - 0499 (208B) 0365 - 1999	AR
5	MS21919WDG5	.						CLAMP	(208) 0240 - 0499 (208B) 0365 - 1999	01
6	2650103-2	.						BRACKET ASSEMBLY	(208) 0240 - 0499 (208B) 0365 - 1999	01
7	S1601-20	.						CLAMP	(208) 0240 - 0499 (208B) 0365 - 1999	02
								ATTACHING PARTS		
8	AN3-15A	.						BOLT	(208) 0240 - 0499 (208B) 0365 - 1999	01
9	MS21042-3	.						NUT	(208) 0240 - 0499 (208B) 0365 - 1999	01
								--*--		
10		.						PANEL - LEFT STATIONARY REFER TO 53-22-01 FIGURE 05		RF

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

24-36-02



STARTER-GENERATOR OVERHEAT WARNING SYSTEM

AIRPLANES (208B) 2138 & ON


USED ON STANDARD AND EASA CERTIFIED AIRPLANES

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A103499

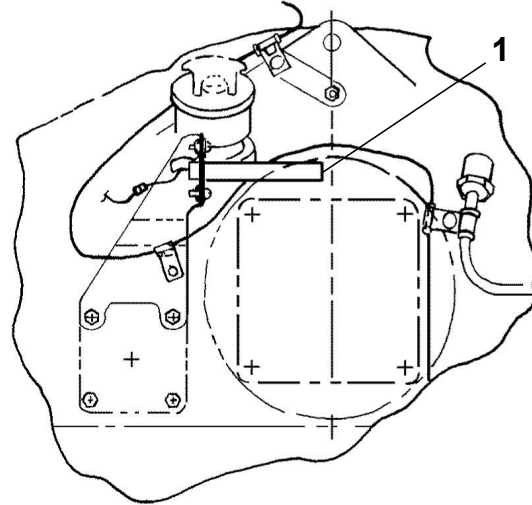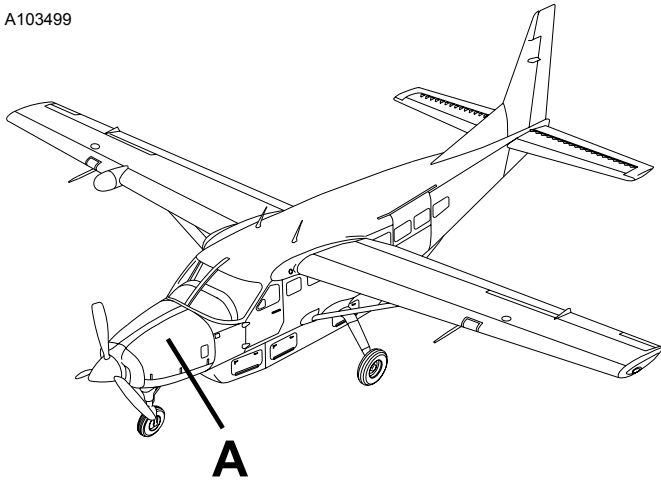

DETAIL A
 VIEW LOOKING FORWARD
 AIRPLANES 208B2138 THRU B5241

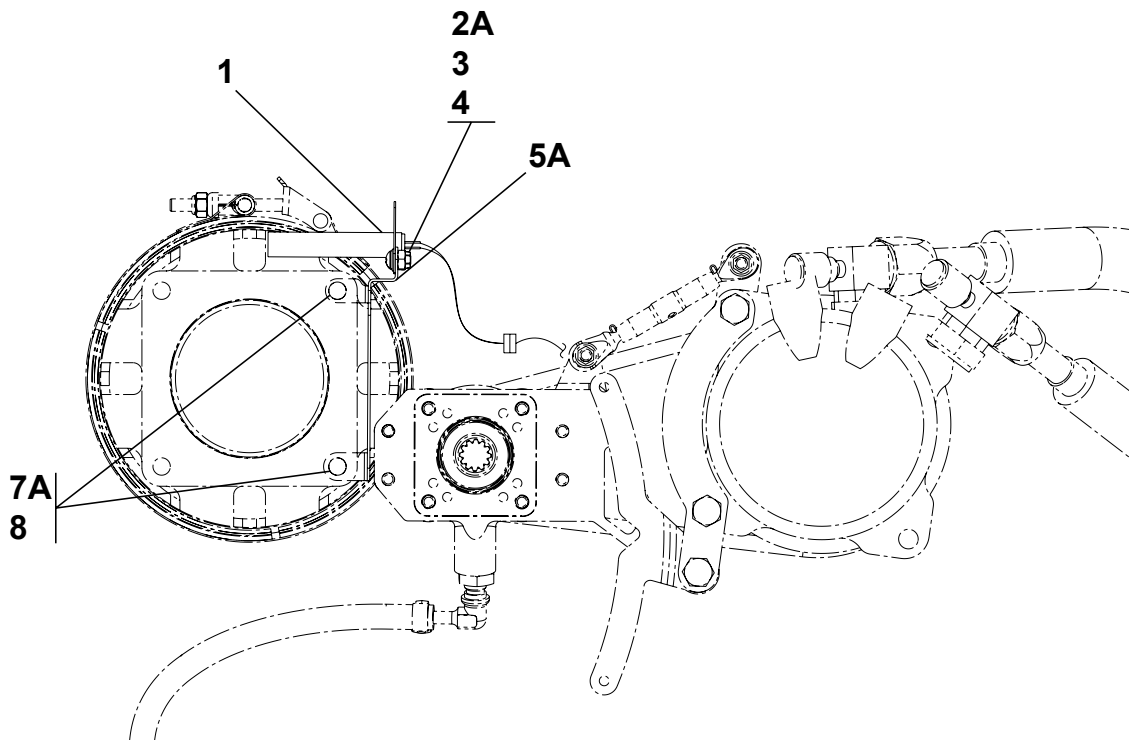

DETAIL A
 VIEW LOOKING AFT
 AIRPLANES 208B5241 AND ON

STARTER-GENERATOR OVERHEAT WARNING SYSTEM
Figure 01A. (Sheet 1)

26581004
 A26584001
 B26581003

Figure 01A
 Page 2
24-36-02 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

STARTER-GENERATOR OVERHEAT WARNING SYSTEM

AIRPLANES (208B) 2138 & ON

USED ON STANDARD AND EASA CERTIFIED AIRPLANES

NOMENCLATURE										UNITS PER ASSY		
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY			
1	C8F-CR300F	.	OVERHEAT SWITCH SN008							93929	(208B) 2138 & ON	01
			ATTACHING PARTS									
- 2	MS35207-261	.	SCREW							07187	(208B) 2138 - 5241	02
2A	MS35207-262	.	SCREW							80205	(208B) 5242 & ON	02
3	NAS1149F0332P	.	WASHER								(208B) 2138 & ON	02
4	MS21045-3	.	NUT								(208B) 2138 & ON	02
			--*--									
- 5	2650099-1	.	BRACKET - TEMP PROBE								(208B) 2138 - 5241	01
5A	2601380-4	.	BRACKET - TEMP PROBE								(208B) 5242 & ON	01
			ATTACHING PARTS									
- 6	MS9530-14	.	BOLT								(208B) 2138 - 5241	02
			NOTE: SUPPLIED ON AC COMPRESSOR PAD									
- 7	NAS1149F0463P	.	WASHER							99321	(208B) 2138 - 5241	04
			NOTE: SUPPLIED ON AC COMPRESSOR PAD									
7A	NAS1149C0532R	.	WASHER								(208B) 5242 & ON	02
			NOTE: SUPPLIED ON STARTER GENERATOR PAD									
8	MS21042L5	.	NUT								(208B) 5242 & ON	04
			NOTE: SUPPLIED ON STARTER GENERATOR PAD									
			--*--									
- ITEM NOT ILLUSTRATED												

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG


24-36-02

**STANDBY ALTERNATOR SHROUD INSTALLATION -
BRITISH CERTIFIED AIRPLANES**

**AIRPLANES (208) 0259 THRU 0359 AND 0417 THRU 0499 AND AIRPLANES
(208B) 0560 THRU 1999**

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A25052

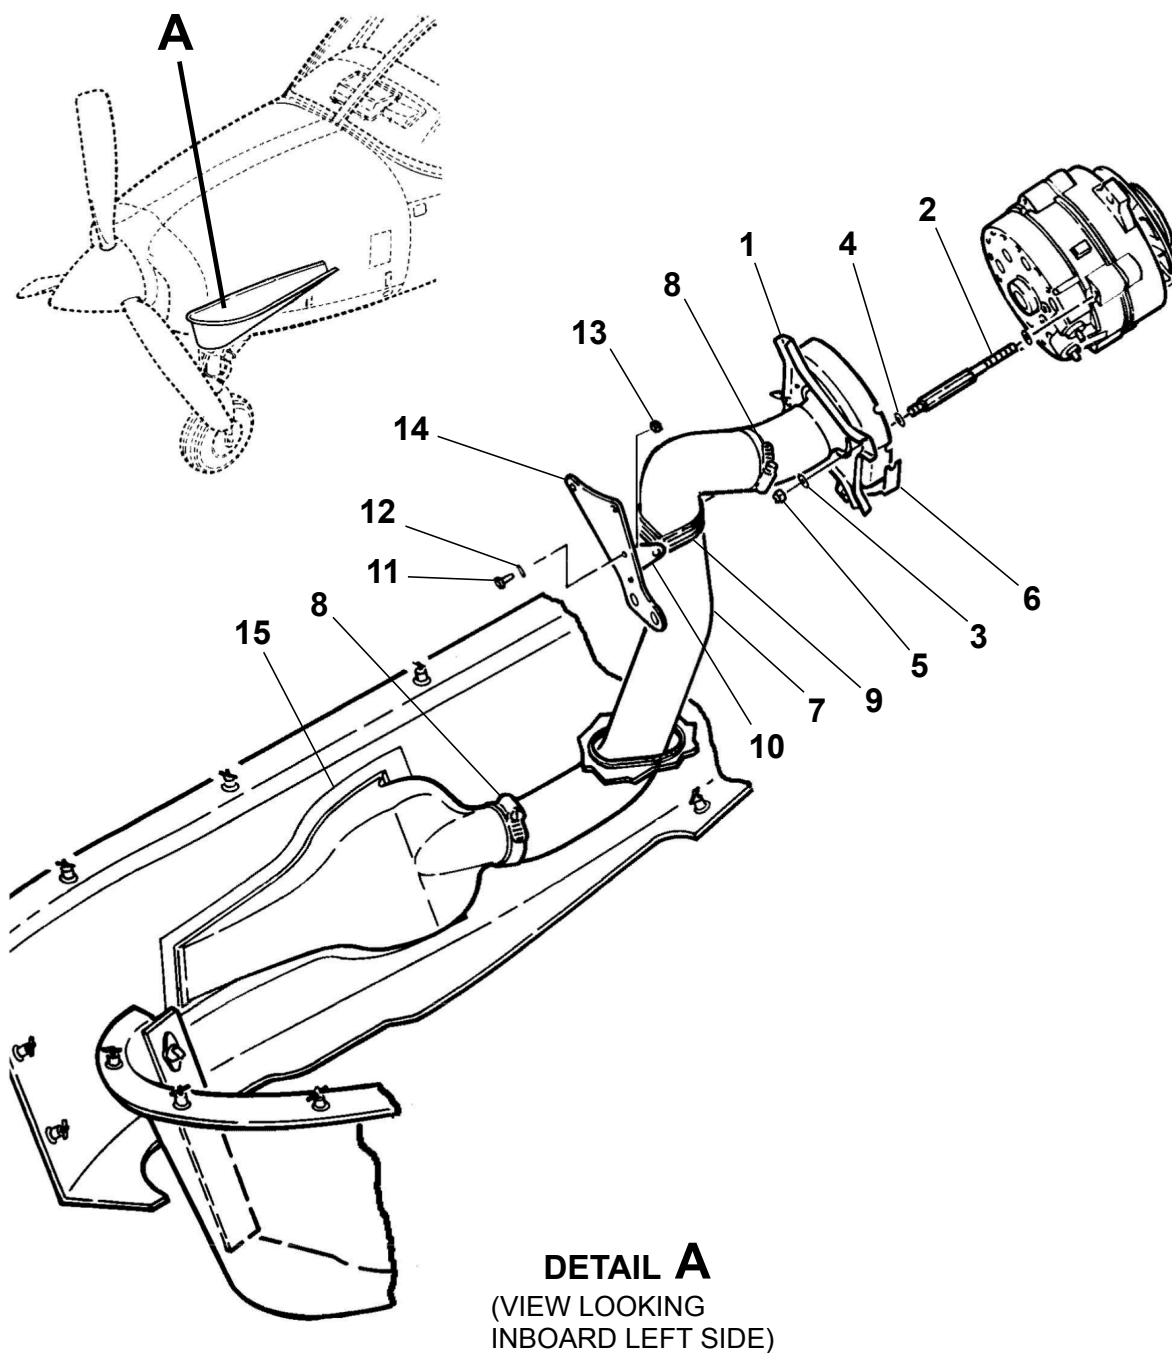

STANDBY ALTERNATOR SHROUD INSTALLATION - BRITISH CERTIFIED AIRPLANES
 Figure 02. (Sheet 1)

26521003
 A2658T2003

Figure 02
 Page 2
24-36-02 Nov 29, 2022

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

STANDBY ALTERNATOR SHROUD INSTALLATION - BRITISH CERTIFIED AIRPLANES
AIRPLANES (208) 0259 THRU 0359 AND 0417 THRU 0499 AND AIRPLANES (208B) 0560 THRU 1999

		NOMENCLATURE									UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	2601436-4	.	SHROUD ASSEMBLY - ALTERNATOR							(208) 0259 - 0359 (208) 0417 - 0499 (208B) 0560 - 1999	01
			ATTACHING PARTS								
2	2601436-5	.	BOLT - SHROUD SUPPORT FOR SPARES ORDER (MUST REPLACE WITH): 2601436-16							(208) 0240 - 0291 (208B) 0560 - 0697	NP
- 2A	2601436-16	.	BOLT - SHROUD SUPPORT SPARES REPLACEMENT FOR: 2601436-5							(208) 0292 - 0329 (208) 0417 - 0499 (208B) 0698 - 1999	04
3	NAS1149F0363P	.	WASHER							73197 (208) 0259 - 0359 (208) 0417 - 0499 (208B) 0560 - 1999	04
4	NAS1149F0363P	.	WASHER TO ADJUST SHROUD							73197 (208) 0259 - 0359 (208) 0417 - 0499 (208B) 0560 - 1999	AR
5	MS21044N3	.	NUT							4W953 (208) 0259 - 0359 (208) 0417 - 0499 (208B) 0560 - 1999	04
			--*--								
6	2601436-9	.	BRACKET - CAPACITOR							(208) 0259 - 0359 (208) 0417 - 0499 (208B) 0560 - 1999	01
7	S1053K18W	.	DUCT 34.00 IN LG BULK ITEM							(208) 0259 - 0359 (208) 0417 - 0499 (208B) 0560 - 1999	01
			ATTACHING PARTS								
8	S1891-32S	.	CLAMP							(208) 0259 - 0359 (208) 0417 - 0499 (208B) 0560 - 1999	02
9	MS21919WDG36	.	CLAMP							(208) 0259 - 0359 (208) 0417 - 0499 (208B) 0560 - 1999	01
			--*--								
10	2601436-12	.	BRACKET							(208) 0259 - 0359 (208) 0417 - 0499 (208B) 0560 - 1999	01
			ATTACHING PARTS								
11	AN3-3A	.	BOLT							(208) 0259 - 0359 (208) 0417 - 0499 (208B) 0560 - 1999	02
12	NAS1149F0363P	.	WASHER							73197 (208) 0259 - 0359 (208) 0417 - 0499 (208B) 0560 - 1999	02
13	MS21042L3	.	NUT ALTERNATE SPARE (INTERCHANGEABLE WITH): NAS1291-3							00624 (208) 0259 - 0359 (208) 0417 - 0499 (208B) 0560 - 1999	02
- 13A	NAS1291-3	.	NUT ALTERNATE SPARE (INTERCHANGEABLE WITH): MS21042L3							(208) 0259 - 0359 (208) 0417 - 0499 (208B) 0560 - 1999	02
			--*--								

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

STANDBY ALTERNATOR SHROUD INSTALLATION - BRITISH CERTIFIED AIRPLANES

AIRPLANES (208) 0259 THRU 0359 AND 0417 THRU 0499 AND AIRPLANES (208B) 0560 THRU 1999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
14	2601436-10	.	BRACKET						(208) 0259 - 0359 (208) 0417 - 0499 (208B) 0560 - 1999	01
15		.	PANEL ASSEMBLY - NOSE GEAR FAIRING REFER TO 71-10-00 FIGURE 03 .							RF
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG


24-37-00

ELECTRICAL MONITORING

**AIRPLANES (208) 0001 THRU 0499 AND AIRPLANES (208B) 0001 THRU
1999**

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

A25053

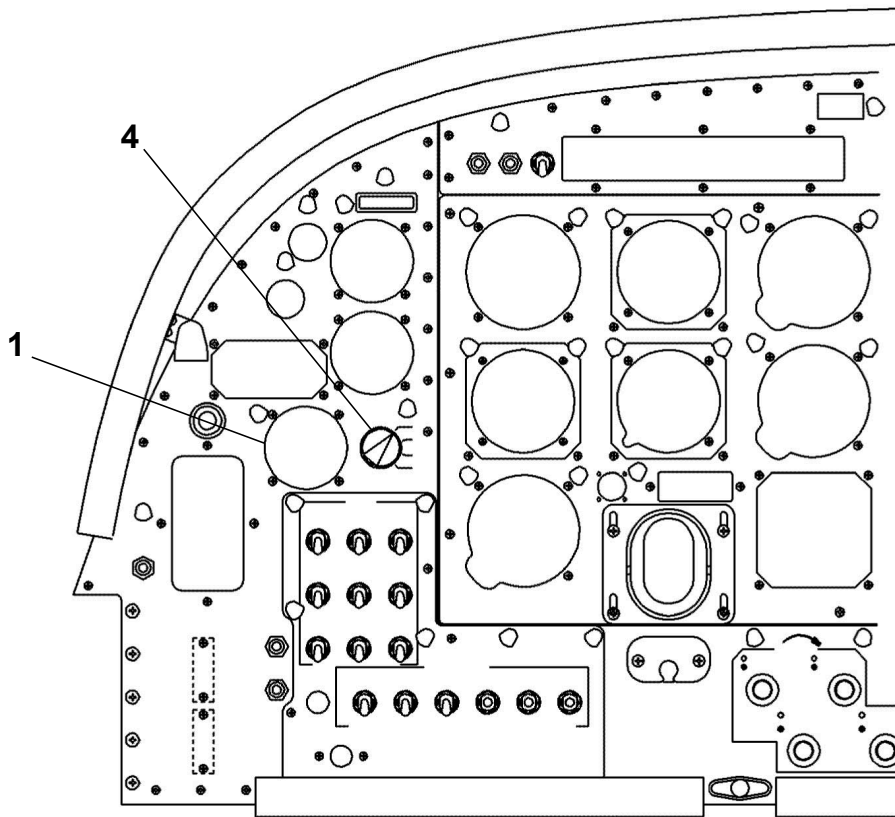

ELECTRICAL MONITORING
Figure 01. (Sheet 1)

2618T1010

Figure 01
Page 2
24-37-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ELECTRICAL MONITORING

AIRPLANES (208) 0001 THRU 0499 AND AIRPLANES (208B) 0001 THRU 1999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	C662504-0101	.	GAGE - VOLT	AMMETER					(208) 0001 - 0499 (208B) 0001 - 1999	01
- 1A	S3486-1	.	GAGE - VOLT	AMMETER USED WITH 300 AMP STARTER/ GENERATOR					(208) 0001 - 0499 (208B) 0001 - 1999	01
			ATTACHING PARTS							
- 2	MS35214-29	.	SCREW						(208) 0001 - 0499 (208B) 0001 - 1999	04
- 3	MS33737-16C	.	NUT						(208) 0001 - 0499 (208B) 0001 - 1999	04
			--*							
4	S1587-5	.	KNOB ASSEMBLY						(208) 0001 - 0499 (208B) 0001 - 1999	01
- 5	80-707227	.	WASHER					04426	(208) 0001 - 0499 (208B) 0001 - 1999	01
- 6	2570100-5	.	SWITCH ASSEMBLY - VOLT/AMMETER FOR SPARES ORDER (MUST REPLACE WITH): 2670120-1						(208) 0001 - 0217 (208B) 0001 - 0305	NP
- 7	2670120-1	.	SWITCH ASSEMBLY - VOLT/AMMETER SPARES REPLACEMENT FOR: 2570100-5						(208) 0218 - 0499 (208B) 0306 - 1999	01
- 8	71BD36-02-1AJN	.	SWITCH					53467	(208) 0001 - 0499 (208B) 0001 - 1999	01
- 9	RNC55H1322DS	.	RESISTOR - USED ON 2570100-5 ASSEMBLY						(208) 0001 - 0217 (208B) 0001 - 0305	01
- 10	2670121-1	.	POTENTIOMETER ASSEMBLY - VOLTMETER ADJUSTMENT USED ON 2670120-1 ASSEMBLY						(208) 0218 - 0499 (208B) 0306 - 1999	01
- 11	S2349-4	.	PLUG					00779	(208) 0001 - 0499 (208B) 0001 - 1999	01
- ITEM NOT ILLUSTRATED										



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

24-40-00


EXTERNAL POWER SYSTEM COMPONENTS
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A25054

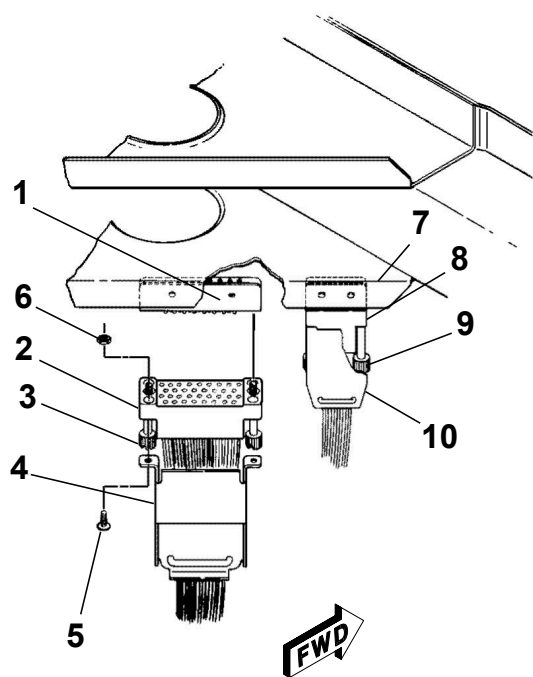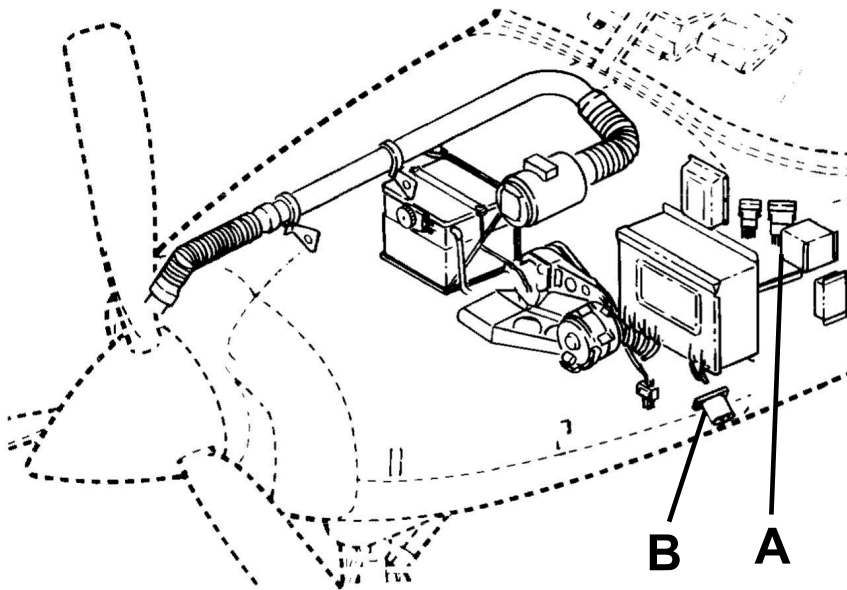

DETAIL A

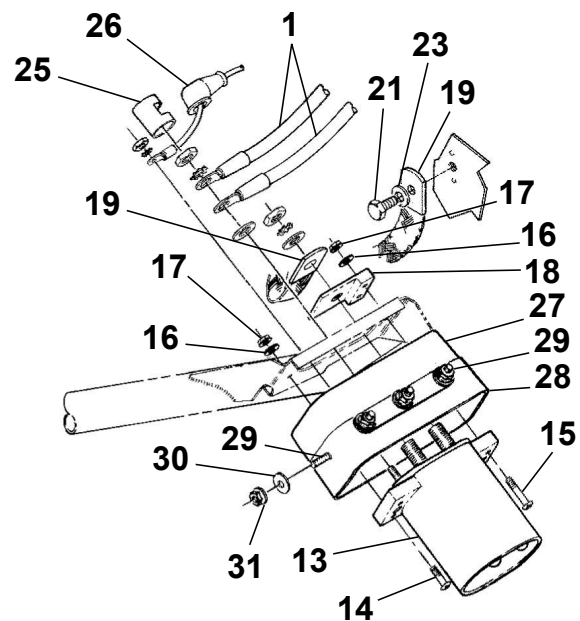

DETAIL B

EXTERNAL POWER SYSTEM COMPONENTS
Figure 01. (Sheet 1)

26582001
 A26582002
 B26581001

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

EXTERNAL POWER SYSTEM COMPONENTS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	S2527-2	.	CONNECTOR - GROUNDING FOR SPARES ORDER (MUST REPLACE WITH): 204814-1						(208) 0001 & ON (208B) 0001 & ON	NP
- 1A	204814-1	.	CONNECTOR - GROUNDING SPARES REPLACEMENT FOR: S2527-2				00779		(208) 0001 & ON (208B) 0001 & ON	01
2	S2527-1	.	BLOCK - GROUNDING FOR SPARES ORDER (MUST REPLACE WITH): 200838-2						(208) 0001 & ON (208B) 0001 & ON	NP
- 2A	200838-2	.	BLOCK - GROUNDING SPARES REPLACEMENT FOR: S2527-1				00779		(208) 0001 & ON (208B) 0001 & ON	01
3	203618-1	.	ATTACHING PARTS JACKSCREW				00779		(208) 0001 & ON (208B) 0001 & ON	02
4	S2527-3	.	CLAMP ASSEMBLY FOR SPARES ORDER (MUST REPLACE WITH): 201846-1						(208) 0001 & ON (208B) 0001 & ON	NP
- 4A	201846-1	.	CLAMP KIT SPARES REPLACEMENT FOR: S2527-3				00779		(208) 0001 & ON (208B) 0001 & ON	01
5	AN515-3R6	.	ATTACHING PARTS SCREW				88044		(208) 0001 & ON (208B) 0001 & ON	02
6	AN340-6	.	NUT						(208) 0001 & ON (208B) 0001 & ON	02
7	S2526-2	.	CONNECTOR - GROUNDING				00779		(208) 0001 & ON (208B) 0001 & ON	01
8	S2526-1	.	BLOCK - GROUNDING				00779		(208) 0001 & ON (208B) 0001 & ON	01
9	203618-1	.	ATTACHING PARTS JACKSCREW				00779		(208) 0001 & ON (208B) 0001 & ON	02
10	201843-1	.	CLAMP ASSEMBLY				00779		(208) 0001 & ON (208B) 0001 & ON	01
- 11	AN515-3R6	.	ATTACHING PARTS SCREW				88044		(208) 0001 & ON (208B) 0001 & ON	02
- 12	AN340-3	.	NUT				88044		(208) 0001 & ON (208B) 0001 & ON	02
13	MS3506-1	.	RECEPTACLE - GROUND SERVICE				96906		(208) 0001 & ON (208B) 0001 & ON	01
14	MS35207-267	.	ATTACHING PARTS SCREW						(208) 0001 & ON (208B) 0001 & ON	02
15	AN520-10R22	.	SCREW						(208) 0001 & ON (208B) 0001 & ON	02

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

EXTERNAL POWER SYSTEM COMPONENTS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
16	NAS1149F0363P	.	WASHER						73197	(208) 0001 & ON (208B) 0001 & ON	04
17	MS21042L3	.	NUT						00624	(208) 0001 & ON (208B) 0001 & ON	04
			--*--								
18	2670047-1	.	LUG - GROUND							(208) 0001 - 0601 (208B) 0001 - 5401	01
- 18A	2670047-2	.	LUG - GROUND							(208) 0602 & ON (208B) 5402 & ON	01
19	0412007-6	.	GROUND STRAP - EXTERNAL POWER							(208) 0068 & ON (208B) 0001 & ON	01
- 20	0412007-17	.	GROUND STRAP - EXTERNAL POWER * AIRPLANES (208B) 0001 & ON INCORPORATING SK208-11							(208) 0001 - 0067 (208B) *0001 & ON	01
21	AN4-5A	.	BOLT						88044	(208) 0068 - 0601 (208B) 0001 - 5401	01
- 21A	AN4-6A	.	BOLT						60380	(208) 0602 & ON (208B) 5402 & ON	01
- 22	AN525-10R6	.	SCREW * AIRPLANES (208B) 0001 & ON INCORPORATING SK208-11							(208) 0001 - 0067 (208B) *0001 & ON	01
23	NAS1149C0432R	.	WASHER							(208) 0068 - 0601 (208B) 0001 - 5401	01
- 23A	MS15795-853	.	WASHER							(208) 0602 & ON (208B) 5402 & ON	01
- 24	NAS1149C0332R	.	WASHER * AIRPLANES (208B) 0001 & ON INCORPORATING SK208-11							(208) 0001 - 0067 (208B) *0001 & ON	01
25	S1807-1	.	COVER - TERMINAL							(208) 0001 & ON (208B) 0001 & ON	01
26	A-A-59178-1	.	NIPPLE						81348	(208) 0001 & ON (208B) 0001 & ON	01
27	2613382-5	.	SEAL ASSEMBLY - GROUND SERVICE RECEPTACLE FOR SPARES ORDER (MUST REPLACE WITH): 2613382-9							(208) 0142 - 0604 (208B) 0126 - 5418	NP
- 27A	2613382-9	.	SEAL ASSEMBLY - GROUND SERVICE RECEPTACLE SPARES REPLACEMENT FOR: 2613382-5							(208) 0605 & ON (208B) 5419 & ON	01
28	2613382-7	.	SEAL FOR SPARES ORDER (MUST REPLACE WITH): 2613382-11							(208) 0142 - 0604 (208B) 0126 - 5418	NP
- 28A	2613382-11	.	SEAL SPARES REPLACEMENT FOR: 2613382-7 ATTACHING PARTS							(208) 0605 & ON (208B) 5419 & ON	01
29	AN3-4A	.	BOLT						80205	(208) 0001 & ON (208B) 0001 & ON	09
30	S1450-3S10-032	.	WASHER							(208) 0001 & ON (208B) 0001 & ON	09
31	MS21043-3	.	NUT							(208) 0001 & ON (208B) 0001 & ON	09
			--*--								

- ITEM NOT ILLUSTRATED




CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

24-50-00

LOWER INSTRUMENT PANEL EQUIPMENT
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A25055

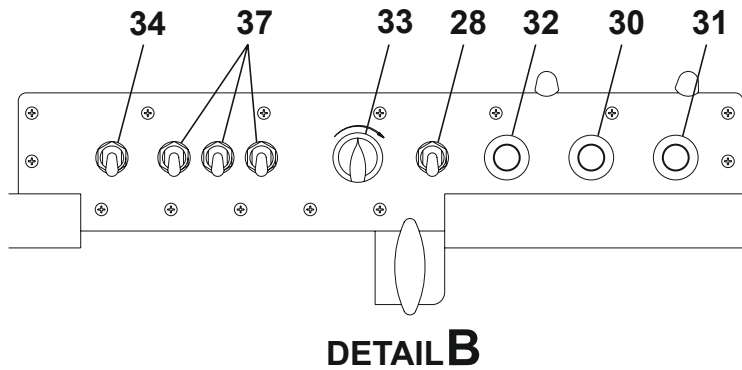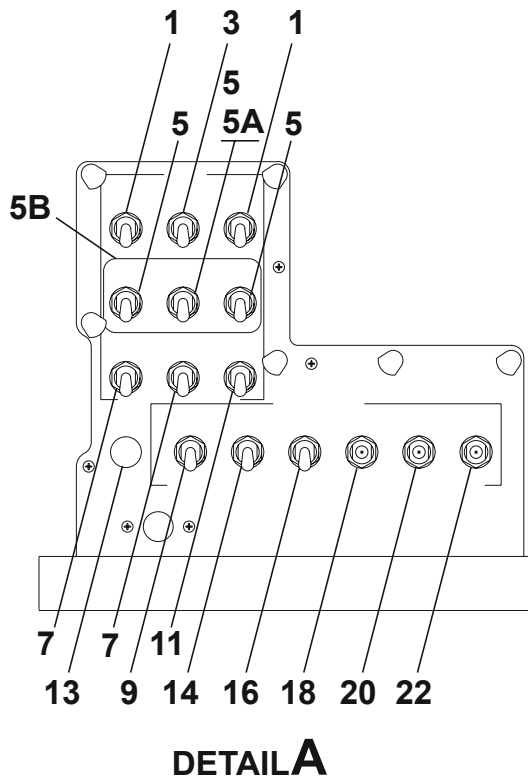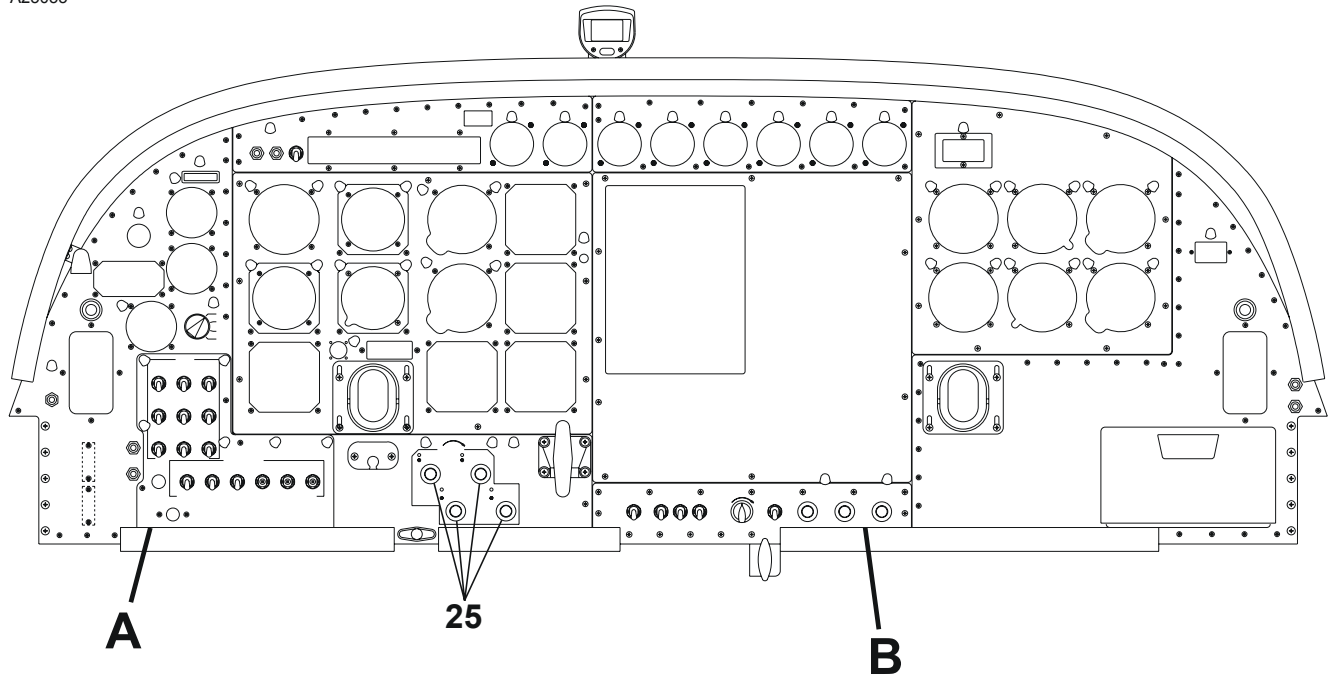

LOWER INSTRUMENT PANEL EQUIPMENT
 Figure 01. (Sheet 1)

2618T1015
 A2618T1015
 B2618T1015

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

LOWER INSTRUMENT PANEL EQUIPMENT

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	MS25306-222	.	SWITCH						(208) 0001 & ON (208B) 0001 & ON	02
- 2	C15WHITE	.	TIP - SWITCH WHITE					95146	(208) 0197 & ON (208B) 0229 & ON	02
3	MS25307-222	.	SWITCH						(208) 0001 & ON (208B) 0001 & ON	01
- 4	C15WHITE	.	TIP - SWITCH WHITE					95146	(208) 0197 & ON (208B) 0229 & ON	01
5	S382-2	.	SWITCH					91929	(208) 0001 & ON (208B) 0001 & ON	03
5A	MS35059-23	.	SWITCH - EXIT SIGN					96906	(208) *0001 & ON (208) *0001 & ON (208B) *0001 & ON (208B) *0001 & ON	01
			* ARGENTINIAN CERTIFIED AIRPLANES (208) 0001 & ON							
			* CHINESE CERTIFIED AIRPLANES (208) 0001 & ON							
			* ARGENTINIAN CERTIFIED AIRPLANES (208B) 0001 & ON							
			* CHINESE CERTIFIED AIRPLANES (208B) 0001 & ON							
5B	2601451-3	.	COVER ASSEMBLY						(208) *0001 & ON (208) *0001 & ON (208B) *0001 & ON (208B) *0001 & ON	01
			* ARGENTINIAN CERTIFIED AIRPLANES (208) 0001 & ON							
			* CHINESE CERTIFIED AIRPLANES (208) 0001 & ON							
			* ARGENTINIAN CERTIFIED AIRPLANES (208B) 0001 & ON							
			* CHINESE CERTIFIED AIRPLANES (208B) 0001 & ON							
- 6	C15WHITE	.	TIP - SWITCH WHITE					95146	(208) 0197 & ON (208B) 0229 & ON	03
7	S382-2	.	SWITCH 208 & 208B PASSENGER VERSION					91929	(208) 0001 & ON	02
- 8	C15WHITE	.	TIP - SWITCH WHITE					95146	(208) 0197 & ON (208B) 0229 & ON	02
9	S382-3	.	SWITCH					11139	(208) 0001 & ON (208B) 0001 & ON	01
- 9A	MS35058-23	.	SWITCH					82389	(208) 0001 & ON (208B) 0001 & ON	01
- 10	C15GREEN	.	TIP - SWITCH GREEN						(208) 0197 & ON (208B) 0229 & ON	01
11	MS35058-27	.	SWITCH					96906	(208) 0001 & ON (208B) 0001 & ON	01
- 12	CM2692-15S1S	.	PLUG BUTTON						(208) 0001 & ON (208B) 0001 & ON	AR
13	CM2692-15S1S	.	PLUG BUTTON						(208) 0001 & ON (208B) 0001 & ON	01
14	S382-2	.	SWITCH					91929	(208) 0001 & ON (208B) 0001 & ON	01
- 15	C15GREEN	.	TIP - SWITCH GREEN						(208) 0197 & ON (208B) 0229 & ON	01
16	MS35058-30	.	SWITCH					96906	(208) 0001 & ON (208B) 0001 & ON	01
- 17	C15GREEN	.	TIP - SWITCH GREEN						(208) 0197 & ON (208B) 0229 & ON	01
18	MS25307-312	.	SWITCH						(208) 0001 & ON (208B) 0001 & ON	01
- 19	C15GREEN	.	TIP - SWITCH GREEN						(208) 0197 & ON (208B) 0229 & ON	01
20	MS25307-312	.	SWITCH - PROP-DEICE						(208) 0001 & ON (208B) 0001 & ON	01
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

LOWER INSTRUMENT PANEL EQUIPMENT

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 21	C15GREEN	.	TIP - SWITCH GREEN						(208) 0197 & ON (208B) 0229 & ON	01
22	MS35058-27	.	SWITCH					96906	(208) 0001 & ON (208B) 0001 & ON	01
- 23	C15GREEN	.	TIP - SWITCH GREEN						(208) 0197 & ON (208B) 0229 & ON	01
- 24	CM2692-15S1S	.	PLUG BUTTON W/O DE-ICE INSTALLATION						(208) 0001 & ON (208B) 0001 & ON	AR
25	S2091-7	.	RHEOSTAT						(208) 0001 & ON (208B) 0001 & ON	04
- 26	S1995-4	.	KNOB - RHEOSTAT						(208) 0001 & ON (208B) 0001 & ON	04
- 27	AN565B2H3	.	SET SCREW - RHEOSTAT KNOB ATTACH						(208) 0001 & ON (208B) 0001 & ON	04
28	S382-2	.	SWITCH - CABIN HEATER					91929	(208) 0001 & ON (208B) 0001 & ON	01
- 29	C15WHITE	.	TIP - SWITCH WHITE					95146	(208) 0197 & ON (208B) 0229 & ON	01
30	S1241-36	.	CONTROL ASSEMBLY - CABIN HEAT						(208) 0001 & ON (208B) 0001 & ON	01
31	S1241-50	.	CONTROL ASSEMBLY - DEFROST ALTERNATE SPARE (INTERCHANGEABLE WITH): S1241-58						(208) 0001 & ON (208B) 0001 & ON	01
- 31A	S1241-58	.	CONTROL ASSEMBLY - DEFROST ALTERNATE SPARE (INTERCHANGEABLE WITH): S1241-50						(208) 0001 & ON (208B) 0001 & ON	01
32	S1241-40	.	CONTROL ASSEMBLY - CABIN AIR/HEAT						(208) 0001 & ON (208B) 0001 & ON	01
33		.	CONTROL VALVE ASSEMBLY - TEMPERATURE REFER TO 21-41-00 FIGURE 01							RF
34	8502K1	.	SWITCH - AIR CONDITIONING ALTERNATE SPARE (INTERCHANGEABLE WITH): 4TL1-1 MS24525-21 * AIRPLANES (208) 0140 THRU 0415 AND 0417 THRU 0499 INCORPORATING SK208-157A * AIRPLANES (208) 0500 & ON AND 2000 THRU 4999 INCORPORATING CAB-21-03 * AIRPLANES (208) 5000 & ON INCORPORATING CAB-21-04 * AIRPLANES (208B) 0214 THRU 1189, 1191 THRU 1215 AND 1217 THRU 1999 INCORPORATING SK208-157A					15605	(208) 0140 & ON (208) *0140 - 0415 (208) *0417 - 0499 (208) *0500 & ON (208) *2000 - 4999 (208) *5000 & ON (208B) 0214 & ON (208B) *0214 - 1189 (208B) *1191 - 1215 (208B) *1217 - 1999	01
- 34A	4TL1-1	.	SWITCH ALTERNATE SPARE (INTERCHANGEABLE WITH): 8502K1					91929	(208) 0140 & ON (208B) 0214 & ON	01
- 34B	MS24525-21	.	SWITCH ALTERNATE SPARE (INTERCHANGEABLE WITH): 8502K1					96906	(208) 0140 & ON (208B) 0214 & ON	01
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG



LOWER INSTRUMENT PANEL EQUIPMENT

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
- 35	C15WHITE	.	CAP - -SWITCH WHITE						95146	(208) 0140 & ON	01
			* AIRPLANES (208) 0140 THRU 0415 AND 0417 THRU 0499							(208) *0140 - 0415	
			INCORPORATING SK208-157A							(208) *0417 - 0499	
			* AIRPLANES (208B) 0214 THRU 1189, 1191 THRU 1215 AND 1217							(208B) 0214 & ON	
			THRU 1999 INCORPORATING SK208-157A							(208B) *0214 - 1189	
			* AIRPLANES (208B) 0500 & ON AND 2000 THRU 4999							(208B) *0500 & ON	
			INCORPORATING CAB-21-03							(208B) *1191 - 1215	
										(208B) *1217 - 1999	
										(208B) *2000 - 4999	
- 36	CM2692-15S1S	.	PLUG BUTTON W/O AIR CONDITIONING							(208) 0001 & ON	01
										(208B) 0001 & ON	
37	S382-3	.	SWITCH - -AIR CONDITIONING BLOWER						11139	(208) 0140 & ON	03
			* AIRPLANES (208) 0140 THRU 0415 AND 0417 THRU 0499							(208) *0140 - 0415	
			INCORPORATING SK208-157A							(208) *0417 - 0499	
			* AIRPLANES (208) 0500 & ON INCORPORATING CAB-21-03							(208) *0500 & ON	
			* AIRPLANES (208) 5000 & ON INCORPORATING CAB-21-04							(208) *5000 & ON	
			* AIRPLANES (208B) 0214 THRU 1189, 1191 THRU 1215 AND 1217							(208B) 0214 & ON	
			THRU 1999 INCORPORATING SK208-157A							(208B) *0214 - 1189	
			* AIRPLANES (208B) 2000 THRU 4999 INCORPORATING CAB-21-03							(208B) *1191 - 1215	
										(208B) *1217 - 1999	
										(208B) *2000 - 4999	
- 38	C15WHITE	.	CAP - -SWITCH WHITE						95146	(208) 0140 & ON	03
			* AIRPLANES (208) 0140 THRU 0415 AND 0417 THRU 0499							(208) *0140 - 0415	
			INCORPORATING SK208-157A							(208) *0417 - 0499	
			* AIRPLANES (208) 0500 & ON AND 2000 THRU 4999							(208) *0500 & ON	
			INCORPORATING CAB-21-03							(208) *2000 - 4999	
			* AIRPLANES (208) 5000 & ON INCORPORATING CAB-21-04							(208) *5000 & ON	
			* AIRPLANES (208B) 0214 THRU 1189, 1191 THRU 1215 AND 1217							(208B) 0214 & ON	
			THRU 1999 INCORPORATING SK208-157A							(208B) *0214 - 1189	
										(208B) *1191 - 1215	
										(208B) *1217 - 1999	
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A25056

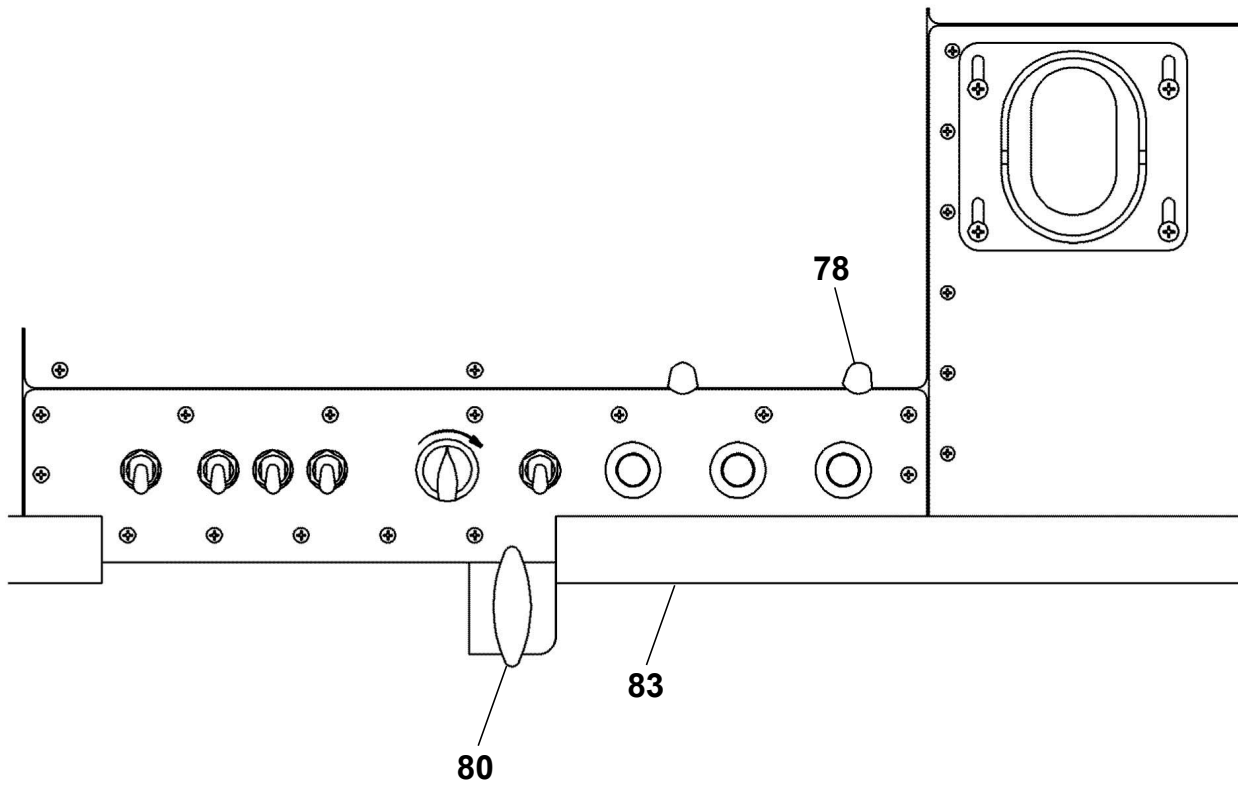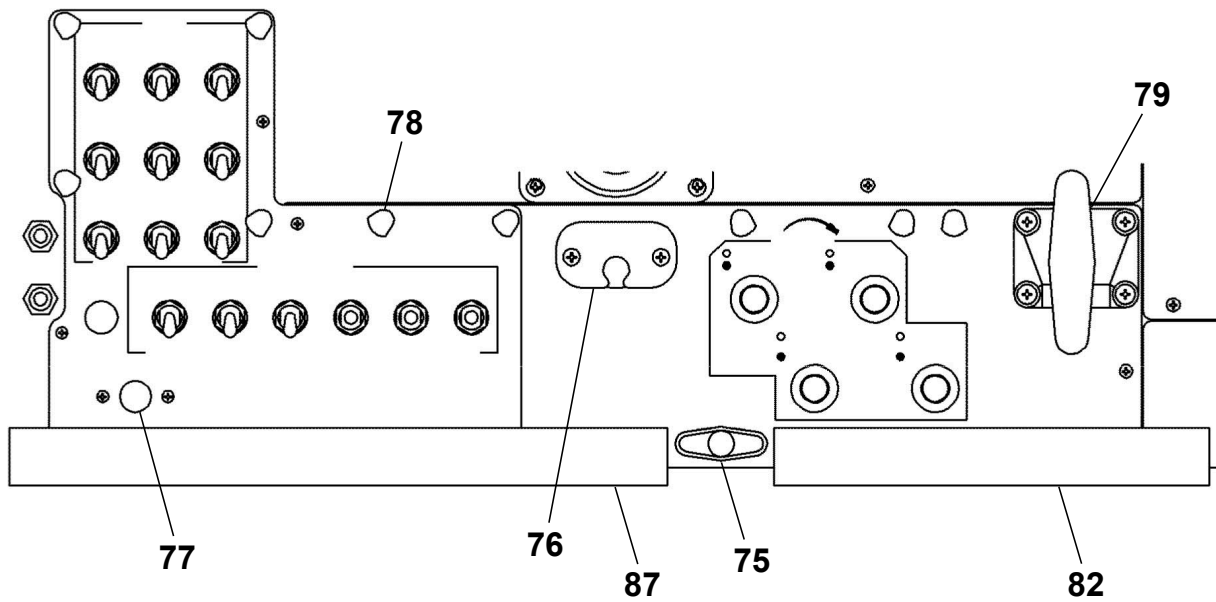

LOWER INSTRUMENT PANEL EQUIPMENT
Figure 01. (Sheet 2)

2618T1015

Figure 01
 Page 6
24-50-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

LOWER INSTRUMENT PANEL EQUIPMENT

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
75		.	CONTROL ASSEMBLY - PARKING BRAKE REFER TO 32-42-00 FIGURE 01								RF
76		.	COVER PLATE - CONTROL WHEEL COIL CORD REFER TO 27-10-01 FIGURE 02								RF
77		.	SELECTOR VALVE AND KNOB - ALTERNATE STATIC AIR REFER TO 34-11-00 FIGURE 01								RF
78		.	INSTRUMENT PANEL LIGHTING REFER TO 33-10-00 FIGURE 01								RF
79		.	INERTIAL SEPARATOR ACTUATING INSTALLATION REFER TO 71-60-00 FIGURE 02								RF
80		.	RUDDER CONTROL LOCK INSTALLATION REFER TO 27-70-00 FIGURE 01								RF
- 81	CM2692-15S1S	.	PLUG BUTTON - W/O AIR CONDITIONING							(208) 0001 & ON (208B) 0001 & ON	03
82	2613026-1	.	BUMPER ASSEMBLY - KNEE FOR SPARES ORDER (MUST REPLACE WITH): 2613026-22							(208) 0001 - 0499 (208B) 0001 - 1999	NP
- 82A	2613026-22	.	BUMPER ASSEMBLY - KNEE SPARES REPLACEMENT FOR: 2613026-1 ATTACHING PARTS							(208) 0500 & ON (208B) 2000 & ON	01
- 82B	AN515-8R5	.	SCREW							(208) 0001 - 0395	04
- 82C	MS35206-242	.	SCREW							72914 (208) 0396 & ON (208B) 0001 & ON	02
			--*--								
83	2613026-4	.	BUMPER ASSEMBLY - KNEE WITHOUT RUDDER LOCK ATTACHING PARTS							(208) 0001 & ON	01
- 83A	AN515-8R5	.	SCREW							(208) 0001 - 0395	06
- 83B	MS35206-242	.	SCREW							72914 (208) 0396 & ON	07
			--*--								
- 84	2613026-16	.	BUMPER ASSEMBLY - KNEE FOR SPARES ORDER (MUST REPLACE WITH): 2613026-20							(208) 0030 - 0199 (208B) 0001 - 0251	NP
- 85	2613026-20	.	BUMPER ASSEMBLY - KNEE USED WITH RUDDER LOCK SPARES REPLACEMENT FOR: 2613026-16 ATTACHING PARTS							(208) 0200 & ON (208B) 0252 & ON	01
- 86	MS35206-242	.	SCREW							72914 (208) 0001 - 0395 (208B) 0001 - 1170	06
- 86A	MS35206-242	.	SCREW							72914 (208) 0396 & ON (208B) 1171 & ON	07
- 86B	MS35206-243	.	SCREW							(208) 0001 - 0395 (208B) 0001 - 1170	01
- 86C	MS21044N08	.	NUT							72914 (208) 0001 - 0395 (208B) 0001 - 1170	01
			--*--								
87	2613026-7	.	BUMPER ASSEMBLY - KNEE							(208) 0001 - 0499 (208B) 0001 - 1999	01
- 87A	2613026-22	.	BUMPER ASSEMBLY - KNEE							(208) 0500 & ON (208B) 2000 & ON	01
			ATTACHING PARTS								
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

LOWER INSTRUMENT PANEL EQUIPMENT

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 88	AN515-8R5	.	SCREW						(208) 0001 - 0395	03
- 88A	MS35206-242	.	SCREW					72914	(208) 0396 & ON (208B) 0001 & ON	03
- 88B	AN515-8R6	.	SCREW						(208) 0001 - 0395	02
- 88C	MS35206-243	.	SCREW						(208B) 0001 - 1170	01
- 88D	MS35206-243	.	SCREW						(208) 0396 - 0399 (208B) 1171 - 1999	02
- 88E	MS35206-242	.	SCREW					72914	(208) 0400 & ON (208B) 2000 & ON	02
- 89	MS21044N08	.	NUT					72914	(208) 0001 - 0395 (208B) 0001 - 1170	01
		--*								
- ITEM NOT ILLUSTRATED										


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

24-50-01

SWITCH AND CIRCUIT PANEL INSTALLATION
AIRPLANES (208) 0001 THRU 0499 AND AIRPLANES (208B) 0001 THRU
1999

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A25057

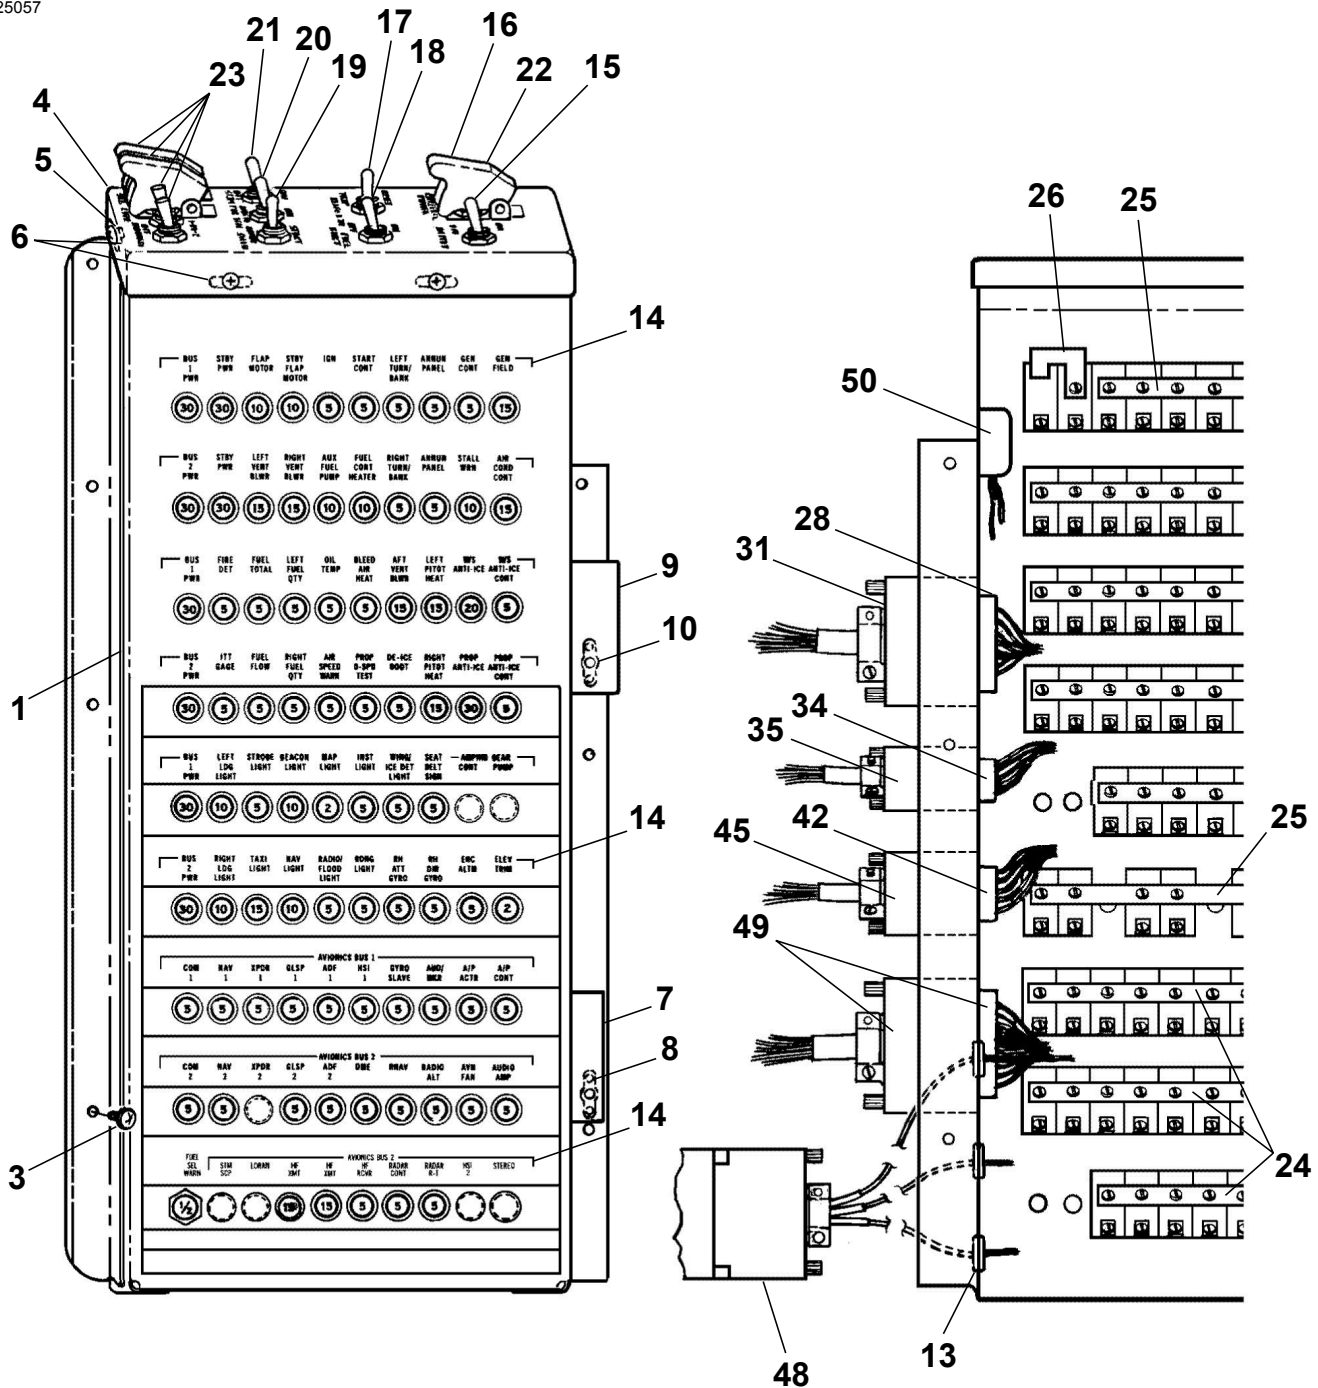

BACK VIEW OF CIRCUIT BREAKER PANEL

SWITCH AND CIRCUIT PANEL INSTALLATION
 Figure 01. (Sheet 1)

26182009
 2618T1015

Figure 01
 Page 2
24-50-01 Nov 4, 2021

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

SWITCH AND CIRCUIT PANEL INSTALLATION

AIRPLANES (208) 0001 THRU 0499 AND AIRPLANES (208B) 0001 THRU 1999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	2613181-14	.							(208) 0001 - 0154 (208B) 0001 - 0179	01
- 2	2613181-18	.							(208) 0155 - 0381 (208B) 0180 - 1086	01
- 2A	2613181-19	.							(208) 0382 - 0499 (208B) 1087 - 1999	01
3	AN525-10R7	.							(208) 0001 - 0499 (208B) 0001 - 1999	07
4	2613181-5	.	.						(208) 0001 - 0499 (208B) 0001 - 1999	01
5	MS35207-261	.	.					07187	(208) 0001 - 0499 (208B) 0001 - 1999	02
6	MS21047L3	.	.					13499	(208) 0001 - 0499 (208B) 0001 - 1999	04
7	2615117-5	.	.						(208) 0001 - 0499 (208B) 0001 - 1999	01
8	MS21047L3	.	.	.				13499	(208) 0001 - 0499 (208B) 0001 - 1999	01
9	2615117-7	.	.						(208) 0001 - 0499 (208B) 0001 - 1999	01
10	MS21047L3	.	.	.				13499	(208) 0001 - 0499 (208B) 0001 - 1999	01
- 11	MS21051L3K	.	.	.					(208) 0001 - 0499 (208B) 0001 - 1999	02
- 12	C15 WHITE	.	.						(208) 0197 - 0499 (208B) 0229 - 1999	06
13	MS35489-11	.	.						(208) 0001 - 0499 (208B) 0001 - 1999	03
14		.								RF
15	MS35059-23	.						96906	(208) 0001 - 0499 (208B) 0001 - 1999	01
16	MS27406-1	.							(208) 0001 - 0499 (208B) 0001 - 1999	01
17	MS27406-3	.							(208) 0001 - 0499 (208B) 0001 - 1999	01
18	MS27407-1	.						96906	(208) 0001 - 0499 (208B) 0001 - 1999	01
19	MS35059-31	.						96906	(208) 0001 - 0499 (208B) 0001 - 1999	01
20	MS35059-23	.						96906	(208) 0001 - 0499 (208B) 0001 - 1999	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

SWITCH AND CIRCUIT PANEL INSTALLATION

AIRPLANES (208) 0001 THRU 0499 AND AIRPLANES (208B) 0001 THRU 1999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
21	MS35059-23	.	SWITCH - STANDBY POWER						96906 (208) 0001 - 0499 (208B) 0001 - 1999	01
22	2613371-1	.	GUARD ASSEMBLY - SWITCH						(208) 0001 - 0499 (208B) 0001 - 1999	01
23		.	SWITCH - REFER TO AVIONICS SERVICE MANUAL							RF
24		.	BUS BAR - REFER TO AVIONICS SERVICE MANUAL							RF
25	2670004-1	.	BUS BAR - CIRCUIT BREAKER						(208) 0001 - 0499 (208B) 0001 - 1999	06
26	2670004-4	.	BUS BAR - CIRCUIT BREAKER FOR SPARES ORDER (MUST REPLACE WITH): 2670004-5						(208) 0001 - 0197 (208B) 0001 - 0235	NP
- 27	2670004-5	.	BUS BAR - CIRCUIT BREAKER SPARES REPLACEMENT FOR: 2670004-4						(208) 0198 - 0245 (208B) 0236 - 0486	01
- 27A	2670004-6	.	BUS BAR - CIRCUIT BREAKER						(208) 0246 - 0499 (208B) 0487 - 1999	01
28	200277-2	.	CONNECTOR						00779 (208) 0001 - 0499 (208B) 0001 - 1999	01
- 29	200875-7	.	JACKSCREW						00779 (208) 0001 - 0499 (208B) 0001 - 1999	02
- 30	S1694-6	.	TUBING - HEAT SHRINK .50 IN LG BULK ITEM						(208) 0001 - 0499 (208B) 0001 - 1999	02
31	202670-2	.	SHIELD - CONNECTOR FOR SPARES ORDER (MUST REPLACE WITH): 2670000-200						00779 (208) 0001 - 0499 (208B) 0001 - 1999	01
- 31A	2670000-200	.	SHIELD & JACKSCREWS SPARES REPLACEMENT FOR: 202670-2						(208) 0001 - 0499 (208B) 0001 - 1999	01
- 32	200276-2	.	CONNECTOR						00779 (208) 0001 - 0499 (208B) 0001 - 1999	01
- 33	202672-1	.	JACKSCREW FOR SPARES ORDER (MUST REPLACE WITH): 2670000-200						00779 (208) 0001 - 0499 (208B) 0001 - 1999	02
- 33A	2670000-200	.	SHIELD & JACKSCREWS SPARES REPLACEMENT FOR: 202672-1						(208) 0001 - 0499 (208B) 0001 - 1999	02
34	S2526-1	.	CONNECTOR						00779 (208) 0001 - 0499 (208B) 0001 - 1999	01
35	200875-7	.	JACKSCREW - LOWER						00779 (208) 0001 - 0499 (208B) 0001 - 1999	01
- 36	S3157-3	.	JACKSCREW UPPER ALTERNATE SPARE (INTERCHANGEABLE WITH): 201092-1						(208) 0001 - 0499 (208B) 0001 - 1999	01
- 36A	201092-1	.	JACKSCREW - UPPER ALTERNATE SPARE (INTERCHANGEABLE WITH): S3157-3						00779 (208) 0001 - 0499 (208B) 0001 - 1999	01
- 37	200875-7	.	JACKSCREW						00779 (208) 0001 - 0499 (208B) 0001 - 1999	02
- 38	S2526-3	.	CLAMP						(208) 0001 - 0499 (208B) 0001 - 1999	01
- 39	201355-1	.	CONNECTOR						00779 (208) 0001 - 0499 (208B) 0001 - 1999	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


SWITCH AND CIRCUIT PANEL INSTALLATION

AIRPLANES (208) 0001 THRU 0499 AND AIRPLANES (208B) 0001 THRU 1999

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
- 40	201388-1	.	JACKSCREW - LOWER						00779	(208) 0001 - 0499 (208B) 0001 - 1999	02
- 41	201389-1	.	JACKSCREW - LOWER						00779	(208) 0001 - 0499 (208B) 0001 - 1999	01
42	S2096-1	.	CONNECTOR							(208) 0001 - 0499 (208B) 0001 - 1999	01
- 43	S1371-6	.	SOCKET ASSEMBLY							(208) 0001 - 0499 (208B) 0001 - 1999	02
- 44	S1694-6	.	TUBING - HEAT SHRINK .50 IN LG BULK ITEM							(208) 0001 - 0499 (208B) 0001 - 1999	02
45	201576-2	.	SHIELD - CONNECTOR FOR SPARES ORDER (MUST REPLACE WITH): 200514-2 S2572-1						00779	(208) 0001 - 0499 (208B) 0001 - 1999	NP
NOTE: 201576-2 SHIELD IS REPLACED BY 200514-2 SHIELD OR S2572-1 SHIELD AND 201785-4 PIN HOOD											
- 45A	200514-2	.	SHIELD SPARES REPLACEMENT FOR: 201576-2						00779	(208) 0001 - 0499 (208B) 0001 - 1999	01
NOTE: 201576-2 SHIELD IS REPLACED BY 200514-2 SHIELD OR S2572-1 SHIELD AND 201785-4 PIN HOOD											
- 45B	S2572-1	.	SHIELD ASSEMBLY SPARES REPLACEMENT FOR: 201576-2						00779	(208) 0001 - 0499 (208B) 0001 - 1999	01
NOTE: 201576-2 SHIELD IS REPLACED BY 200514-2 SHIELD OR S2572-1 SHIELD AND 201785-4 PIN HOOD											
- 45C	201785-4	.	PIN HOOD						00779	(208) 0001 - 0499 (208B) 0001 - 1999	01
- 46	201359-1	.	CONNECTOR						00779	(208) 0001 - 0499 (208B) 0001 - 1999	01
- 47	200871-2	.	JACKSCREW						00779	(208) 0001 - 0499 (208B) 0001 - 1999	02
48		.	ELECTRIC POWER BOX INSTL REFER TO 24-50-02 FIGURE 01								RF
49		.	CONNECTOR - REFER TO AVIONICS SERVICE MANUAL								RF
50	2670093-1	.	RELAY ASSEMBLY - FUEL SELECTOR WARNING							(208) 0001 - 0499 (208B) 0001 - 1999	01
			ATTACHING PARTS								
- 51	S1676-3B16	.	SCREW * AIRPLANES (208) 0001 THRU 0105 INCORPORATING SK208-20							(208) *0001 - 0105	02
- 52	LNNY440NA	.	LOCKNUT * AIRPLANES (208) 0001 THRU 0105 INCORPORATING SK208-20						85480	(208) *0001 - 0105 (208B) 0001 - 1999	02
--*--											
- ITEM NOT ILLUSTRATED											

CESSNA[®] MODEL 208 ILLUSTRATED PARTS CATALOG

A25058

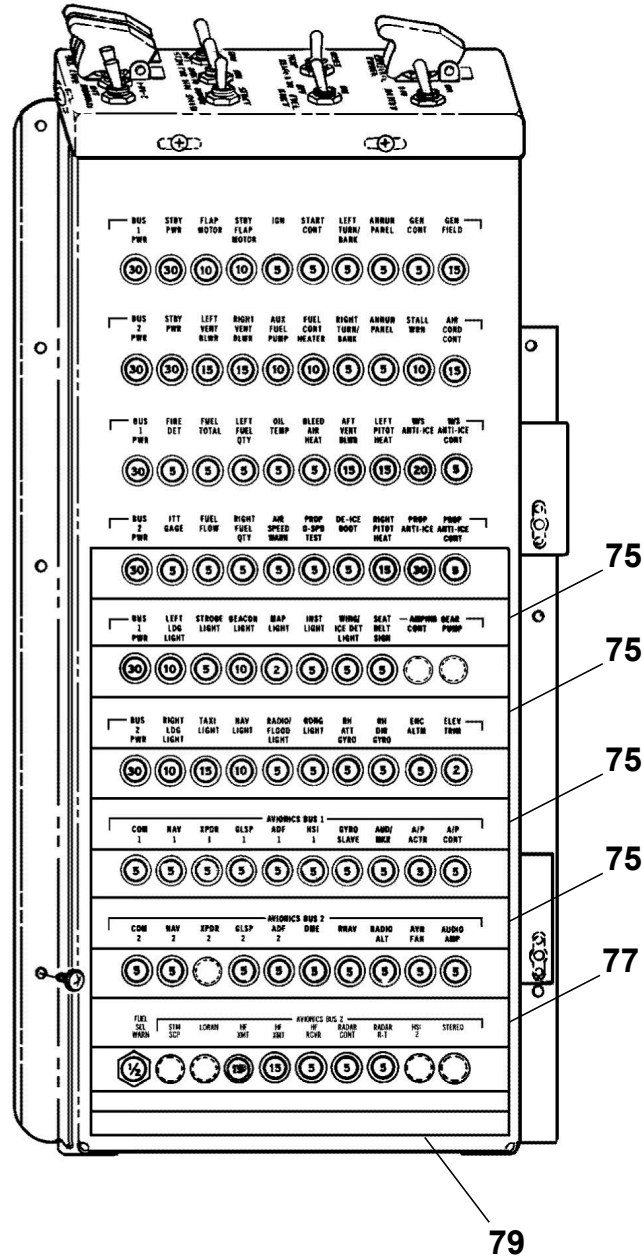

SWITCH AND CIRCUIT PANEL INSTALLATION
Figure 01. (Sheet 2)

26182010A

Figure 01
Page 6
24-50-01 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

SWITCH AND CIRCUIT PANEL INSTALLATION

AIRPLANES (208) 0001 THRU 0499 AND AIRPLANES (208B) 0001 THRU 1999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
75	2613411-1	.	KICK GUARD COVER - C/B PANEL						(208) 0127 - 0154	NP
			FOR SPARES ORDER (MUST REPLACE WITH):						(208) *0001 - 0126	
			2613411-4						(208B) 0044 - 0179	
			* AIRPLANES (208) 0001 THRU 0126 INCORPORATING SK208-32						(208B) *0001 - 0043	
			* AIRPLANES (208B) 0001 THRU 0043 INCORPORATING SK208-34							
- 76	2613411-4	.	KICK GUARD COVER - C/B PANEL						(208) 0155 - 0499	04
			SPARES REPLACEMENT FOR:						(208B) 0180 - 1999	
			2613411-1							
77	2613411-2	.	KICK GUARD COVER - C/B PANEL						(208) 0127 - 0154	NP
			FOR SPARES ORDER (MUST REPLACE WITH):						(208B) 0044 - 0179	
			2613411-5						(208B) *0001 - 0043	
			* AIRPLANES (208B) 0001 THRU 0043 INCORPORATING SK208-34						(208B) *0001 - 0126	
			* AIRPLANES (208B) 0001 THRU 0126 INCORPORATING SK208-32							
- 78	2613411-5	.	KICK GUARD COVER - C/B PANEL						(208) 0155 - 0499	01
			SPARES REPLACEMENT FOR:						(208B) 0180 - 1999	
			2613411-2							
79	2613411-3	.	KICK GUARD COVER - C/B PANEL						(208) 0127 - 0154	NP
			FOR SPARES ORDER (MUST REPLACE WITH):						(208) *0001 - 0126	
			2613411-6						(208B) 0044 - 0179	
			* AIRPLANES (208) 0001 THRU 0126 INCORPORATING SK208-32						(208B) *0001 - 0043	
			* AIRPLANES (208B) 0001 THRU 0043 INCORPORATING SK208-34							
- 80	2613411-6	.	KICK GUARD COVER - C/B PANEL						(208) 0155 - 0499	01
			SPARES REPLACEMENT FOR:						(208) *0001 - 0126	
			2613411-3						(208B) 0180 - 1999	
			* AIRPLANES (208) 0001 THRU 0126 INCORPORATING SK208-32						(208B) *0001 - 0043	
			* AIRPLANES (208B) 0001 THRU 0043 INCORPORATING SK208-34							
- ITEM NOT ILLUSTRATED										


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

24-50-01

SWITCH AND CIRCUIT PANEL INSTALLATION
AIRPLANES (208) 0500 & ON AND AIRPLANES (208B) 2000 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A72144

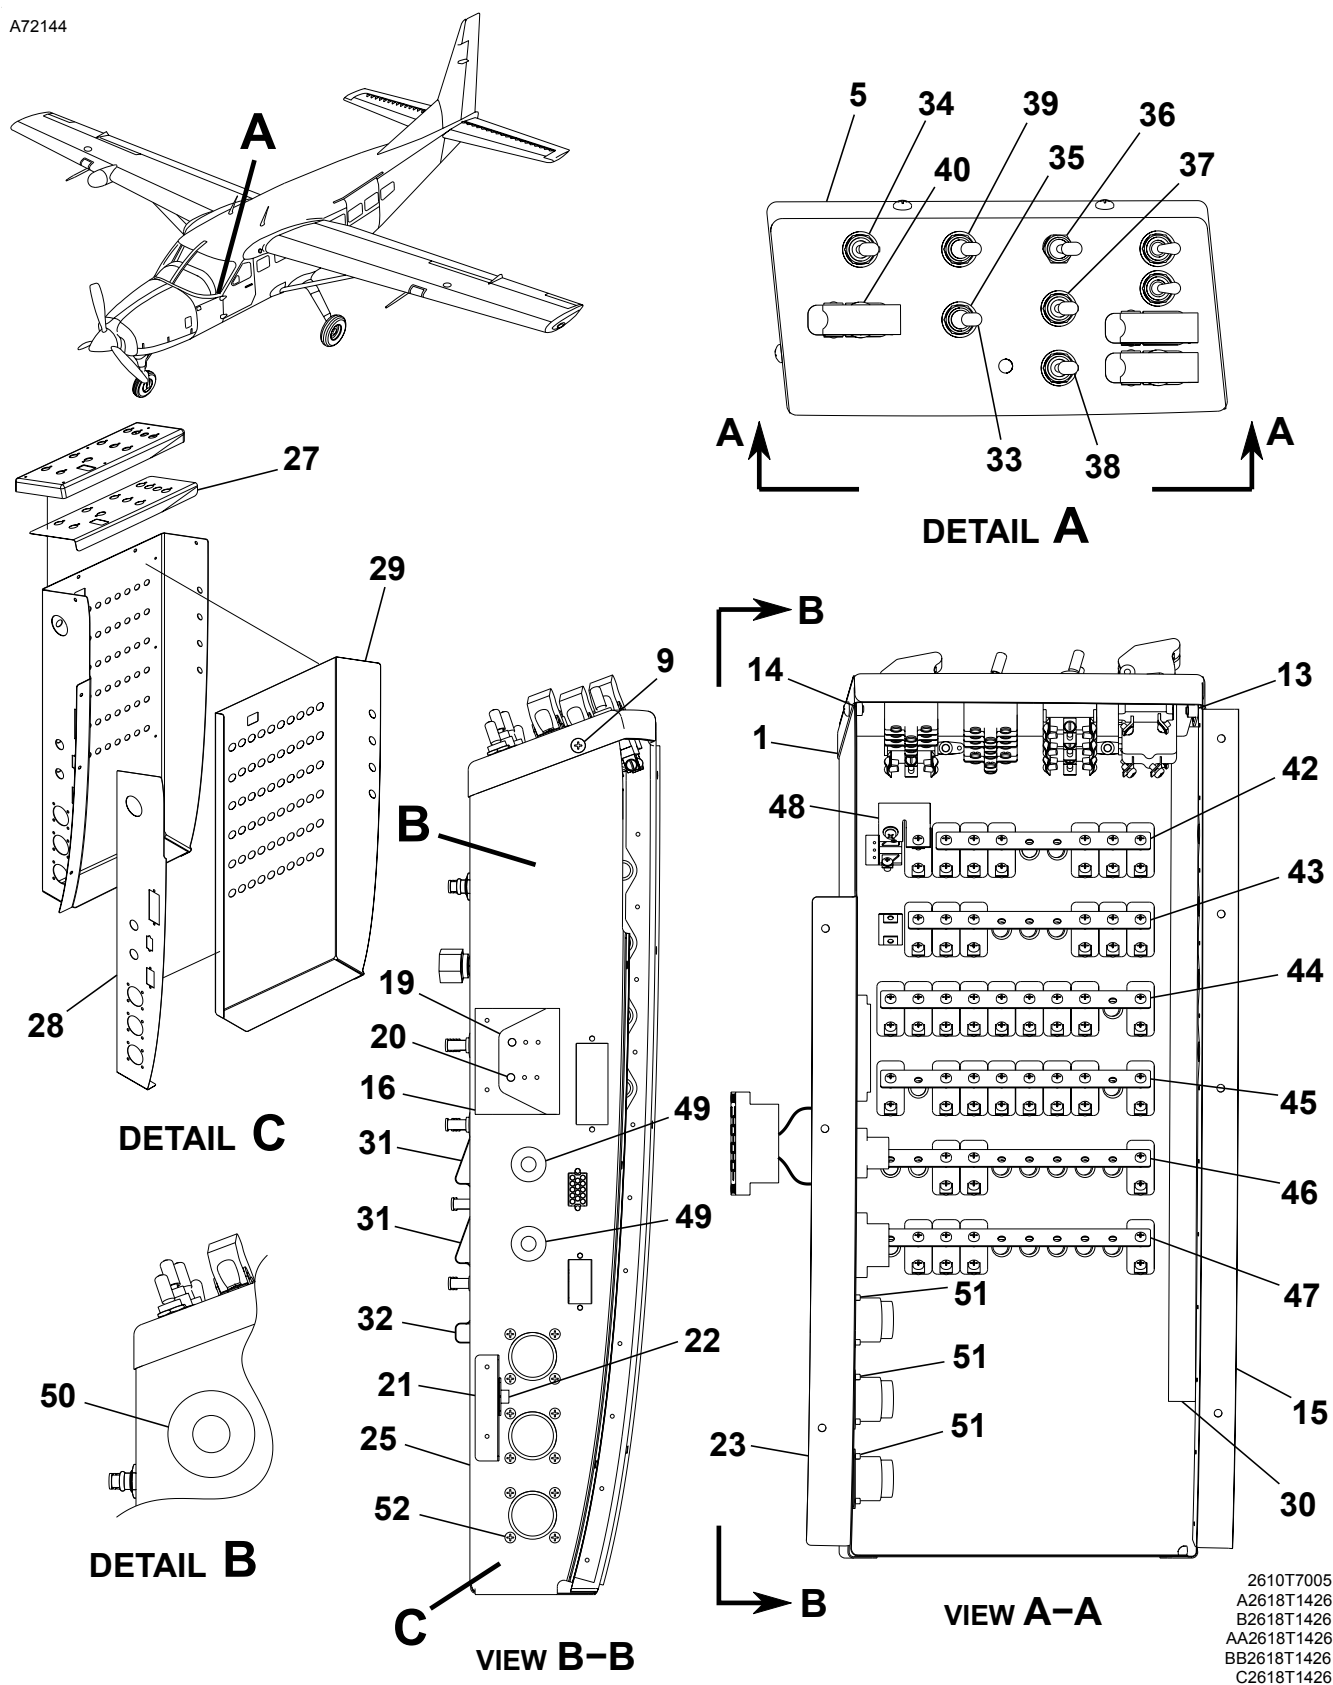

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

SWITCH AND CIRCUIT PANEL INSTALLATION

AIRPLANES (208) 0500 & ON AND AIRPLANES (208B) 2000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	2613479-1	.							(208) 0500 & ON (208B) 2000 - 2314	01
- 2	2613479-16	.							(208) 0500 & ON (208B) 2315 - 4999	01
- 3	2613500-1	.							(208B) 5000 - 5045	01
- 3A	2613500-10	.							(208B) 5089 & ON	01
- 3B	DDA06570-1	.							(208B) 5046 - 5088	01
NOTE: WHEN ORDERING DDA PART NUMBERS, ALSO PROVIDE REFERENCE DRAWING NUMBER 2613500										
ATTACHING PARTS										
- 4	AN525-10R7	.							(208) 0500 & ON (208B) 2000 & ON	07
--*--										
5	2613479-8	.	.						(208) 0500 & ON (208B) 2000 - 4999	01
- 6	2613500-7	.	.						(208B) 5000 & ON	01
- 7	MS21069L04K	.	.	.					(208B) 5000 & ON	03
- 8	MS21073L04	.	.	.					(208B) 5000 & ON	02
9	MS35207-261	.	.					07187	(208) 0500 & ON (208B) 2000 & ON	04
- 10	2613479-13	.	.						(208) 0500 & ON (208B) 2000 - 2314	01
- 11	2613479-17	.	.						(208) 0500 & ON (208B) 2315 - 4999	01
- 12	2613500-9	.	.						(208B) 5000 - 5088	01
- 12A	2613500-11	.	.						(208B) 5089 & ON	01
13	MS21051L3K	.	.	.					(208) 0500 & ON (208B) 2000 & ON	01
14	MS21047L3K	.	.	.					(208) 0500 & ON (208B) 2000 & ON	03
15	2613181-23	.	.	.					(208) 0500 & ON (208B) 2000 & ON	01
16	2613479-3	.	.	.					(208) 0500 & ON (208B) 2000 & ON	01
- 17	MS21047L3	.	.	.	.			13499	(208) 0500 & ON (208B) 2000 & ON	01
- 18	MS21051L3	.	.	.	.				(208) 0500 & ON (208B) 2000 & ON	02
19	2613479-18	.	.	.					(208) 0533 & ON (208B) 2315 - 4999 (208B) 5089 & ON	01
20	MS21051L3	.	.	.	.				(208) 0500 & ON (208B) 2000 & ON	01
21	2613479-12	.	.	.					(208) 0500 & ON (208B) 2000 & ON	01
22	MS21047L3	.	.	.	.			13499	(208) 0500 & ON (208B) 2000 & ON	01
23	2613479-14	.	.	.					(208) 0500 & ON (208B) 2000 - 4999	01
- 24	2613500-5	.	.	.					(208B) 5000 - 5088	01
- ITEM NOT ILLUSTRATED										

Figure 01A

Page 3

24-50-01

Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

SWITCH AND CIRCUIT PANEL INSTALLATION

AIRPLANES (208) 0500 & ON AND AIRPLANES (208B) 2000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 24A	2613500-14	.	.	.	SIDE - FORWARD				(208B) 5089 & ON	01
25	2613479-7	.	.	.	BOX				(208) 0500 & ON	01
									(208B) 2000 - 4999	
- 26	2613500-6	.	.	.	BOX				(208B) 5000 - 5088	01
- 26A	2613500-15	.	.	.	BOX				(208B) 5089 & ON	01
27	2613500-2	.	.	INSULATOR - COVER					(208B) 5000 - 5088	01
- 27A	2613500-16	.	.	INSULATOR - COVER					(208B) 5089 & ON	01
28	2613500-3	.	.	INSULATOR - FORWARD					(208B) 5000 - 5088	01
- 28A	2613500-12	.	.	INSULATOR - FORWARD					(208B) 5089 & ON	01
29	2613500-4	.	.	INSULATOR - INBOARD					(208B) 5000 - 5088	01
- 29A	2613500-13	.	.	INSULATOR - INBOARD					(208B) 5089 & ON	01
30	2613505-2	.	.	INSULATOR					(208B) 5089 & ON	01
- 30A	DDA06570-2	.	.	INSULATOR					(208B) 5046 - 5088	01
NOTE: WHEN ORDERING DDA PART NUMBERS, ALSO PROVIDE REFERENCE DRAWING NUMBER 2613500										
31	2613411-4	.	COVER - KICK GUARD UPPER & CENTER						(208) 0500 & ON	02
									(208B) 2000 & ON	
32	2613411-6	.	COVER - KICK GUARD LOWER						(208) 0500 & ON	01
									(208B) 2000 & ON	
33	C15WHITE	.	TIP - SWITCH WHITE					95146	(208) 0500 & ON	06
									(208B) 2000 & ON	
34	MS35059-23	.	SWITCH - BATTERY SC005					96906	(208) 0500 & ON	01
									(208B) 2000 & ON	
35	MS27406-3	.	SWITCH - GENERATOR SC007						(208) 0500 & ON	01
									(208B) 2000 & ON	
36	MS35059-31	.	SWITCH - STARTER SC004					96906	(208) 0500 & ON	01
									(208B) 2000 & ON	
37	MS35059-23	.	SWITCH - IGNITION SC003					96906	(208) 0500 & ON	01
									(208B) 2000 & ON	
38	MS35059-23	.	SWITCH - STANDBY ALTERNATOR SC014					96906	(208) 0500 & ON	01
									(208B) 2000 & ON	
39	MS27407-1	.	SWITCH - FUEL BOOST SC011					96906	(208) 0500 & ON	01
									(208B) 2000 & ON	
40	MS27406-1	.	SWITCH - EXTERNAL POWER RECEPTACLE SC006						(208) 0500 & ON	01
									(208B) 2000 & ON	
- 41	2613371-1	.	GUARD ASSEMBLY - SWITCH SC006						(208) 0500 & ON	01
									(208B) 2000 & ON	
42	2670004-1	.	BUS BAR HC101						(208) 0500 & ON	01
									(208B) 2000 & ON	
43	2670004-1	.	BUS BAR HC102						(208) 0500 & ON	01
									(208B) 2000 & ON	
44	2670004-1	.	BUS BAR HC103						(208) 0500 & ON	01
									(208B) 2000 & ON	
45	2670004-1	.	BUS BAR HC104						(208) 0500 & ON	01
									(208B) 2000 & ON	
46	2670004-1	.	BUS BAR HC105						(208) 0500 & ON	01
									(208B) 2000 & ON	
47	2670004-1	.	BUS BAR HC106						(208) 0500 & ON	01
									(208B) 2000 & ON	
48	2670004-6	.	BUS BAR HC110						(208) 0500 & ON	01
									(208B) 2000 & ON	

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

SWITCH AND CIRCUIT PANEL INSTALLATION

AIRPLANES (208) 0500 & ON AND AIRPLANES (208B) 2000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
49	MS35489-11	.						GROMMET	(208) 0500 & ON (208B) 2000 & ON	02
50	CM3524-8-20	.						GROMMET	(208B) 5000 & ON	01
51	M85049/95-16-B	.						MOUNTING FLANGE	(208) 0500 & ON (208B) 2000 & ON	03
								ATTACHING PARTS		
52	MS35206-227	.						SCREW	72914 (208) 0500 & ON (208B) 2000 & ON	12
								--*--		
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG


24-50-01

CIRCUIT BREAKERS

**AIRPLANES (208) 0001 THRU 0499 AND AIRPLANES (208B) 0001 THRU
1999**

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A25059

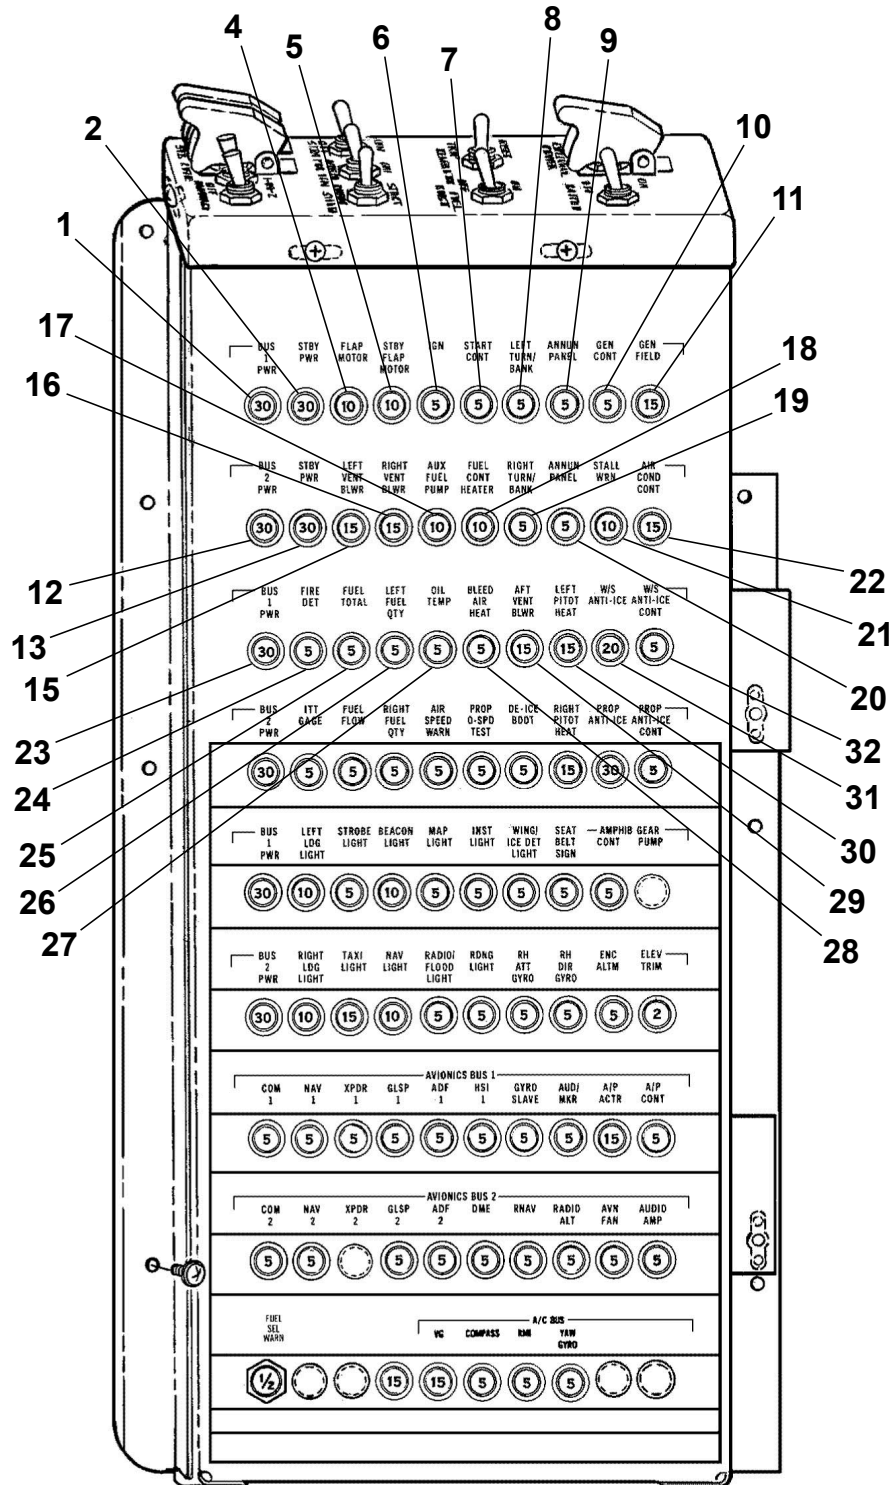

26182010

CIRCUIT BREAKERS
Figure 02. (Sheet 1)

Figure 02
 Page 2
24-50-01 Nov 4, 2021

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

CIRCUIT BREAKERS

AIRPLANES (208) 0001 THRU 0499 AND AIRPLANES (208B) 0001 THRU 1999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	S1232-530	.	CIRCUIT BREAKER 30 AMP BUS 1 PWR HC001						(208) 0001 - 0499 (208B) 0001 - 1999	01
2	S1232-530	.	CIRCUIT BREAKER 30 AMP STBY PWR HC002						(208) 0001 - 0179 (208B) 0001 - 0209	01
- 3	S1232-540	.	CIRCUIT BREAKER 40 AMP STBY PWR HC002						(208) 0180 - 0499 (208B) 0210 - 1999	01
4	S1232-515	.	CIRCUIT BREAKER 15 AMP FLAP MOTOR HC003						(208) 0001 - 0154 (208B) 0001 - 0179	01
- 4A	S1232-510	.	CIRCUIT BREAKER 10 AMP FLAP MOTOR - HC003						(208) 0155 - 0499 (208B) 0180 - 1999	01
5	S1232-510	.	CIRCUIT BREAKER 10 AMP STBY FLAP MOTOR HC004						(208) 0001 - 0499 (208B) 0001 - 1999	01
6	S1232-505	.	CIRCUIT BREAKER 5 AMP IGN HC005						(208) 0001 - 0499 (208B) 0001 - 1999	01
7	S1232-505	.	CIRCUIT BREAKER 5 AMP START CONT HC006						(208) 0001 - 0499 (208B) 0001 - 1999	01
8	S1232-505	.	CIRCUIT BREAKER 5 AMP - LEFT TURN/BANK HC007						(208) 0001 - 0499 (208B) 0001 - 1999	01
9	S1232-505	.	CIRCUIT BREAKER 5 AMP ANNUN PANEL HC008						(208) 0001 - 0499 (208B) 0001 - 1999	01
10	S1232-505	.	CIRCUIT BREAKER 5 AMP GEN CONT - CB109 HC009						(208) 0001 - 0499 (208B) 0001 - 1999	01
11	7MC3-3-15	.	CIRCUIT BREAKER 15 AMP GEN FIELD - CB110 HC010 FOR SPARES ORDER (MUST REPLACE WITH): 2670040-200					69275	(208) 0001 - 0245 (208B) 0001 - 0486	NP
- 11A	2670040-200	.	CIRCUIT BREAKER 15 AMP GEN FIELD FOR SPARES ONLY HC010 SPARES REPLACEMENT FOR: 7MC3-3-15						(208) 0001 - 0499 (208B) 0001 - 1999	01
- 11B	4380-005-15	.	CIRCUIT BREAKER 15 AMP GEN FIELD HC010 FOR SPARES ORDER (MUST REPLACE WITH): 2TC7-15					76374	(208) 0246 - 0499 (208B) 0487 - 1999	NP
- 11C	2TC7-15	.	CIRCUIT BREAKER 15 AMP GEN FIELD HC010 SPARES REPLACEMENT FOR: 4380-005-15					82647	(208) 0246 - 0499 (208B) 0487 - 1999	01
12	S1232-530	.	CIRCUIT BREAKER 30 AMP BUS 2 PWR HC011						(208) 0001 - 0499 (208B) 0001 - 1999	01
13	S1232-530	.	CIRCUIT BREAKER 30 AMP STBY PWR HC012						(208) 0001 - 0179 (208B) 0001 - 0209	01
- 14	S1232-540	.	CIRCUIT BREAKER 40 AMP STBY PWR HC012						(208) 0180 - 0499 (208B) 0210 - 1999	01
15	S1232-515	.	CIRCUIT BREAKER 15 AMP - LEFT VENT BLWR HC013						(208) 0001 - 0238 (208B) 0001 - 0399	01
- 15A	S1232-507	.	CIRCUIT BREAKER 7.5 AMP - LEFT VENT BLWR HC013						(208) 0239 - 0239 (208B) 0400 - 0408	01
- 15B	S1232-510	.	CIRCUIT BREAKER 10 AMP - LEFT VENT BLWR HC013 * AIRPLANES (208) 0140 THRU 0415 AND 0417 THRU 0499 INCORPORATING SK208-157A * AIRPLANES (208B) 0214 THRU 1189, 1191 THRU 1215 AND 1217 THRU 1999 INCORPORATING SK208-157A						(208) 0240 - 0499 (208) *0140 - 0415 (208) *0417 - 0499 (208B) 0409 - 1999 (208B) *0214 - 1189 (208B) *1191 - 1215 (208B) *1217 - 1999	01

- ITEM NOT ILLUSTRATED

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

CIRCUIT BREAKERS

AIRPLANES (208) 0001 THRU 0499 AND AIRPLANES (208B) 0001 THRU 1999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
16	S1232-515	.	CIRCUIT BREAKER 15 AMP - RIGHT VENT BLWR HC014						(208) 0001 - 0238 (208B) 0001 - 0399	01
- 16A	S1232-507	.	CIRCUIT BREAKER 7.5 AMP - RIGHT VENT BLWR HC014						(208) 0239 - 0239 (208B) 0400 - 0408	01
- 16B	S1232-510	.	CIRCUIT BREAKER 10 AMP - RIGHT VENT BLWR HC014 * AIRPLANES (208) 0140 THRU 0415 AND 0417 THRU 0499 INCORPORATING SK208-157A * AIRPLANES (208B) 0214 THRU 1189, 1191 THRU 1215 AND 1217 THRU 1999 INCORPORATING SK208-157A						(208) 0240 - 0499 (208) *0140 - 0415 (208) *0417 - 0499 (208B) 0409 - 1999 (208B) *0214 - 1189 (208B) *1191 - 1215 (208B) *1217 - 1999	01
17	S1232-510	.	CIRCUIT BREAKER 10 AMP AUX FUEL PUMP HC015						(208) 0001 - 0499 (208B) 0001 - 1999	01
18	S1232-510	.	CIRCUIT BREAKER 10 AMP FUEL CONT HEATER HC016						(208) 0001 - 0499 (208B) 0001 - 1999	01
19	S1232-505	.	CIRCUIT BREAKER 5 AMP - RIGHT TURN/BANK HC017						(208) 0001 - 0499 (208B) 0001 - 1999	01
20	S1232-505	.	CIRCUIT BREAKER 5 AMP ANNUN PANEL HC018						(208) 0001 - 0499 (208B) 0001 - 1999	01
21	S1232-510	.	CIRCUIT BREAKER 10 AMP STALL WRN HC019						(208) 0001 - 0499 (208B) 0001 - 1999	01
22	S1232-515	.	CIRCUIT BREAKER 15 AMP AIR COND CONT HC020						(208) 0140 - 0238 (208B) 0214 - 0399	01
- 22A	S1232-505	.	CIRCUIT BREAKER 15 AMP AIR COND CONT HC020 * AIRPLANES (208) 0140 THRU 0415 AND 0417 THRU 0499 INCORPORATING SK208-157A * AIRPLANES (208B) 0214 THRU 1189, 1191 THRU 1215 AND 1217 THRU 1999 INCORPORATING SK208-157A						(208) 0239 - 0499 (208) *0140 - 0415 (208) *0417 - 0499 (208B) 0400 - 1999 (208B) *0214 - 1189 (208B) *1191 - 1215 (208B) *1217 - 1999	01
23	S1232-530	.	CIRCUIT BREAKER 30 AMP BUS 1 PWR HC021						(208) 0001 - 0499 (208B) 0001 - 1999	01
24	S1232-505	.	CIRCUIT BREAKER 5 AMP FIRE DET HC022						(208) 0001 - 0499 (208B) 0001 - 1999	01
25	S1232-505	.	CIRCUIT BREAKER 5 AMP FUEL TOTAL HC023						(208) 0001 - 0499 (208B) 0001 - 1999	01
26	S1232-505	.	CIRCUIT BREAKER 5 AMP - LEFT FUEL QTY HC024						(208) 0001 - 0499 (208B) 0001 - 1999	01
27	S1232-505	.	CIRCUIT BREAKER 5 AMP OIL TEMP HC025						(208) 0001 - 0499 (208B) 0001 - 1999	01
28	S1232-505	.	CIRCUIT BREAKER 5 AMP BLEED AIR HEAT HC026						(208) 0001 - 0499 (208B) 0001 - 1999	01
29	S1232-515	.	CIRCUIT BREAKER 15 AMP AFT VENT BLOWER HC027						(208) 0001 - 0238 (208B) 0001 - 0399	01
- 29A	S1232-507	.	CIRCUIT BREAKER 7.5 AMP AFT VENT BLWR HC027						(208) 0239 - 0239 (208B) 0400 - 0408	01
- 29B	S1232-510	.	CIRCUIT BREAKER 10 AMP AFT VENT BLWR HC027 * AIRPLANES (208) 0140 THRU 0415 AND 0417 THRU 0499 INCORPORATING SK208-157A * AIRPLANES (208B) 0214 THRU 1189, 1191 THRU 1215 AND 1217 THRU 1999 INCORPORATING SK208-157A						(208) 0240 - 0499 (208) *0140 - 0415 (208) *0417 - 0499 (208B) 0409 - 1999 (208B) *0214 - 1189 (208B) *1191 - 1215 (208B) *1217 - 1999	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


CIRCUIT BREAKERS

AIRPLANES (208) 0001 THRU 0499 AND AIRPLANES (208B) 0001 THRU 1999

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
30	S1232-515	.							CIRCUIT BREAKER 15 AMP - LEFT PITOT HEAT HC028	(208) 0001 - 0499 (208B) 0001 - 1999	01
31	S1232-520	.							CIRCUIT BREAKER 20 AMP W/S ANTI-ICE HC029	(208) 0001 - 0499 (208B) 0001 - 1999	01
32	S1232-505	.							CIRCUIT BREAKER 5 AMP W/S ANTI-ICE CONT HC030	(208) 0001 - 0499 (208B) 0001 - 1999	01
- 33	S1232-505	.							CIRCUIT BREAKER 5 AMP #1 TRANSPONDER	(208) 0001 - 0499 (208B) 0001 - 1999	01
- 34	S1232-505	.							CIRCUIT BREAKER 5 AMP #2 TRANSPONDER	(208) 0001 - 0499 (208B) 0001 - 1999	01
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A25060

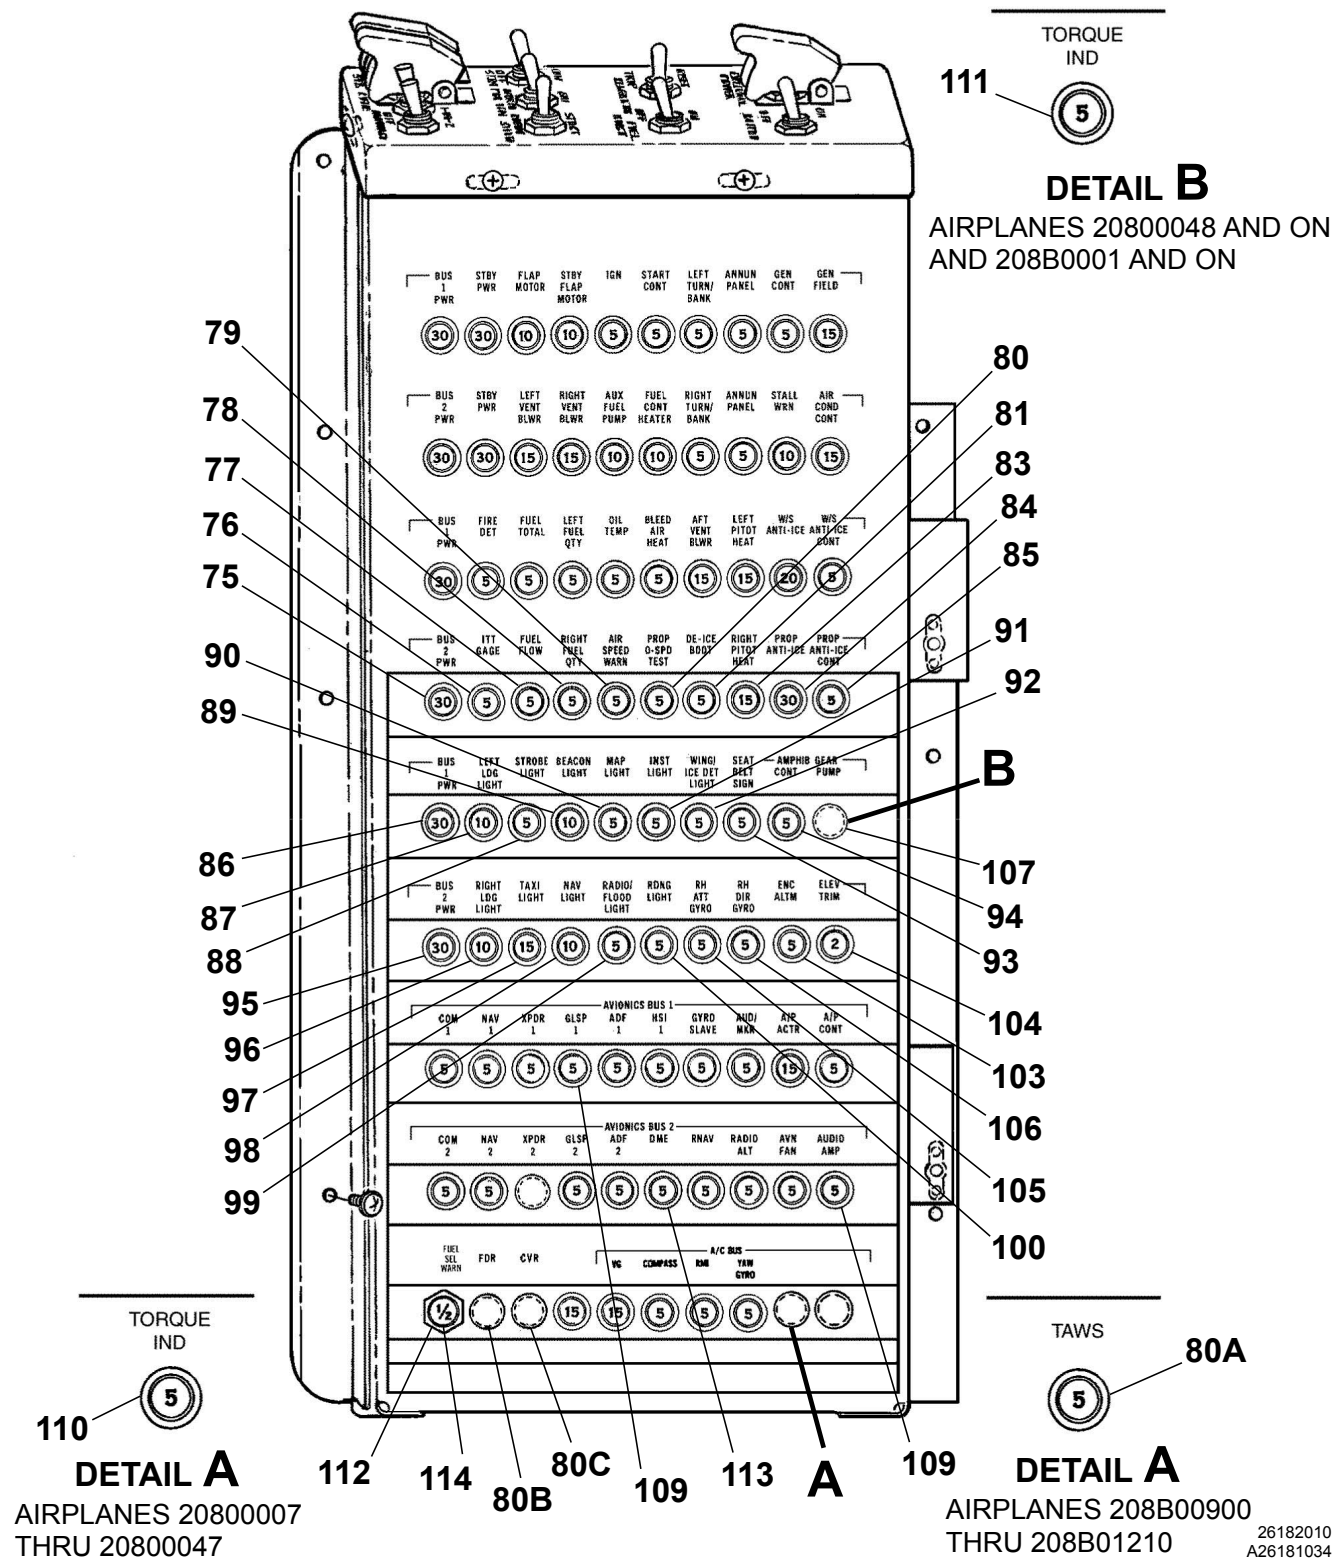

CIRCUIT BREAKERS
 Figure 02. (Sheet 2)

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

CIRCUIT BREAKERS

AIRPLANES (208) 0001 THRU 0499 AND AIRPLANES (208B) 0001 THRU 1999

		NOMENCLATURE									UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
75	S1232-530	.							CIRCUIT BREAKER 30 AMP BUS 2 PWR HC031	(208) 0001 - 0499 (208B) 0001 - 1999	01
76	S1232-505	.							CIRCUIT BREAKER 5 AMP ITT GAGE HC032	(208) 0001 - 0499 (208B) 0001 - 1999	01
77	S1232-505	.							CIRCUIT BREAKER 5 AMP FUEL FLOW HC033	(208) 0001 - 0499 (208B) 0001 - 1999	01
78	S1232-505	.							CIRCUIT BREAKER 5 AMP - RIGHT FUEL QTY HC034	(208) 0001 - 0499 (208B) 0001 - 1999	01
79	S1232-505	.							CIRCUIT BREAKER 5 AMP AIR SPEED WARN HC035	(208) 0001 - 0499 (208B) 0001 - 1999	01
80	S1232-505	.							CIRCUIT BREAKER 5 AMP PROP O-SPEED TEST HC036	(208) 0001 - 0499 (208B) 0001 - 1999	01
80A	S1232-505	.							CIRCUIT BREAKER 5 AMP TAWS	(208) 0001 - 0499 (208B) 0001 - 1999	01
80B	S1232-505	.							CIRCUIT BREAKER 5 AMP FDR	(208) 0001 - 0499 (208B) 0001 - 1999	01
80C	S1232-505	.							CIRCUIT BREAKER 5 AMP CVR	(208) 0001 - 0499 (208B) 0001 - 1999	01
81	S1232-505	.							CIRCUIT BREAKER 5 AMP DE-ICE BOOT HC037	(208) 0001 - 0499 (208B) 0001 - 1999	01
- 82	S1232-507	.							CIRCUIT BREAKER 7.5 AMP DE-ICE BOOT - USED WITH CARGO POD & LANDING GEAR DE-ICE HC037	(208) 0225 - 0395 (208B) 0328 - 1999	01
83	S1232-515	.							CIRCUIT BREAKER 15 AMP - RIGHT PITOT HEAT HC038	(208) 0001 - 0499 (208B) 0001 - 1999	01
84	S1232-530	.							CIRCUIT BREAKER 30 AMP PROP ANTI-ICE HC039	(208) 0001 - 0499 (208B) 0001 - 1999	01
85	S1232-505	.							CIRCUIT BREAKER 5 AMP PROP ANTI-ICE HC040	(208) 0001 - 0499 (208B) 0001 - 1999	01
86	S1232-530	.							CIRCUIT BREAKER 30 AMP BUS 1 PWR HC041	(208) 0001 - 0499 (208B) 0001 - 1999	01
87	S1232-510	.							CIRCUIT BREAKER 10 AMP - LEFT LDG LIGHT HC042	(208) 0001 - 0499 (208B) 0001 - 1999	01
88	S1232-505	.							CIRCUIT BREAKER 5 AMP STROBE LIGHT HC043	(208) 0001 - 0499 (208B) 0001 - 1999	01
89	S1232-510	.							CIRCUIT BREAKER 10 AMP BEACON LIGHT HC044	(208) 0001 - 0499 (208B) 0001 - 1999	01
90	S1232-502	.							CIRCUIT BREAKER 2 AMP MAP LIGHT HC045	(208) 0001 - 0499 (208B) 0001 - 1999	01
91	S1232-505	.							CIRCUIT BREAKER 5 AMP INST LIGHT HC046	(208) 0001 - 0499 (208B) 0001 - 1999	01
92	S1232-505	.							CIRCUIT BREAKER 5 AMP WING/ICE DET LIGHT HC047	(208) 0001 - 0499 (208B) 0001 - 1999	01
93	S1232-505	.							CIRCUIT BREAKER 5 AMP SEAT BELT SIGN HC048	(208) 0001 - 0499 (208B) 0001 - 1999	01
94	S1232-505	.							CIRCUIT BREAKER AMP INFLIGHT MOVEABLE DR HC049	(208) 0001 - 0499 (208B) 0001 - 1999	01
95	S1232-530	.							CIRCUIT BREAKER 30 AMP BUS 2 PWR HC051	(208) 0001 - 0499 (208B) 0001 - 1999	01
96	S1232-510	.							CIRCUIT BREAKER 10 AMP - RIGHT LDG LIGHT HC052	(208) 0001 - 0499 (208B) 0001 - 1999	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

CIRCUIT BREAKERS

AIRPLANES (208) 0001 THRU 0499 AND AIRPLANES (208B) 0001 THRU 1999

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
97	S1232-515	.							CIRCUIT BREAKER 15 AMP TAXI LIGHT HC053	(208) 0001 - 0499 (208B) 0001 - 1999	01
98	S1232-510	.							CIRCUIT BREAKER 10 AMP NAV LIGHT HC054	(208) 0001 - 0499 (208B) 0001 - 1999	01
99	S1232-505	.							CIRCUIT BREAKER 5 AMP RADIO/FLOOD LIGHT HC055	(208) 0001 - 0499 (208B) 0001 - 1999	01
100	S1232-505	.							CIRCUIT BREAKER 5 AMP READING LIGHT HC056	(208) 0001 - 0499 (208B) 0001 - 1999	01
- 101	S1232-507	.							CIRCUIT BREAKER 7.5 AMP READING LIGHT HC056	(208B) 0220 & ON	01
- 102	S1232-505	.							CIRCUIT BREAKER 5 AMP JUMP LIGHT HC056	(208) 0001 - 0499 (208B) 0001 - 1999	01
103	S1232-505	.							CIRCUIT BREAKER 5 AMP ENC ALTM HC059	(208) 0001 - 0499 (208B) 0001 - 1999	01
104	S1232-502	.							CIRCUIT BREAKER 2 AMP ELEV TRIM HC060	(208) 0001 - 0499 (208B) 0001 - 1999	01
105	S1232-505	.							CIRCUIT BREAKER 5 AMP - RIGHT ATTACH GYRO HC057	(208) 0001 - 0499 (208B) 0001 - 1999	01
106	S1232-505	.							CIRCUIT BREAKER 5 AMP - RIGHT DIR GYRO HC058	(208) 0001 - 0499 (208B) 0001 - 1999	01
107	S2446C6W	.							PLUG BUTTON	(208) 0001 - 0179 (208B) 0001 - 0209	AR
- 108	S2446M6W	.							PLUG BUTTON	(208) 0180 & ON (208B) 0210 & ON	AR
109		.							CIRCUIT BREAKER		RF
NOTE: REFER TO AVIONIC INSTALLATIONS SERVICE/PARTS MANUAL.											
110	S1232-505	.							CIRCUIT BREAKER 5 AMP TORQUE IND	(208) 0007 - 0047	01
111	4200-001-5	.							CIRCUIT BREAKER 5 AMP TORQUE IND	(208) 0048 & ON (208B) 0001 & ON	01
112	S2899L0.5	.							CIRCUIT BREAKER 1/2 AMP FUEL SELECT WARN * AIRPLANES (208) 0001 THRU 0105 INCORPORATING SK208-20	(208) 0106 & ON (208) *0001 - 0105 (208B) 0001 & ON	01
113	S1232-505	.							CIRCUIT BREAKER 5 AMP CVDR HC046	(208) 0001 - 0499 (208B) 0001 - 1999	01
114	2613407-1	.							GUARD - CIRCUIT BREAKER	(208) 0001 - 0499 (208B) 0001 - 1999	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG



24-50-01

CIRCUIT BREAKERS


AIRPLANES (208) 0500 & ON AND AIRPLANES (208B) 2000 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A72146

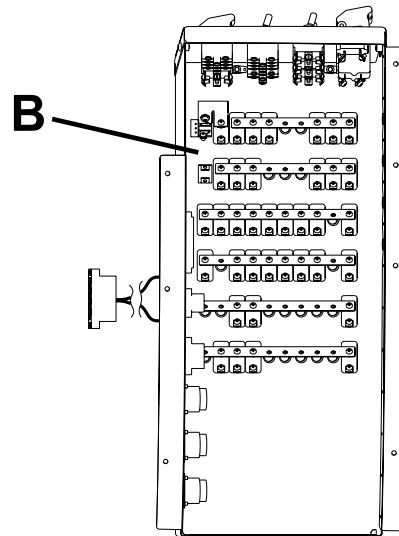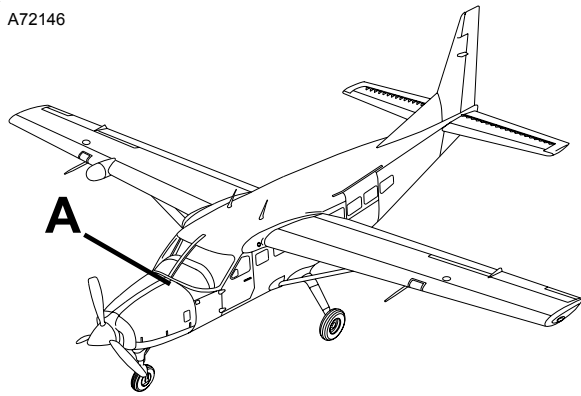

DETAIL A

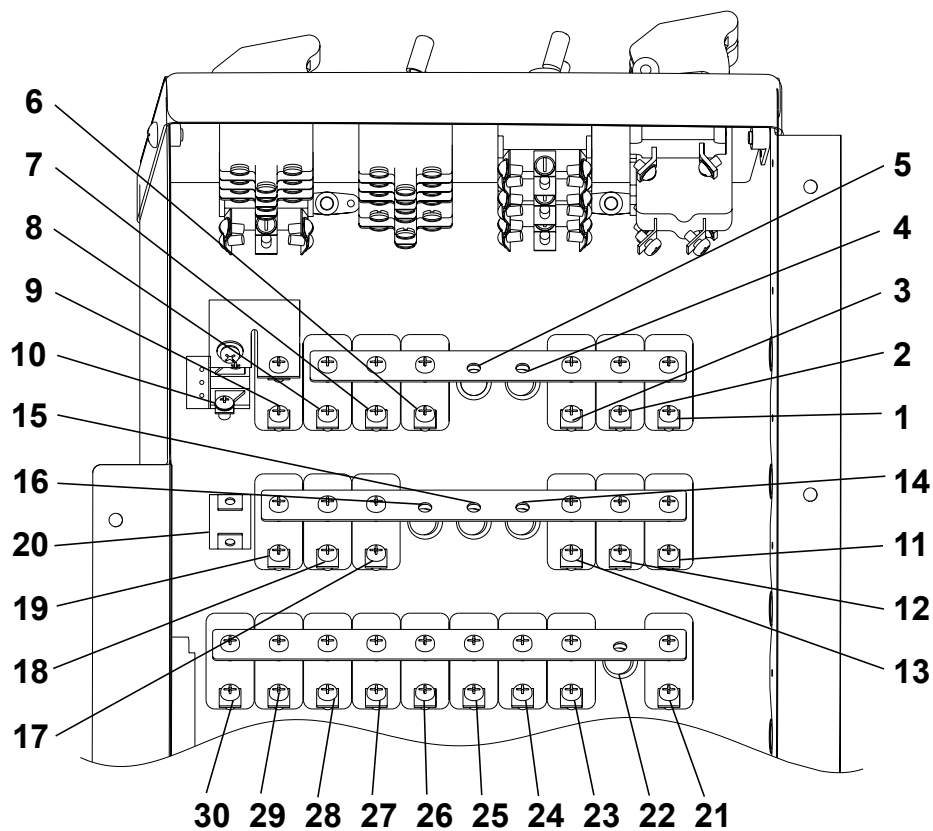

DETAIL B

CIRCUIT BREAKERS
Figure 03. (Sheet 1)

2610T7005
 A2618T1425
 B2618T1426

Figure 03
 Page 2
24-50-01 Nov 4, 2021

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

CIRCUIT BREAKERS

AIRPLANES (208) 0500 & ON AND AIRPLANES (208B) 2000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	S1232-530	.	CIRCUIT BREAKER 30 AMP BUS 1 PWR HC001						(208) 0500 & ON (208B) 2000 & ON	01
- 1A	S2742-19	.	TIP - ORANGE HC001 * EASA CERTIFIED AIRPLANES (208B) 5242 & ON						(208B) *5242 & ON	01
2	S1232-540	.	CIRCUIT BREAKER 40 AMP STBY PWR HC002						(208) 0500 & ON (208B) 2000 & ON	01
3	S1232-515	.	CIRCUIT BREAKER - LEFT PITOT HEATER HC003						(208) 0500 & ON (208B) 2000 & ON	01
4	S1232-530	.	CIRCUIT BREAKER 30 AMP PROP ANTI-ICE OPT HC004						(208) 0500 & ON (208B) 2000 & ON	01
5	S1232-505	.	CIRCUIT BREAKER - PRIMARY ANTI-ICE OPT HC005						(208) 0500 & ON (208B) 2000 & ON	01
6	S1232-505	.	CIRCUIT BREAKER 5 AMP TORQUE HC006						(208) 0500 & ON (208B) 2000 & ON	01
7	S1232-505	.	CIRCUIT BREAKER 5 AMP IGN HC007						(208) 0500 & ON (208B) 2000 & ON	01
8	S1232-505	.	CIRCUIT BREAKER 5 AMP START CONT HC008						(208) 0500 & ON (208B) 2000 & ON	01
- 8A	S2742-19	.	TIP - ORANGE HC008 * EASA CERTIFIED AIRPLANES (208B) 5242 & ON						(208B) *5242 & ON	01
9	S1232-505	.	CIRCUIT BREAKER 5 AMP GEN CONT HC009						(208) 0500 & ON (208B) 2000 & ON	01
- 9A	S2742-19	.	TIP - ORANGE HC009 * EASA CERTIFIED AIRPLANES (208B) 5242 & ON						(208B) *5242 & ON	01
10	4380-005-15	.	CIRCUIT BREAKER 15 AMP GEN FIELD HC010					76374	(208) 0500 - 0511 (208B) 2000 - 2111	01
- 10A	2TC7-15	.	CIRCUIT BREAKER 15 AMP GEN FIELD HC010 * AIRPLANES (208B) 2025 THRU 2065 INCORPORATING CAB09-10					82647	(208) 0512 & ON (208B) 2112 & ON (208B) *2025 - 2065	01
- 10B	S2742-21	.	TIP - ORANGE HC010 * EASA CERTIFIED AIRPLANES (208B) 5242 & ON						(208B) *5242 & ON	01
11	S1232-530	.	CIRCUIT BREAKER 30 AMP BUS 2 PWR HC011						(208) 0500 & ON (208B) 2000 & ON	01
- 11A	S2742-19	.	TIP - ORANGE HC011 * EASA CERTIFIED AIRPLANES (208B) 5242 & ON						(208B) *5242 & ON	01
12	S1232-540	.	CIRCUIT BREAKER 40 AMP STBY PWR HC012						(208) 0500 & ON (208B) 2000 & ON	01
13	S1232-515	.	CIRCUIT BREAKER 15 AMP - RIGHT PITOT HEATER HC013						(208) 0500 & ON (208B) 2000 & ON	01
14	S1232-505	.	CIRCUIT BREAKER 5 AMP PROP ANTI-ICE CONT OPT HC014						(208) 0500 & ON (208B) 2000 & ON	01
15	S1232-505	.	CIRCUIT BREAKER - BACKUP ANTI-ICE OPT HC015						(208) 0500 & ON (208B) 2000 & ON	01
16	S1232-502	.	CIRCUIT BREAKER - W/S ANTI-ICE OPT HC016						(208) 0500 & ON (208B) 2000 & ON	01
17	S1232-510	.	CIRCUIT BREAKER 10 AMP AUX 12 VDC POWER HC017						(208) 0500 & ON (208B) 2000 & ON	01
18	S1232-505	.	CIRCUIT BREAKER 5 AMP - LEFT FUEL QTY HC018						(208) 0500 & ON (208B) 2000 & ON	01
19	S1232-510	.	CIRCUIT BREAKER 10 AMP AUX FUEL PUMP HC019						(208) 0500 & ON (208B) 2000 & ON	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

CIRCUIT BREAKERS



AIRPLANES (208) 0500 & ON AND AIRPLANES (208B) 2000 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
20	S2899L0.5	.							CIRCUIT BREAKER .5 AMP FUEL SEL WARN HC020	(208) 0500 & ON (208B) 2000 & ON	01
21	S1232-530	.							CIRCUIT BREAKER 30 AMP BUS 1 PWR HC021	(208) 0500 & ON (208B) 2000 & ON	01
22		.							SPARE READING LIGHT OPT HC022		RF
23	S1232-505	.							CIRCUIT BREAKER 5 AMP INST LIGHT HC023	(208) 0500 & ON (208B) 2000 & ON	01
24	S1232-510	.							CIRCUIT BREAKER 10 AMP - LEFT LDG LIGHT HC024	(208) 0500 & ON (208B) 2000 & ON	01
25	S1232-505	.							CIRCUIT BREAKER 5 AMP STROBE LIGHT HC025	(208) 0500 & ON (208B) 2000 & ON	01
26	S1232-510	.							CIRCUIT BREAKER 10 AMP BEACON LIGHT HC026	(208) 0500 & ON (208B) 2000 & ON	01
27	S1232-505	.							CIRCUIT BREAKER 5 AMP WING ICE DET LIGHT HC027	(208) 0500 & ON (208B) 2000 & ON	01
28	S1232-505	.							CIRCUIT BREAKER 5 AMP - RIGHT FUEL QTY HC028	(208) 0500 & ON (208B) 2000 & ON	01
29	S1232-502	.							CIRCUIT BREAKER 2 AMP FUEL FLOW NG & NP HC029	(208) 0500 - 0650 (208B) 2000 - 5500	01
30	S1232-510	.							CIRCUIT BREAKER 10 AMP FUEL CONT HEATER HC030	(208) 0500 & ON (208B) 2000 & ON	01


- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A72147

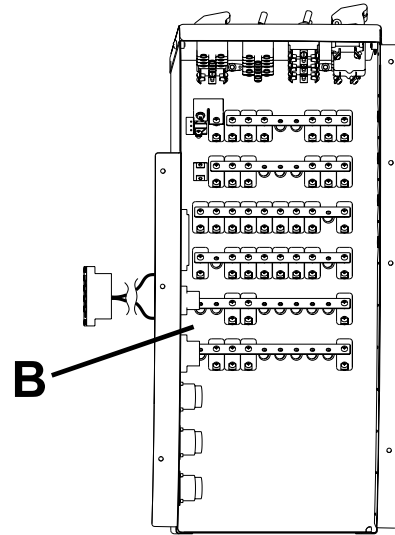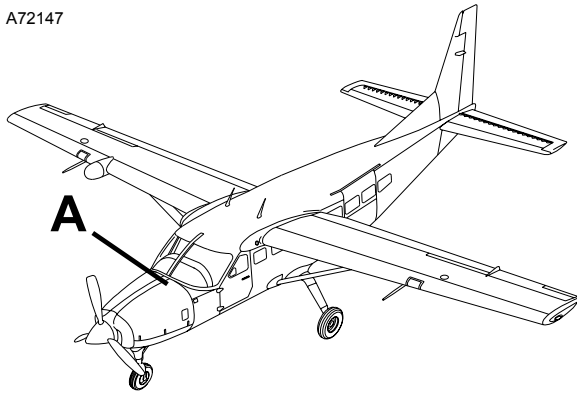

DETAIL A

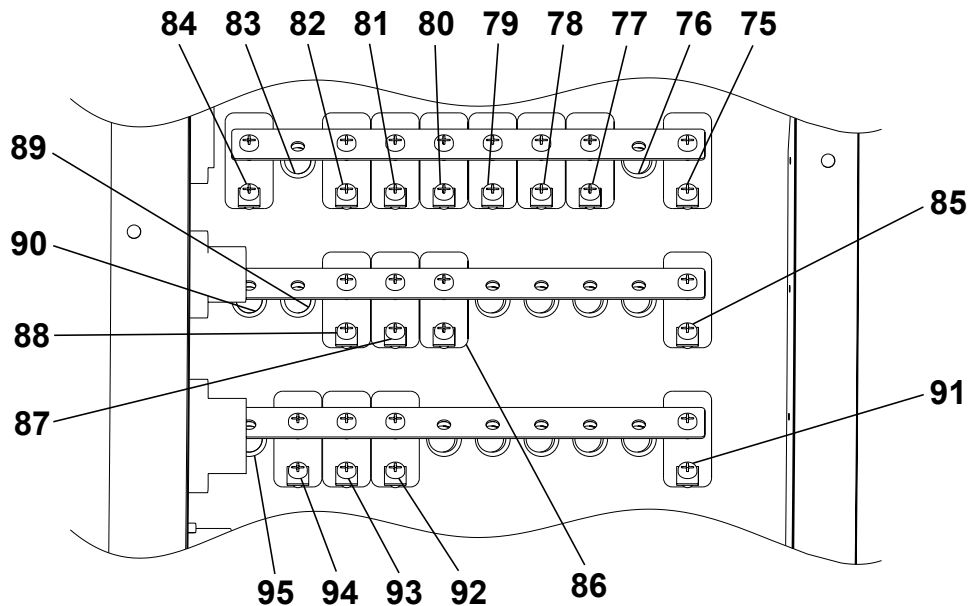

DETAIL B

CIRCUIT BREAKERS
Figure 03. (Sheet 2)

2610T7005
 A2618T1425
 B2618T1426

Figure 03
 Page 6
24-50-01 Nov 4, 2021

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

CIRCUIT BREAKERS

AIRPLANES (208) 0500 & ON AND AIRPLANES (208B) 2000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
75	S1232-530	.	CIRCUIT BREAKER 30 AMP BUS 2 PWR HC031						(208) 0500 & ON (208B) 2000 & ON	01
76	S1232-505	.	CIRCUIT BREAKER - 30 AMP BUS 2 PWR SEAT BELT SIGN OPT HC032						(208) 0500 & ON (208B) 2000 & ON	01
77	S1232-505	.	CIRCUIT BREAKER 5 AMP AVN FLOOD LIGHT HC033						(208) 0500 & ON (208B) 2000 & ON	01
78	S1232-510	.	CIRCUIT BREAKER 10 AMP - RIGHT LDG LIGHT HC034						(208) 0500 & ON (208B) 2000 & ON	01
79	S1232-515	.	CIRCUIT BREAKER 15 AMP TAXI LIGHT HC035						(208) 0500 & ON (208B) 2000 & ON	01
80	S1232-510	.	CIRCUIT BREAKER 10 AMP NAV LIGHT HC036						(208) 0500 & ON (208B) 2000 & ON	01
81	S1232-505	.	CIRCUIT BREAKER 5 AMP FIRE DET HC037						(208) 0500 & ON (208B) 2000 & ON	01
82	S1232-505	.	CIRCUIT BREAKER 5 AMP PROP O-SPEED TEST HC038						(208) 0500 & ON (208B) 2000 & ON	01
83	S1232-505	.	CIRCUIT BREAKER 5 AMP AIR CONDITIONER CONT OPT HC039 * AIRPLANES (208) 0500 & ON INCORPORATING CAB-21-03 * AIRPLANES (208B) 2000 THRU 4999 INCORPORATING CAB-21-03 * AIRPLANES (208B) 5000 & ON INCORPORATING CAB-21-04						(208) *0500 & ON (208B) *2000 - 4999 (208B) *5000 & ON	01
84	S1232-505	.	CIRCUIT BREAKER 5 AMP DECK SKIN FANS HC040						(208) 0500 & ON (208B) 2000 & ON	01
85	S1232-530	.	CIRCUIT BREAKER 30 AMP BUS 1 PWR HC041						(208) 0500 & ON (208B) 2000 & ON	01
86	S1232-505	.	CIRCUIT BREAKER 5 AMP CVDR - HC046						(208) 0500 & ON (208B) 2000 & ON	01
87	S1232-510	.	CIRCUIT BREAKER 10 AMP FLAP MOTOR HC047						(208) 0500 & ON (208B) 2000 & ON	01
88	S1232-505	.	CIRCUIT BREAKER 5 AMP AIR SPEED WARN HC048						(208) 0500 & ON (208B) 2000 & ON	01
89	S1232-510	.	CIRCUIT BREAKER - AFT VENT BLOWER OPT HC049 * AIRPLANES (208) 0500 & ON INCORPORATING CAB-21-03 * AIRPLANES (208B) 2000 THRU 4999 INCORPORATING CAB-21-03 * AIRPLANES (208B) 5000 & ON INCORPORATING CAB-21-04						(208) *0500 & ON (208B) *2000 - 4999 (208B) *5000 & ON	01
90	S1232-510	.	CIRCUIT BREAKER - LEFT VENT BLOWER OPT HC050 * AIRPLANES (208) 0500 & ON INCORPORATING CAB-21-03 * AIRPLANES (208B) 2000 THRU 4999 INCORPORATING CAB-21-03 * AIRPLANES (208B) 5000 & ON INCORPORATING CAB-21-04						(208) *0500 & ON (208B) *2000 - 4999 (208B) *5000 & ON	01
91	S1232-530	.	CIRCUIT BREAKER 30 AMP BUS 2 PWR HC051						(208) 0500 & ON (208B) 2000 & ON	01
92	S1232-510	.	CIRCUIT BREAKER 10 AMP STANDBY FLAP MOTOR HC057						(208) 0500 & ON (208B) 2000 & ON	01
93	S1232-510	.	CIRCUIT BREAKER 10 AMP STALL WARN HC058						(208) 0500 & ON (208B) 2000 & ON	01
94	S1232-505	.	CIRCUIT BREAKER 5 AMP BLEED AIR HEAT HC059						(208) 0500 & ON (208B) 2000 & ON	01
95	S1232-510	.	CIRCUIT BREAKER - RIGHT VENT BLOWER OPT HC060 * AIRPLANES (208) 0500 & ON INCORPORATING CAB-21-03 * AIRPLANES (208B) 2000 THRU 4999 INCORPORATING CAB-21-03 * AIRPLANES (208B) 5000 & ON INCORPORATING CAB-21-04						(208) *0500 & ON (208B) *2000 - 4999 (208B) *5000 & ON	01

- ITEM NOT ILLUSTRATED



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

24-50-02

ELECTRIC POWER BOX INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A25061

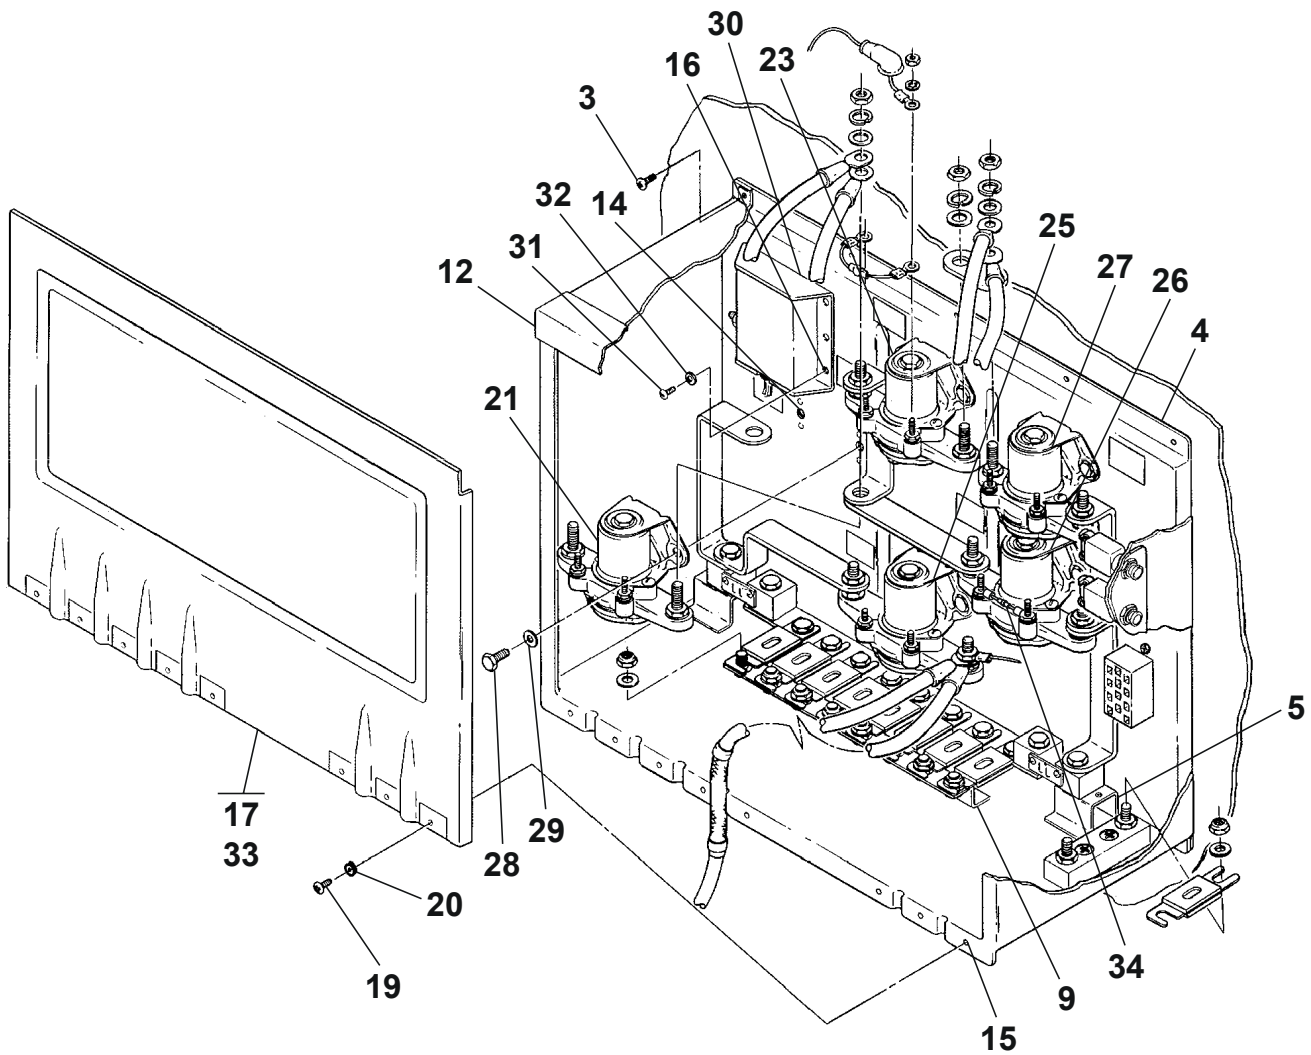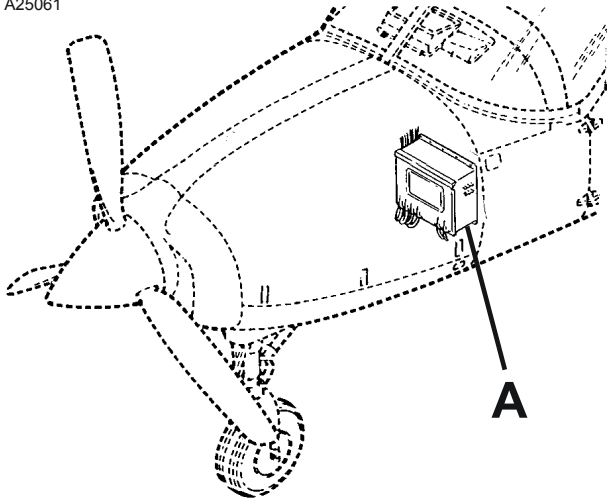

DETAIL A

ELECTRIC POWER BOX INSTALLATION
 Figure 01. (Sheet 1)

2618R1004
 A2618R4001

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ELECTRIC POWER BOX INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 1	2670001-1	.	RELAY BOX ASSEMBLY FOR SPARES ORDER (MUST REPLACE WITH): 2670001-20						(208) 0001 - 0162 (208B) 0001 - 0191	NP
			NOTE: WHEN ORDERING RELAY BOX ASSEMBLY FOR AIRPLANES EQUIPPED WITH 300 AMP STARTER/GENERATOR, ALSO ORDER 2670122-3 RELAY BOX COVER ASSEMBLY.							
- 2	2670001-20	.	RELAY BOX ASSEMBLY SPARES REPLACEMENT FOR: 2670001-1						(208) 0163 - 0381 (208B) 0192 - 1086	01
			NOTE: WHEN ORDERING RELAY BOX ASSEMBLY FOR AIRPLANES EQUIPPED WITH 300 AMP STARTER/GENERATOR, ALSO ORDER 2670122-3 RELAY BOX COVER ASSEMBLY.							
- 2A	2670001-31	.	RELAY BOX ASSEMBLY						(208) 0382 - 0499 (208B) 1087 - 1999	01
			NOTE: WHEN ORDERING RELAY BOX ASSEMBLY FOR AIRPLANES EQUIPPED WITH 300 AMP STARTER/GENERATOR, ALSO ORDER 2670122-3 RELAY BOX COVER ASSEMBLY.							
- 2B	2670001-35	.	RELAY BOX ASSEMBLY						(208) 0500 - 0663 (208B) 2000 - 4999	01
			NOTE: WHEN ORDERING RELAY BOX ASSEMBLY FOR AIRPLANES EQUIPPED WITH 300 AMP STARTER/GENERATOR, ALSO ORDER 2670122-3 RELAY BOX COVER ASSEMBLY.							
- 2C	2670001-41	.	RELAY BOX ASSEMBLY						(208) 0664 & ON	01
			NOTE: WHEN ORDERING RELAY BOX ASSEMBLY FOR AIRPLANES EQUIPPED WITH 300 AMP STARTER/GENERATOR, ALSO ORDER 2670122-3 RELAY BOX COVER ASSEMBLY.							
- 2D	2670001-38	.	RELAY BOX ASSEMBLY						(208B) 5000 - 5590	01
			NOTE: WHEN ORDERING RELAY BOX ASSEMBLY FOR AIRPLANES EQUIPPED WITH 300 AMP STARTER/GENERATOR, ALSO ORDER 2670122-3 RELAY BOX COVER ASSEMBLY.							
- 2E	2670001-42	.	RELAY BOX ASSEMBLY						(208B) 5591 & ON	01
			NOTE: WHEN ORDERING RELAY BOX ASSEMBLY FOR AIRPLANES EQUIPPED WITH 300 AMP STARTER/GENERATOR, ALSO ORDER 2670122-3 RELAY BOX COVER ASSEMBLY.							
3	NAS428-3A6	.	BOLT						(208) 0001 & ON (208B) 0001 & ON	10
4	2670066-1	.	INSULATOR						(208) 0001 & ON (208B) 0001 & ON	01
5	2670001-6	.	SUPPORT ASSEMBLY - SHUNT FOR SPARES ORDER (MUST REPLACE WITH): 2670001-25						(208) 0001 - 0162 (208B) 0001 - 0191	NP
- 6	MS21059L6	.	NUTPLATE						(208) 0001 - 0162 (208B) 0001 - 0191	01
- 6A	MS21051L6	.	NUTPLATE						(208) 0163 & ON (208B) 0192 & ON	01
- 7	2670001-25	.	SUPPORT ASSEMBLY - SHUNT SPARES REPLACEMENT FOR: 2670001-6						(208) 0163 & ON (208B) 0192 & ON	02
- 8	NAS1149FN332P	.	WASHER						(208) 0001 & ON (208B) 0001 & ON	08
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ELECTRIC POWER BOX INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
9	2670001-4	.	.	SUPPORT - LIMITER					(208) 0001 - 0162	NP
				FOR SPARES ORDER (MUST REPLACE WITH):					(208B) 0001 - 0191	
				2670001-23						
- 10	2670001-23	.	.	SUPPORT - LIMITER					(208) 0163 & ON	01
				SPARES REPLACEMENT FOR:					(208B) 0192 & ON	
				2670001-4						
- 11	NAS1149FN332P	.	.	WASHER					(208) 0001 & ON	03
									(208B) 0001 & ON	
12	2670001-8	.	.	RETAINER - COVER					(208) 0001 - 0162	NP
				FOR SPARES ORDER (MUST REPLACE WITH):					(208B) 0001 - 0191	
				2670001-27						
- 13	2670001-27	.	.	RETAINER - COVER					(208) 0163 & ON	01
				SPARES REPLACEMENT FOR:					(208B) 0192 & ON	
				2670001-8						
14	MS21059L4	.	.	NUTPLATE					(208) 0001 & ON	10
									(208B) 0001 & ON	
15	MS21047L3	.	.	NUTPLATE				13499	(208) 0001 & ON	08
									(208B) 0001 & ON	
16	NAS682A08K	.	.	NUTPLATE					(208) 0001 - 0162	02
									(208B) 0001 - 0191	
- 16A	MS21051L08	.	.	NUTPLATE					(208) 0163 & ON	02
									(208B) 0192 & ON	
17	2670001-17	.	.	COVER ASSEMBLY - RELAY BOX					(208) 0001 - 0162	NP
				FOR SPARES ORDER (MUST REPLACE WITH):					(208B) 0001 - 0191	
				2670001-29						
- 18	2670001-29	.	.	COVER ASSEMBLY - RELAY BOX					(208) 0163 & ON	01
				SPARES REPLACEMENT FOR:					(208B) 0192 - 4999	
				2670001-17						
- 18A	2670122-3	.	.	COVER ASSEMBLY - RELAY BOX					(208B) 5000 & ON	01
				ATTACHING PARTS						
19	MS27039-1-09	.	.	SCREW					(208) 0001 & ON	08
									(208B) 0001 & ON	
20	NAS1149F0363P	.	.	WASHER				73197	(208) 0001 & ON	08
									(208B) 0001 & ON	
				--*--						
21	SM400D37	.	.	CONTACTOR - INTERNAL START				81640	(208) 0001 & ON	01
									(208B) 0001 & ON	
- 22		.	.	DELETED - NOT USED						
23	SM400D37	.	.	CONTACTOR - EXTERNAL START				81640	(208) 0001 & ON	01
									(208B) 0001 & ON	
- 24		.	.	DELETED - NOT USED						
25	6041H205	.	.	CONTACTOR - BATTERY				81640	(208) 0001 - 0499	01
									(208B) 0001 - 1999	
- 25A	MS24185-D2	.	.	CONTACTOR - BATTERY				27193	(208) 0500 & ON	01
									(208B) 2000 & ON	
26	6041H205	.	.	CONTACTOR - GENERATOR				81640	(208) 0001 - 0499	01
									(208B) 0001 - 1999	
- 26A	MS24185-D2	.	.	CONTACTOR - GENERATOR				27193	(208) 0500 & ON	01
									(208B) 2000 & ON	
27	MS24171-D2	.	.	CONTACTOR - EXTERNAL POWER				53201	(208) 0001 & ON	01
									(208B) 0001 & ON	

ATTACHING PARTS

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ELECTRIC POWER BOX INSTALLATION



AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
28	AN4-4A	.	BOLT						(208) 0001 & ON (208B) 0001 & ON	02
29	NAS1149F0463P	.	WASHER					99321	(208) 0001 & ON (208B) 0001 & ON	02
			--*--							
30	C593005-0101	.	GROUND POWER MONITOR						(208) 0001 & ON (208B) 0001 & ON	01
			ATTACHING PARTS							
31	MS35206-230	.	SCREW					80205	(208) 0001 & ON (208B) 0001 & ON	02
32	NAS1149FN616P	.	WASHER					2X920	(208) 0001 & ON (208B) 0001 & ON	02
			--*--							
33	2670122-3	.	COVER ASSEMBLY - RELAY BOX						(208) 0001 & ON (208B) 0001 & ON	01
			NOTE: WHEN ORDERING RELAY BOX ASSEMBLY FOR AIRPLANES EQUIPPED WITH 300 AMP STARTER/GENERATOR, ALSO ORDER 2670122-3 RELAY BOX COVER ASSEMBLY.							
34	2670086-1	.	TRANSZORB ASSEMBLY						(208) 0327 - 0499 (208B) 0826 - 1999	01


- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A25062

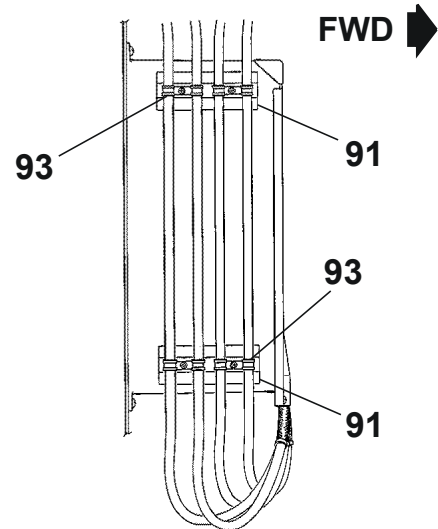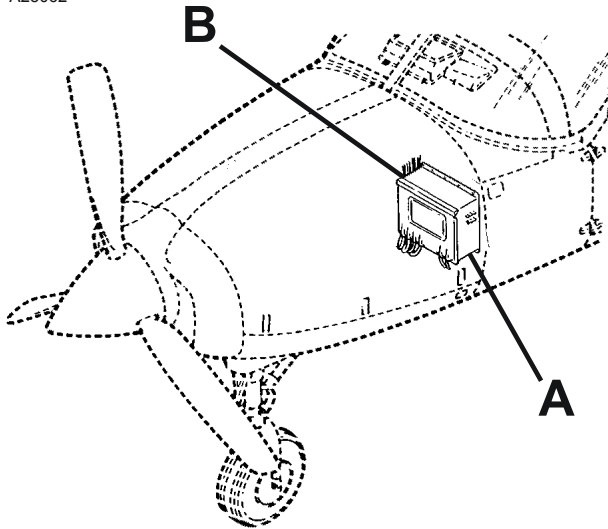

DETAIL B

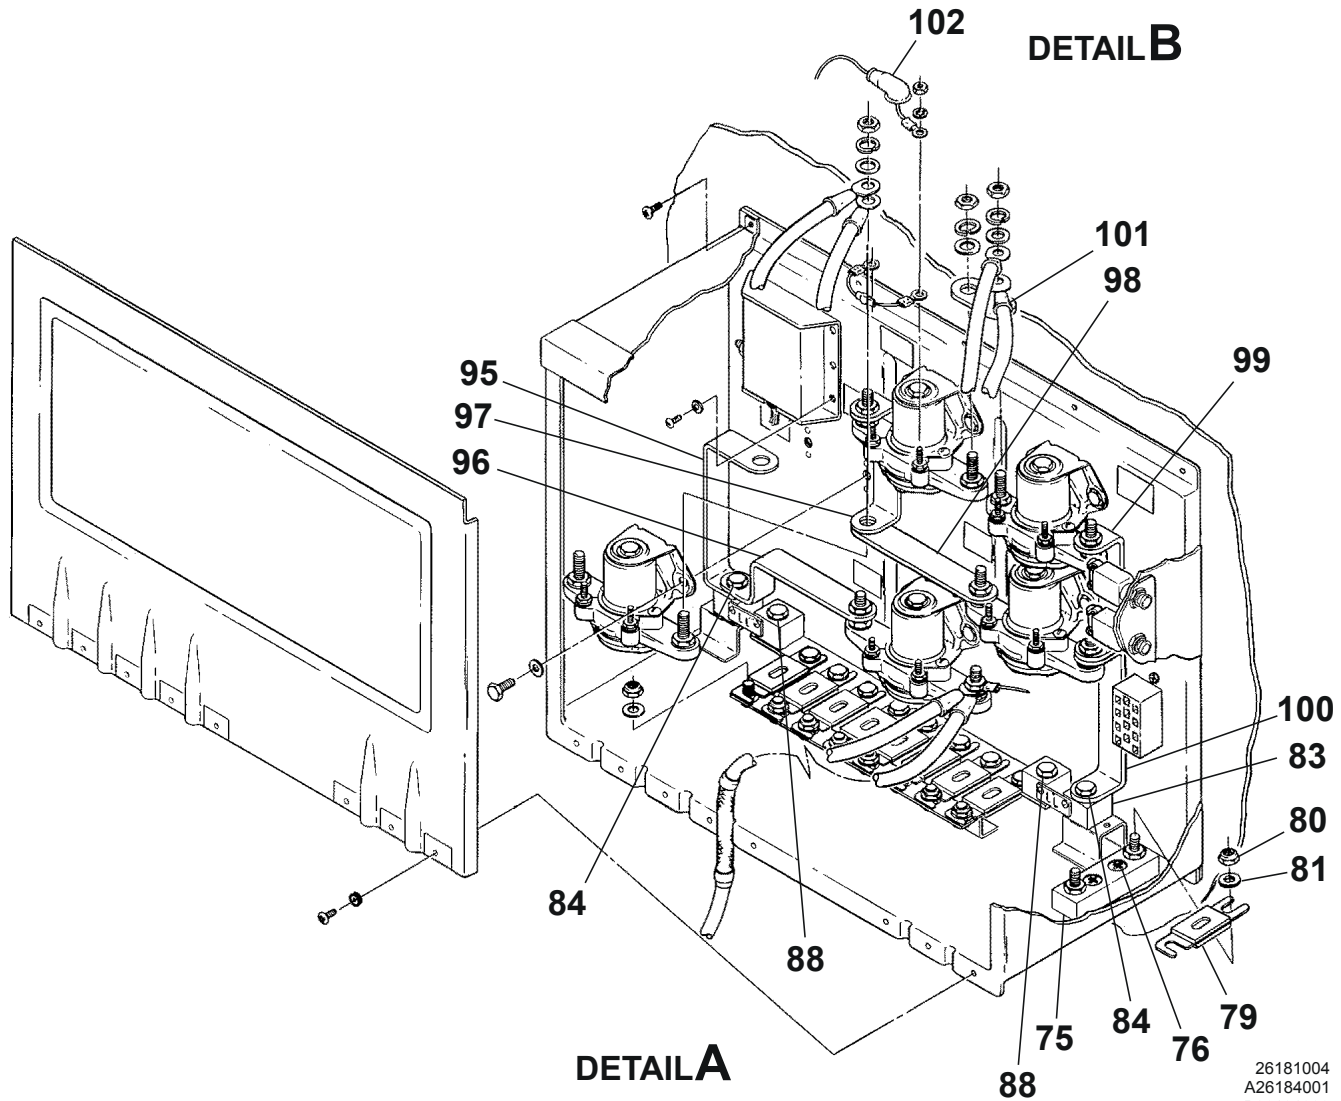

DETAIL A

ELECTRIC POWER BOX INSTALLATION
 Figure 01. (Sheet 2)

26181004
 A26184001
 B26181003

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

ELECTRIC POWER BOX INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY		
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY			
75	76279-1	.	BLOCK ASSEMBLY						2X920	(208) 0001 & ON (208B) 0001 & ON	01	
			ATTACHING PARTS									
76	MS35191-274	.	SCREW							(208) 0001 & ON (208B) 0001 & ON	02	
- 77	NAS1149D0332J	.	WASHER						80205	(208) 0001 & ON (208B) 0001 & ON	02	
- 78	MS21042L3	.	NUT						00624	(208) 0001 & ON (208B) 0001 & ON	02	
			--*--									
79	ANL40	.	LIMITER						71400	(208) 0001 & ON (208B) 0001 & ON	01	
			ATTACHING PARTS									
80	MS20365-524A	.	NUT - INCLUDED WITH 76279-1 BLOCK ASSEMBLY							(208) 0001 & ON (208B) 0001 & ON	02	
81	NAS1149F0532P	.	WASHER - INCLUDED WITH 76279-1 BLOCK ASSEMBLY						61526	(208) 0001 & ON (208B) 0001 & ON	02	
- 82	MS35691-13	.	NUT INCLUDED WITH 76279-1 BLOCK ASSEMBLY							(208) 0001 & ON (208B) 0001 & ON	02	
			--*--									
83	S2609-1	.	SHUNT ASSEMBLY RZ005							(208) 0001 & ON (208B) 0001 & ON	02	
- 83A	S2609-2	.	SHUNT ASSEMBLY - USED WITH 300 AMP STARTER/GENERATOR							(208) 0001 - 0499 (208B) 0001 - 1999	02	
- 83B	S2609-2	.	SHUNT ASSEMBLY - OUTBOARD USED WITH 300 AMP STARTER/ GENERATOR RZ009							(208) 0500 & ON (208B) 2000 & ON	01	
- 83C	S2609-2	.	SHUNT ASSEMBLY - INBOARD USED WITH 300 AMP STARTER/ GENERATOR RZ008							(208) 0500 - 0504 (208B) 2000 - 2013	01	
			ATTACHING PARTS									
84	AN6-11A	.	BOLT - OUTBOARD							(208) 0001 & ON (208B) 0001 & ON	01	
- 85	AN6-12A	.	BOLT - INBOARD							(208) 0001 & ON (208B) 0001 & ON	01	
- 86	NAS1149F0663P	.	WASHER							(208) 0001 & ON (208B) 0001 & ON	01	
- 87	MS35338-46	.	WASHER							(208) 0001 & ON (208B) 0001 & ON	01	
88	AN6-10A	.	BOLT						80205	(208) 0001 & ON (208B) 0001 & ON	01	
- 89	NAS1149F0663P	.	WASHER							(208) 0001 & ON (208B) 0001 & ON	01	
- 90	MS35338-46	.	WASHER							(208) 0001 & ON (208B) 0001 & ON	01	
			--*--									
91	2670001-15	.	BRACKET ASSEMBLY							(208) 0001 & ON (208B) 0001 & ON	02	
- 92	MS21047L3K	.	.	NUTPLATE						(208) 0001 & ON (208B) 0001 & ON	02	
93	MS21919DG5	.	CLAMP							(208) 0001 & ON (208B) 0001 & ON	08	
			ATTACHING PARTS									
- ITEM NOT ILLUSTRATED												

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ELECTRIC POWER BOX INSTALLATION



AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 94	MS35207-263	.	SCREW						80205 (208) 0001 & ON (208B) 0001 & ON	01
			--*--							
95	2670033-5	.	BUS BAR						(208) 0001 & ON (208B) 0001 & ON	01
96	2670033-13	.	BUS BAR						(208) 0001 & ON (208B) 0001 & ON	01
97	2670033-11	.	BUS BAR						(208) 0001 & ON (208B) 0001 & ON	01
98	2670033-6	.	BUS BAR						(208) 0001 & ON (208B) 0001 & ON	01
99	2670033-9	.	BUS BAR						(208) 0001 & ON (208B) 0001 & ON	01
100	2670033-10	.	BUS BAR						(208) 0001 & ON (208B) 0001 & ON	01
101	2670033-1	.	BUS BAR						(208) 0001 & ON (208B) 0001 & ON	01
102	A-A-59178-1	.	NIPPLE						81348 (208) 0001 & ON (208B) 0001 & ON	05

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A25063

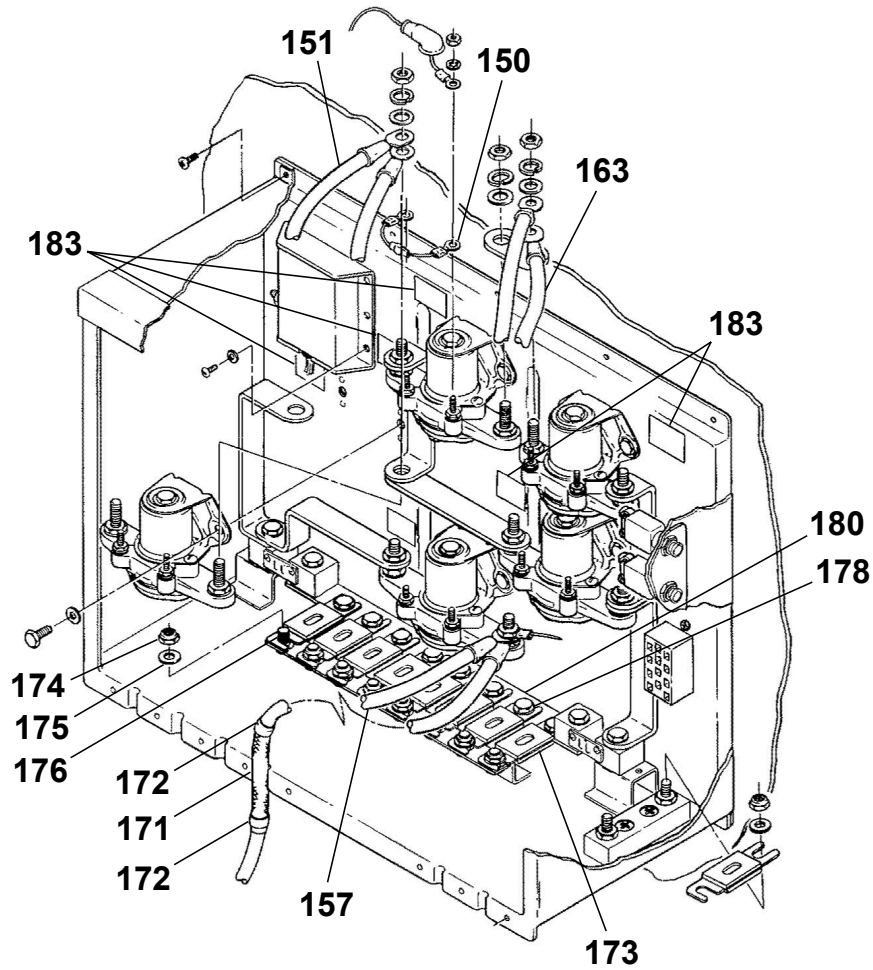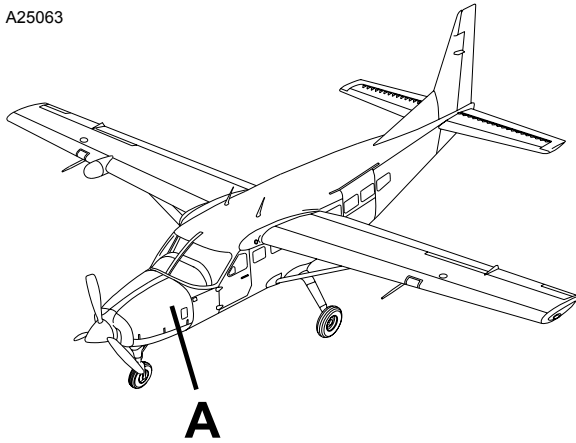

DETAIL A

ELECTRIC POWER BOX INSTALLATION
Figure 01. (Sheet 3)

2610T7005
 A2618R4001

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

ELECTRIC POWER BOX INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
150	2670086-1	.	TRANSZORB ASSEMBLY						(208) 0085 - 0499	01
		.	* AIRPLANES (208) 0001 THRU 0081 INCORPORATING SK208-24						(208) *0001 - 0081	
									(208B) 0001 - 1999	
151	2671000PB1	.	CABLE ASSEMBLY CONTACTOR TO STARTER/GENERATOR						(208) 0001 - 0499	01
									(208B) 0001 - 1999	
- 152	2671000PB153	.	CABLE ASSEMBLY CONTACTOR TO STARTER/GENERATOR -						(208) 0001 - 0499	01
			USED WITH 300 AMP STARTER/GENERATOR						(208B) 0001 - 1999	
- 153	2671000PB40	.	CABLE ASSEMBLY CONTACTOR TO STARTER/GENERATOR						(208) 0001 - 0499	01
									(208B) 0001 - 1999	
- 154	2677030-6	.	WIRE BUNDLE ASSEMBLY CONTACTOR TO STARTER/						(208) 0500 & ON	01
			GENERATOR						(208B) 2000 & ON	
- 155	2671000PB154	.	CABLE ASSEMBLY CONTACTOR TO STARTER/GENERATOR -						(208) 0001 - 0499	01
			USED WITH 300 AMP STARTER/GENERATOR						(208B) 0001 - 1999	
- 156	2677038-2	.	WIRE BUNDLE ASSEMBLY CONTACTOR TO STARTER/						(208) 0500 & ON	01
			GENERATOR - USED WITH 300 AMP STARTER/GENERATOR						(208B) 2000 & ON	
157	2671000PA1	.	CABLE ASSEMBLY CONTACTOR TO BATTERY						(208) 0001 - 0499	01
									(208B) 0001 - 1999	
- 158	2671000PA13	.	CABLE ASSEMBLY CONTACTOR TO BATTERY - USED WITH 300						(208) 0001 - 0499	01
			AMP STARTER/GENERATOR						(208B) 0001 - 1999	
- 159	2671000PA2	.	CABLE ASSEMBLY CONTACTOR TO BATTERY						(208) 0001 - 0499	01
									(208B) 0001 - 1999	
- 160	2677030-7	.	WIRE BUNDLE ASSEMBLY CONTACTOR TO BATTERY						(208) 0500 & ON	01
									(208B) 2000 & ON	
- 161	2671000PA14	.	CABLE ASSEMBLY CONTACTOR TO BATTERY - USED WITH 300						(208) 0001 - 0499	01
			AMP STARTER/GENERATOR						(208B) 0001 - 1999	
- 162	2677038-3	.	WIRE BUNDLE ASSEMBLY CONTACTOR TO BATTERY - USED						(208) 0500 & ON	01
			WITH 300 AMP STARTER/GENERATOR						(208B) 2000 & ON	
163	2671000PC9	.	CABLE ASSEMBLY CONTACTOR TO EXTERNAL POWER RECPT						(208) 0001 - 0499	01
									(208B) 0001 - 1999	
- 164	2671000PC28	.	CABLE ASSEMBLY CONTACTOR TO EXTERNAL POWER RECPT -						(208) 0001 - 0499	01
			USED WITH 300 AMP STARTER/GENERATOR						(208B) 0001 - 1999	
- 165	2671000PC12	.	CABLE ASSEMBLY CONTACTOR TO EXTERNAL POWER RECPT						(208) 0001 - 0499	01
									(208B) 0001 - 1999	
- 166	2677030-4	.	WIRE BUNDLE ASSEMBLY CONTACTOR TO EXTERNAL POWER						(208) 0500 & ON	01
			RECPT						(208B) 2000 & ON	
- 167	2671000PC29	.	CABLE ASSEMBLY CONTACTOR TO EXTERNAL POWER RECPT -						(208) 0001 - 0499	01
			USED WITH 300 AMP STARTER/GENERATOR						(208B) 0001 - 1999	
- 168	2677038-1	.	WIRE BUNDLE ASSEMBLY CONTACTOR TO EXTERNAL POWER						(208) 0500 & ON	01
			RECPT - USED WITH 300 AMP STARTER/GENERATOR						(208B) 2000 & ON	
- 169	2671000PC23	.	CABLE ASSEMBLY CONTACTOR TO EXTERNAL POWER RECPT						(208) 0007 & ON	01
									(208B) 0001 & ON	
- 170	2671000PC25	.	CABLE ASSEMBLY CONTACTOR TO EXTERNAL POWER RECPT						(208) 0007 & ON	01
									(208B) 0001 & ON	
171	02-207	.	SLEEVING 3.00 IN LG					61284	(208) 0001 & ON	06
									(208B) 0001 & ON	
172	S1694-2	.	TUBING 1.00 IN LG						(208) 0001 & ON	12
									(208B) 0001 & ON	
173	ANL40	.	LIMITER					71400	(208) 0001 & ON	08
									(208B) 0001 & ON	

ATTACHING PARTS

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


ELECTRIC POWER BOX INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
174	MS21044C5	.	NUT						(208) 0001 & ON (208B) 0001 & ON	08
175	NAS1149F0532P	.	WASHER					61526	(208) 0001 & ON (208B) 0001 & ON	24
176	NAS428-5A7	.	BOLT						(208) 0001 & ON (208B) 0001 & ON	08
- 177	AN316-5R	.	NUT						(208) 0001 & ON (208B) 0001 & ON	08
178	AN5-4A	.	BOLT						(208) 0001 & ON (208B) 0001 & ON	08
- 179	NAS1149F0532P	.	WASHER					61526	(208) 0001 & ON (208B) 0001 & ON	08
			--*--							
180	2670033-8	.	BUS BAR - LIMITER						(208) 0001 & ON (208B) 0001 & ON	01
- 181	MS21073L5	.	NUTPLATE						(208) 0001 & ON (208B) 0001 & ON	08
- 182	MS21047L6	.	NUTPLATE						(208) 0001 & ON (208B) 0001 & ON	02
183		.	EXTERIOR PLACARDS & MARKINGS REFER TO 11-N-23 FIGURE 01 .							RF
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A25064

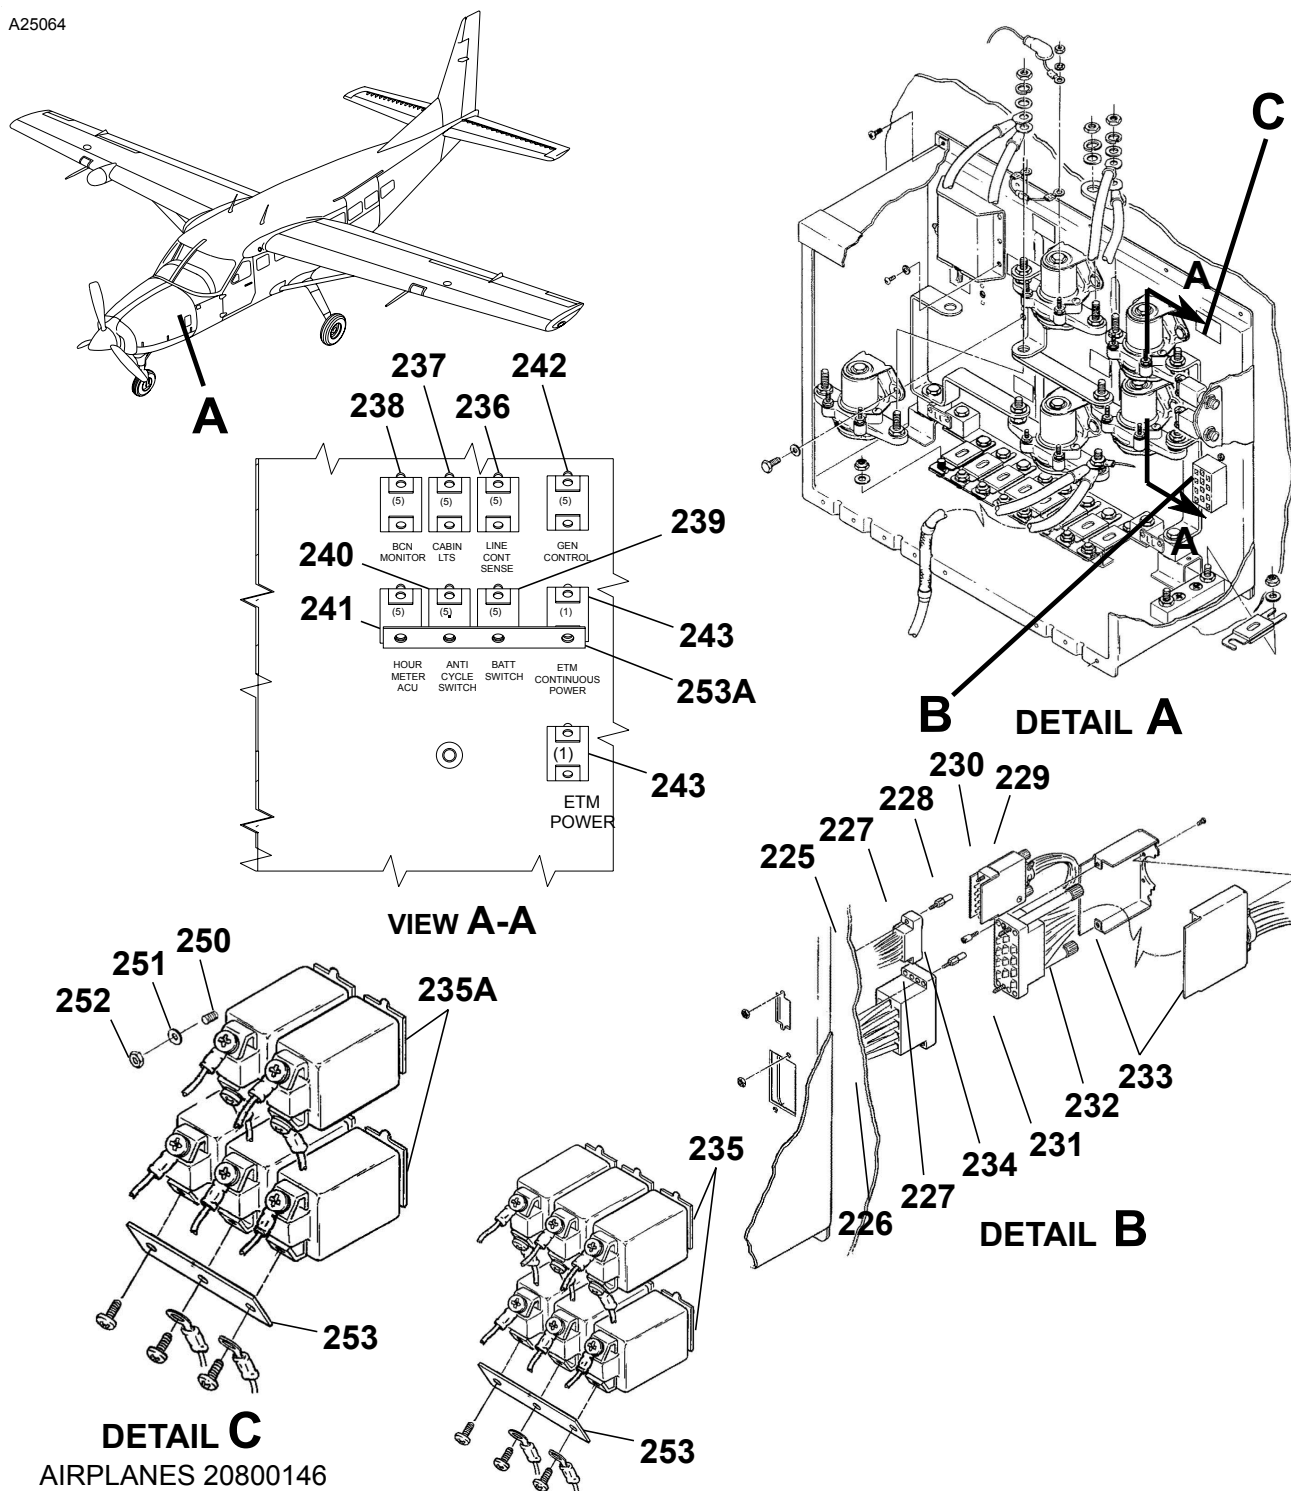

AIRPLANES 20800146
 THRU 20800381 AND
 AIRPLANES 208B0180
 THRU 208B01086

AIRPLANES 20800001 THRU 20800145
 AND 20800382 THRU 20800499 AND
 AIRPLANES 208B0001 THRU 208B0179 AND
 208B1087 THRU 208B1999

ELECTRIC POWER BOX INSTALLATION
Figure 01. (Sheet 4)

2610T7005
 A2618R4001
 B2618R1001
 C2618R4001

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

ELECTRIC POWER BOX INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
225	S2096-1	.	CONNECTOR FEMALE						(208) 0001 - 0499 (208B) 0001 - 1999	01
226	205043-1	.	CONNECTOR FEMALE * AIRPLANES (208B) 2029 THRU 2037 AND 2039 THRU 2043 INCORPORATING SSP08-2					00779	(208) 0001 & ON (208B) 0001 & ON (208B) *2029 - 2037 (208B) *2039 - 2043	01
			ATTACHING PARTS							
227	200875-7	.	JACKSCREW					00779	(208) 0001 - 0499 (208B) 0001 - 1999	02
			--*--							
228	201359-1	.	CONNECTOR MALE					00779	(208) 0500 & ON (208B) 2000 & ON	01
			ATTACHING PARTS							
229	200871-2	.	JACKSCREW					00779	(208) 0001 - 0499 (208B) 0001 - 1999	02
			--*--							
230	201576-2	.	SHIELD ASSEMBLY FOR SPARES ORDER (MUST REPLACE WITH): 200514-2 S2572-1					00779	(208) 0001 - 0499 (208B) 0001 - 1999	NP
			NOTE: 201576-2 SHIELD IS REPLACED BY 200514-2 SHIELD OR S2572-1 SHIELD AND 201785-4 PIN HOOD							
- 230A	200514-2	.	SHIELD ASSEMBLY SPARES REPLACEMENT FOR: 201576-2					00779	(208) 0001 & ON (208B) 0001 & ON	01
			NOTE: 201576-2 SHIELD IS REPLACED BY 200514-2 SHIELD OR S2572-1 SHIELD AND 201785-4 PIN HOOD							
- 230B	S2572-1	.	SHIELD ASSEMBLY SPARES REPLACEMENT FOR: 201576-2					00779	(208) 0001 & ON (208B) 0001 & ON	01
			NOTE: 201576-2 SHIELD IS REPLACED BY 200514-2 SHIELD OR S2572-1 SHIELD AND 201785-4 PIN HOOD							
- 230C	201785-4	.	PIN HOOD					00779	(208) 0001 & ON (208B) 0001 & ON	01
231	205042-1	.	CONNECTOR MALE * AIRPLANES (208B) 2029 THRU 2037 AND 2039 THRU 2043 INCORPORATING SSP08-2					00779	(208) 0001 & ON (208B) 0001 & ON (208B) *2029 - 2037 (208B) *2039 - 2043	01
232	201911-1	.	JACKSCREW					00779	(208) 0001 & ON (208B) 0001 & ON	02
233	202713-2	.	SHIELD ASSEMBLY					00779	(208) 0001 & ON (208B) 0001 & ON	01
234	201911-1	.	JACKSCREW - SHIELD ASSEMBLY ATTACH					00779	(208) 0001 & ON (208B) 0001 & ON	04
235	4200-001-5	.	CIRCUIT BREAKER - ELECTRICAL POWER BOX						(208) 0001 - 0145 (208) 0382 - 0499 (208B) 0001 - 0179 (208B) 1087 - 1999	06
235A	4200-001-5	.	CIRCUIT BREAKER						(208) 0146 - 0381 (208B) 0180 - 1086	05
236	MS26574-5	.	CIRCUIT BREAKER - LINE CONT SENSE HZ001					76374	(208) 0500 & ON (208B) 2000 & ON	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

ELECTRIC POWER BOX INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
237	MS26574-5	.	CIRCUIT BREAKER - CABIN LIGHTS HZ002						76374	(208) 0500 & ON (208B) 2000 & ON	01
238	MS26574-5	.	CIRCUIT BREAKER - BCN MONITOR HZ003						76374	(208) 0500 & ON (208B) 2000 & ON	01
239	MS26574-5	.	CIRCUIT BREAKER - BATTERY SWITCH HZ004						76374	(208) 0500 & ON (208B) 2000 & ON	01
240	MS26574-5	.	CIRCUIT BREAKER - ANTI CYCLE SWITCH HZ005						76374	(208) 0500 & ON (208B) 2000 & ON	01
241	MS26574-5	.	CIRCUIT BREAKER - HOUR METER ACU HZ006						76374	(208) 0500 & ON (208B) 2000 & ON	01
242	MS26574-5	.	CIRCUIT BREAKER - GEN CONTROL HZ032						76374	(208) 0664 & ON (208B) 5591 & ON	01
243	MS26574-1	.	CIRCUIT BREAKER - WITH ALTAIR ETM * AIRPLANES (208B) 5000 THRU 5120 INCORPORATING CAB-77-01							(208) 0382 & ON (208B) 1087 & ON (208B) *5000 - 5120	02
- 244	S3478-1	.	CIRCUIT BREAKER BLOCK ASSEMBLY ATTACHING PARTS						2X920	(208B) 5000 - 5120	01
- 245	MS35206-243	.	SCREW * AIRPLANES (208B) 5000 THRU 5120 INCORPORATING CAB-77-01							(208B) *5000 - 5120	01
- 246	MS35206-229	.	SCREW * AIRPLANES (208B) 5000 THRU 5120 INCORPORATING CAB-77-01							(208B) *5000 - 5120	01
- 247	MS35338-41	.	LOCK WASHER * AIRPLANES (208B) 5000 THRU 5120 INCORPORATING CAB-77-01 --*--						80205	(208B) *5000 - 5120	01
- 248	DP-437	.	PLUG * AIRPLANES (208B) 5000 THRU 5120 INCORPORATING CAB-77-01							(208B) *5000 - 5120	01
- 249	NAS1149D0716J	.	WASHER - 1 WITH EACH CIRCUIT BREAKER							(208) 0001 & ON (208B) 0001 & ON	AR
250	MS35207-263	.	SCREW						80205	(208) 0146 - 0499 (208B) 0180 - 1999	01
251	AN970-3	.	WASHER						80205	(208) 0146 - 0499 (208B) 0180 - 1999	01
252	MS21045L3	.	NUT							(208) 0146 - 0499 (208B) 0180 - 1999	01
253	2670033-12	.	BUS BAR							(208) 0001 - 0499 (208B) 0001 - 1999	01
253A	2670033-15	.	BUS BAR							(208) 0500 & ON (208B) 2000 & ON	01
- 254		.	PLACARD INSTALLATION REFER TO 11-N-24 FIGURE 01.								RF
- ITEM NOT ILLUSTRATED											


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

24-50-03

AVIONICS JUNCTION BOX INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24261

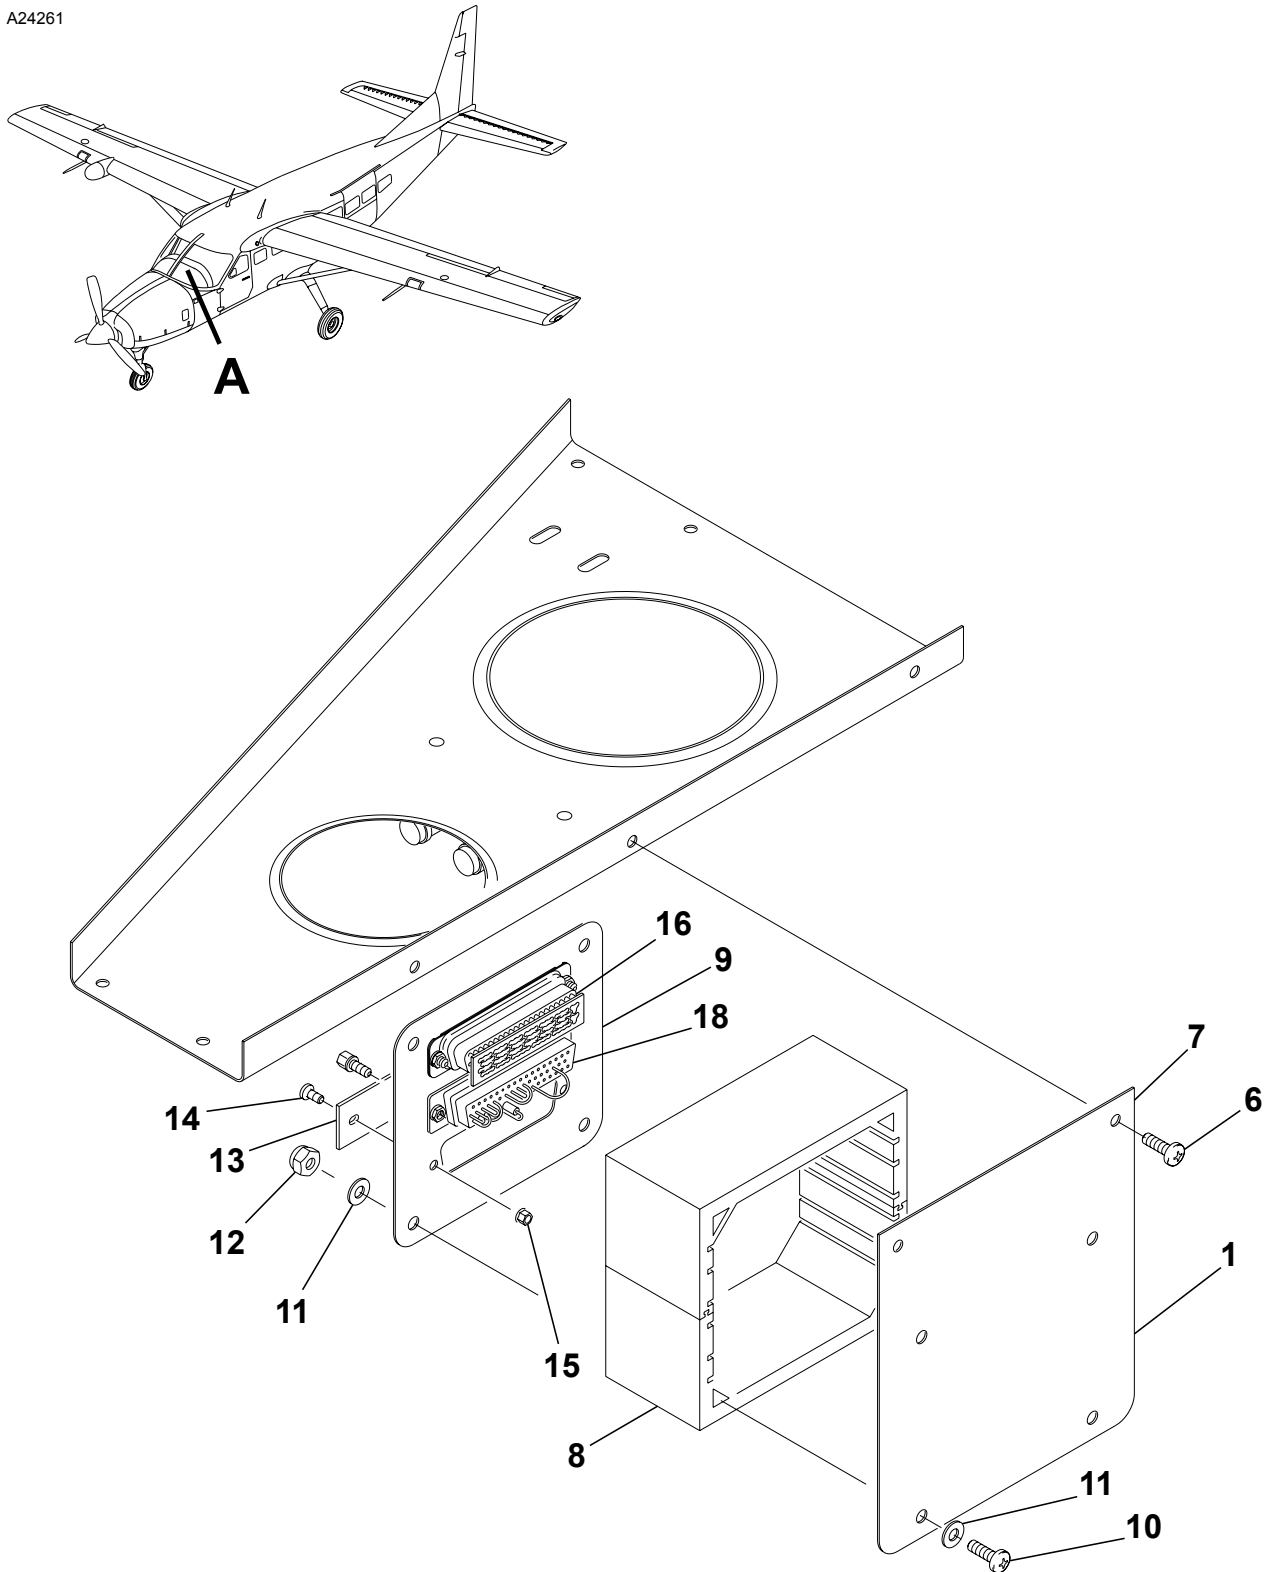

DETAIL A

AVIONICS JUNCTION BOX INSTALLATION
Figure 01. (Sheet 1)

2610T7005
 A2618T1079

Figure 01
 Page 2
24-50-03 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

AVIONICS JUNCTION BOX INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	2670101-1	.	.	.	.	.	.	.	(208) 0146 - 0349 (208B) 0180 - 0914	01
- 2	2670101-3	.	.	.	.	.	.	.	(208) 0146 - 0349 (208B) 0180 - 0914	01
- 3	2670101-4	.	.	.	.	.	.	.	(208) 0232 - 0331 (208B) 0349 - 0874	01
- 4	2670101-5	.	.	.	.	.	.	.	(208) 0232 - 0331 (208B) 0349 - 0874	01
- 5	2670101-8	.	.	.	.	.	.	.	(208) 0001 - 0145 (208B) 0001 - 0293	01
- 5A	2670101-6	.	.	.	.	.	.	.	(208) 0146 & ON (208B) 0180 & ON	01
- 5B	2670101-10	.	.	.	.	.	.	.	(208) 0350 & ON (208B) 0900 & ON	01
- 5C	2670101-12	.	.	.	.	.	.	.	(208) 0376 & ON (208B) 1051 & ON	01
6	MS35206-245	.	.	.	.	.	.	OTRC3	(208) 0001 & ON (208B) 0001 & ON	02
7	2670101-2	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 & ON	01
- 7A	2670101-7	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 & ON	01
8	S2703-1	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 & ON	NP
NOTE: ONE (1) S4110-2 REPLACES TWO (2) S2703-1.										
- 8A	S4110-2	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 & ON	01
NOTE: ONE (1) S4110-2 REPLACES TWO (2) S2703-1.										
9	9455007-3	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 & ON	01
10	MS35206-254	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 & ON	04
11	NAS1149FN816P	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 & ON	08
12	MS21044N08	.	.	.	.	.	.	72914	(208) 0001 & ON (208B) 0001 & ON	04
13	9756127-3	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 & ON	01
14	MS35206-213	.	.	.	.	.	.	07187	(208) 0001 & ON (208B) 0001 & ON	02
15	MS21042-04	.	.	.	.	.	.	80205	(208) 0001 & ON (208B) 0001 & ON	02
16	9455009-1	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 & ON	01
- 17	2670126-1	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 & ON	01
18	2670095-1	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 & ON	01
- 19	9755003-1	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 & ON	01
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

AVIONICS JUNCTION BOX INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 20	9755003-1	.	.	.	P.C. BOARD ASSEMBLY - USED WITH 2670101-4, -8				(208) 0001 & ON (208B) 0001 & ON	02
- ITEM NOT ILLUSTRATED										



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

24-50-03

AVIONICS JUNCTION BOX INSTALLATION
AIRPLANES (208) 0396 & ON AND AIRPLANES (208B) 1165 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24263

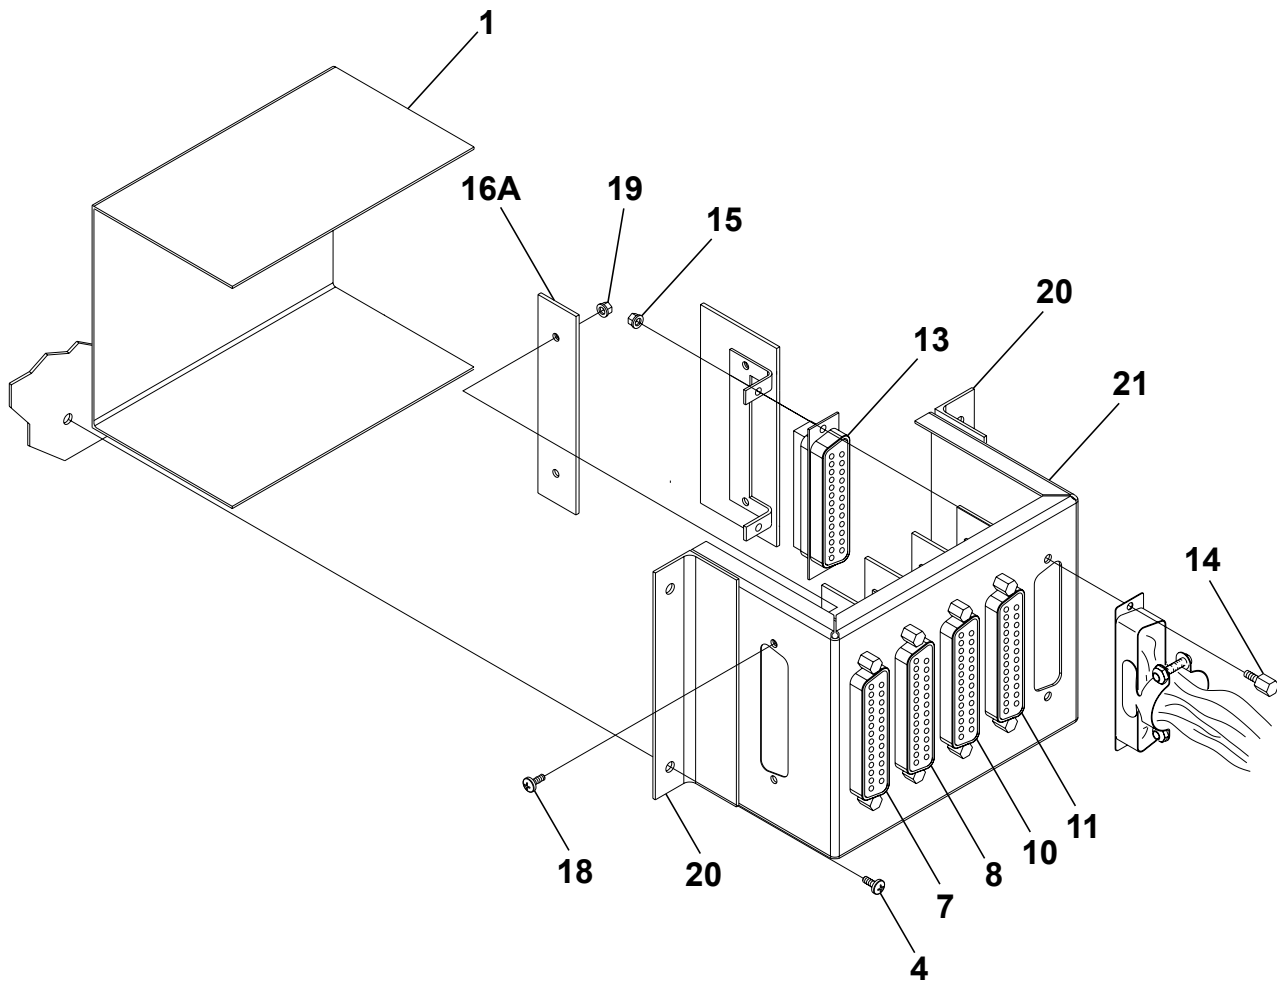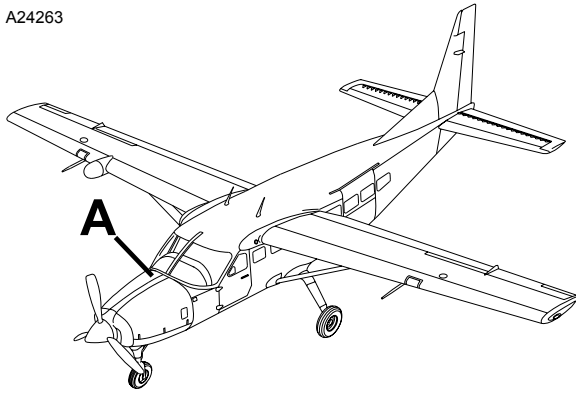

DETAIL A

AVIONICS JUNCTION BOX INSTALLATION
Figure 02. (Sheet 1)

2610T7005
 A2618T1385

Figure 02
 Page 2
24-50-03 Nov 4, 2021

AVIONICS JUNCTION BOX INSTALLATION

AIRPLANES (208) 0396 & ON AND AIRPLANES (208B) 1165 & ON

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

AVIONICS JUNCTION BOX INSTALLATION

AIRPLANES (208) 0396 & ON AND AIRPLANES (208B) 1165 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 16	9756127-3	.	.	---					(208) 0396 - 0499 (208B) 1165 - 1999	02
16A	9756127-3	.	.	PLATE - USED WITH 2670141-2, 2670141-3, 2670141-4 AND 2670141-8 SLOT 6					(208) 0396 - 0410 (208) 0500 & ON (208B) 1165 - 1249 (208B) 2000 & ON	01
- 17	9756127-3	.	.	PLATE - USED WITH 2670141-8 SLOTS 3, 4, AND 5					(208) 0500 & ON (208B) 2000 & ON	03
- 17A		.	.	DELETED - NOT USED ATTACHING PARTS						
18	MS35206-213	.	.	SCREW				07187	(208) 0396 & ON (208B) 1165 & ON	AR
19	MS21042-04	.	.	NUT				80205	(208) 0396 & ON (208B) 1165 & ON	AR
20	2670141-1	.	.	---					(208) 0396 & ON (208B) 1165 & ON	01
21	CU3005A	.	.	AVIONICS BOX ASSEMBLY					(208) 0396 & ON (208B) 1165 & ON	01
		.	.	BOX				71218	(208) 0396 & ON (208B) 1165 & ON	01

- ITEM NOT ILLUSTRATED



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

24-51-00

FUEL PUMP RELAY INSTALLATION
AIRPLANES (208B) 5000 & ON

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

A88745

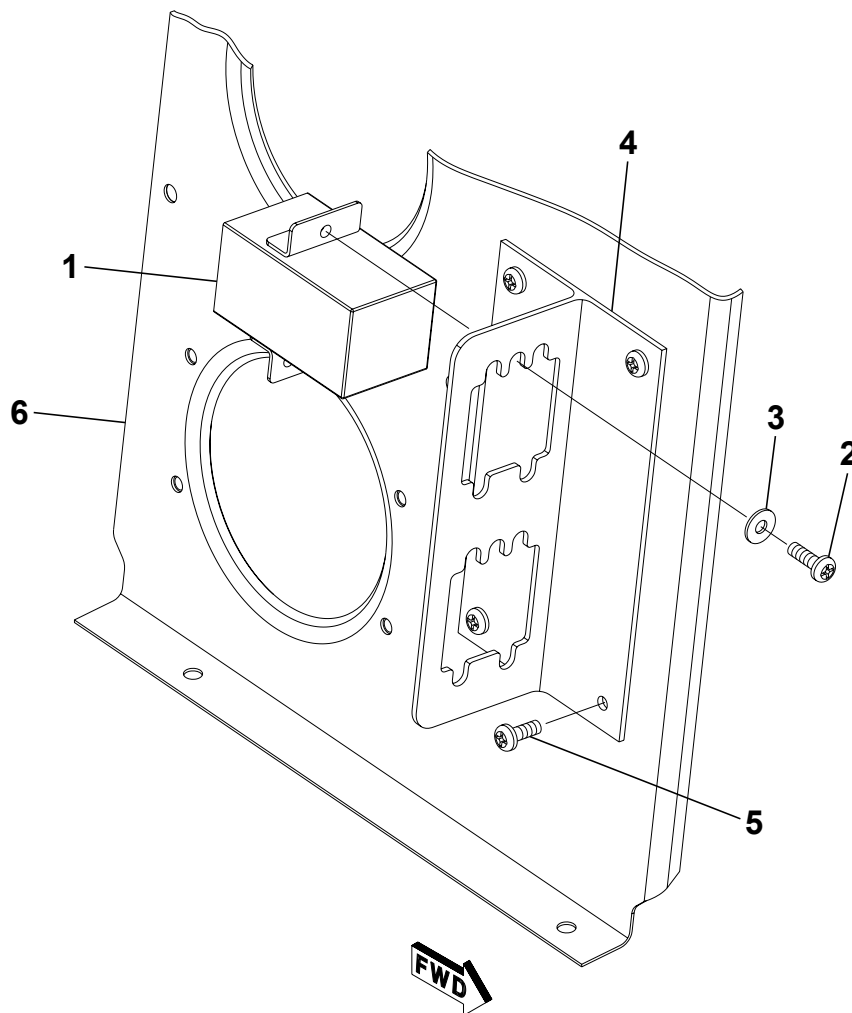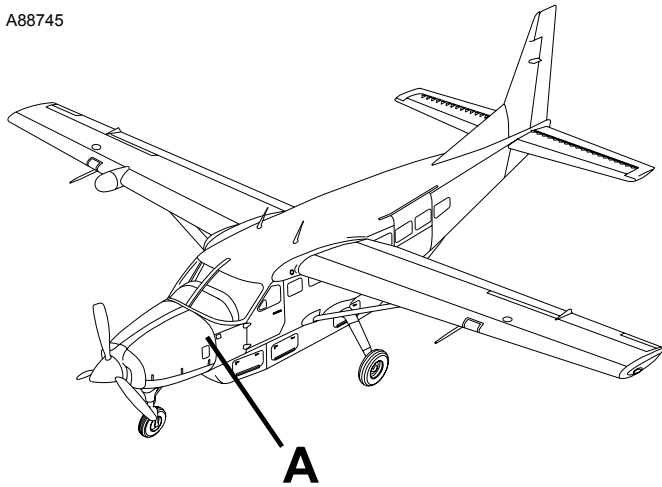

DETAIL A

FUEL PUMP RELAY INSTALLATION
Figure 01. (Sheet 1)

2610T7004
A2614T1477

Figure 01
Page 2
24-51-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL PUMP RELAY INSTALLATION
AIRPLANES (208B) 5000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	76733-20	.	RELAY - TIME DELAY KC004					2X920	(208B) 5000 & ON	01
			ATTACHING PARTS							
2	MS35206-229	.	SCREW						(208B) 5000 & ON	03
3	NAS1149FN632P	.	WASHER					4W953	(208B) 5000 & ON	03
			--*--							
4	2613504-2	.	RELAY BRACKET						(208B) 5000 & ON	01
			ATTACHING PARTS							
5	MS35206-228	.	SCREW					80205	(208B) 5000 & ON	04
			--*--							
6		.	PLATE ASSEMBLY							RF
			REFER TO 25-70-00 FIGURE 01							
- 7	2677106-4	.	WBA - DELAY RELAY SMASS JC095						(208B) 5000 & ON	01
- ITEM NOT ILLUSTRATED										



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

24-51-00

P3 FLOW CONTROL VALVE RELAY INSTALLATION
AIRPLANES (208B) 5000 & ON

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

A91987

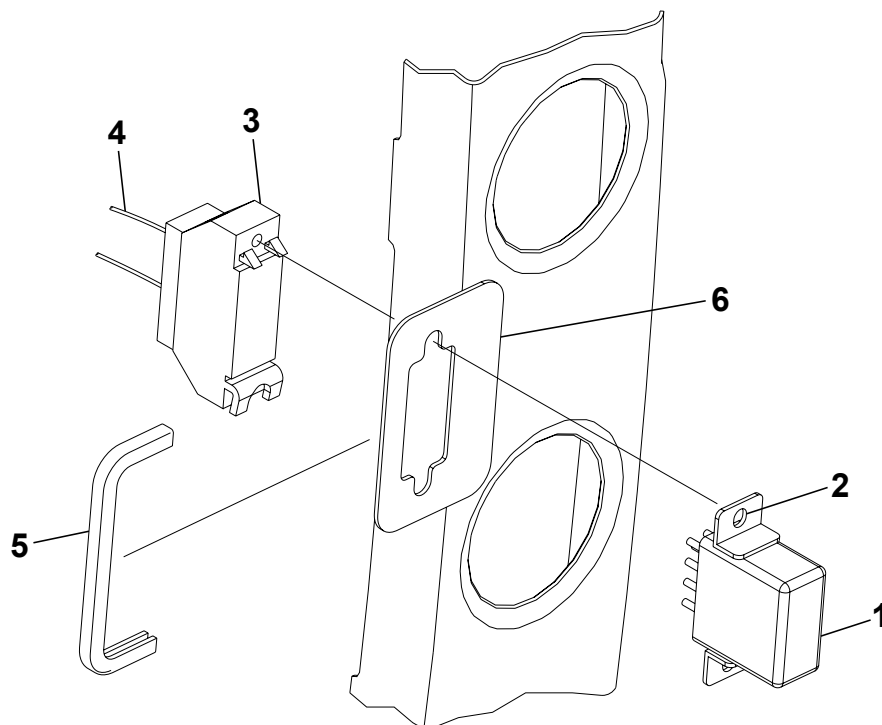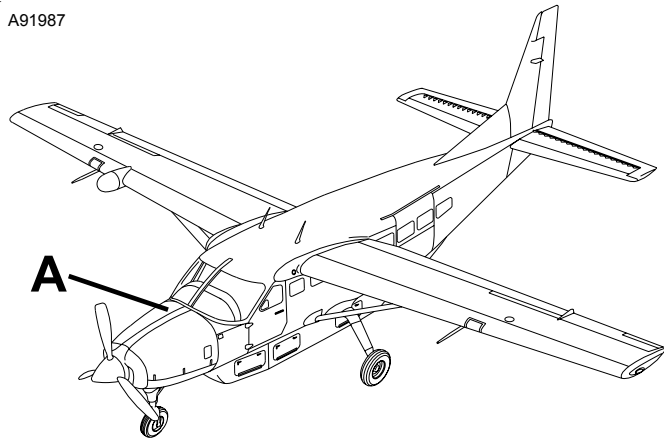

DETAIL A

P3 FLOW CONTROL VALVE RELAY INSTALLATION
Figure 02. (Sheet 1)

2610T7004
A2618T1483

Figure 02
Page 2
24-51-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

P3 FLOW CONTROL VALVE RELAY INSTALLATION

AIRPLANES (208B) 5000 & ON

		NOMENCLATURE									UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	M83536/9-024	.	RELAY - AND M83536/9-024M ALTERNATE SPARE (INTERCHANGEABLE WITH): M83536/9-024L M83536/9-024M ALTERNATE SPARE (PERMISSIBLE TO ALSO USE): M83536/10-024M						2X920	(208B) 5000 & ON	01
- 1A	M83536/9-024L	.	RELAY - AND M83536/9-024M ALTERNATE SPARE (INTERCHANGEABLE WITH): M83536/9-024 M83536/9-024M ALTERNATE SPARE (PERMISSIBLE TO ALSO USE): M83536/10-024M							(208B) 5000 & ON	01
- 1B	M83536/9-024M	.	RELAY ALTERNATE SPARE (INTERCHANGEABLE WITH): M83536/9-024 M83536/9-024L ALTERNATE SPARE (PERMISSIBLE TO ALSO USE): S4627-1							(208B) 5000 & ON	01
- 1C	M83536/10-024M	.	RELAY							(208B) 5000 & ON	01
- 1D	S4627-1	.	RELAY ATTACHING PARTS						7EK50	(208B) 5000 & ON	01
2	450040150	.	JRS HARDWARE PACKAGE						58982	(208B) 5000 & ON	02
			--*--								
3	JRS200300	.	RELAY SOCKET						58982	(208B) 5000 & ON	01
4	2697381-2	.	WBA - BLEED AIR RELAY-SMASSY							(208B) 5000 - 5088	01
- 4A	2677014-5	.	WBA - P3 VALVE RELAY-SMASSY							(208B) 5089 & ON	01
5	S1050-1-3.40	.	GROMMET							(208B) 5000 & ON	01
6	8718134-3	.	BRACKET							(208B) 5000 & ON	01
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG



24-52-01

AUTOPILOT CIRCUIT BREAKERS


AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A972

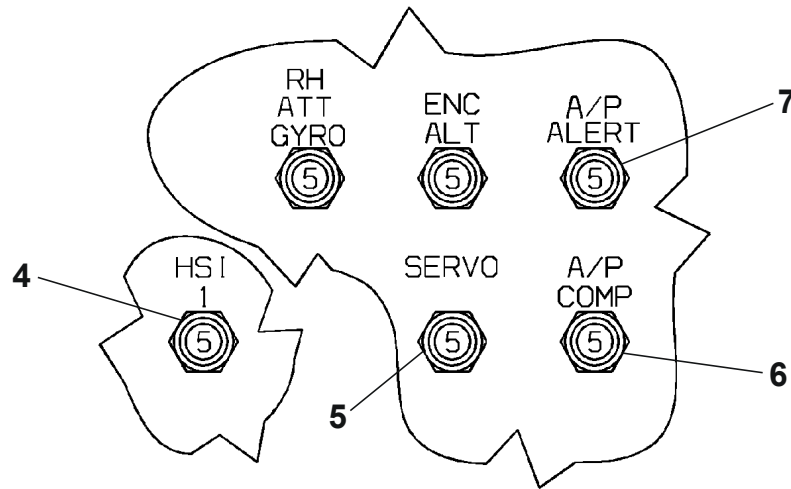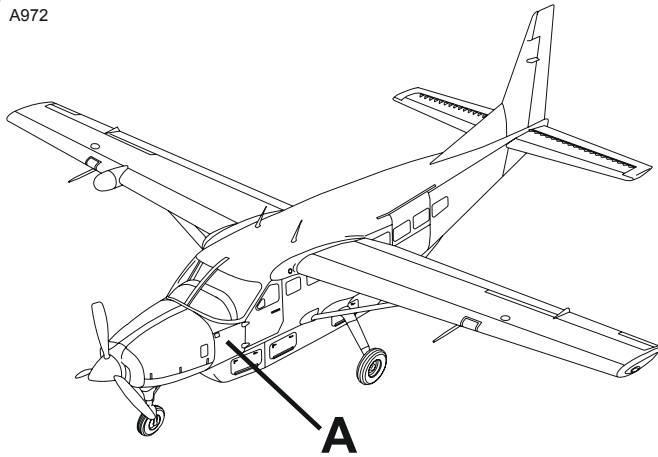

DETAIL A
 (TYPE KFC 225)

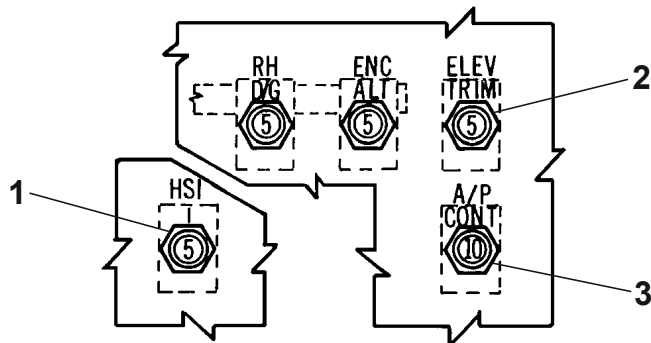

DETAIL A
 (TYPE KC 191 AND KC 192)

AUTOPILOT CIRCUIT BREAKERS
Figure 01. (Sheet 1)

2610T7004
 A2618R1241
 A2618R1059

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

AUTOPILOT CIRCUIT BREAKERS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	S1232-505	.							(208) 0001 & ON (208B) 0001 & ON	01
2	S1232-505	.							(208) 0001 & ON (208B) 0001 & ON	01
3	S1232-510	.							(208) 0001 & ON (208B) 0001 & ON	01
4	S1232-505	.							(208) 0001 & ON (208B) 0001 & ON	01
5	S1232-505	.							(208) 0001 & ON (208B) 0001 & ON	01
6	S1232-505	.							(208) 0001 & ON (208B) 0001 & ON	01
7	S1232-505	.							(208) 0001 & ON (208B) 0001 & ON	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG


24-52-03

**AVIONICS CIRCUIT BREAKER PANEL INSTALLATION -
USED WITH SPERRY 300 AND 400 SERIES RADIOS AND
KING RADIOS**

AIRPLANES (208) 0001 THRU 0145

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24253

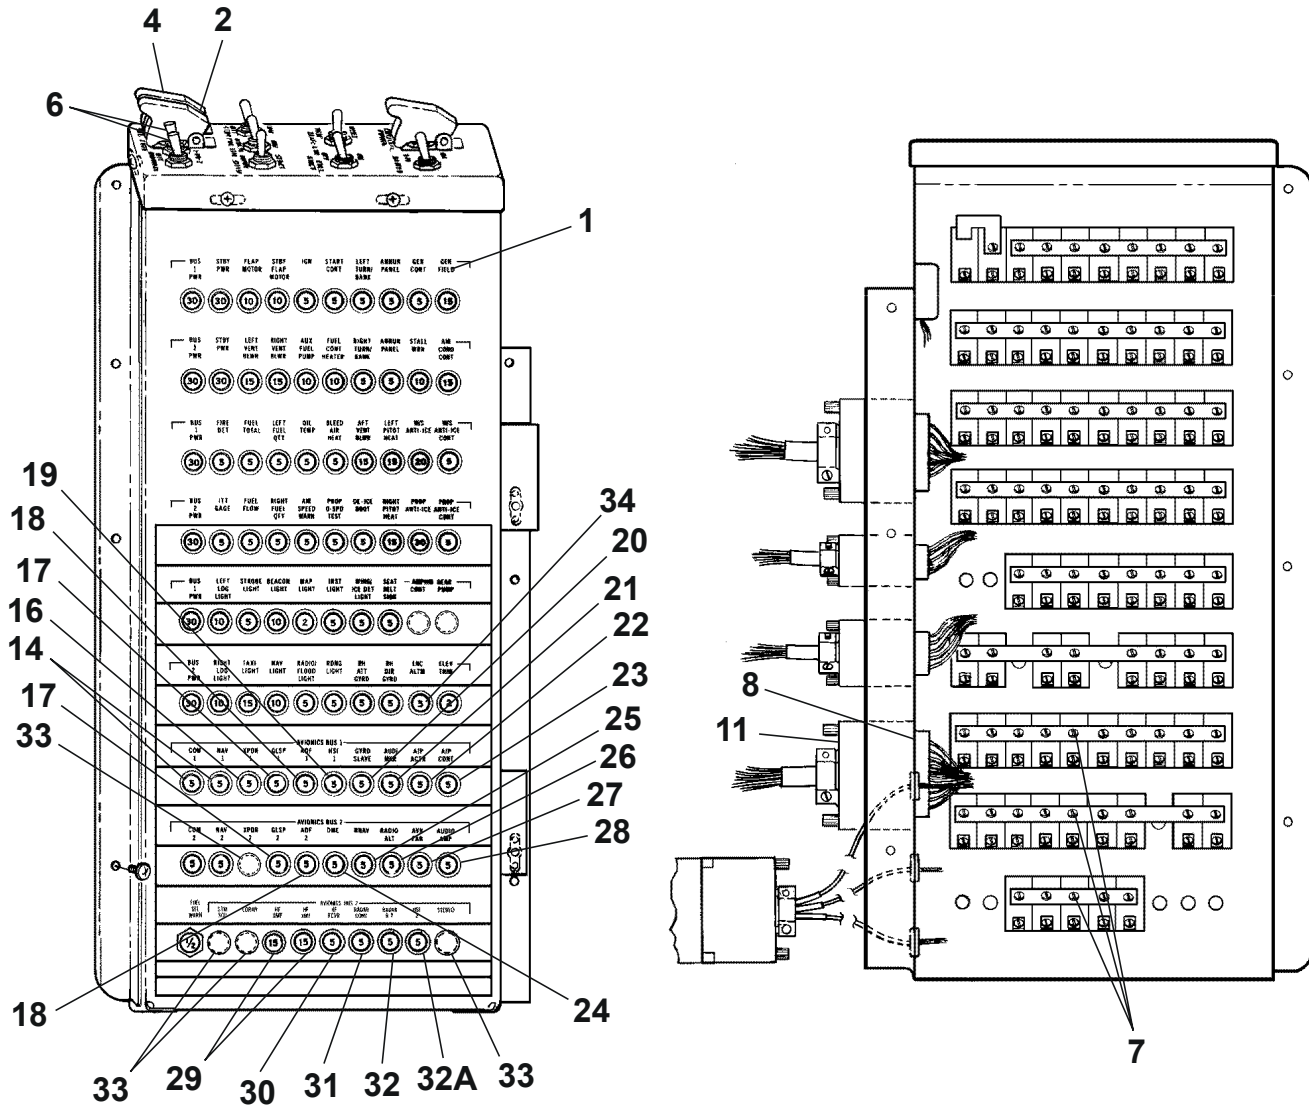

**AVIONICS CIRCUIT BREAKER PANEL INSTALLATION - USED WITH SPERRY 300 AND 400 SERIES
 RADIOS AND KING RADIOS**
 Figure 01. (Sheet 1)

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

**AVIONICS CIRCUIT BREAKER PANEL INSTALLATION - USED WITH SPERRY 300 AND 400 SERIES
RADIOS AND KING RADIOS
AIRPLANES (208) 0001 THRU 0145**

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1		. PLACARDS - CIRCUIT BREAKER PANEL REFER TO 11-N-31 FIGURE 01								RF
2	MS25224-1	. .							96906	(208) 0001 - 0145 01
- 3	CM3589-20	. .								(208) 0001 - 0145 01
4	MS25224-1	. .							96906	(208) 0001 - 0145 01
- 5	CM3589-20	. .								(208) 0001 - 0145 01
6	CM3589-20	. .								(208) 0001 - 0145 02
7	2670004-1	. .								(208) 0001 - 0145 03
8	201302-1	. .							00779	(208) 0001 - 0145 01
- 9	S1371-8	. . .								(208) 0001 - 0145 02
- 10	S1371-6	. . .								(208) 0001 - 0145 02
11	202135-2	. .							00779	(208) 0001 - 0145 01
- 12	200871-2	. . .							00779	(208) 0001 - 0145 02
- 12B	200867-2	. . .							00779	(208) 0001 - 0145 02
- 13	2021164-1	. . .								(208) 0001 - 0145 01
14	S1232-505	. .								(208) 0001 - 0145 01
		. CIRCUIT BREAKER - SPERRY NAV/COMS TYPE RT-385A OR RT-485B								
		NOTE: QUANTITIES ARE DOUBLED WHEN SECOND INSTRUMENT IS INSTALLED.								
- 15	S1232-510	. .								(208) 0001 - 0145 01
16	S1232-505	. .								(208) 0001 - 0145 01
		. CIRCUIT BREAKER - 400 TRANSPONDER TYPE RT-459A OR KING TYPE KT-79								
17	S1232-505	. .								(208) 0001 - 0145 01
		. CIRCUIT BREAKER - 400 GLIDE SLOPE TYPE R-443B								
		NOTE: QUANTITIES ARE DOUBLED WHEN SECOND INSTRUMENT IS INSTALLED.								
18	S1232-505	. .								(208) 0001 - 0145 01
		. CIRCUIT BREAKER - 300 AND 400 ADFS TYPE R-546E AND R-446A OR KING TYPE KR-87								
		NOTE: QUANTITIES ARE DOUBLED WHEN SECOND INSTRUMENT IS INSTALLED.								
19	S1232-505	. .								(208) 0001 - 0145 01
20	S1232-505	. .								(208) 0001 - 0145 01
21	S1232-505	. .								(208) 0001 - 0145 01
22	S1232-505	. .								(208) 0001 - 0145 01
23	S1232-515	. .								(208) 0001 - 0145 01
24	S1232-505	. .								(208) 0001 - 0145 01
		. CIRCUIT BREAKER - 300 AND 400 SERIES DME TYPE R-377A AND R-477A OR KING DME TYPE KN-63								
25	S1232-505	. .								(208) 0001 - 0145 01
		. CIRCUIT BREAKER - 400 RNAV TYPE RN-479A OR KING AREA NAV SYSTEM TYPE KSN-81								
26	S1232-505	. .								(208) 0001 - 0145 01
		. CIRCUIT BREAKER - RADIO ALTIMETER SPERRY 800 TYPE AA-801A OR KING TYPE KRA-10A								
27	S1232-505	. .								(208) 0001 - 0145 01
		. CIRCUIT BREAKER - AVIONICS FAN SAU-90 OR SMA-90 OR KING TYPE KMA-24								
28	S1232-505	. .								(208) 0001 - 0145 01
29	S1232-515	. .								(208) 0001 - 0145 01
30	S1232-505	. .								(208) 0001 - 0145 01
31	S1232-505	. .								(208) 0001 - 0145 01
		. CIRCUIT BREAKER - RADAR UNIT BENDIX TYPE RDS-82 OR RDS-81 OR KING TYPE KWX-56								

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

**AVIONICS CIRCUIT BREAKER PANEL INSTALLATION - USED WITH SPERRY 300 AND 400 SERIES
 RADIOS AND KING RADIOS**

AIRPLANES (208) 0001 THRU 0145

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
32	S1232-505	.	.						(208) 0001 - 0145	01
32A	S1232-505	.	.						(208) 0001 - 0145	01
33	S2446M6W	.	.						(208) 0001 - 0145	AR
34	S1232-505	.	.						(208) 0001 - 0145	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

24-52-04

**AVIONICS CIRCUIT BREAKER PANEL INSTALLATION -
USED WITH KING RADIOS ONLY**

**AIRPLANES (208) 0146 THRU 0499 AND AIRPLANES (208B) 0180 THRU
1999**

A24254



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

AVIONICS CIRCUIT BREAKER PANEL INSTALLATION - USED WITH KING RADIOS ONLY

AIRPLANES (208) 0146 THRU 0499 AND AIRPLANES (208B) 0180 THRU 1999

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1		.	.	.	.	.	.	.		RF	
		PLACARDS - CIRCUIT BREAKER PANEL REFER TO 11-N-31 FIGURE 01									
2	MS25224-1	.	.	.	.	.	.	.	96906	(208) 0146 - 0499 (208B) 0180 - 1999	01
- 2A	CM3589-20	.	.	.	.	.	.	.		(208) 0146 - 0499 (208B) 0180 - 1999	01
3	MS25224-1	.	.	.	.	.	.	.	96906	(208) 0146 - 0499 (208B) 0180 - 1999	01
- 3A	CM3589-20	.	.	.	.	.	.	.		(208) 0146 - 0499 (208B) 0180 - 1999	01
4	CM3589-30	.	.	.	.	.	.	.		(208) 0146 - 0262 (208B) 0001 - 0607	NP
		CIRCUIT BREAKER - AVIONICS ON/OFF SWITCH FOR SPARES ORDER (MUST REPLACE WITH): 7270-5-30									
- 4A	7270-5-30	.	.	.	.	.	.	.	82647	(208) 0263 & ON (208B) 0608 & ON	02
		CIRCUIT BREAKER - AVIONICS ON/OFF SWITCH SPARES REPLACEMENT FOR: CM3589-30									
5	2670004-1	.	.	.	.	.	.	.		(208) 0146 - 0499 (208B) 0180 - 1999	03
6	201302-1	.	.	.	.	.	.	.	00779	(208) 0146 - 0499 (208B) 0180 - 1999	01
		CONNECTOR - CIRCUIT BREAKER									
- 6A	S1371-8	.	.	.	.	.	.	.		(208) 0146 - 0499 (208B) 0180 - 1999	02
		JACK SCREW - UPPER									
- 6B	S1371-6	.	.	.	.	.	.	.		(208) 0146 - 0499 (208B) 0180 - 1999	02
		JACK SCREW - LOWER									
7	202135-2	.	.	.	.	.	.	.	00779	(208) 0146 - 0499 (208B) 0180 - 1999	01
		CONNECTOR - INSTRUMENTS									
- 7A	200871-1	.	.	.	.	.	.	.	00779	(208) 0146 - 0499 (208B) 0180 - 1999	02
		JACK SCREW - MALE									
- 7B	200867-2	.	.	.	.	.	.	.	00779	(208) 0146 - 0499 (208B) 0180 - 1999	02
		JACK SCREW - FEMALE									
- 7C	202164-1	.	.	.	.	.	.	.		(208) 0146 - 0499 (208B) 0180 - 1999	01
		LONG SHIELD									
8	S2446M6W	.	.	.	.	.	.	.		(208) 0146 - 0499 (208B) 0180 - 1999	AR
		PLUG - INSTALL WHEN RADIOS ARE NOT INSTALLED									
9	S1232-505	.	.	.	.	.	.	.		(208) 0146 - 0499 (208B) 0180 - 1999	01
		CIRCUIT BREAKER - LORAN-C TYPE R-40									
10	S1232-515	.	.	.	.	.	.	.		(208) 0146 - 0499 (208B) 0180 - 1999	02
		CIRCUIT BREAKER - HF TRANSMITTER TYPE KHF-950									
11	S1232-505	.	.	.	.	.	.	.		(208) 0146 - 0499 (208B) 0180 - 1999	01
		CIRCUIT BREAKER - NAV/COM TYPE KX-165									
		NOTE: QUANTITIES ARE DOUBLE WHEN SECOND INSTRUMENT IS INSTALLED.									
12	S1232-505	.	.	.	.	.	.	.		(208) 0146 - 0499 (208B) 0180 - 1999	01
		CIRCUIT BREAKER - TRANSPONDER									
13	S1232-505	.	.	.	.	.	.	.		(208) 0146 - 0499 (208B) 0180 - 1999	01
		CIRCUIT BREAKER - ADF TYPE KR-87									
14	S1232-505	.	.	.	.	.	.	.		(208) 0146 - 0499 (208B) 0180 - 1999	01
		CIRCUIT BREAKER - RADAR R/T BENDIX TYPE RDS-81 OR KING TYPE KWX-56									
15	S1232-505	.	.	.	.	.	.	.		(208) 0146 - 0499 (208B) 0180 - 1999	01
		CIRCUIT BREAKER - RADAR UNIT BENDIX TYPE SRDS-81 OR KING TYPE KWX-56									

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

AVIONICS CIRCUIT BREAKER PANEL INSTALLATION - USED WITH KING RADIOS ONLY

AIRPLANES (208) 0146 THRU 0499 AND AIRPLANES (208B) 0180 THRU 1999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
16	S1232-505	.	.	.	.	.	.	.	CIRCUIT BREAKER - HF RECEIVER TYPE KHF-950 (208) 0146 - 0499 (208B) 0180 - 1999	01
17	S1232-505	.	.	.	.	.	.	.	CIRCUIT BREAKER - AUDIO AMP TYPE KMA-24 (208) 0146 - 0499 (208B) 0180 - 1999	01
18	S1232-505	.	.	.	.	.	.	.	CIRCUIT BREAKER - AVIONICS FAN (208) 0146 - 0499 (208B) 0180 - 1999	01
19	S1232-505	.	.	.	.	.	.	.	CIRCUIT BREAKER - RADIO ALTIMETER TYPE KRA-10A (208) 0146 - 0499 (208B) 0180 - 1999	01
20	S1232-505	.	.	.	.	.	.	.	CIRCUIT BREAKER - RNAV TYPE KSN-81 (208) 0146 - 0499 (208B) 0180 - 1999	01
21	S1232-505	.	.	.	.	.	.	.	CIRCUIT BREAKER - DME TYPE KN-63 (208) 0146 - 0499 (208B) 0180 - 1999	01
22	S1232-510	.	.	.	.	.	.	.	CIRCUIT BREAKER - AUTOPILOT CONTROLLER TYPE KAP-150 (208) 0146 - 0499 (208B) 0180 - 1999	01
23	S1232-505	.	.	.	.	.	.	.	CIRCUIT BREAKER - AUD/MKR PART OF KING KMA-24 (208) 0146 - 0499 (208B) 0180 - 1999	01
24	S1232-505	.	.	.	.	.	.	.	CIRCUIT BREAKER - HSI 1 TYPE KI-525A USED WITH KING KAP-150 AUTOPILOT (208) 0146 - 0499 (208B) 0180 - 1999	01
25	S1232-505	.	.	.	.	.	.	.	CIRCUIT BREAKER - ENCODING ALTIMETER TYPE KEA-130 (208) 0146 - 0499 (208B) 0180 - 1999	01
- 25A	S1232-505	.	.	.	.	.	.	.	CIRCUIT BREAKER - USED WITH KT73 KING TRANSPONDER (208) 0146 - 0499 (208B) 0180 - 1999	02

- ITEM NOT ILLUSTRATED



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

24-52-05


AVIONICS CIRCUIT BREAKER PANEL INSTALLATION
AIRPLANES (208) 0500 & ON AND AIRPLANES (208B) 2000 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


A72145

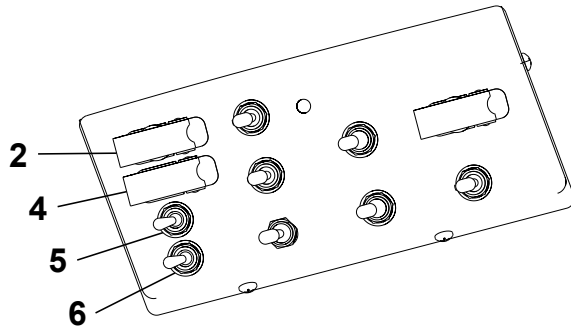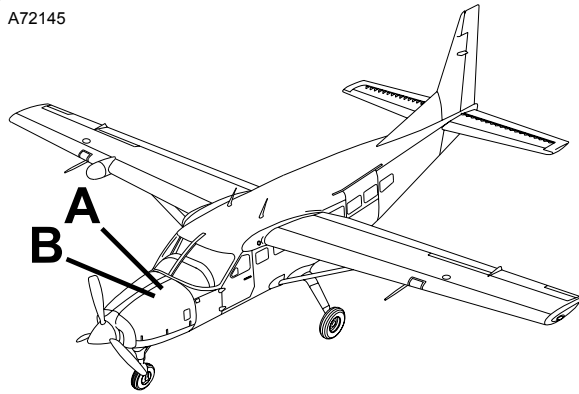

VIEW A-A

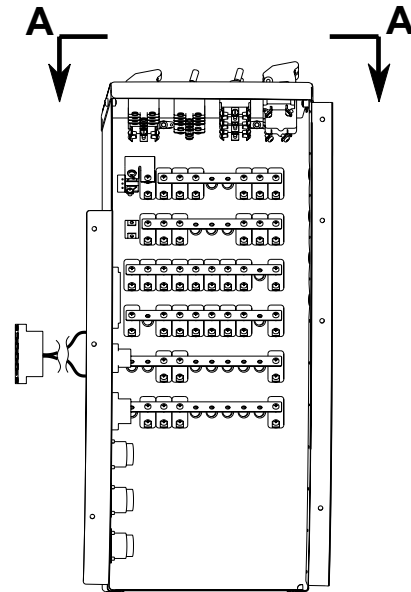

DETAIL A

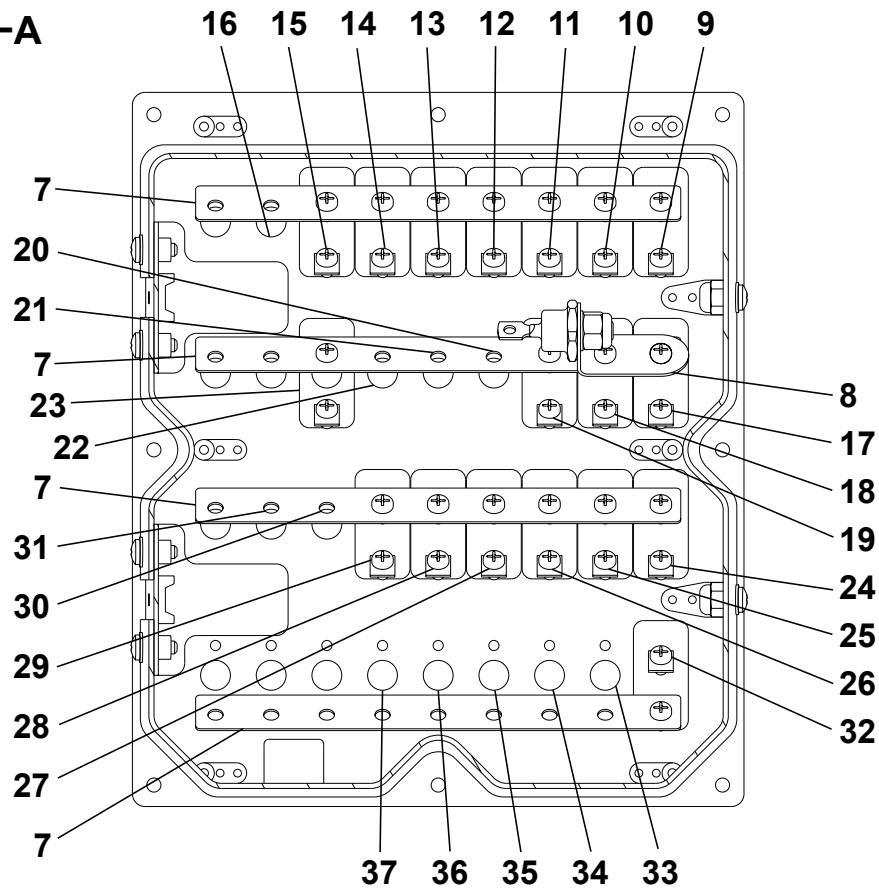

DETAIL B

AVIONICS CIRCUIT BREAKER PANEL INSTALLATION
Figure 01. (Sheet 1)

2610T7005
 A2618T1426
 B2618T1426
 AA2618T1426

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

AVIONICS CIRCUIT BREAKER PANEL INSTALLATION AIRPLANES (208) 0500 & ON AND AIRPLANES (208B) 2000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 1	7270-5-30	.	CIRCUIT BREAKER - AVIONICS STANDBY POWER SC013					82647	(208) 0500 & ON (208B) 2000 & ON	01
2	MS25224-1	.	GUARD - AVIONICS STANDBY POWER SC013					96906	(208) 0500 & ON (208B) 2000 & ON	01
- 3	CM3589-20	.	CIRCUIT BREAKER - AVIONICS BUS TIE SC017						(208) 0500 & ON (208B) 2000 & ON	01
4	MS25224-1	.	GUARD - AVIONICS BUS TIE SC017					96906	(208) 0500 & ON (208B) 2000 & ON	01
5	7270-5-30	.	CIRCUIT BREAKER - AVIONICS 1 SC016					82647	(208) 0500 & ON (208B) 2000 & ON	01
6	7270-5-30	.	CIRCUIT BREAKER - AVIONICS 2 SC018					82647	(208) 0500 & ON (208B) 2000 & ON	01
7	2670004-1	.	BUS BAR						(208) 0500 & ON (208B) 2000 & ON	04
8	2670154-1	.	BUS BAR						(208) 0500 & ON (208B) 2000 & ON	01
9	S1232-507	.	CIRCUIT BREAKER 7.5 AMP - COMM 1 HI011						(208) 0500 & ON (208B) 2000 & ON	01
10	S1232-505	.	CIRCUIT BREAKER 5 AMP - NAV 1 HI012						(208) 0500 & ON (208B) 2000 & ON	01
11	S1232-505	.	CIRCUIT BREAKER 5 AMP - ENG INTFC HI013						(208) 0500 & ON (208B) 2000 & ON	01
12	S1232-505	.	CIRCUIT BREAKER 5 AMP - ADC 1 HI014						(208) 0500 & ON (208B) 2000 & ON	01
13	S1232-505	.	CIRCUIT BREAKER 5 AMP - AHRS 1 HI015						(208) 0500 & ON (208B) 2000 & ON	01
14	S1232-505	.	CIRCUIT BREAKER 5 AMP - PFD 1 HI016						(208) 0500 & ON (208B) 2000 & ON	01
15	S1232-505	.	CIRCUIT BREAKER 5 AMP - XPDR 1 HI017						(208) 0500 & ON (208B) 2000 & ON	01
16	S1232-502	.	CIRCUIT BREAKER - ADF 1 OPT HI018						(208) 0500 & ON (208B) 2000 & ON	01
17	S1232-505	.	CIRCUIT BREAKER 5 AMP - AUDIO HI021						(208) 0500 & ON (208B) 2000 & ON	01
18	S1232-505	.	CIRCUIT BREAKER 5 AMP - A/P SERVOS & A/P DISC HI022						(208) 0500 & ON (208B) 2000 & ON	01
19	S1232-505	.	CIRCUIT BREAKER 5 AMP - A/P CONT HI023						(208) 0500 & ON (208B) 2000 & ON	01
20	S1232-505	.	CIRCUIT BREAKER 5 AMP - ELT NAV INTFC OPT HI024						(208) 0500 & ON (208B) 2000 & ON	01
21	S1232-505	.	CIRCUIT BREAKER 5 AMP - RADIO ALT OPT HI025 * AIRPLANES (208) 0500 & ON INCORPORATING CAB-34-06 * AIRPLANES (208B) 2000 & ON INCORPORATING CAB-34-06						(208) *0500 & ON (208B) *2000 & ON	01
22		.	SPARE - RADAR R/T OPT HI026							RF
23	S1232-502	.	CIRCUIT BREAKER 2 AMP - DCU HI027 * AIRPLANES (208B) 5000 THRU 5500 INCORPORATING CAB-31-01						(208) 0500 - 0650 (208B) 2000 - 5500 (208B) *5000 - 5500	01
24	S1232-507	.	CIRCUIT BREAKER 7.5 AMP - COM 2 HI031						(208) 0500 & ON (208B) 2000 & ON	01
25	S1232-505	.	CIRCUIT BREAKER 5 AMP - NAV 2 HI032						(208) 0500 & ON (208B) 2000 & ON	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

AVIONICS CIRCUIT BREAKER PANEL INSTALLATION

AIRPLANES (208) 0500 & ON AND AIRPLANES (208B) 2000 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
26	S1232-505	.							CIRCUIT BREAKER 5 AMP - MFD HI033	(208) 0500 & ON (208B) 2000 & ON	01
27	S1232-505	.							CIRCUIT BREAKER 5 AMP - ADC 2 HI034	(208) 0500 & ON (208B) 2000 & ON	01
28	S1232-505	.							CIRCUIT BREAKER 5 AMP - AHRS 2 HI035	(208) 0500 & ON (208B) 2000 & ON	01
29	S1232-505	.							CIRCUIT BREAKER 5 AMP - PFD 2 HI036	(208) 0500 & ON (208B) 2000 & ON	01
30		.							SPARE - XPDR 2 OPT HI037		RF
31		.							SPARE - ADF 2 OPT HI038		RF
- 31A		.							SPARE - AUDIO 2 HI038		RF
- 31B	S1232-505	.							CIRCUIT BREAKER - AUDIO 2 HI038	(208) 0651 & ON (208B) 5501 & ON	01
32	S1232-505	.							CIRCUIT BREAKER 5 AMP - DME HI041	(208) 0500 & ON (208B) 2000 & ON	01
33		.							SPARE - TAS OPT HI042		RF
34		.							SPARE - XM-DATA LINK OPT HI043		RF
35		.							SPARE - STM SCOPE OPT HI044		RF
36		.							SPARE - HF RCVR OPT HI045		RF
37		.							SPARE - HF AMP OPT HI046		RF
- ITEM NOT ILLUSTRATED											