

CHAPTER

28

FUEL

RECORD OF TEMPORARY REVISIONS

[illegible]

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

CHAPTER/ SECTION/ SUBJECT	START PAGE OR FIGURE	NUMBER OF PAGES	DATE
28 - TITLE		1	
28 - LIST OF EFFECTIVE PAGES	Page 1	1	Nov 29, 2022
28 - TABLE OF CONTENTS	Page 1	1	Nov 29, 2022
28-10-01	Figure 01	3	Nov 4, 2021
28-10-03	Figure 01	13	Nov 29, 2022
28-21-00	Figure 01	15	Nov 29, 2022
28-21-00	Figure 02	17	Nov 29, 2022
28-21-00	Figure 03	4	Nov 4, 2021
28-22-00	Figure 01	12	Nov 29, 2022
28-22-01	Figure 01	4	Nov 29, 2022
28-23-00	Figure 01	12	Nov 29, 2022
28-23-01	Figure 01	5	Nov 4, 2021
28-40-00	Figure 01	3	Nov 4, 2021
28-41-00	Figure 01	5	Nov 4, 2021
28-41-00	Figure 02	4	Nov 4, 2021
28-42-01	Figure 01	4	Nov 29, 2022

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

<u>SUBJECT</u>	<u>LOCATION</u>	<u>EFFECTIVITY</u>	
		<u>START</u>	<u>END</u>
FUEL FILLER CAP INSTALLATION	28-10-01 Figure 01	(208) 0001 (208B) 0001	& ON & ON
FUEL VENTILATION SYSTEM	28-10-03 Figure 01	(208) 0001 (208B) 0001	& ON & ON
FUEL DISTRIBUTION SYSTEM	28-21-00 Figure 01	(208) 0001	& ON
FUEL DISTRIBUTION SYSTEM	28-21-00 Figure 02	(208B) 0001	& ON
FUEL ECOLOGY TANK SYSTEM	28-21-00 Figure 03	(208B) 5000	& ON
FUEL RESERVOIR COMPONENTS	28-22-00 Figure 01	(208) 0001 (208B) 0001	& ON & ON
TKS FUEL SUMP INSTALLATION - FAIRING	28-22-01 Figure 01	(208) 0518 (208B) 2000	& ON & ON
FUEL SELECTOR CONTROLS	28-23-00 Figure 01	(208) 0001 (208B) 0001	& ON & ON
FUEL SHUTOFF VALVES	28-23-01 Figure 01	(208) 0001 (208B) 0001	& ON & ON
SIGNAL CONDITIONER INSTALLATION	28-40-00 Figure 01	(208) 0500 (208B) 2000	0650 5500
FUEL INDICATING SYSTEM	28-41-00 Figure 01	(208) 0001 (208B) 0001	& ON & ON
FUEL SENSOR	28-41-00 Figure 02	(208) 0500 (208B) 2000	& ON & ON
FUEL SELECTORS OFF WARNING SYSTEM	28-42-01 Figure 01	(208) 0106 (208) 0001 (208B) 0001	& ON 0105 & ON

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG



28-10-01

FUEL FILLER CAP INSTALLATION


AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24944

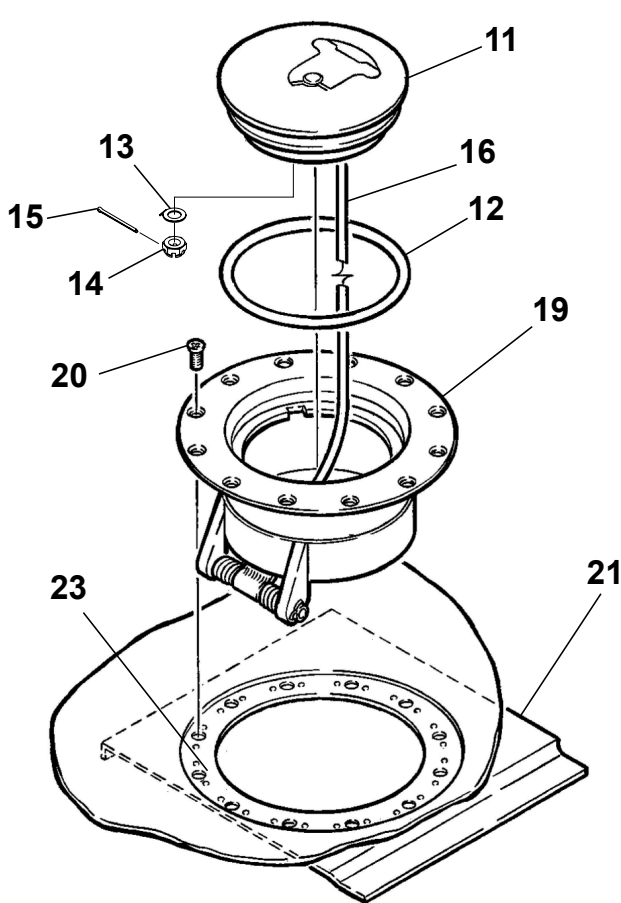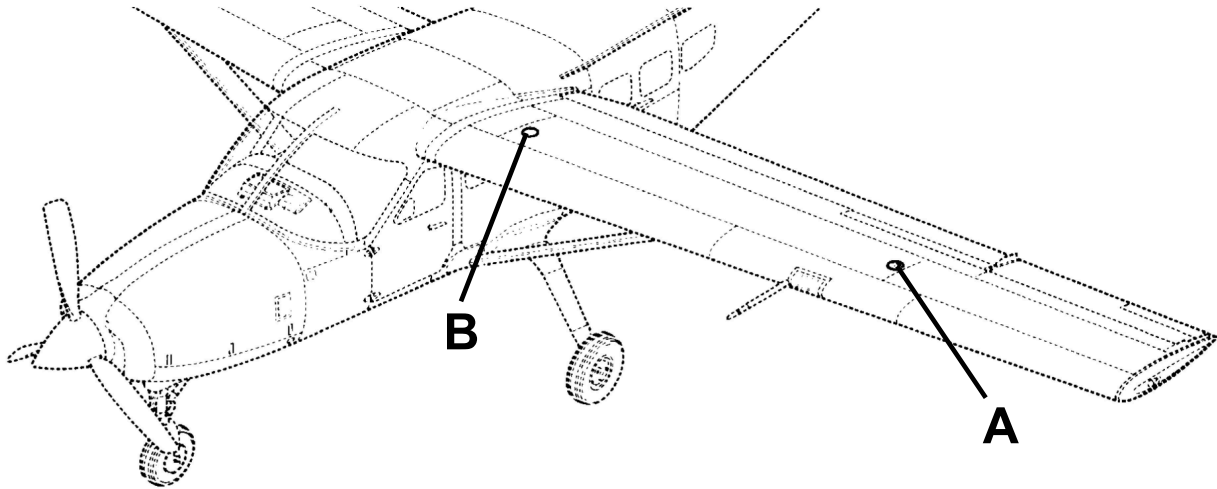

DETAIL B

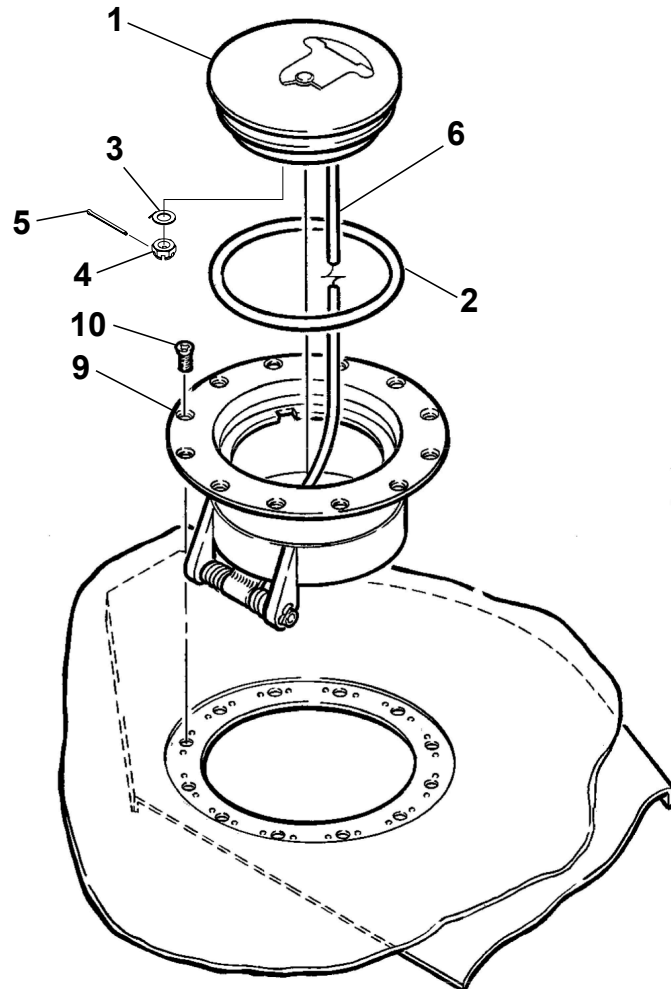

DETAIL A

FUEL FILLER CAP INSTALLATION
Figure 01. (Sheet 1)

2626X1012
 A26261005
 B26261006

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL FILLER CAP INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	C156005-0107	.							(208) 0001 & ON (208B) 0001 & ON	02
2	MS29513-338	.	.						(208) 0001 & ON (208B) 0001 & ON	02
3	431-140	.	.						(208) 0001 & ON (208B) 0001 & ON	01
4	AN310-4	.	.						(208) 0001 & ON (208B) 0001 & ON	01
5	MS24665-1013	.	.						(208) 0001 & ON (208B) 0001 & ON	01
6	MS27380-3	.							(208) 0001 & ON (208B) 0001 & ON	02
- 7	417-128	.							(208) 0001 & ON (208B) 0001 & ON	01
- 8	MS29513-010	.						91511	(208) 0001 & ON (208B) 0001 & ON	02
9	C156005-0105	.							(208) 0001 & ON (208B) 0001 & ON	02
10	MS24693-C50	.							(208) 0001 & ON (208B) 0001 & ON	12
11	C156005-0107	.							(208) 0014 & ON (208B) 0001 & ON	02
12	MS29513-338	.	.						(208) 0014 & ON (208B) 0001 & ON	02
13	431-140	.	.						(208) 0001 & ON (208B) 0001 & ON	01
14	AN310-4	.	.						(208) 0001 & ON (208B) 0001 & ON	01
15	MS24665-1013	.	.						(208) 0001 & ON (208B) 0001 & ON	01
16	MS27380-3	.							(208) 0014 & ON (208B) 0001 & ON	01
- 17	417-128	.							(208) 0001 & ON (208B) 0001 & ON	01
- 18	MS29513-010	.						91511	(208) 0014 & ON (208B) 0001 & ON	02
19	C156005-0105	.							(208) 0014 & ON (208B) 0001 & ON	02
20	MS24693-C50	.							(208) 0014 & ON (208B) 0001 & ON	12
21	2601091-1	.							(208) 0014 & ON (208B) 0001 & ON	01
- 22	2601091-2	.							(208) 0014 & ON (208B) 0001 & ON	01
23	MS21047L08	.	.						(208) 0014 & ON (208B) 0001 & ON	12

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG


28-10-03

FUEL VENTILATION SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24945

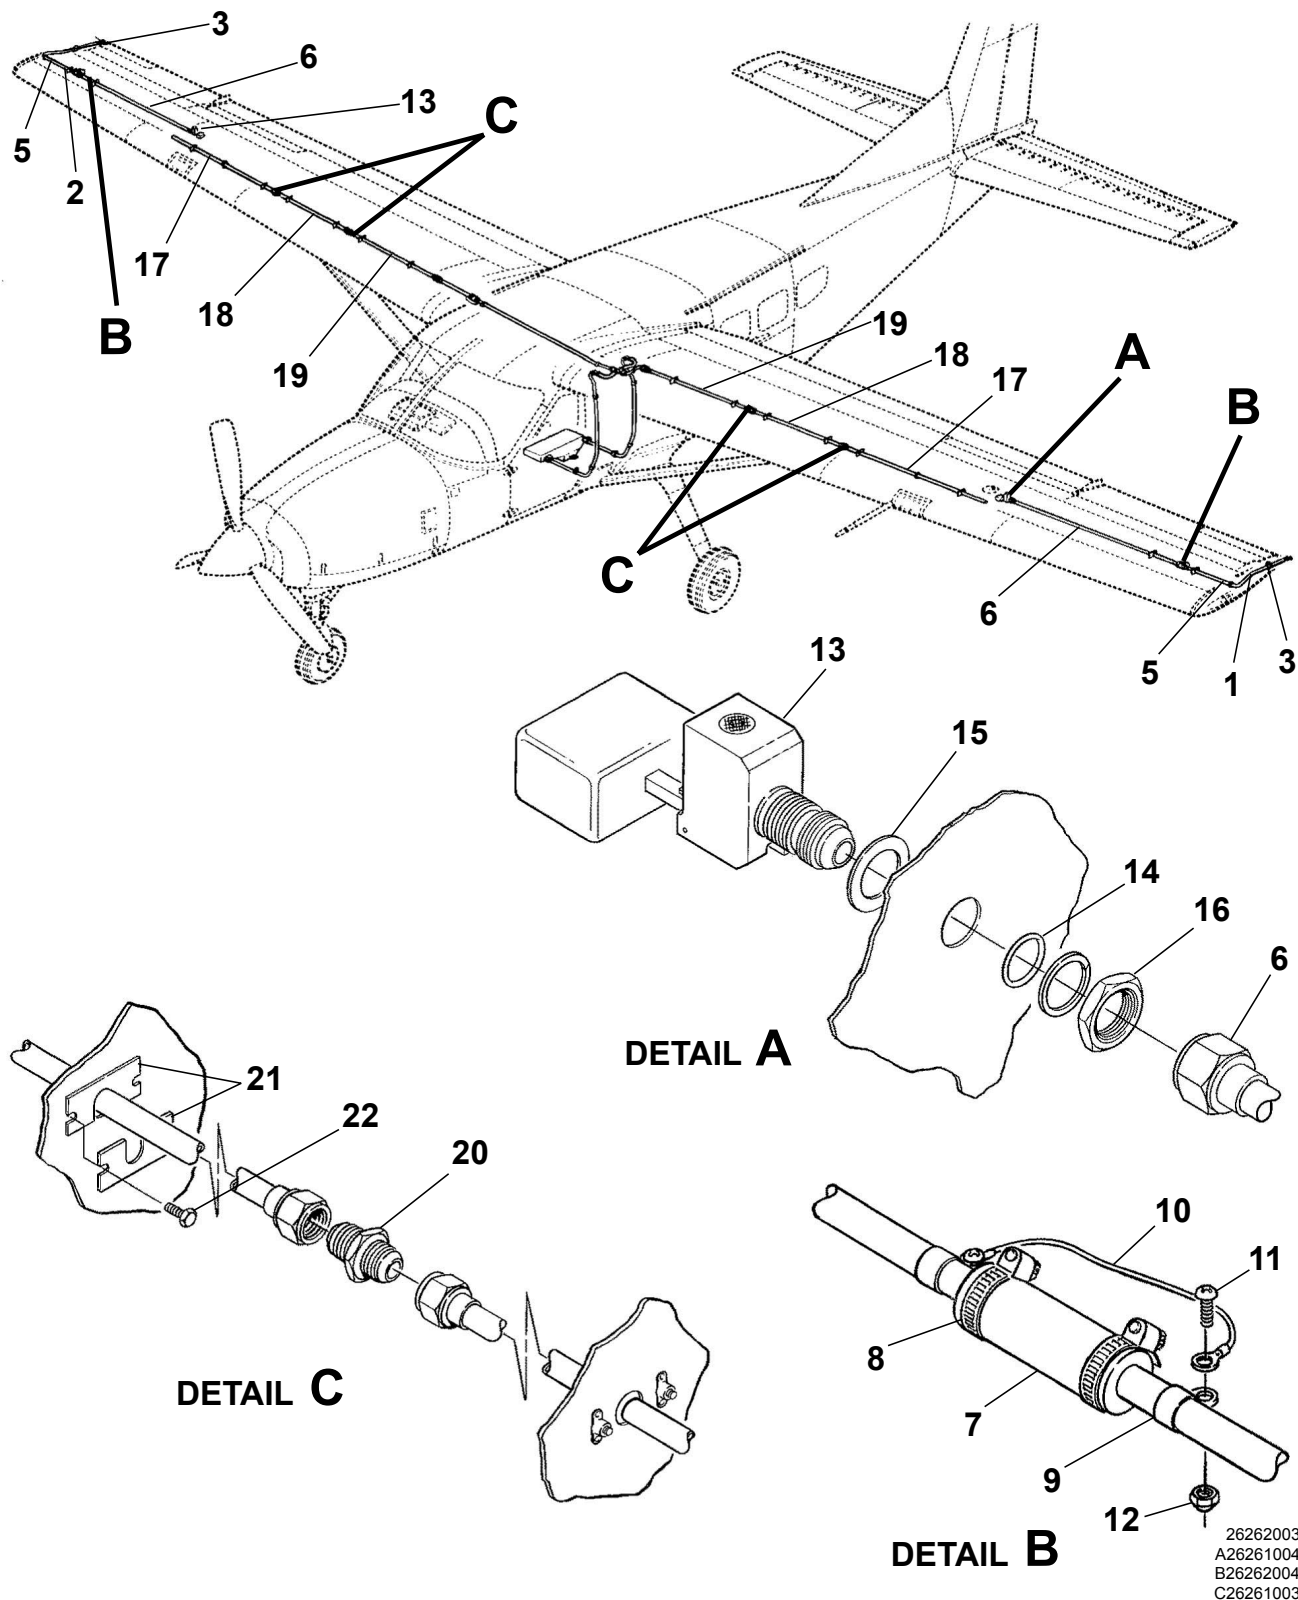

FUEL VENTILATION SYSTEM
 Figure 01. (Sheet 1)

Figure 01
 Page 2
28-10-03 Nov 29, 2022

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL VENTILATION SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	2600101-59	.	LINE - ASSEMBLY LEFT							(208) 0001 & ON (208B) 0001 & ON	01
2	2600101-60	.	LINE - ASSEMBLY RIGHT							(208) 0001 & ON (208B) 0001 & ON	01
			ATTACHING PARTS								
3	AN742D8	.	CLAMP							(208) 0001 & ON (208B) 0001 & ON	01
- 4	MS35206-261	.	SCREW							31211 (208) 0001 & ON (208B) 0001 & ON	01
5	MS35489-15	.	GROMMET							(208) 0001 & ON (208B) 0001 & ON	01
			--*--								
6	2600101-43	.	LINE ASSEMBLY							(208) 0001 & ON (208B) 0001 & ON	02
7	S51-8	.	HOSE - 3.00 INCH LONG BULK ITEM							(208) 0001 & ON (208B) 0001 & ON	02
			ATTACHING PARTS								
8	S2357-3	.	CLAMP							(208) 0001 & ON (208B) 0001 & ON	02
			--*--								
9	AN735D8	.	CLAMP							(208) 0001 & ON (208B) 0001 & ON	04
10	S2876-1BB6	.	WIRE - JUMPER							(208) 0001 & ON (208B) 0001 & ON	02
			ATTACHING PARTS								
11	MS35207-263	.	SCREW							80205 (208) 0001 & ON (208B) 0001 & ON	02
12	MS21044N3	.	NUT							4W953 (208) 0001 & ON (208B) 0001 & ON	02
			--*--								
13	2126001-1	.	VALVE ASSEMBLY - FUEL VENT							(208) 0001 & ON (208B) 0001 & ON	02
			ATTACHING PARTS								
14	MS29512-08	.	O-RING							(208) 0001 & ON (208B) 0001 & ON	01
15	NAS1149C1290R	.	WASHER							(208) 0001 & ON (208B) 0001 & ON	01
16	AN6289D8	.	NUT							(208) 0001 & ON (208B) 0001 & ON	01
			--*--								
17	2600101-46	.	LINE ASSEMBLY							(208) 0001 & ON (208B) 0001 & ON	02
18	2600101-47	.	LINE ASSEMBLY							(208) 0001 & ON (208B) 0001 & ON	02
19	2600101-48	.	LINE ASSEMBLY							(208) 0001 & ON (208B) 0001 & ON	02
20	AS5174D0808	.	UNION							(208) 0001 & ON (208B) 0001 & ON	04
21	2121001-2	.	RETAINER - HALF							(208) 0001 & ON (208B) 0001 & ON	32
			ATTACHING PARTS								

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


FUEL VENTILATION SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
22	AN3-5A	.	BOLT						(208) 0001 & ON (208B) 0001 & ON	02
		--*								
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24946

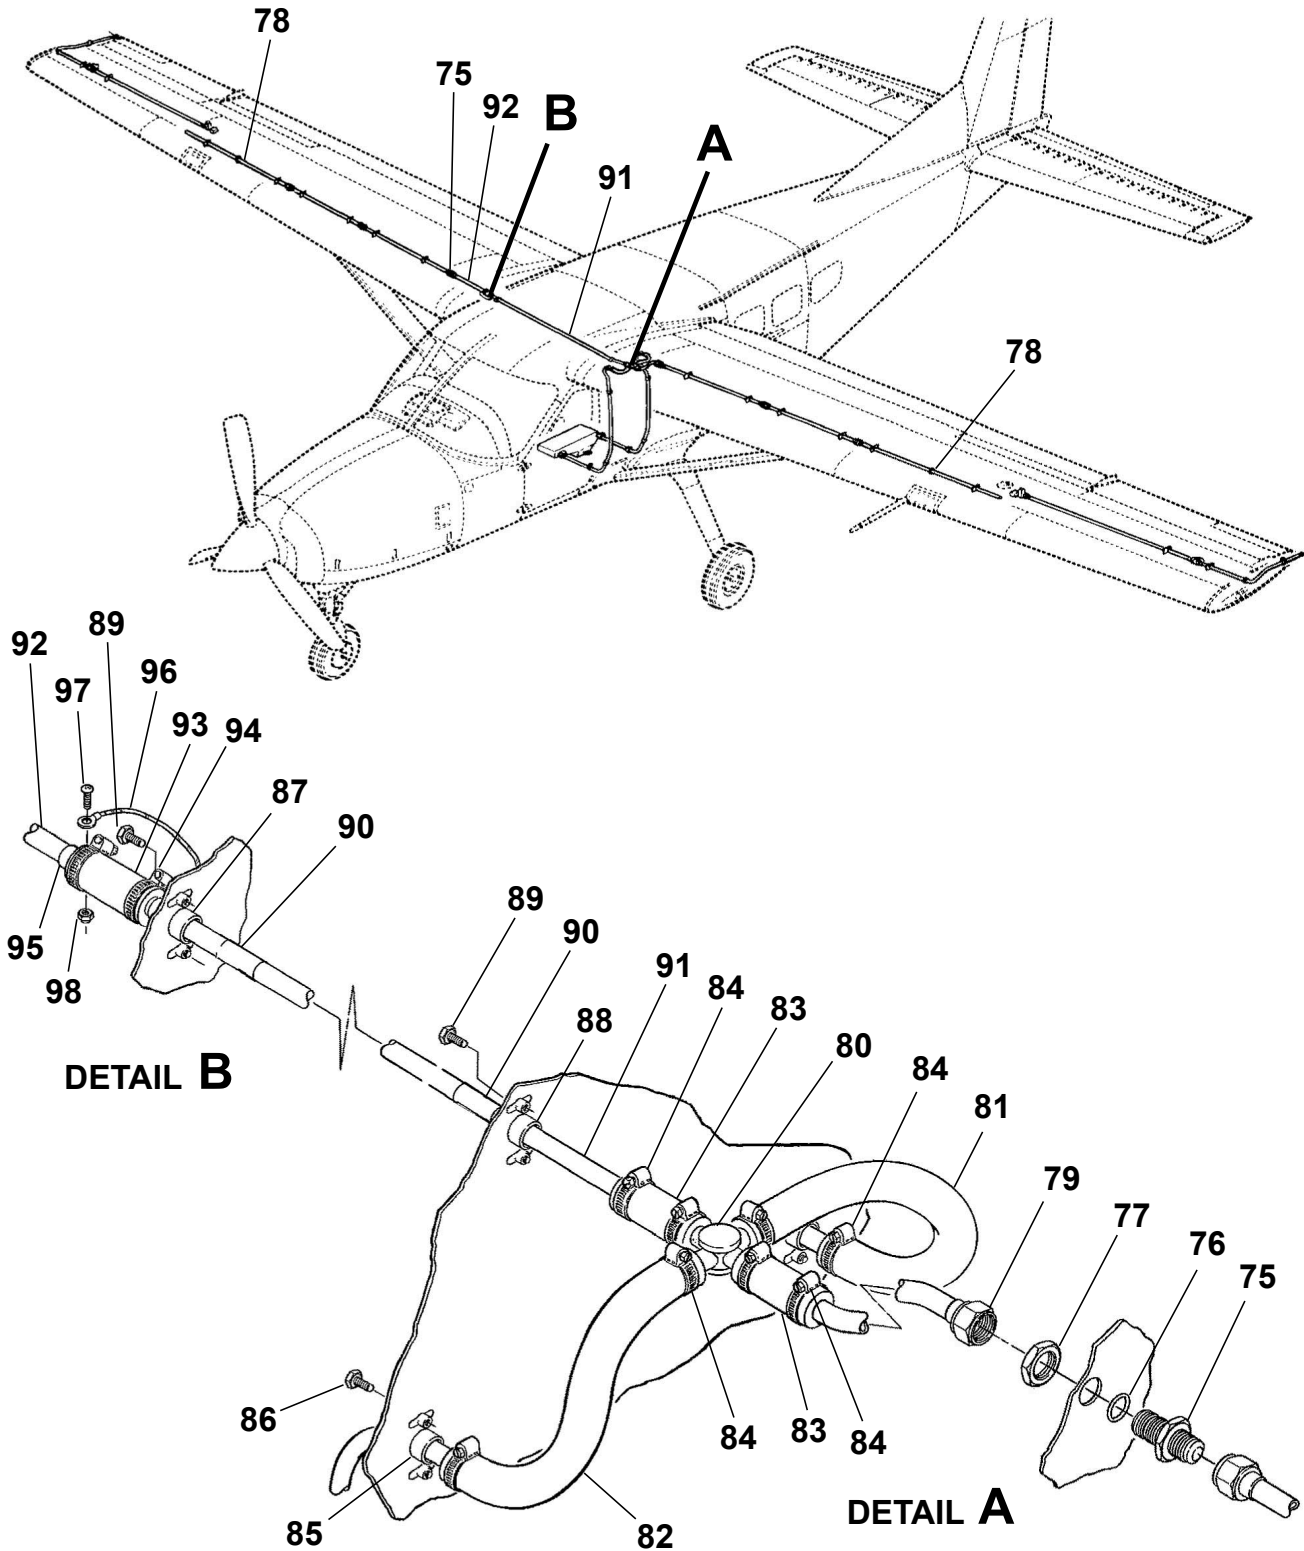

26262003
 A26262001
 B26262001

FUEL VENTILATION SYSTEM
 Figure 01. (Sheet 2)

Figure 01
 Page 6
28-10-03 Nov 29, 2022

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL VENTILATION SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

		NOMENCLATURE									UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
75	AN832-8D	.	UNION - BULKHEAD							(208) 0001 & ON (208B) 0001 & ON	02
			ATTACHING PARTS								
76	MS29512-08	.	O-RING							(208) 0001 & ON (208B) 0001 & ON	01
77	AS5178W08	.	NUT							(208) 0001 & ON (208B) 0001 & ON	01
			--*--								
78	MS21266-1N	.	GROMMET							58510 (208) 0001 & ON (208B) 0001 & ON	02
79	2600101-49	.	LINE ASSEMBLY							(208) 0001 & ON (208B) 0001 & ON	01
80	2616020-1	.	CROSS ASSEMBLY - HOSE FOR SPARES ORDER (MUST REPLACE WITH): S3026-8-8-8-8							(208) 0001 - 0240 (208B) 0001 - 0423	NP
- 80A	S3026-8-8-8-8	.	CROSS ASSEMBLY - HOSE SPARES REPLACEMENT FOR: 2616020-1							(208) 0241 & ON (208B) 0424 & ON	01
81	S51-8	.	HOSE 15.00 IN LG BULK ITEM							(208) 0001 & ON (208B) 0001 & ON	01
82	S51-8	.	HOSE 13.00 IN LG BULK ITEM							(208) 0001 & ON (208B) 0001 & ON	01
83	S51-8	.	HOSE 3.00 IN LG BULK ITEM							(208) 0001 & ON (208B) 0001 & ON	02
			ATTACHING PARTS								
84	S2357-3	.	CLAMP							(208) 0001 & ON (208B) 0001 & ON	02
			--*--								
85	S45A-12	.	SEAL							03296 (208) 0001 & ON (208B) 0001 & ON	02
			ATTACHING PARTS								
86	AN3-3A	.	BOLT							(208) 0001 & ON (208B) 0001 & ON	02
			--*--								
87	S45A-12	.	SHIELD HALF							03296 (208) 0001 & ON (208B) 0001 & ON	02
88	S45A-12	.	SHIELD HALF							03296 (208) 0001 & ON (208B) 0001 & ON	02
			ATTACHING PARTS								
89	MS35207-263	.	SCREW							80205 (208) 0001 & ON (208B) 0001 & ON	02
			--*--								
90	S1071-3	.	SLEEVE 1.30 IN LG BULK ITEM							(208) 0001 & ON (208B) 0001 & ON	02
91	2600101-52D	.	LINE							(208) 0001 & ON (208B) 0001 & ON	01
92	2600101-53	.	LINE ASSEMBLY							(208) 0001 & ON (208B) 0001 & ON	01
93	S51-8	.	HOSE 2.50 IN LG BULK ITEM							(208) 0001 & ON (208B) 0001 & ON	01
			ATTACHING PARTS								

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL VENTILATION SYSTEM


AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
94	S2357-3	.	CLAMP						(208) 0001 & ON (208B) 0001 & ON	02
			--*--							
95	AN735D8	.	CLAMP						(208) 0001 & ON (208B) 0001 & ON	02
96	S2876-1BB6	.	WIRE - JUMPER						(208) 0001 & ON (208B) 0001 & ON	01
			ATTACHING PARTS							
97	MS35207-263	.	SCREW					80205	(208) 0001 & ON (208B) 0001 & ON	02
98	MS21044N3	.	NUT					4W953	(208) 0001 & ON (208B) 0001 & ON	02
			--*--							

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24947

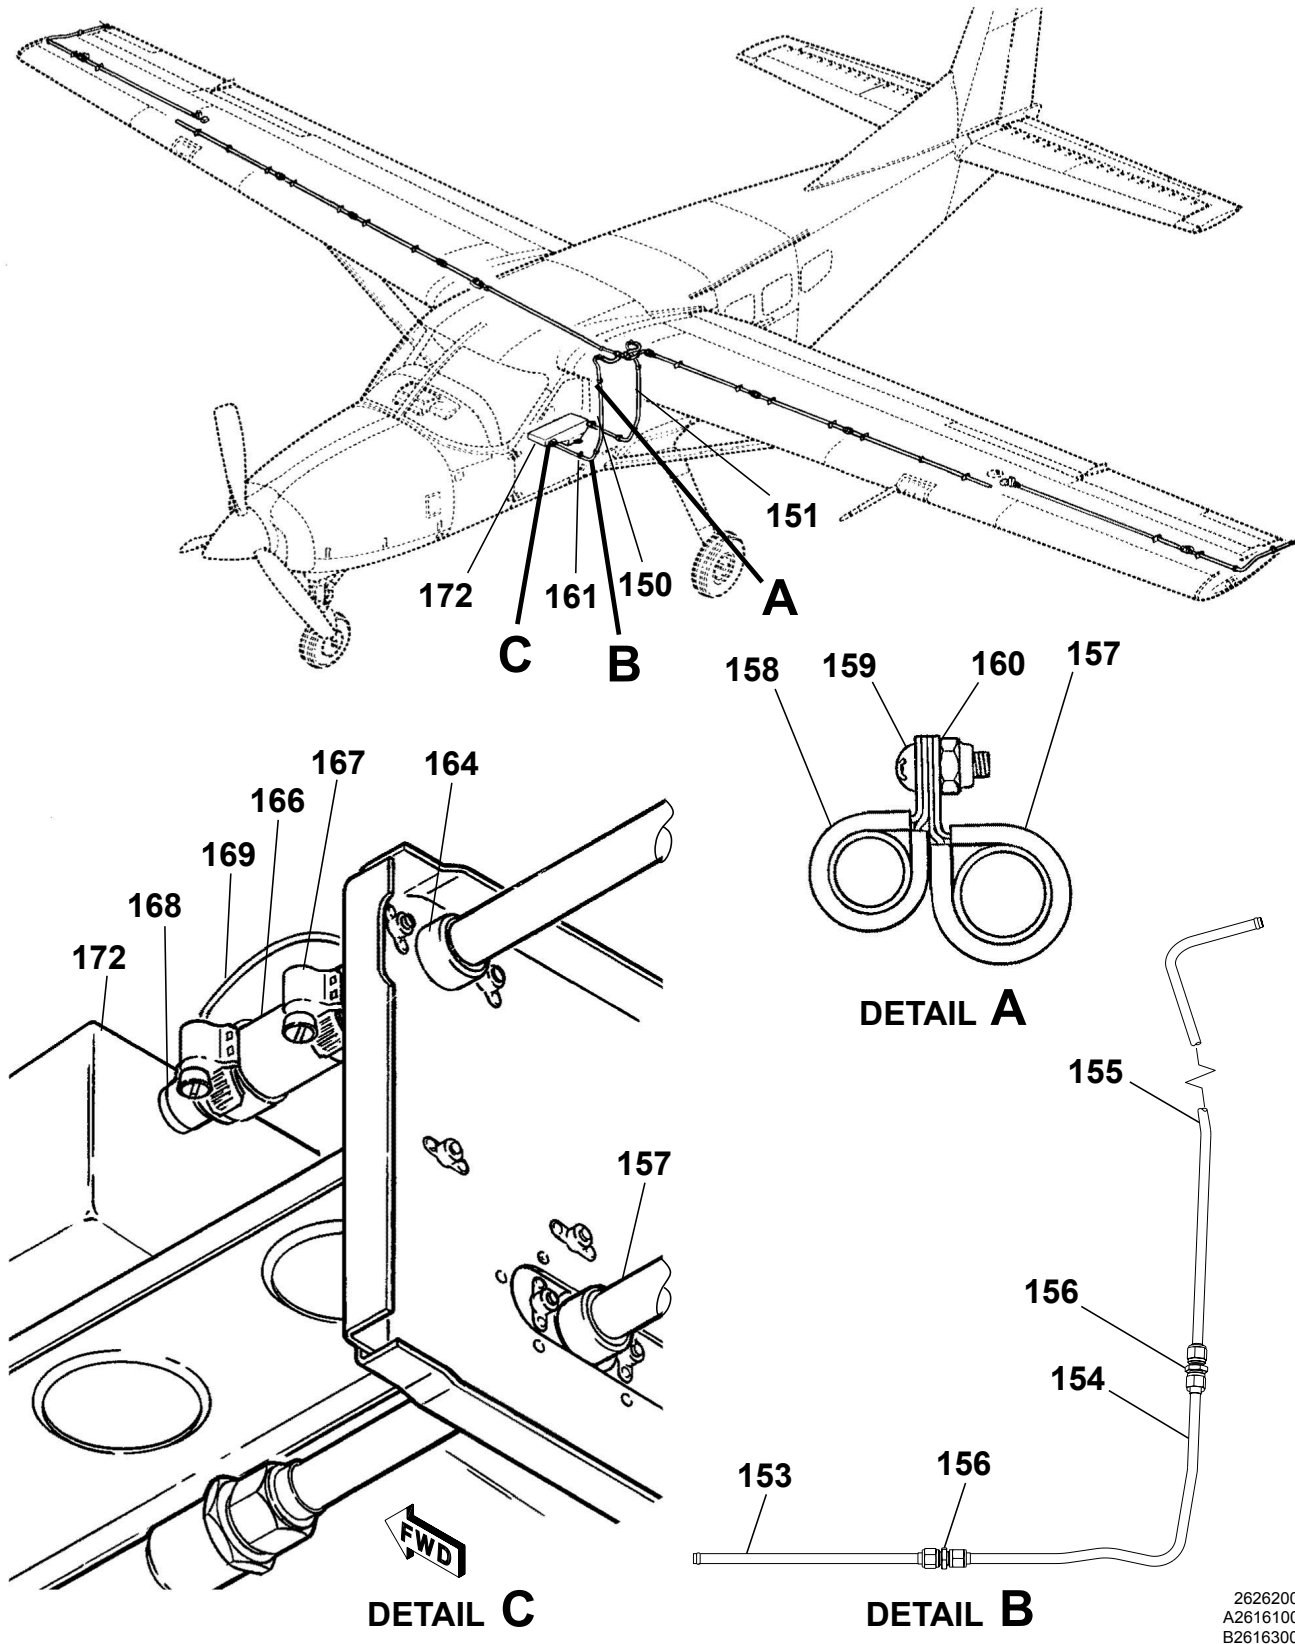

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

FUEL VENTILATION SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
150	2600101-51D	.							(208) 0001 & ON (208B) 0001 & ON	01
151	2600101-50D	.							(208) 0001 & ON (208B) 0001 & ON	01
- 152	2695009-4	.							(208) *0403 - 0423 (208) *0500 - 0523 (208B) *0220 - 0220 (208B) *0221 - 0221 (208B) *1189 - 1317 (208B) *2000 - 2089 (208B) *2091 - 2177 (208B) *2179 - 2183 (208B) *2185 - 2196 (208B) *2198 - 2204 (208B) *2206 - 2218 (208B) *2225 - 2229 (208B) *2231 - 2231 (208B) *2232 - 2232	01
153	2695009-1	.	.						(208) *0403 - 0423 (208) *0500 - 0523 (208B) *0220 - 0220 (208B) *0221 - 0221 (208B) *1189 - 1317 (208B) *2000 - 2089 (208B) *2091 - 2177 (208B) *2179 - 2183 (208B) *2185 - 2196 (208B) *2198 - 2204 (208B) *2206 - 2218 (208B) *2225 - 2229 (208B) *2231 - 2231 (208B) *2232 - 2232	01
154	2695009-2	.	.						(208) *0403 - 0423 (208) *0500 - 0523 (208B) *0220 - 0220 (208B) *0221 - 0221 (208B) *1189 - 1317 (208B) *2000 - 2089 (208B) *2091 - 2177 (208B) *2179 - 2183 (208B) *2185 - 2196 (208B) *2198 - 2204 (208B) *2206 - 2218 (208B) *2225 - 2229 (208B) *2231 - 2231 (208B) *2232 - 2232	01
- ITEM NOT ILLUSTRATED										

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

FUEL VENTILATION SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
155	2695009-3	.	.	TUBE ASSEMBLY - FUEL, MOD					(208) *0403 - 0423	01
				* AIRPLANES (208) 0403 THRU 0423 AND 0500 THRU 0523					(208) *0500 - 0523	
				INCORPORATING CAB28-01					(208B) *0220 - 0220	
				* AIRPLANES (208B) 0220 THRU 0221, 1189 THRU 1317, 2000					(208B) *0221 - 0221	
				THRU 2089, 2091 THRU 2177, 2179 THRU 2183, 2185 THRU					(208B) *1189 - 1317	
				2196, 2198 THRU 2204, 2206 THRU 2218, 2225 THRU 2229 AND					(208B) *2000 - 2089	
				2231 THRU 2232 INCORPORATING CAB28-01					(208B) *2091 - 2177	
									(208B) *2179 - 2183	
									(208B) *2185 - 2196	
									(208B) *2198 - 2204	
									(208B) *2206 - 2218	
									(208B) *2225 - 2229	
									(208B) *2231 - 2231	
									(208B) *2232 - 2232	
156	AS5174D0808	.	.	UNION					(208) *0403 - 0423	02
				* AIRPLANES (208) 0403 THRU 0423 AND 0500 THRU 0523					(208) *0500 - 0523	
				INCORPORATING CAB28-01					(208B) *0220 - 0220	
				* AIRPLANES (208B) 0220 THRU 0221, 1189 THRU 1317, 2000 THRU					(208B) *0221 - 0221	
				2089, 2091 THRU 2177, 2179 THRU 2183, 2185 THRU 2196, 2198					(208B) *1189 - 1317	
				THRU 2204, 2206 THRU 2218, 2225 THRU 2229 AND 2231 THRU					(208B) *2000 - 2089	
				2232 INCORPORATING CAB28-01					(208B) *2091 - 2177	
									(208B) *2179 - 2183	
									(208B) *2185 - 2196	
									(208B) *2198 - 2204	
									(208B) *2206 - 2218	
									(208B) *2225 - 2229	
									(208B) *2231 - 2231	
									(208B) *2232 - 2232	
157		.	.	FUEL DISTRIBUTION SYSTEM						RF
				REFER TO 28-21-00 FIGURE 01 .						
158	MS21919DG8	.	.	CLAMP					(208) 0001 & ON	04
									(208B) 0001 & ON	
				ATTACHING PARTS						
159	MS35207-264	.	.	SCREW			80205		(208) 0001 & ON	01
									(208B) 0001 & ON	
160	MS21044N3	.	.	NUT			4W953		(208) 0001 & ON	01
									(208B) 0001 & ON	
				--*--						
161	MS21919DG8	.	.	CLAMP					(208) 0001 & ON	NP
									(208B) 0001 & ON	
- 162	MS35207-263	.	.	SCREW			80205		(208) 0001 & ON	NP
									(208B) 0001 & ON	
- 163	BL101-8-1	.	.	SPIRAL WRAP					(208) 0001 & ON	04
									(208B) 0001 & ON	
164	2611146-1	.	.	SEAL					(208) 0001 & ON	02
									(208B) 0001 & ON	
				ATTACHING PARTS						
- 165	AN3-3A	.	.	BOLT					(208) 0001 & ON	02
									(208B) 0001 & ON	
				--*--						
166	S51-8	.	.	HOSE 2.50 IN LG BULK ITEM					(208) 0001 & ON	02
									(208B) 0001 & ON	
				ATTACHING PARTS						

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL VENTILATION SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
167	S1891-10S	.	CLAMP						(208) 0001 & ON (208B) 0001 & ON	02
			--*--							
168	AN735D8	.	CLAMP						(208) 0001 & ON (208B) 0001 & ON	04
169	S2876-1BB6	.	WIRE - JUMPER						(208) 0001 & ON (208B) 0001 & ON	02
			ATTACHING PARTS							
- 170	MS35207-263	.	SCREW					80205	(208) 0001 & ON (208B) 0001 & ON	02
- 171	MS21044N3	.	NUT					4W953	(208) 0001 & ON (208B) 0001 & ON	02
			--*--							
172		.	FUEL RESERVOIR COMPONENTS							RF
			REFER TO 28-22-00 FIGURE 01 .							
- ITEM NOT ILLUSTRATED										


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

28-21-00

FUEL DISTRIBUTION SYSTEM
AIRPLANES (208) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A25072

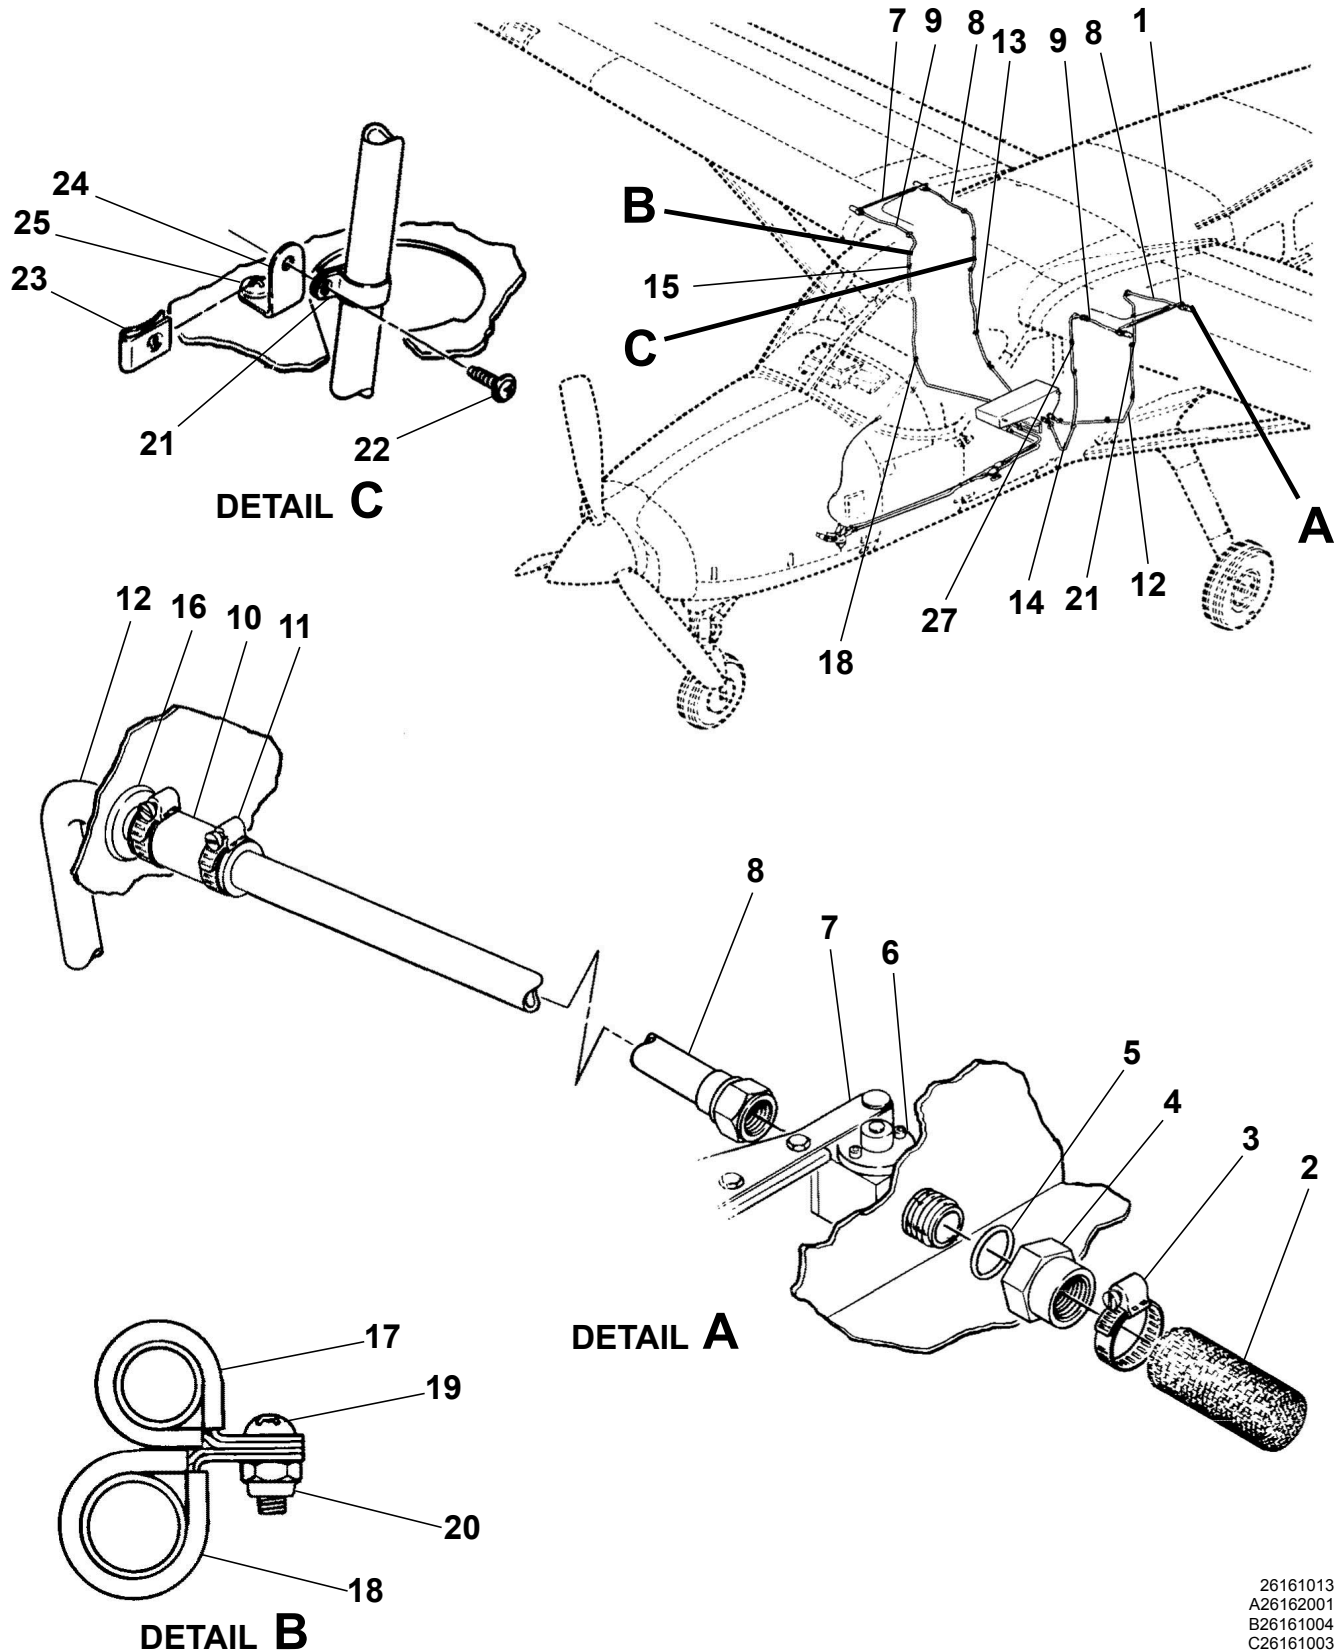

FUEL DISTRIBUTION SYSTEM
 Figure 01. (Sheet 1)

26161013
 A26162001
 B26161004
 C26161003


FUEL DISTRIBUTION SYSTEM

AIRPLANES (208) 0001 & ON

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24949

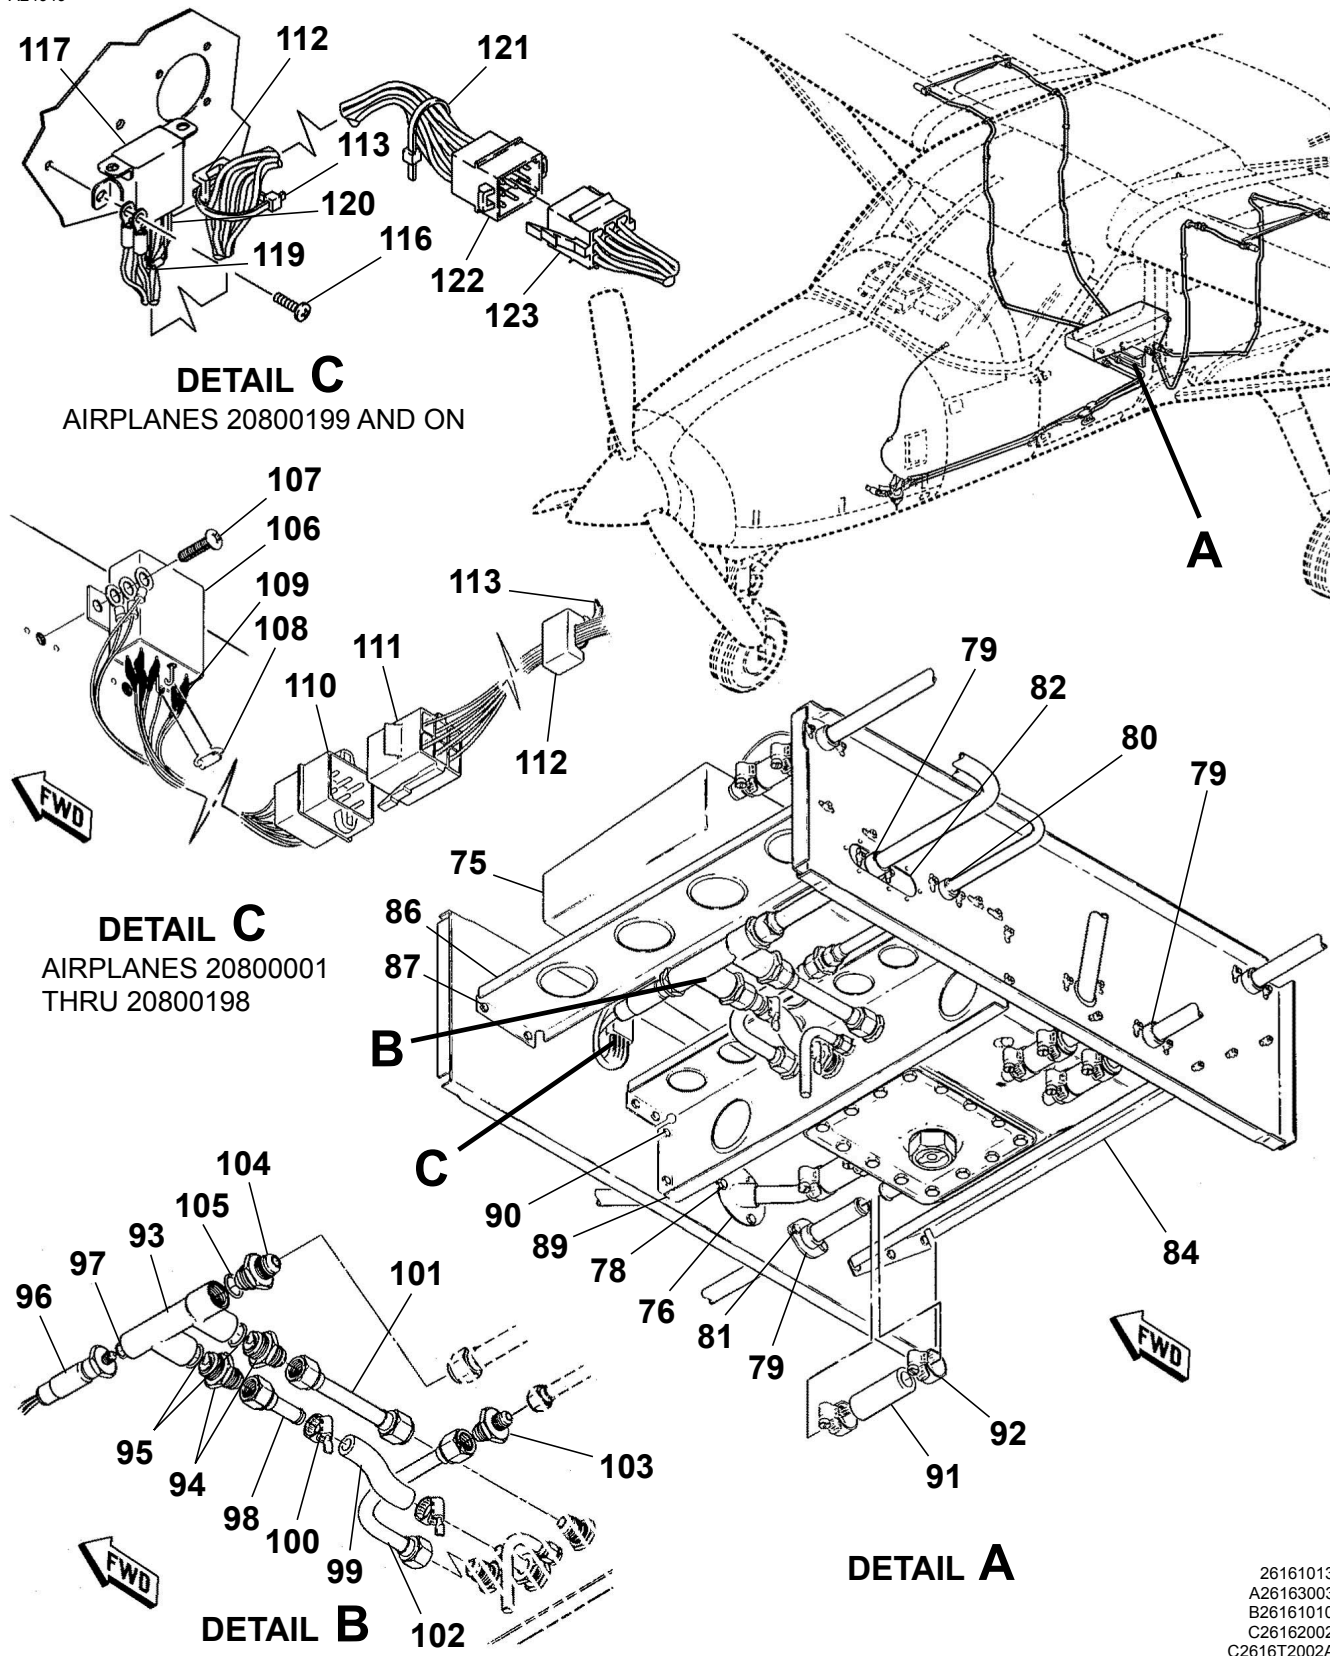

FUEL DISTRIBUTION SYSTEM
 Figure 01. (Sheet 2)

26161013
 A26163003
 B26161010
 C26162002
 C2616T2002A

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

FUEL DISTRIBUTION SYSTEM

AIRPLANES (208) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
75		.	FUEL RESERVOIR COMPONENTS							RF
		.	REFER TO 28-22-00 FIGURE 01 .							
76	2611147-2	.	SEAL ASSEMBLY - RIGHT						(208) 0001 - 0329	01
- 76A	2611147-8	.	SEAL ASSEMBLY - RIGHT						(208) 0330 & ON	01
- 77	2611147-1	.	SEAL ASSEMBLY - LEFT						(208) 0001 - 0329	01
- 77A	2611147-7	.	SEAL ASSEMBLY - LEFT						(208) 0330 & ON	01
		.	ATTACHING PARTS							
78	AN3-3A	.	BOLT						(208) 0001 - 0329	03
- 78A	AN3-3A	.	BOLT						(208) 0330 & ON	04
- 78B	NAS1149F0363P	.	WASHER				73197		(208) 0330 & ON	04
		.	--*--							
79	S45A13	.	SEAL				03296		(208) 0001 & ON	03
80	NMCS45A12	.	SEAL				03296		(208) 0001 & ON	01
		.	ATTACHING PARTS							
81	AN3-4A	.	BOLT				80205		(208) 0001 & ON	02
		.	--*--							
82	2616027-1	.	DOUBLER ASSEMBLY						(208) 0001 & ON	01
- 83	MS21047L3	.	NUTPLATE				13499		(208) 0001 & ON	02
84		.	SUPPORT ASSEMBLY - FUEL RESERVOIR AFT							RF
		.	REFER TO 53-12-00 FIGURE 01 .							
- 85	2611152-3	.	RUB STRIP						(208) 0001 & ON	01
86	2611152-2	.	SUPPORT - ASSEMBLY-FUEL RESERVOIR FORWARD						(208) 0001 & ON	01
		.	ATTACHING PARTS							
87	AN3-3A	.	BOLT						(208) 0001 & ON	04
		.	--*--							
- 88	2611152-6	.	RUB STRIP						(208) 0001 & ON	01
89		.	FUEL RESERVOIR COMPONENTS							RF
		.	REFER TO 28-22-00 FIGURE 01 .							
		.	ATTACHING PARTS							
90	AN3-3A	.	BOLT						(208) 0001 & ON	08
		.	--*--							
91	S51-10-10	.	HOSE						(208) 0001 & ON	04
		.	ATTACHING PARTS							
92	S1891-10S	.	CLAMP						(208) 0001 & ON	02
		.	--*--							
93	5956008-4	.	MANIFOLD ASSEMBLY						(208) 0001 & ON	01
94	8C214-1	.	VALVE - SWING CHECK				82829		(208) 0001 & ON	02
95	MS29512-12	.	O-RING						(208) 0001 & ON	02
96	S2615-1	.	SWITCH - FUEL PRESSURE						(208) 0001 - 0241	NP
		.	FOR SPARES ORDER (MUST REPLACE WITH):							
		.	S2615-2							
- 96A	S2615-2	.	SWITCH - FUEL PRESSURE						(208) 0242 & ON	01
		.	SPARES REPLACEMENT FOR:							
		.	S2615-1							
97	MS29512-04	.	O-RING				58918		(208) 0001 & ON	01
98	2616028-1	.	LINE ASSEMBLY						(208) 0001 & ON	01
99	S51-8	.	HOSE - 3.50 IN LG BULK ITEM						(208) 0001 & ON	01
		.	ATTACHING PARTS							
100	AN737TW30	.	CLAMP						(208) 0001 & ON	02
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL DISTRIBUTION SYSTEM


AIRPLANES (208) 0001 & ON

NOMENCLATURE										UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY	
101	2600101-74	.							(208) 0001 & ON	01
- 101A	S2692-8N	.							(208) 0001 & ON	02
102	2600101-75	.							(208) 0001 & ON	01
103	AS5174D0806	.							(208) 0001 & ON	01
104	AS5174D1008	.							(208) 0001 & ON	01
105	MS29512-08	.							(208) 0001 & ON	01
106	B07D912BC1-0359	.						58614	(208) 0001 - 0198	01
		.								
107	MS35206-230	.						80205	(208) 0001 - 0198	02
		.								
		.								
108	1N4005	.							(208) 0001 - 0198	01
109	S1694-4	.							(208) 0001 - 0198	AR
110	S1640-6	.							(208) 0001 - 0198	01
111	S1641-6	.							(208) 0001 - 0198	01
112	S1741-1	.							(208) 0001 & ON	01
113	S2209-2	.							(208) 0001 & ON	01
- 114	2670119-1	.							(208) 0199 - 0236	01
		.								
		.								
- 115	2670119-2	.							(208) 0237 - 0499	01
		.								
		.								
		.								
116	MS35206-230	.						80205	(208) 0199 & ON	02
		.								
		.								
117	B07D912BC1-0359	.	.					58614	(208) 0199 - 0236	NP
- 117A	MS27743-17	.	.						(208) 0416 - 0416	1
		.	.						(208) 0500 & ON	
		.	.							
- 118	M83536/33-005L	.	.						(208) 0237 & ON	01
		.	.							
		.	.							
119	1N4005	.	.						(208) 0199 - 0236	01
120	M23053/5-104-9	.	.						(208) 0199 & ON	AR
121	S2209-2	.	.						(208) 0199 & ON	02
122	S1640-9	.	.						(208) 0199 & ON	01
123	S1641-9	.	.						(208) 0199 & ON	01
- ITEM NOT ILLUSTRATED										

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24950

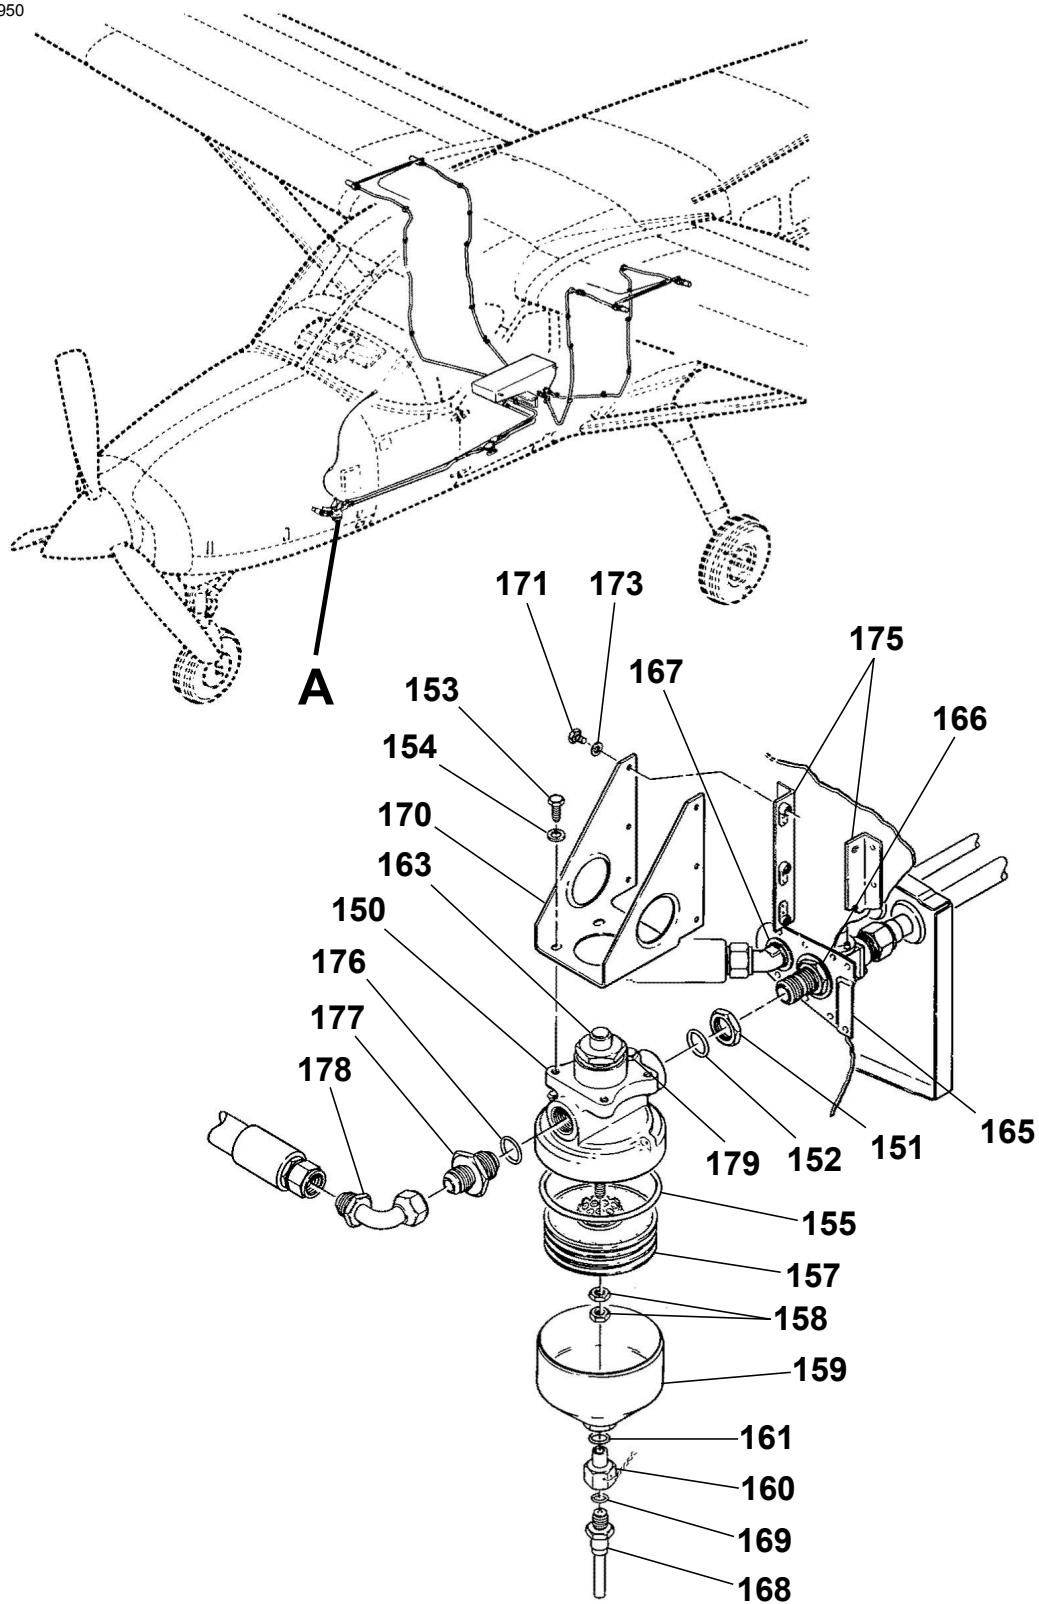

DETAIL A

FUEL DISTRIBUTION SYSTEM
Figure 01. (Sheet 3)

2616R1013
 A2616R3001A

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


FUEL DISTRIBUTION SYSTEM

AIRPLANES (208) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
150	1J18-10	.						FUEL FILTER - ASSEMBLY ATTACHING PARTS	26433	(208) 0001 & ON 01
151	AS5178-10	.						NUT		(208) 0001 & ON 01
152	MS29513-117	.						O-RING		(208) 0001 & ON 01
153	AN4H3A	.						BOLT		(208) 0001 & ON 04
154	NAS1149C0432R	.						WASHER		(208) 0001 & ON 04
		--*--								
155	102A10001-15	.	.					O-RING	26433	(208) 0001 & ON 01
- 156	MS29513-237	.	.					O-RING		(208) 0001 & ON 01
157	D9-55-1	.	.					FILTER - FUEL ATTACHING PARTS	26433	(208) 0001 & ON 01
158	104A10004-06	.	.					NUT	26433	(208) 0001 & ON 02
		--*--								
159	A1-533-1	.	.					BOWL - FUEL FILTER ATTACHING PARTS	26433	(208) 0001 & ON 01
160	D4-324-1	.	.					DRAIN PORT	26433	(208) 0001 & ON 01
161	102A10001-16	.	.					O-RING	26433	(208) 0001 & ON 01
- 162	MS29513-013	.	.					O-RING		(208) 0001 & ON 01
		--*--								
163	102A10001-36	.	.					O-RING - INDICATOR BUTTON	26433	(208) 0001 & ON 01
- 164	MS29513-122	.	.					O-RING - INDICATOR BUTTON		(208) 0001 & ON 01
165	2653001-2	.						COVER PLATE		(208) 0123 & ON 01
166	S1450-14S20-032	.						WASHER		(208) 0123 & ON 01
167	NAS1149C0963R	.						WASHER		(208) 0123 & ON 01
168	50C9F	.						DRAIN VALVE - FUEL	91511	(208) 0001 & ON 01
169	MS28778-6	.						O RING		(208) 0001 & ON 01
170	2626013-2	.						BRACKET		(208) 0001 - 0329 01
- 170A	2626013-14	.						BRACKET ATTACHING PARTS		(208) 0330 & ON 01
171	AN3-3A	.						BOLT		(208) 0001 - 0131 06
- 172	AN3-3A	.						BOLT		(208) 0132 & ON 05
173	NAS1149C0332R	.						WASHER		(208) 0001 - 0131 06
- 174	NAS1149C0332R	.						WASHER		(208) 0132 & ON 05
		--*--								
175		.						SUPPORT ASSEMBLY REFER TO 53-10-00 FIGURE 01.		RF
176	MS29513-117	.						O-RING		(208) 0001 & ON 01
177	AN919-15	.						REDUCER		(208) 0001 & ON 01
178	500454-85	.						ELBOW	00624	(208) 0001 & ON 01
179	MS20913-1D	.						PLUG		(208) 0001 & ON 01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

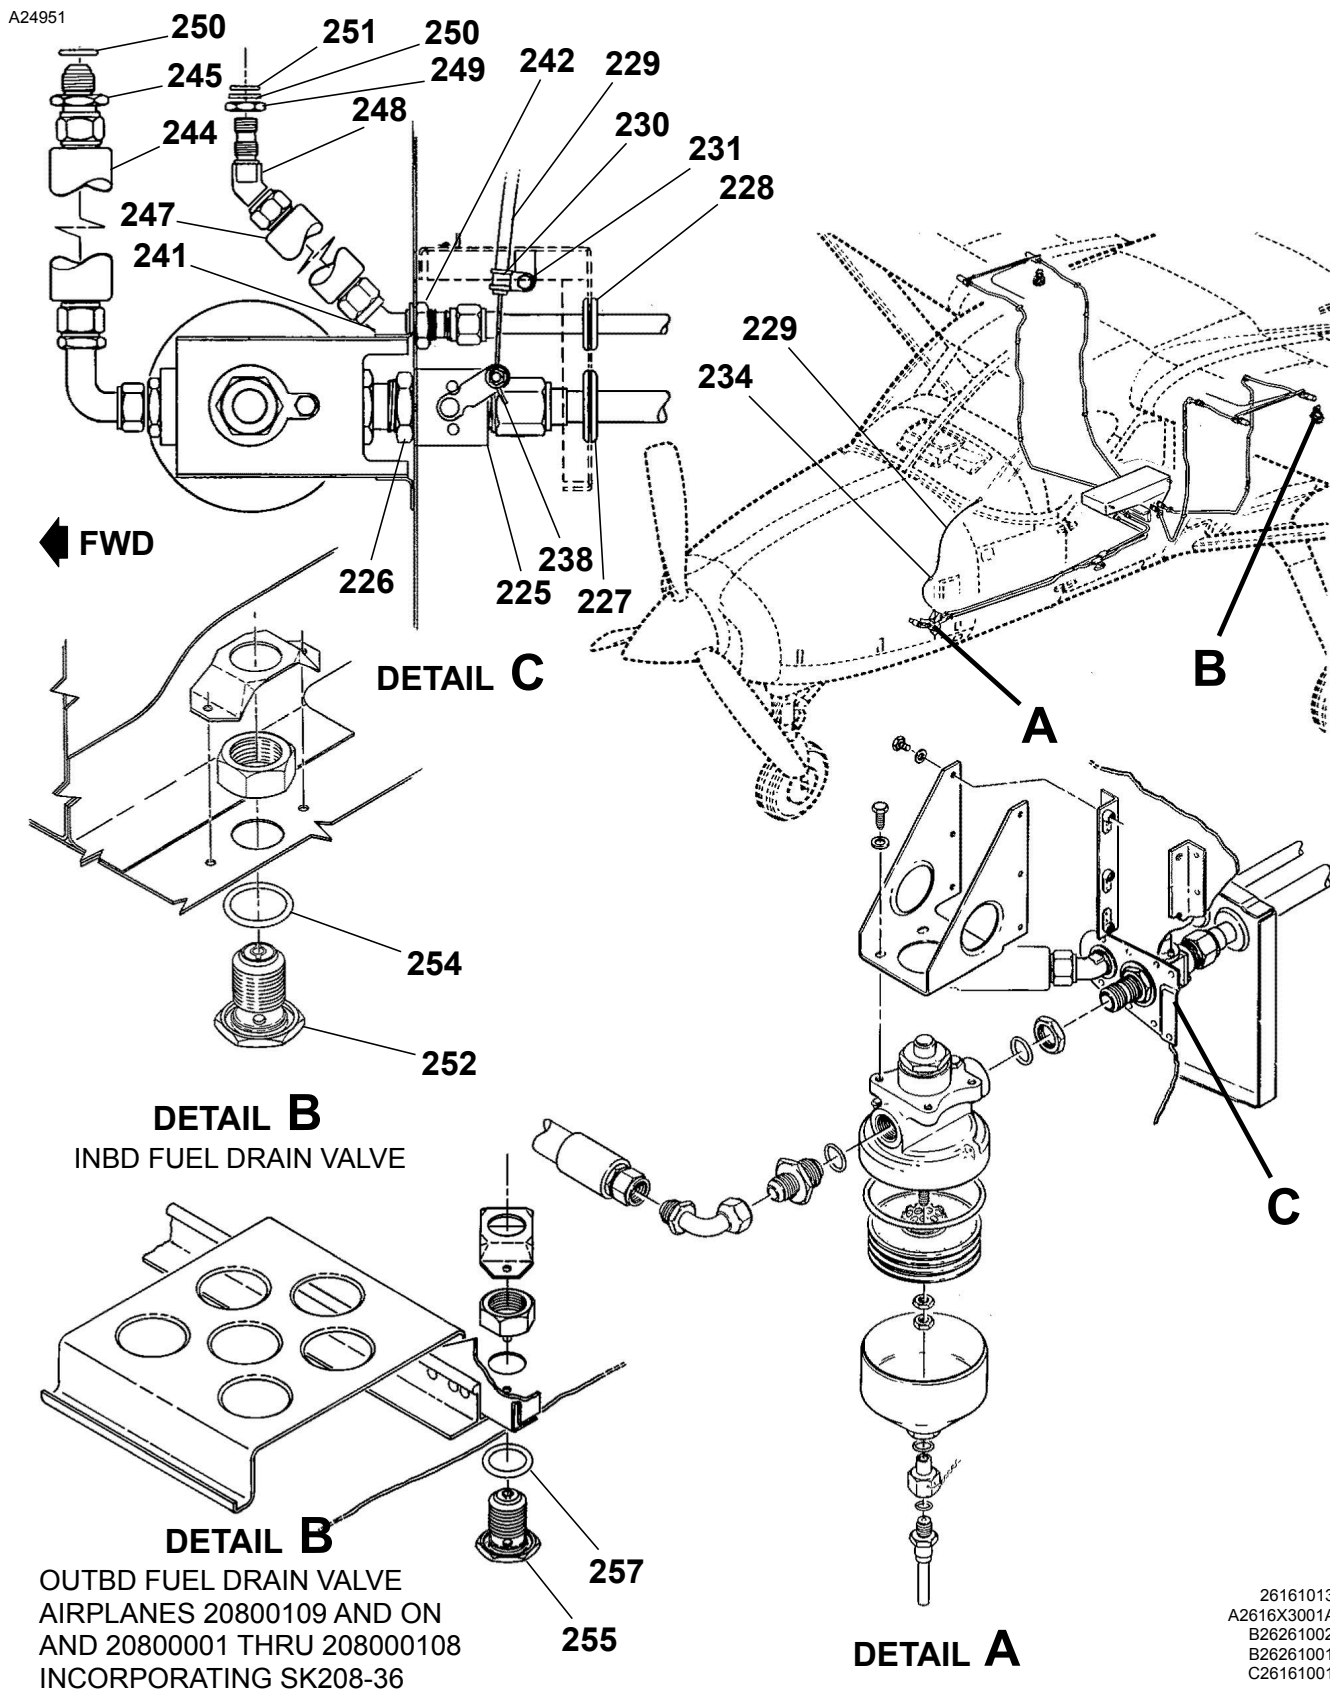

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

FUEL DISTRIBUTION SYSTEM

AIRPLANES (208) 0001 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
225		.	VALVE - FUEL SHUTOFF REFER TO 28-23-01 FIGURE 01. ATTACHING PARTS								RF
226	AS5178-10	.	NUT --*--							(208) 0001 & ON	01
227	MS35489-18	.	GROMMET							(208) 0001 & ON	01
228	MS35489-12	.	GROMMET							(208) 0001 & ON	01
229	S1241-54	.	CONTROL ASSEMBLY - FUEL SHUTOFF							(208) 0001 & ON	01
230	S2226-3	.	CLAMP ATTACHING PARTS							(208) 0001 & ON	01
231	AN3-4A	.	BOLT							80205 (208) 0001 & ON	01
- 232	NAS1149F0332P	.	WASHER							(208) 0001 & ON	01
- 233	MS21044N3	.	NUT --*--							4W953 (208) 0001 & ON	01
234	S2226-3	.	CLAMP							(208) 0001 & ON	01
- 235	AN525-10R7	.	SCREW							(208) 0001 & ON	01
- 236	NAS1149F0332P	.	WASHER							(208) 0001 & ON	01
- 237	MS21044N3	.	NUT							4W953 (208) 0001 & ON	01
238	S2323-5	.	CLAMP - CONTROL ATTACHING PARTS							(208) 0001 & ON	01
- 239	NAS1149D0332K	.	WASHER							(208) 0001 & ON	01
- 240	MS21044N3	.	NUT --*--							4W953 (208) 0001 & ON	01
241	AN837-6J	.	ELBOW ATTACHING PARTS							(208) 0001 & ON	01
242	AS5178J06	.	NUT							(208) 0001 & ON	01
- 243	NAS1149C0932R	.	WASHER --*--							(208) 0001 & ON	01
244	S2495-8B000-0520	.	HOSE ASSEMBLY - FUEL SUPPLY TO ENGINE FOR SPARES ORDER (MUST REPLACE WITH): S2808-8B0520							(208) 0001 - 0260	NP
- 244A	S2808-8B0520	.	HOSE ASSEMBLY - FUEL SUPPLY TO ENGINE SPARES REPLACEMENT FOR: S2495-8B000-0520 ALTERNATE SPARE (INTERCHANGEABLE WITH): AE3663726H0520							(208) 0261 & ON	01
- 244B	AE3663726H0520	.	HOSE ASSEMBLY - FUEL SUPPLY TO ENGINE ALTERNATE SPARE (INTERCHANGEABLE WITH): S2808-8B0520							(208) 0261 & ON	01
245	AS5174D0808	.	UNION							(208) 0001 & ON	01
- 246	MS29512-08	.	O-RING							(208) 0001 & ON	01
247	S2495-6-000-0330	.	HOSE ASSEMBLY - FUEL MOTIVE FLOW TO ENGINE FOR SPARES ORDER (MUST REPLACE WITH): S2808-6-0330							(208) 0001 - 0260	NP
- 247A	S2808-6-0330	.	HOSE ASSEMBLY - FUEL MOTIVE FLOW TO ENGINE SPARES REPLACEMENT FOR: S2495-6-000-0330 ALTERNATE SPARE (INTERCHANGEABLE WITH): AE3663724G0330							(208) 0261 & ON	01
- ITEM NOT ILLUSTRATED											


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

FUEL DISTRIBUTION SYSTEM

AIRPLANES (208) 0001 & ON

		NOMENCLATURE							UNITS PER ASSY		
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
- 247B	AE3663724G0330	.	HOSE ASSEMBLY - FUEL MOTIVE FLOW TO ENGINE ALTERNATE SPARE (INTERCHANGEABLE WITH): S2808-6-0330							(208) 0261 & ON	01
248	S2626-1J	.	ELBOW							(208) 0001 & ON	01
249	AN6289J5	.	NUT							(208) 0001 & ON	01
250	MS28773-05	.	RETAINER							(208) 0001 & ON	01
251	MS29512-05	.	O-RING							(208) 0001 & ON	01
252	79C1	.	VALVE - FUEL DRAIN 1 LEFT & 1 RIGHT				91511		(208) 0001 & ON	02	
- 253	2-010-V835-75	.	.	O-RING - INTERNAL ALTERNATE SPARE (INTERCHANGEABLE WITH): 2-010V835-75				83259	(208) 0001 & ON	01	
- 253A	2-010V835-75	.	PACKING - INTERNAL ALTERNATE SPARE (INTERCHANGEABLE WITH): 2-010-V835-75							(208) 0001 & ON	01
254	MS29513-020	.	O-RING 1 - LEFT & 1 RIGHT							(208) 0001 & ON	02
255	79C1	.	VALVE - FUEL DRAIN 1LH & 1 RIGHT				91511		(208) 0109 & ON	02	
			* AIRPLANES (208) 0001 THRU 0108 AND 0109 & ON INCORPORATING SK208-36							(208) *0001 - 0108 (208) *0109 & ON	
- 256	2-010-V835-75	.	.	O-RING - INTERNAL * AIRPLANES (208) 0001 THRU 0108 AND 0109 & ON INCORPORATING SK208-36				83259	(208) 0109 & ON (208) *0001 - 0108 (208) *0109 & ON	01	
257	MS29513-020	.	O-RING 1 - LEFT & 1 RIGHT						(208) 0109 & ON	02	
			* AIRPLANES (208) 0001 THRU 0108 AND 0109 & ON INCORPORATING SK208-36							(208) *0001 - 0108 (208) *0109 & ON	
- ITEM NOT ILLUSTRATED											

 A25073



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

FUEL DISTRIBUTION SYSTEM

AIRPLANES (208) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
300	2600101-14	.							(208) 0001 & ON	01
301	2600101-15	.							(208) 0001 & ON	01
302	AS5174D0606	.							(208) 0001 & ON	01
303	AS5174-1010	.							(208) 0001 & ON	01
304	2611195-8	.							(208) 0001 & ON	01
305	2611195-4	.							(208) 0001 & ON	01
306	2611195-6	.							(208) 0001 & ON	01
307	2611195-3	.							(208) 0001 & ON	01
		.								
308	MS3367-1-9	.							(208) 0001 & ON	02
		--*--								
309	S2548-4	.							(208) 0001 & ON	02
310	S2548-4	.							(208) 0001 & ON	02
		.								
311	S2357-1	.							(208) 0001 - 0003	02
- 312	S2357-1	.							(208) 0004 & ON	01
313	S2357-1	.							(208) 0001 & ON	02
		--*--								
314	MS35489-14	.							(208) 0004 & ON	02
315	2613024-1	.							(208) 0001 - 0003	01
316	2600101-28	.							(208) 0001 & ON	01
317	2600101-31	.							(208) 0001 & ON	01
318	MS21919DG10	.							(208) 0001 & ON	01
		.								
319	MS35207-267	.							(208) 0001 & ON	01
- 320	NAS43DD3-16N	.							(208) 0001 & ON	01
		.								
		ALTERNATE SPARE (INTERCHANGEABLE WITH):								
		NAS43DD3-16FC								
- 320A	NAS43DD3-16FC	.							(208) 0001 & ON	01
		.								
		ALTERNATE SPARE (INTERCHANGEABLE WITH):								
		NAS43DD3-16N								
- 321	MS21044N3	.						4W953	(208) 0001 & ON	01
- 322	AN743-13	.							(208) 0001 & ON	01
		--*--								
323	MS21919DG10	.							(208) 0001 & ON	01
324	MS21919DG6	.						83259	(208) 0001 & ON	01
		.								
		ATTACHING PARTS								
325	MS35207-264	.						80205	(208) 0001 & ON	01
- 326	MS21044N3	.						4W953	(208) 0001 & ON	01
		--*--								
327	MS21047L08	.							(208) 0001 & ON	04
328	2601221-1	.							(208) 0001 & ON	01
		.								
		ATTACHING PARTS								
329	MS35206-244	.							(208) 0001 & ON	08
		--*--								
330	CM2692-26-1S	.							(208) 0001 - 0024	01
331		.								RF
		REFER TO 25-52-00 FIGURE 01 .								
- ITEM NOT ILLUSTRATED										


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

28-21-00

FUEL DISTRIBUTION SYSTEM
AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24953

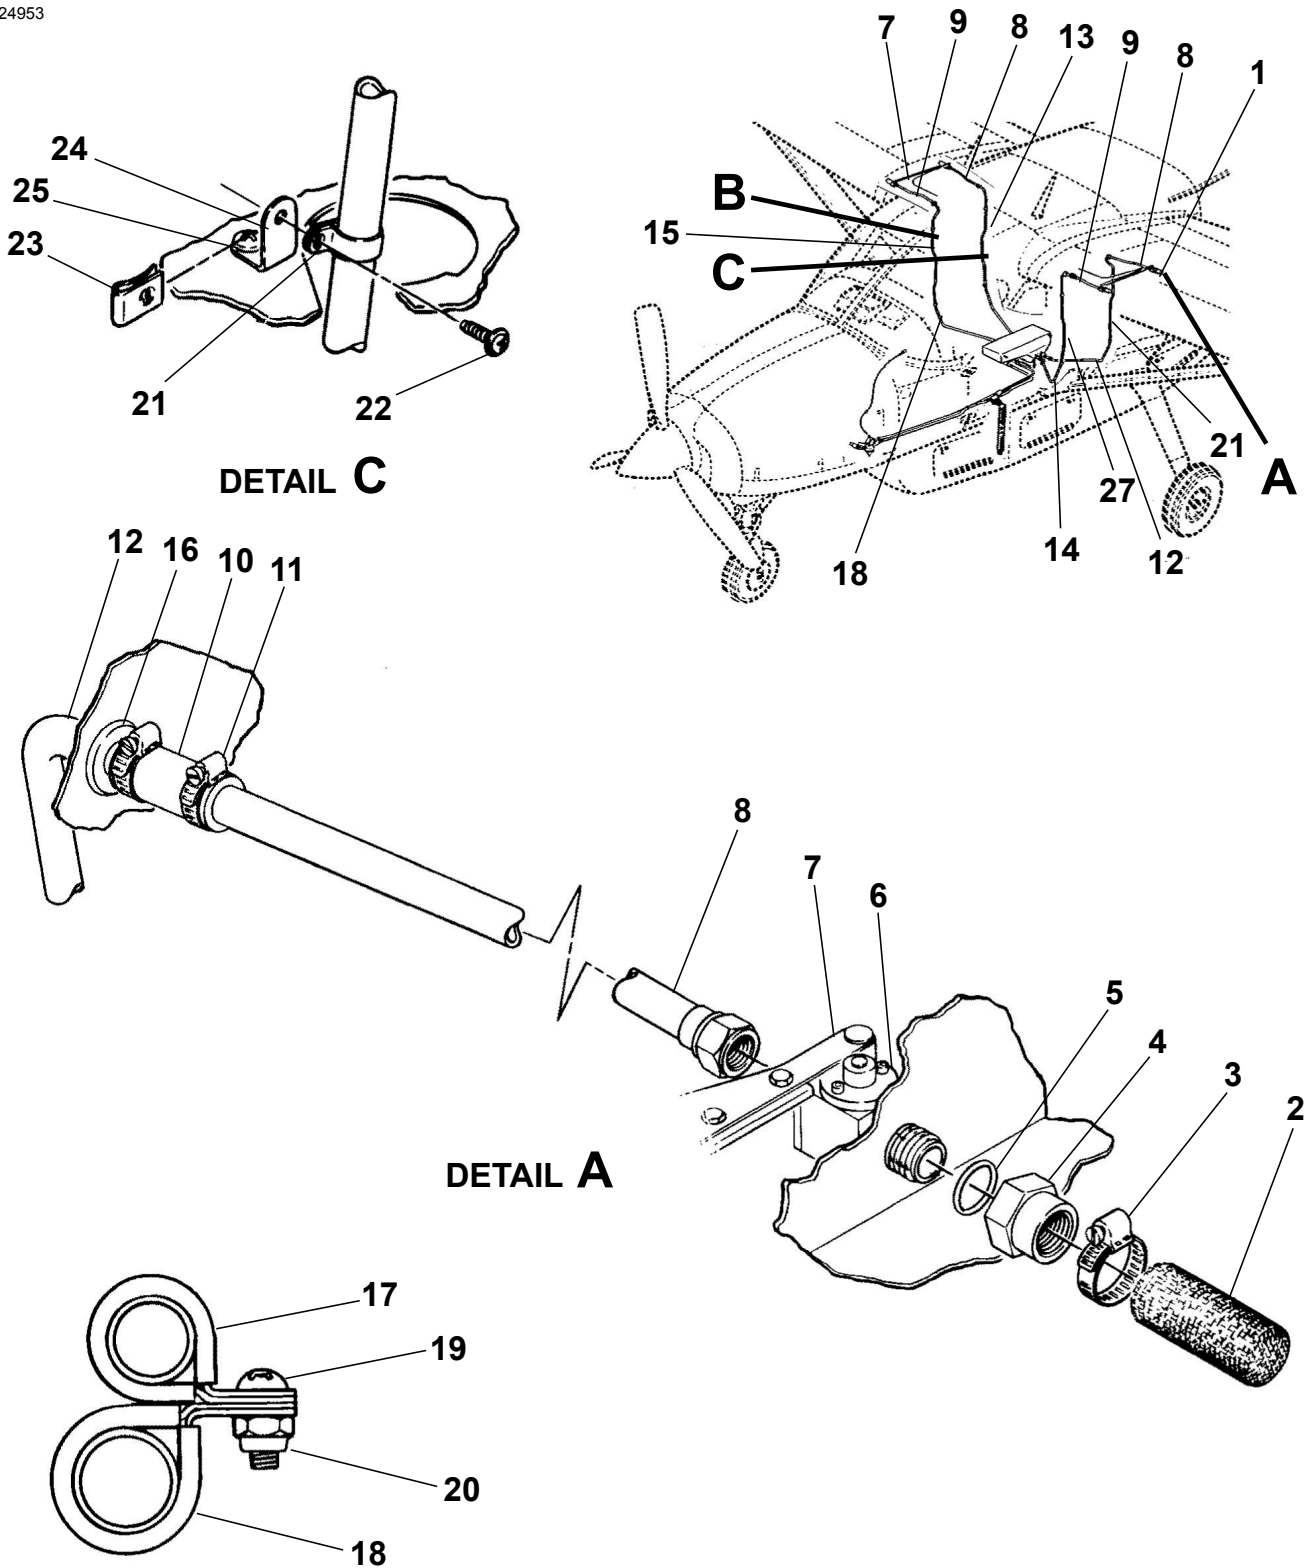

DETAIL B

FUEL DISTRIBUTION SYSTEM
 Figure 02. (Sheet 1)

26161013
 A26162001
 B26161004
 C26161003

AIRPLANES (208B) 0001 & ON

Figure 02
Page 3
28-21-00 Nov 29, 2022

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG


FUEL DISTRIBUTION SYSTEM

AIRPLANES (208B) 0001 & ON

		NOMENCLATURE							UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY
--*--									
- ITEM NOT ILLUSTRATED									


CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24958

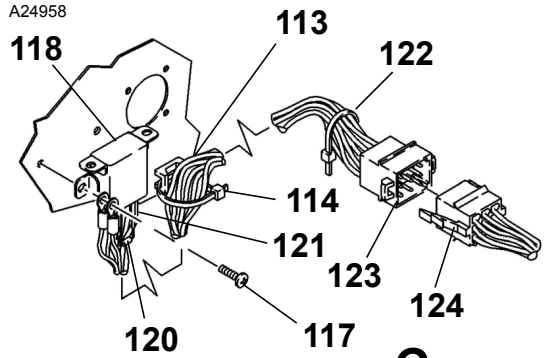


DETAIL C

AIRPLANES 208B0242 AND ON

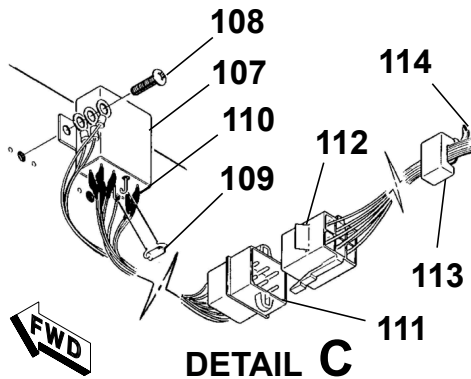


DETAIL C

AIRPLANES 208B0001
 THRU 208B0241

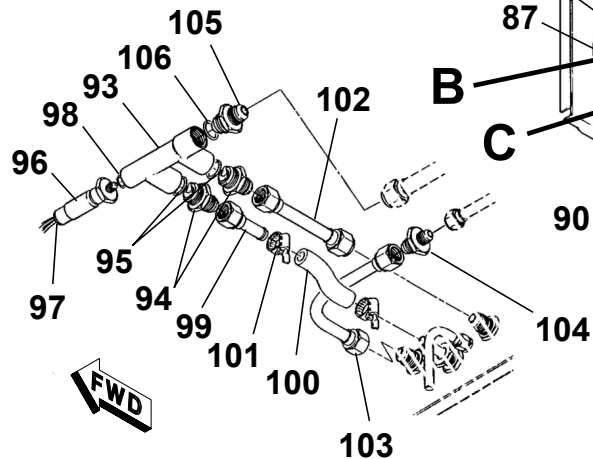

DETAIL B

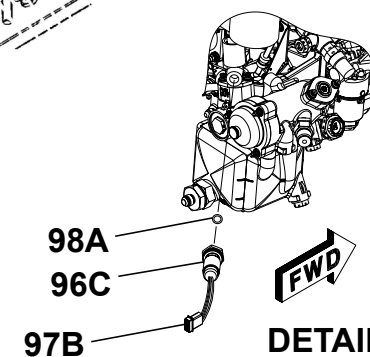


DETAIL B


AIRPLANES 208B5000 AND ON

FUEL DISTRIBUTION SYSTEM

Figure 02. (Sheet 2)

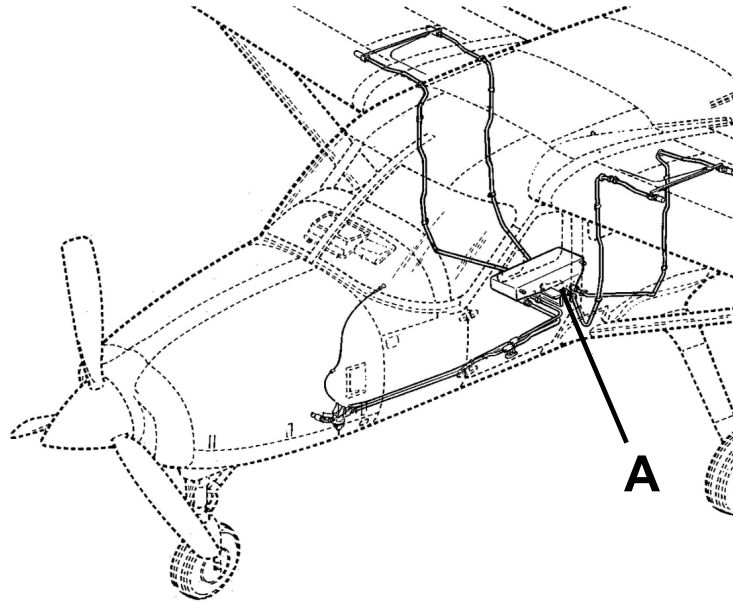

A

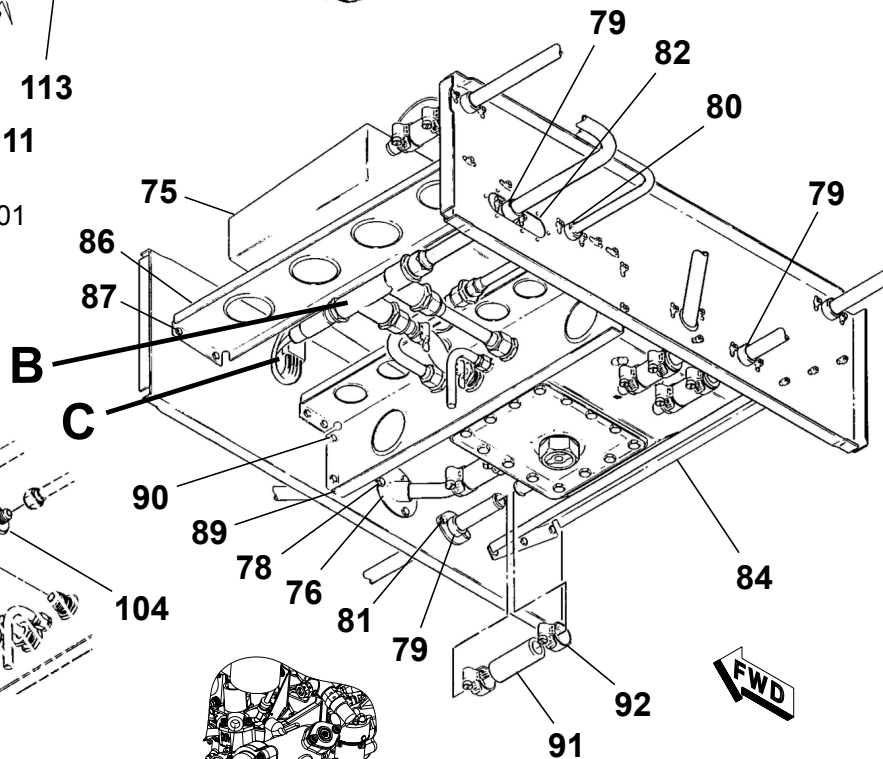

DETAIL A

26161013
 A2616R3003
 B2616T1044
 B2616R1010
 C2616R2002
 C2616R2002A

Figure 02
 Page 6

28-21-00 Nov 29, 2022

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

FUEL DISTRIBUTION SYSTEM

AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
75		.	FUEL RESERVOIR COMPONENTS							RF
		.	REFER TO 28-22-00 FIGURE 01 .							
76	2611147-2	.	SEAL ASSEMBLY - RIGHT						(208B) 0001 - 0853	01
- 76A	2611147-8	.	SEAL ASSEMBLY - RIGHT						(208B) 0854 & ON	01
- 77	2611147-1	.	SEAL ASSEMBLY - LEFT						(208B) 0001 - 0853	01
- 77A	2611147-7	.	SEAL ASSEMBLY - LEFT						(208B) 0854 & ON	01
		.	ATTACHING PARTS							
78	AN3-3A	.	BOLT						(208B) 0001 - 0853	03
- 78A	AN3-3A	.	BOLT						(208B) 0854 & ON	04
- 78B	NAS1149F0363P	.	WASHER				73197		(208B) 0854 & ON	04
		.	--*--							
79	S45A-13	.	SEAL				03296		(208B) 0001 & ON	03
80	S45A-12	.	SEAL				03296		(208B) 0001 & ON	01
81	AN3-4A	.	BOLT - SEAL ATTACH				80205		(208B) 0001 & ON	02
82	2616027-1	.	DOUBLER ASSEMBLY						(208B) 0001 & ON	01
- 83	MS21047L3	.	NUTPLATE				13499		(208B) 0001 & ON	02
84		.	SUPPORT ASSEMBLY - FUEL RESERVOIR AFT							RF
		.	REFER TO 53-12-00 FIGURE 01 .							
- 85	2611152-3	.	RUB STRIP						(208B) 0001 & ON	01
86	2611152-2	.	SUPPORT ASSEMBLY - FUEL RESERVOIR FORWARD						(208B) 0001 & ON	01
87	AN3-3A	.	BOLT - SUPPORT ASSEMBLY ATTACH						(208B) 0001 & ON	04
- 88	2611152-6	.	RUB STRIP						(208B) 0001 & ON	01
89		.	FUEL RESERVOIR COMPONENTS							RF
		.	REFER TO 28-22-00 FIGURE 01 .							
90	AN3-3A	.	BOLT - FUEL RESEVIOR COMPONENTS ATTACH						(208B) 0001 & ON	08
91	S51-10-10	.	HOSE						(208B) 0001 & ON	04
92	S1891-10S	.	CLAMP - CLAMP ATTACH						(208B) 0001 & ON	02
93	5956008-4	.	MANIFOLD ASSEMBLY						(208B) 0001 & ON	01
94	8C214-1	.	VALVE - SWING CHECK				82829		(208B) 0001 & ON	02
95	MS29512-12	.	O-RING						(208B) 0001 & ON	02
96	S2615-1	.	SWITCH - FUEL PRESSURE SC012						(208B) 0001 - 0431	NP
		.	FOR SPARES ORDER (MUST REPLACE WITH):							
		.	S2615-2							
- 96A	S2615-2	.	SWITCH - FUEL PRESSURE SC012						(208B) 0432 - 4999	01
		.	SPARES REPLACEMENT FOR:							
		.	S2615-1							
- 96B	AS5169D04L	.	PLUG/BLEEDER						(208B) 5000 & ON	01
96C	S2615-4	.	SWITCH - FUEL PRESSURE SN011						(208B) 5000 & ON	01
97	2677102-2	.	WBA - FUEL RESRVOIR -SMASSY						(208B) 2000 - 4999	01
- 97A	2677106-2	.	WBA - FUEL RESRVOIR -SMASSY						(208B) 5000 & ON	01
97B	2677106-5	.	WBA - FUEL PRESSURE SWITCH -SMASSY						(208B) 5000 & ON	01
98	MS29512-04	.	O-RING				58918		(208B) 0001 & ON	01
98A	M83248/2-904	.	O-RING						(208B) 0001 & ON	01
99	2616028-1	.	LINE ASSEMBLY						(208B) 0001 & ON	01
100	S51-8	.	HOSE - 3.50 IN LG BULK ITEM						(208B) 0001 & ON	01
		.	ATTACHING PARTS							
101	AN737TW30	.	CLAMP						(208B) 0001 & ON	02
		.	--*--							
102	2600101-74	.	LINE ASSEMBLY - FUEL						(208B) 0001 & ON	01
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL DISTRIBUTION SYSTEM

AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 102A	S2692-8N	.	SEAL - CONICAL OPTIONAL						(208B) 0001 & ON	02
103	2600101-75	.	LINE ASSEMBLY - FUEL						(208B) 0001 & ON	01
104	AS5174D0806	.	REDUCER						(208B) 0001 & ON	01
105	AS5174D1008	.	REDUCER						(208B) 0001 & ON	01
106	MS29512-08	.	O-RING						(208B) 0001 & ON	01
107	2T-4687	.	RELAY					02289	(208B) 0001 - 0241	01
			ATTACHING PARTS							
108	MS35206-230	.	SCREW					80205	(208B) 0001 - 0241	02
			--*--							
109	1N4005	.	DIODE						(208B) 0001 - 0241	01
110	S1694-4	.	TUBE - HEAT SHRINK BULK ITEM						(208B) 0001 - 0241	AR
111	S1640-6	.	CONNECTOR - ELEC PIN						(208B) 0001 - 0241	01
112	S1641-6	.	CONNECTOR - ELEC SOCKET						(208B) 0001 - 0241	01
113	S1741-1	.	ANCHOR						(208B) 0001 & ON	01
114	S2099-2	.	TIE						(208B) 0001 & ON	01
- 115	2670119-1	.	RELAY ASSEMBLY - FUEL PUMP FOR SPARES ORDER (MUST REPLACE WITH): 2670119-2						(208B) 0242 - 0388	01
- 116	2670119-2	.	RELAY ASSEMBLY - FUEL PUMP SPARES REPLACEMENT FOR: 2670119-1						(208B) 0389 & ON	01
			ATTACHING PARTS							
117	MS35206-230	.	SCREW					80205	(208B) 0242 & ON	02
			--*--							
118	2T-4687	.	RELAY					02289	(208B) 0242 - 0388	01
- 119	M83536/33-005L	.	RELAY						(208B) 0389 & ON	01
120	1N4005	.	DIODE						(208B) 0242 - 0388	01
121	M23053/5-104-9	.	SLEEVING						(208B) 0242 & ON	AR
122	S2209-2	.	TIE						(208B) 0242 & ON	02
123	S1640-9	.	CONNECTOR - ELEC PIN						(208B) 0242 & ON	01
124	S1641-9	.	CONNECTOR - ELEC SOCKET						(208B) 0242 & ON	01
- ITEM NOT ILLUSTRATED										

A24959



26161013
A2616X3001A

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

FUEL DISTRIBUTION SYSTEM


AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
150	1J18-10	.						FUEL FILTER - ASSEMBLY ATTACHING PARTS	26433	(208B) 0001 - 4999 01
151	AS5178-10	.						NUT		(208B) 0001 - 4999 01
152	MS29513-117	.						O-RING		(208B) 0001 - 4999 01
153	AN4H3A	.						BOLT		(208B) 0001 - 4999 04
154	NAS1149C0432R	.						WASHER		(208B) 0001 - 4999 04
		--*--								
155	102A10001-15	.	.					O-RING	26433	(208B) 0001 - 4999 01
- 156	MS29513-237	.	.					O-RING		(208B) 0001 - 4999 01
157	D9-55-1	.	.					FILTER - FUEL ATTACHING PARTS	26433	(208B) 0001 - 4999 01
158	104A10004-06	.	.					NUT	26433	(208B) 0001 - 4999 02
		--*--								
159	A1-533-1	.	.					BOWL - FUEL FILTER	26433	(208B) 0001 - 4999 01
160	D4-324-1	.	.					DRAIN PORT	26433	(208B) 0001 - 4999 01
161	102A10001-16	.	.					O-RING	26433	(208B) 0001 - 4999 01
- 162	MS29513-013	.	.					O-RING		(208B) 0001 - 4999 01
163	102A10001-36	.	.					O-RING - INDICATOR BUTTON	26433	(208B) 0001 - 4999 01
- 164	MS29513-122	.	.					O-RING - INDICATOR BUTTON		(208B) 0001 - 4999 01
165	2653001-2	.						COVER PLATE		(208B) 0001 - 4999 01
- 165A	2656001-3	.						COVER PLATE		(208B) 5000 & ON 01
166	S1450-14S20-032	.						WASHER		(208B) 0001 & ON 01
167	NAS1149C0963R	.						WASHER		(208B) 0001 & ON 01
168	50C9F	.						DRAIN VALVE	91511	(208B) 0001 - 4999 01
169	MS28778-6	.						O-RING		(208B) 0001 - 4999 01
170	2626013-2	.						BRACKET ATTACHING PARTS		(208B) 0001 - 4999 01
171	AN3-3A	.						BOLT		(208B) 0001 - 0065 06
- 172	AN3-3A	.						BOLT		(208B) 0066 - 4999 05
173	NAS1149C0332R	.						WASHER		(208B) 0001 - 0065 06
- 174	NAS1149C0332R	.						WASHER		(208B) 0066 - 4999 05
		--*--								
175		.						SUPPORT ASSEMBLY REFER TO 53-10-00 FIGURE 01 .		RF
176	MS29513-117	.						O-RING		(208B) 0001 - 4999 01
177	AN919-15	.						REDUCER		(208B) 0001 - 4999 01
178	500454-85	.						ELBOW	00624	(208B) 0001 - 4999 01



- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24960

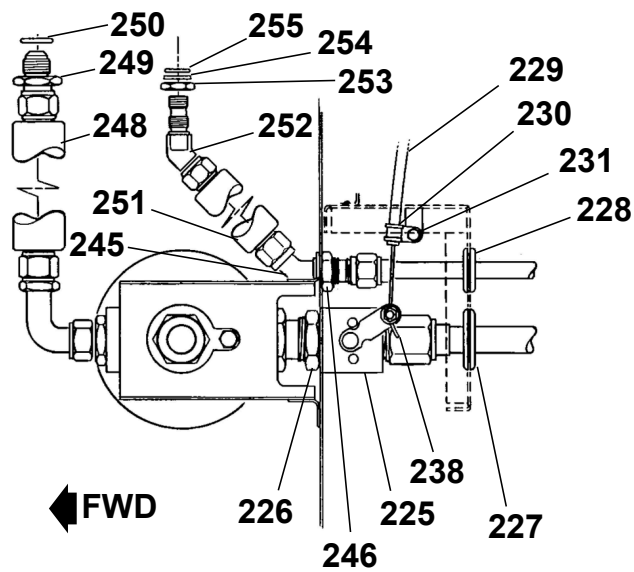


DETAIL C

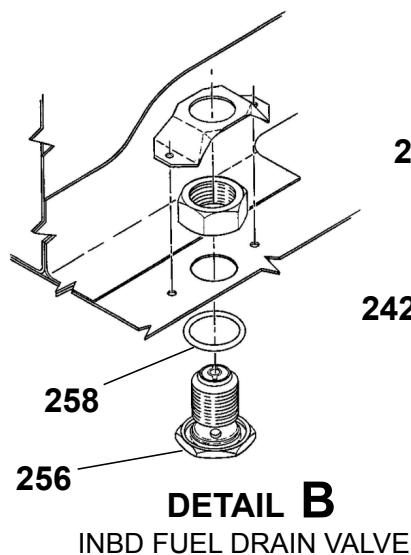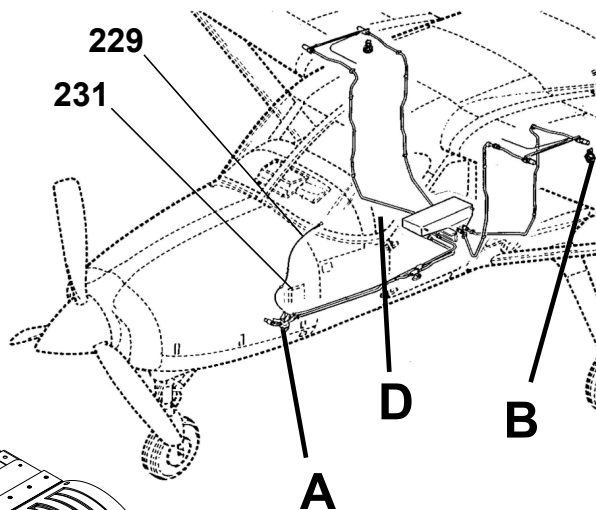


DETAIL B

INBD FUEL DRAIN VALVE

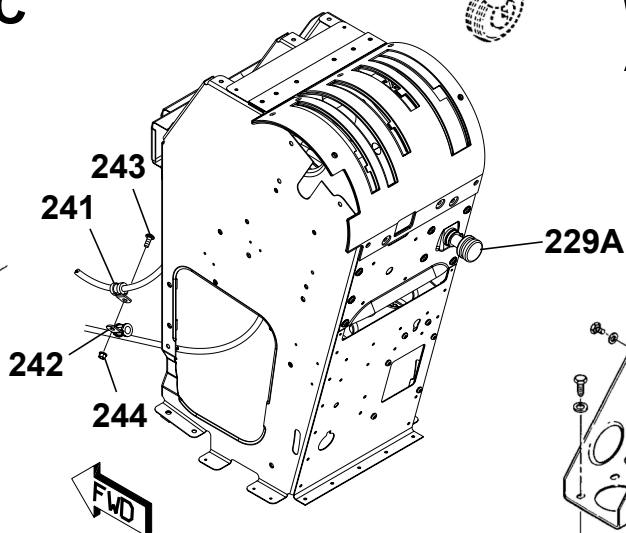


DETAIL D

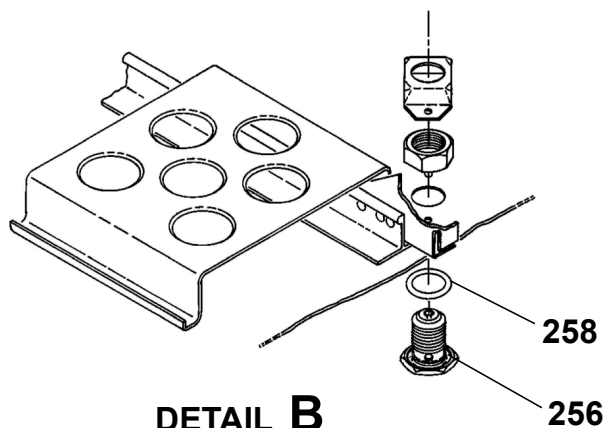

DETAIL B

OUTBD FUEL DRAIN VALVE

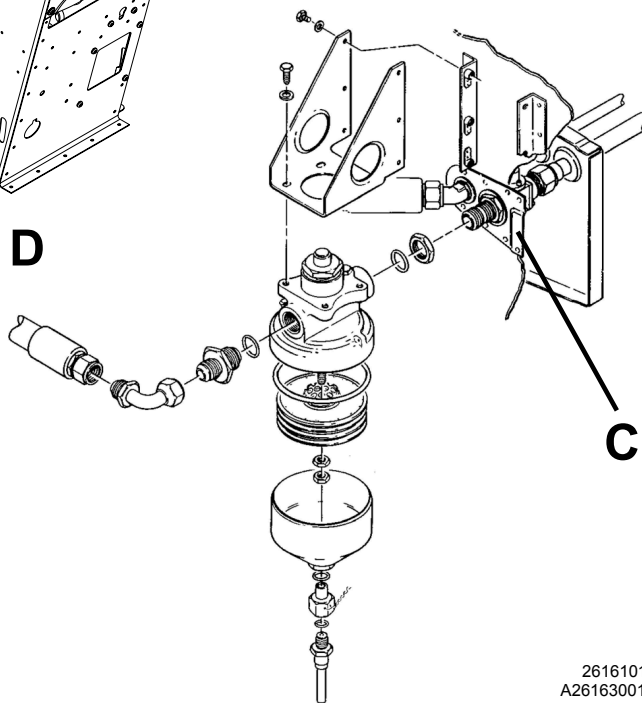

DETAIL A

FUEL DISTRIBUTION SYSTEM
 Figure 02. (Sheet 4)

26161013
 A26163001A
 B26261002
 B26261001
 C2616T1045
 D2616T1045

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

FUEL DISTRIBUTION SYSTEM

AIRPLANES (208B) 0001 & ON

		NOMENCLATURE									UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY			
225		.	VALVE - FUEL SHUTOFF REFER TO 28-23-01 FIGURE 01. ATTACHING PARTS								RF	
226	AS5178-10	.	NUT --*--							(208B) 0001 & ON	01	
227	MS35489-18	.	GROMMET							(208B) 0001 & ON	01	
228	MS35489-12	.	GROMMET							(208B) 0001 & ON	01	
229	S1241-54	.	CONTROL ASSEMBLY - FUEL SHUTOFF							(208B) 0001 - 4999	01	
229A	6352	.	CONTROL ASSEMBLY - DUEL FUEL SHUTOFF							(208B) 5000 & ON	01	
230	S2226-3	.	CLAMP ATTACHING PARTS							(208B) 0001 & ON	01	
231	AN3-4A	.	BOLT							80205	(208B) 0001 & ON	01
- 232	NAS1149F0332P	.	WASHER								(208B) 0001 & ON	01
- 233	MS21044N3	.	NUT --*--							4W953	(208B) 0001 & ON	01
- 234	S2226-3	.	CLAMP ATTACHING PARTS								(208B) 0001 & ON	01
- 235	AN525-10R7	.	SCREW								(208B) 0001 & ON	01
- 236	NAS1149F0332P	.	WASHER								(208B) 0001 & ON	01
- 237	MS21044N3	.	NUT --*--							4W953	(208B) 0001 & ON	01
238	S2323-5	.	CLAMP - CONTROL ATTACHING PARTS								(208B) 0001 & ON	01
- 239	NAS1149F0332P	.	WASHER								(208B) 0001 & ON	01
- 240	MS21044N3	.	NUT --*--							4W953	(208B) 0001 & ON	01
241	MS21919WDG4	.	CLAMP							OTWO	(208B) 5000 & ON	01
242	MS21919WDG5	.	CLAMP								(208B) 5000 & ON	01
243	MS35207-262	.	SCREW							80205	(208B) 5000 & ON	01
244	MS21043-3	.	NUT ALTERNATE SPARE (INTERCHANGEABLE WITH): NAS1291C3								(208B) 5000 & ON	01
- 244A	NAS1291C3	.	NUT ALTERNATE SPARE (INTERCHANGEABLE WITH): MS21043-3								(208B) 5000 & ON	01
245	AN837-6J	.	ELBOW ATTACHING PARTS								(208B) 0001 & ON	01
246	AS5178J06	.	NUT								(208B) 0001 & ON	01
- 247	NAS1149C0932R	.	WASHER --*--								(208B) 0001 & ON	01
248	S2495-8B000-0520	.	HOSE ASSEMBLY - FUEL SUPPLY TO ENGINE ALTERNATE SPARE (INTERCHANGEABLE WITH): S2808-8B0520								(208B) 0001 - 0586	NP
- 248A	S2808-8B0520	.	HOSE ASSEMBLY - FUEL SUPPLY TO ENGINE ALTERNATE SPARE (INTERCHANGEABLE WITH): S2495-8B000-0520 AE3663726H0520								(208B) 0587 & ON	01
- ITEM NOT ILLUSTRATED												

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


FUEL DISTRIBUTION SYSTEM

AIRPLANES (208B) 0001 & ON

		NOMENCLATURE							UNITS PER ASSY			
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY			
- 248B	AE3663726H0520	.	HOSE ASSEMBLY - FUEL SUPPLY TO ENGINE ALTERNATE SPARE (INTERCHANGEABLE WITH): S2808-8B0520							(208B) 0587 & ON	01	
249	AS5174D0808	.	UNION							(208B) 0001 & ON	01	
250	MS29512-08	.	O-RING							(208B) 0001 & ON	01	
251	S2495-6-000-0330	.	HOSE ASSEMBLY - FUEL MOTIVE FLOW TO ENGINE FOR SPARES ORDER (MUST REPLACE WITH): S2808-6-0330							(208B) 0001 - 0586	NP	
- 251A	S2808-6-0330	.	HOSE ASSEMBLY - FUEL MOTIVE FLOW TO ENGINE SPARES REPLACEMENT FOR: S2495-6-000-0330 ALTERNATE SPARE (INTERCHANGEABLE WITH): AE3663724G0330							(208B) 0587 & ON	01	
- 251B	AE3663724G0330	.	HOSE ASSEMBLY - FUEL MOTIVE FLOW TO ENGINE ALTERNATE SPARE (INTERCHANGEABLE WITH): S2808-6-0330							(208B) 0587 & ON	01	
252	S2626-1J	.	ELBOW							(208B) 0001 & ON	01	
253	AN6289J5	.	NUT							(208B) 0001 & ON	01	
254	MS28773-05	.	RETAINER							(208B) 0001 & ON	01	
255	MS29512-05	.	O-RING							(208B) 0001 & ON	01	
256	79C1	.	VALVE - FUEL DRAIN 2 LEFT & 2 RIGHT							91511	(208B) 0001 & ON	04
- 257	2-010-V835-75	.	.	O-RING						83259	(208B) 0001 & ON	01
258	MS29513-020	.	O-RING 2 - LEFT & 2 RIGHT							(208B) 0001 & ON	04	
- ITEM NOT ILLUSTRATED												

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24961

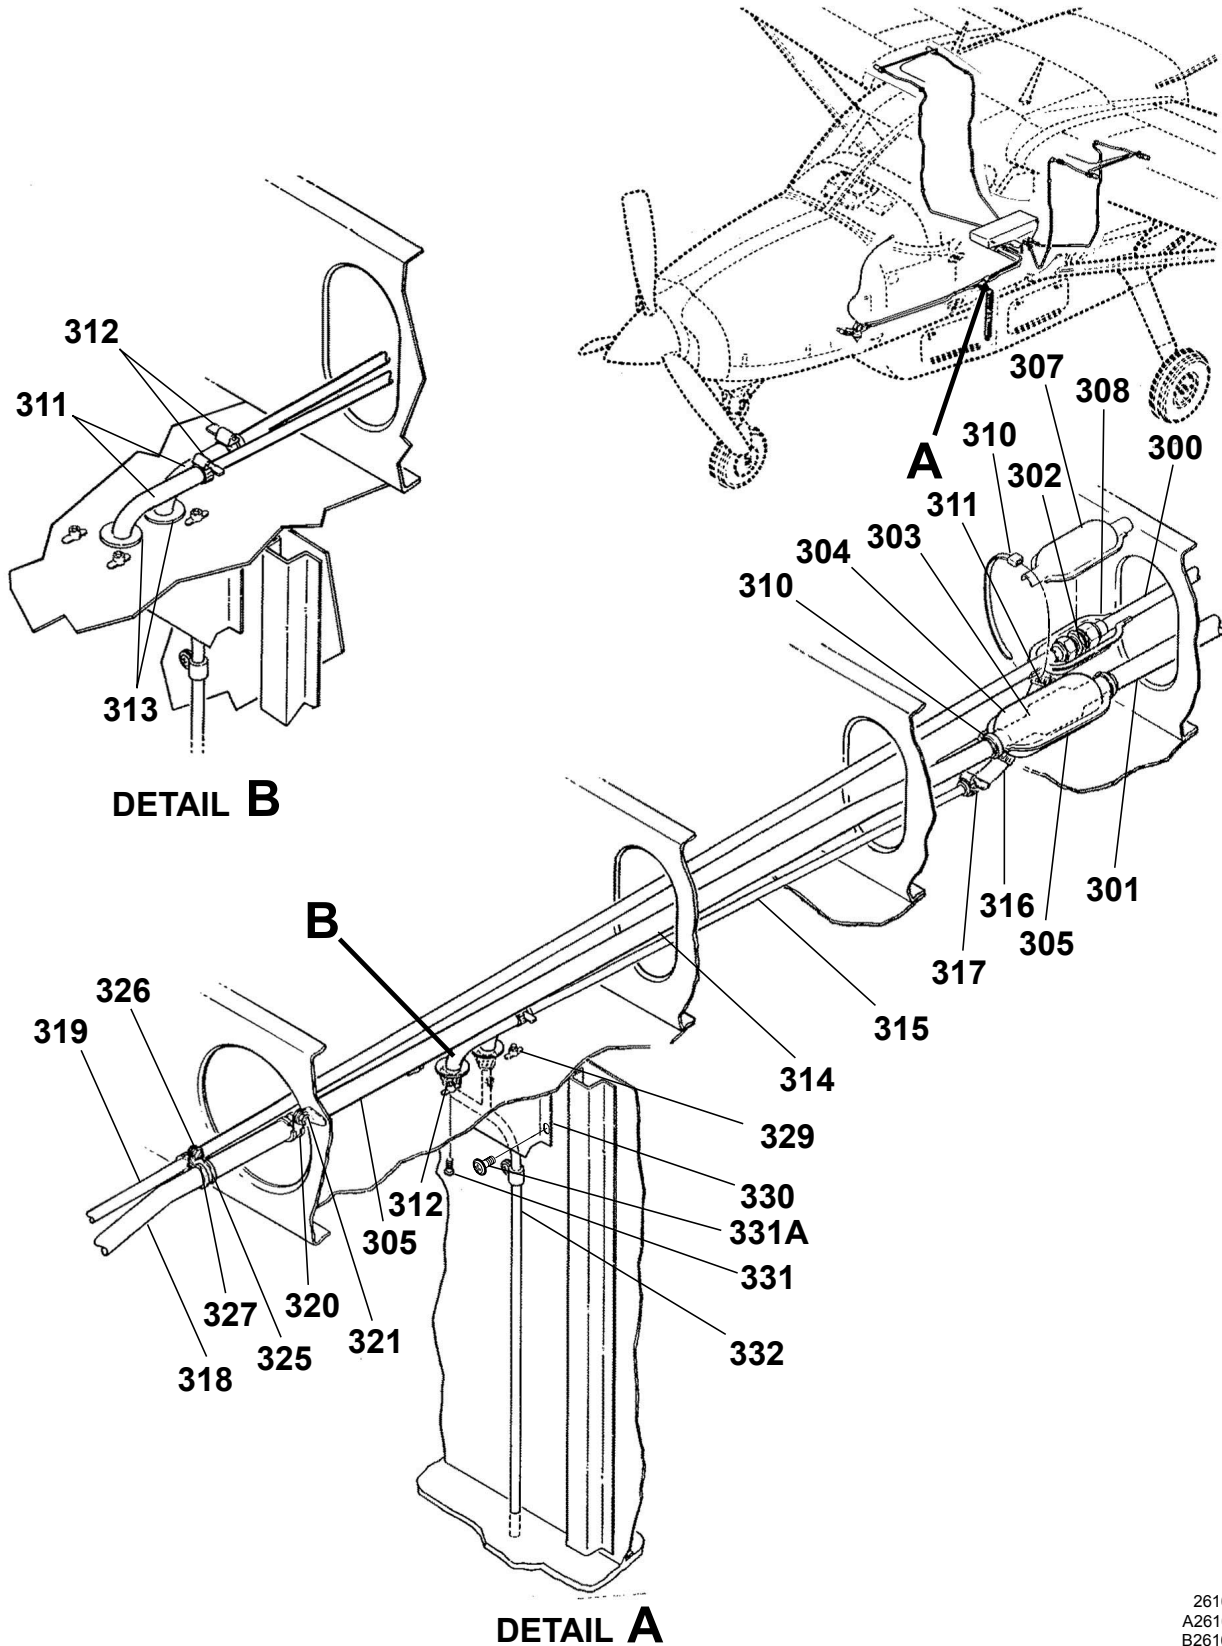

26161009
 A26163002
 B26161008

Figure 02
 Page 16
28-21-00 Nov 29, 2022

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL DISTRIBUTION SYSTEM

AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
300	2600101-26	.	LINE ASSEMBLY - FUEL						(208B) 0001 & ON	01
301	2600101-27	.	LINE ASSEMBLY - FUEL						(208B) 0001 & ON	01
302	AS5174D0606	.	UNION						(208B) 0001 & ON	01
303	AS5174-1010	.	UNION						(208B) 0001 & ON	01
304	2611195-8	.	COVER - FUEL LINE UNION UPPER						(208B) 0001 & ON	01
305	2611195-4	.	COVER ASSEMBLY - FUEL LINE UNION LOWER						(208B) 0001 - 0040	01
- 306	2611195-14	.	COVER ASSEMBLY - FUEL LINE UNION LOWER						(208B) 0041 & ON	01
307	2611195-6	.	COVER - FUEL LINE UNION UPPER						(208B) 0001 & ON	01
308	2611195-3	.	COVER ASSEMBLY - FUEL LINE UNION LOWER						(208B) 0001 - 0040	01
- 309	2611195-13	.	COVER ASSEMBLY - FUEL LINE UNION LOWER						(208B) 0041 & ON	01
			ATTACHING PARTS							
310	MS3367-1-9	.	STA STRAP						(208B) 0001 & ON	02
			--*--							
311	S2548-4	.	HOSE - 4.50 IN LG BULK ITEM						(208B) 0001 & ON	02
			ATTACHING PARTS							
312	S2357-1	.	CLAMP						(208B) 0001 & ON	02
			--*--							
313	MS35489-14	.	GROMMET						(208B) 0001 & ON	02
314	2600101-70	.	LINE - DRAIN						(208B) 0001 & ON	01
315	2600101-71	.	LINE - DRAIN						(208B) 0001 & ON	01
316	S2548-4	.	HOSE - 2.50 IN LG BULK ITEM						(208B) 0001 & ON	02
			ATTACHING PARTS							
317	S2357-1	.	CLAMP						(208B) 0001 & ON	02
			--*--							
318	2600101-29	.	LINE ASSEMBLY - FUEL						(208B) 0001 & ON	01
319	2600101-30	.	LINE ASSEMBLY - FUEL						(208B) 0001 & ON	01
320	MS21919DG10	.	CLAMP						(208B) 0001 & ON	01
			ATTACHING PARTS							
321	MS35207-267	.	SCREW						(208B) 0001 & ON	01
- 322	NAS43DD3-16N	.	SPACER						(208B) 0001 & ON	01
- 323	MS21044N3	.	NUT					4W953	(208B) 0001 & ON	01
- 324	AN743-13	.	BRACKET						(208B) 0001 & ON	01
			--*--							
325	MS21919WDG10	.	CLAMP						(208B) 0001 & ON	01
326	MS21919WDG6	.	CLAMP					84971	(208B) 0001 & ON	01
			ATTACHING PARTS							
327	MS35207-264	.	SCREW					80205	(208B) 0001 & ON	01
- 328	MS21044N3	.	NUT					4W953	(208B) 0001 & ON	01
			--*--							
329	MS21047L08	.	NUTPLATE						(208B) 0001 & ON	04
330	2601221-1	.	COVER - FUEL DRAIN LINE						(208B) 0001 & ON	01
			ATTACHING PARTS							
331	MS35206-244	.	SCREW						(208B) 0001 & ON	04
331A	AN525-10R7	.	SCREW						(208B) 0001 & ON	04
			--*--							
332		.	CARGO POD INSTALLATION							RF
			REFER TO 25-52-00 FIGURE 02.							
- ITEM NOT ILLUSTRATED										


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

28-21-00

FUEL ECOLOGY TANK SYSTEM
AIRPLANES (208B) 5000 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A89908

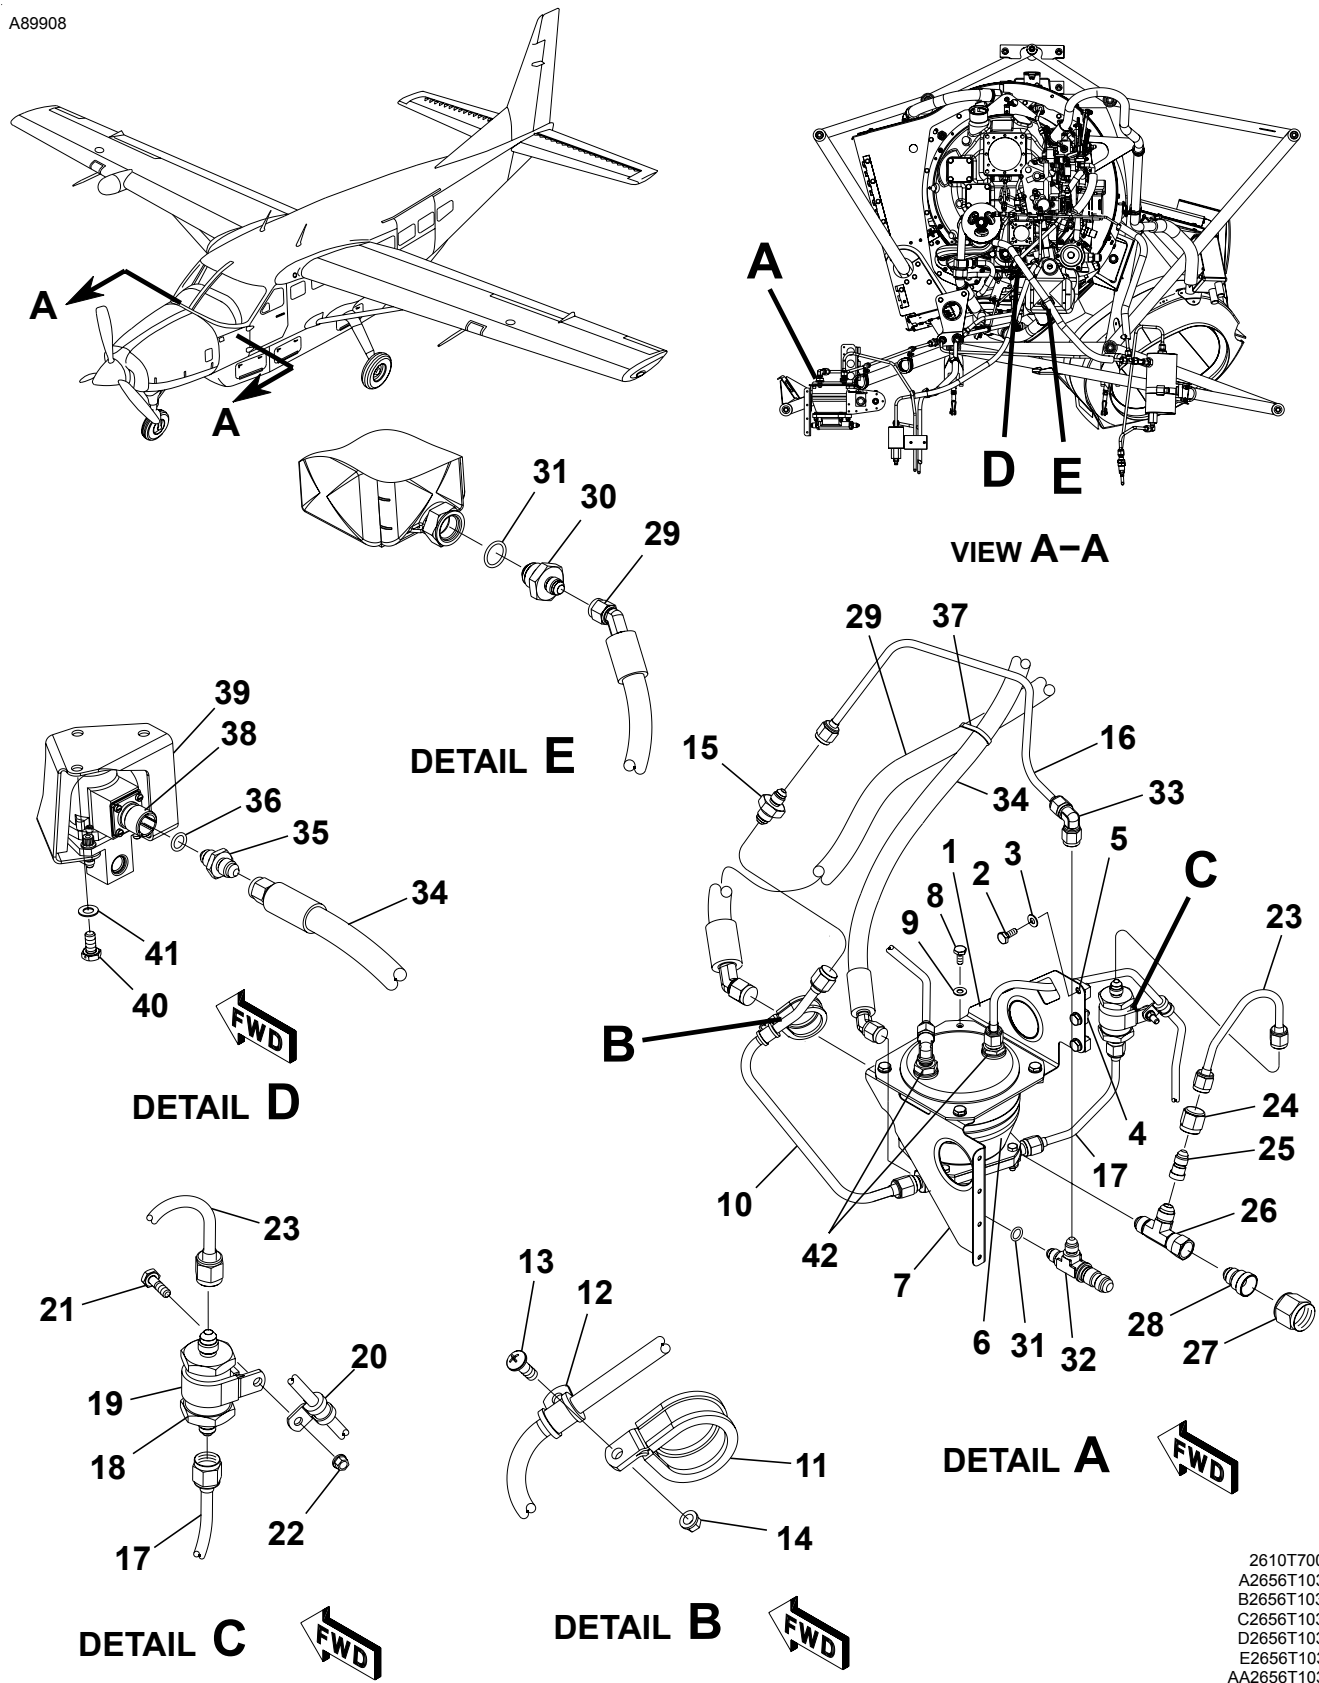

2610T7004
 A2656T1038
 B2656T1038
 C2656T1038
 D2656T1038
 E2656T1038
 AA2656T1038

FUEL ECOLOGY TANK SYSTEM
 Figure 03. (Sheet 1)

Figure 03
 Page 2
28-21-00 Nov 4, 2021

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

FUEL ECOLOGY TANK SYSTEM

AIRPLANES (208B) 5000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	2656001-18	.	BRACKET ASSEMBLY - FUEL ECOLOGY TANK						(208B) 5000 & ON	01
		.	ATTACHING PARTS							
2	AN3-4A	.	BOLT					80205	(208B) 5000 & ON	03
3	NAS1149C0332R	.	WASHER						(208B) 5000 & ON	03
		.	--*--							
4	MS21059L3	.	NUTPLATE						(208B) 5000 & ON	01
		.	ALTERNATE SPARE (INTERCHANGEABLE WITH):							
		.	NAS1791A3-1							
- 4A	NAS1791A3-1	.	NUTPLATE						(208B) 5000 & ON	01
		.	ALTERNATE SPARE (INTERCHANGEABLE WITH):							
		.	MS21059L3							
5	MS21062L3	.	NUTPLATE						(208B) 5000 & ON	04
6		.	FUEL ECOLOGY TANK							RF
		.	NOTE: ITEM SUPPLIED WITH ENGINE. REFER TO MAINTENANCE MANUAL FOR SUPPLIERS PUBLICATION LIST							
7	2656001-21	.	BRACKET ASSEMBLY - FUEL ECOLOGY TANK						(208B) 5000 - 5175	NP
		.	FOR SPARES ORDER (MUST REPLACE WITH):							
		.	2695014-1							
- 7A	2656001-28	.	BRACKET ASSEMBLY - FUEL ECOLOGY TANK						(208B) 5176 & ON	01
- 7A	2695014-1	.	BRACKET ASSEMBLY - FUEL ECOLOGY TANK MOD						(208B) 5000 - 5061	01
		.	SPARES REPLACEMENT FOR:							
		.	2656001-21							
		.	NOTE: AIRPLANES -B5000 THRU -B5061 MODIFIED BY CAB-71-02.							
		.	ATTACHING PARTS							
8	AN3-4A	.	BOLT					80205	(208B) 5000 & ON	04
9	NAS1149C0332R	.	WASHER						(208B) 5000 & ON	04
		.	--*--							
10	2656001-22	.	TUBE ASSEMBLY - FUEL ECOLOGY						(208B) 5000 & ON	01
11	MS21919WDG18	.	CLAMP					84971	(208B) 5000 & ON	01
12	MS21919WDG5	.	CLAMP						(208B) 5000 & ON	01
13	MS35207-263	.	SCREW					80205	(208B) 5000 & ON	01
14	MS21042L3	.	NUT					00624	(208B) 5000 & ON	01
15	AS5174J0504	.	REDUCER						(208B) 5000 & ON	01
16	2656001-26	.	TUBE ASSEMBLY - FUEL ECOLOGY						(208B) 5000 & ON	01
17	2656001-23	.	TUBE ASSEMBLY - FUEL ECOLOGY						(208B) 5000 & ON	01
18	S2218-5	.	VALVE - SWING CHECK						(208B) 5000 & ON	01
19	MS21919WDG16	.	CLAMP						(208B) 5000 & ON	01
20	MS21919WDG4	.	CLAMP					OTWO	(208B) 5000 & ON	01
21	AN3-5A	.	BOLT						(208B) 5000 & ON	01
22	MS21042L3	.	NUT					00624	(208B) 5000 & ON	01
23	2656001-12	.	TUBE ASSEMBLY - FUEL ECOLOGY						(208B) 5000 & ON	01
24	AN818-6J	.	NUT						(208B) 5000 & ON	01
25	NAS1564J6-4	.	REDUCER						(208B) 5000 & ON	01
26	6R6X-SS	.	TEE					30780	(208B) 5000 & ON	01
27	AN818-10J	.	NUT						(208B) 5000 & ON	01
28	NAS1564J10-6	.	REDUCER						(208B) 5000 & ON	01
29	AE6208G0254-203	.	HOSE ASSEMBLY - FUEL SUPPLY					00624	(208B) 5000 & ON	01
30	AS5174J1006	.	REDUCER						(208B) 5000 & ON	01
31	M83248/2-910	.	PACKING						(208B) 5000 & ON	01

- ITEM NOT ILLUSTRATED

FUEL ECOLOGY TANK SYSTEM

AIRPLANES (208B) 5000 & ON

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG




28-22-00

FUEL RESERVOIR COMPONENTS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24962

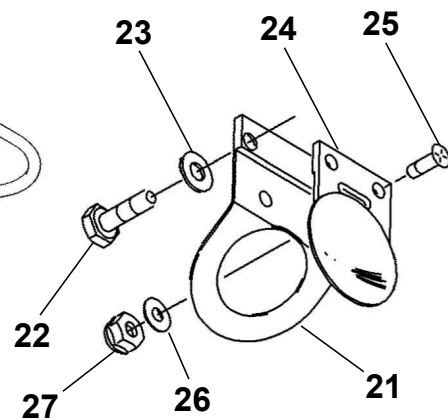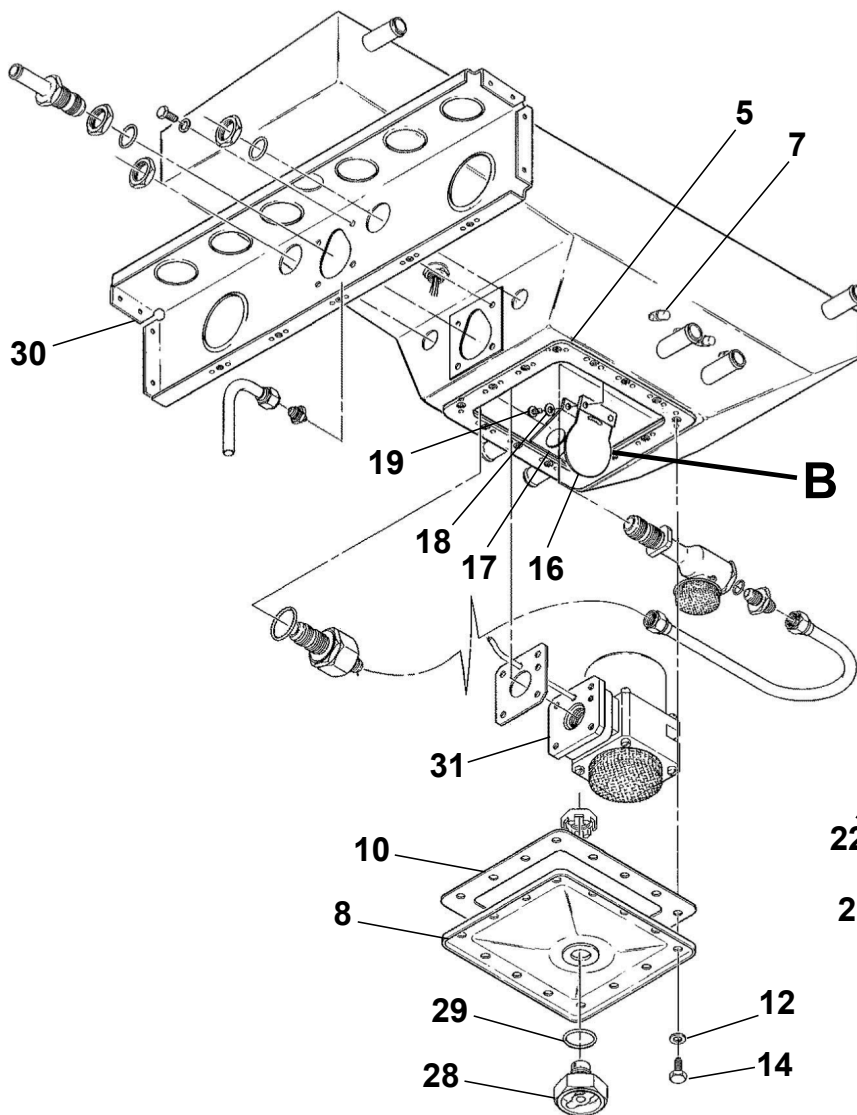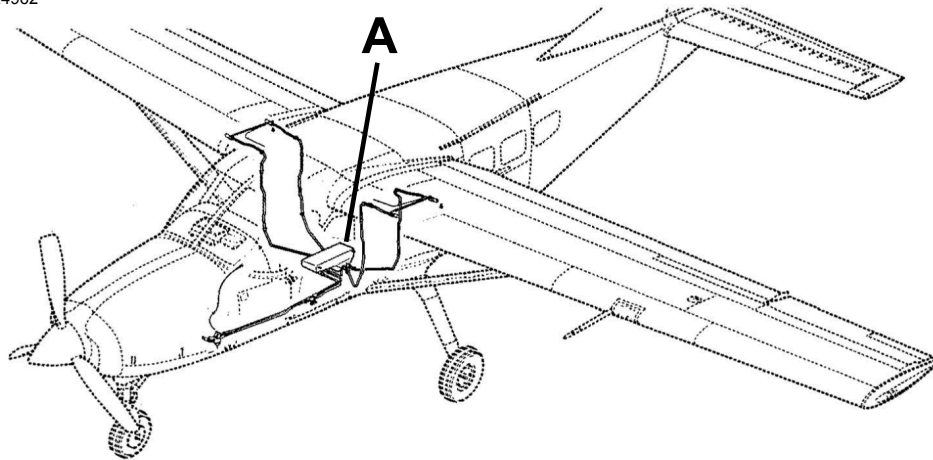

DETAIL B

AIRPLANE 20800155 AND ON
 AND 208B0180 AND ON

DETAIL A

FUEL RESERVOIR COMPONENTS
 Figure 01. (Sheet 1)

26161013
 A26163004
 B2616T1026

Figure 01
 Page 2
28-22-00 Nov 29, 2022

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

FUEL RESERVOIR COMPONENTS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
17	2616017-30	.	.	.	STOP BRACKET - SWING CHECK VALVE FOR SPARES ORDER (MUST REPLACE WITH): 2616031-1 * AIRPLANES (208) 0001 THRU 0154 INCORPORATING SK208-25 ATTACHING PARTS				(208) 0107 - 0154 (208) *0001 - 0106 (208) *0001 - 0154 (208B) 0001 - 0179	NP
18	NAS1149D0363K	.	.	.	WASHER				(208) 0001 - 0154 (208B) 0001 - 0179	02
19	MS35207-266	.	.	.	SCREW			71468	(208) 0001 - 0106 (208) *0001 & ON	02
- 20	AN3-5A	.	.	.	BOLT				(208) 0107 - 0154 (208) *0001 - 0106 (208) *0001 - 0154 (208B) 0001 - 0179	02


21	2616031-1	.	.	.	VALVE ASSEMBLY - FUEL RESERVOIR SPARES REPLACEMENT FOR: 9912071-1 2616017-30 ATTACHING PARTS				(208) 0155 & ON (208B) 0180 & ON	01
22	AN3-5A	.	.	.	BOLT				(208) 0155 & ON (208B) 0180 & ON	02
23	NAS1149D0363K	.	.	.	WASHER				(208) 0155 & ON (208B) 0180 & ON	02

24	9912071-2	.	.	.	VALVE				(208) 0155 & ON (208B) 0180 & ON	01
25	MS24693-S27	.	.	.	SCREW				(208) 0155 & ON (208B) 0180 & ON	02
26	NAS1149FN632P	.	.	.	WASHER			4W953	(208) 0155 & ON (208B) 0180 & ON	02
27	MS21045-06	.	.	.	NUT			92092	(208) 0015 & ON (208B) 0180 & ON	02
28	967B-5	.	.	.	VALVE - FUEL DRAIN - WITHOUT CARGO POD			91511	(208) 0001 & ON (208B) 0001 & ON	01
29	M83248/1-020	.	.	.	O-RING W/O CARGO POD				(208) 0001 & ON (208B) 0001 & ON	01
30		.	.	.	BRACKET - RESERVOIR MOUNTING REFER TO 53-12-00 FIGURE 01 .					RF
31	1613-00-1	.	.	.	PUMP - FUEL BOOST ELEC ALTERNATE SPARE (INTERCHANGEABLE WITH): 2C6-8			09445	(208) 0001 & ON (208B) 0001 & ON	01
- 32	2C6-8	.	.	.	PUMP - FUEL BOOST ALTERNATE SPARE (INTERCHANGEABLE WITH): 1613-00-1			26433	(208) 0051 & ON (208B) 0001 - 4999	01
- 32A	2C6-10	.	.	.	PUMP - FUEL BOOST				(208B) 5000 & ON	01


- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24963

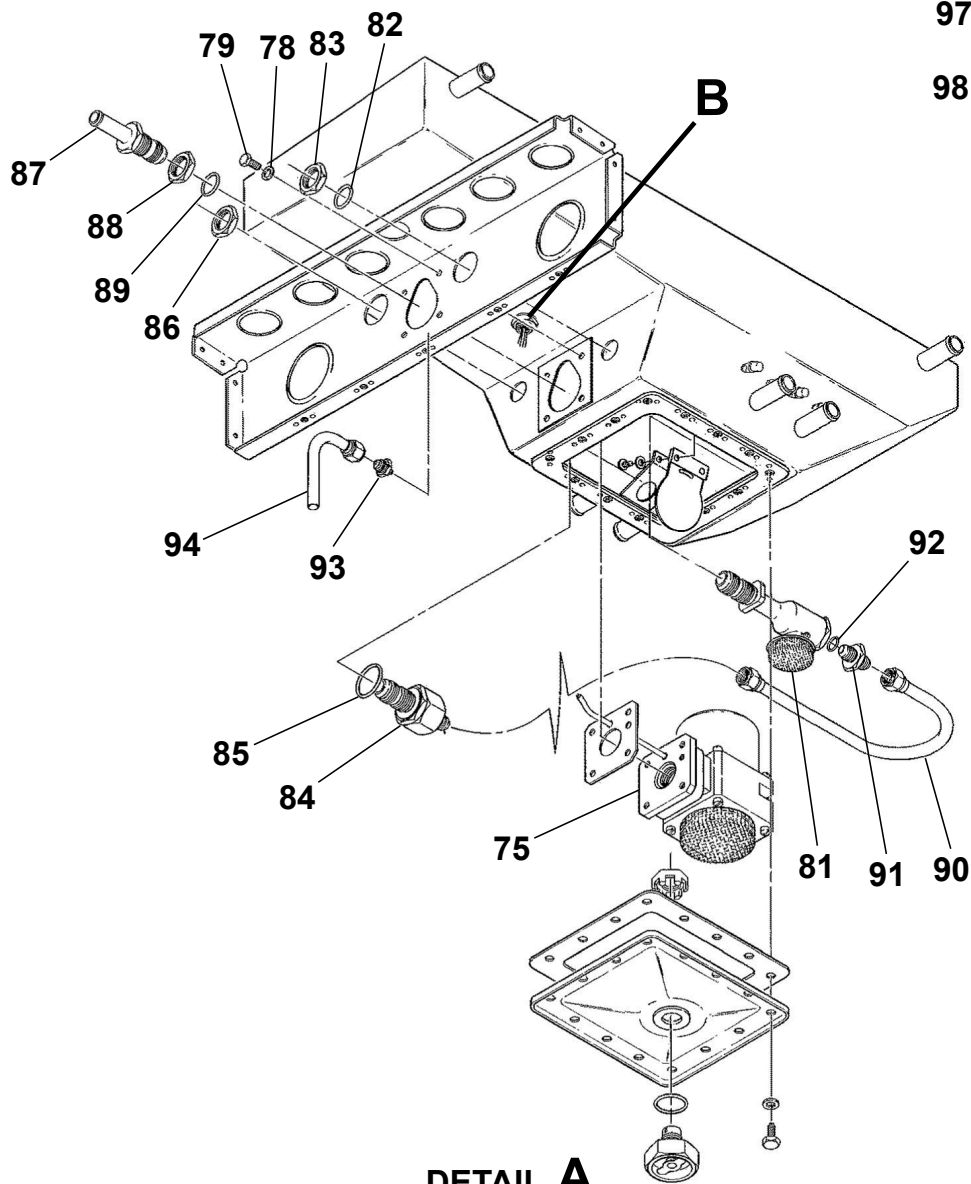

DETAIL A
FUEL RESERVOIR COMPONENTS
 Figure 01. (Sheet 2)

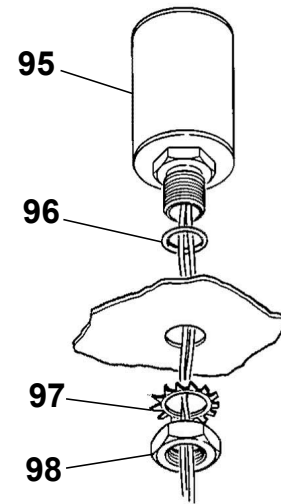

DETAIL B

26161013
 A26163004
 B26161012

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL RESERVOIR COMPONENTS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
75	2696001-1	.	GASKET - USED WITH 1613-00-1 PUMP ONLY						(208) 0001 - 0106	01
- 76	2616024-2	.	GASKET - USED WITH 2C6-8 PUMP ONLY						(208) 0051 - 0106	01
- 77	2616024-3	.	GASKET						(208) 0107 & ON (208B) 0001 & ON	01
78	NAS1149F0432P	.	WASHER						(208) 0001 & ON (208B) 0001 & ON	04
79	AN4H4A	.	BOLT						(208) 0001 - 0106	04
- 80	AN4H5A	.	BOLT						(208) 0107 & ON (208B) 0001 & ON	04
81	68E101-14	.	PUMP - EJECTOR					82829	(208) 0001 & ON (208B) 0001 - 4999	01
- 81A	68E101-19	.	PUMP - EJECTOR ATTACHING PARTS					82829	(208B) 5000 & ON	01
82	NAS1596-08	.	O-RING						(208) 0001 & ON (208B) 0001 & ON	01
83	AS5178W08	.	NUT						(208) 0001 & ON (208B) 0001 & ON	01
			--*--							
84	6C172	.	CHECK VALVE - FUEL					82829	(208) 0001 & ON (208B) 0001 & ON	01
			ATTACHING PARTS							
85	M83248/1-212	.	O-RING						(208) 0001 & ON (208B) 0001 & ON	01
86	AS5178W08	.	NUT						(208) 0001 & ON (208B) 0001 & ON	01
			--*--							
87	AN807-8D	.	ADAPTER						(208) 0001 & ON (208B) 0001 & ON	01
88	AS5178W08	.	NUT						(208) 0001 & ON (208B) 0001 & ON	01
89	NAS1596-08	.	O-RING						(208) 0001 & ON (208B) 0001 & ON	01
90	2600101-12	.	LINE ASSEMBLY						(208) 0001 & ON (208B) 0001 & ON	01
91	AS5174D0606	.	UNION						(208) 0001 & ON (208B) 0001 & ON	01
92	MS29512-06	.	O-RING						(208) 0001 & ON (208B) 0001 & ON	01
93	AS5194J0402	.	ADAPTER						(208) 0001 - 0106	01
			NOTE: THIS PART IS NOT REQUIRED WHEN ALTERNATE (2C6-8) FUEL BOOST PUMP IS INSTALLED							
94	2600101-16	.	LINE ASSEMBLY - DRAIN W/O CARGO POD						(208) 0001 - 0106	01
			NOTE: THIS PART IS NOT REQUIRED WHEN ALTERNATE (2C6-8) FUEL BOOST PUMP IS INSTALLED							
95	GF5500-82	.	SWITCH - LOW FUEL LEVEL					58918	(208) 0001 & ON (208B) 0001 & ON	01
			ATTACHING PARTS							
96	MS28778-6	.	O-RING						(208) 0001 & ON (208B) 0001 & ON	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


FUEL RESERVOIR COMPONENTS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
97	MS35335-38	.	WASHER							(208) 0001 & ON (208B) 0001 & ON	01
98	AN924-6D	.	NUT							(208) 0001 & ON (208B) 0001 & ON	01
		--*									
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24964

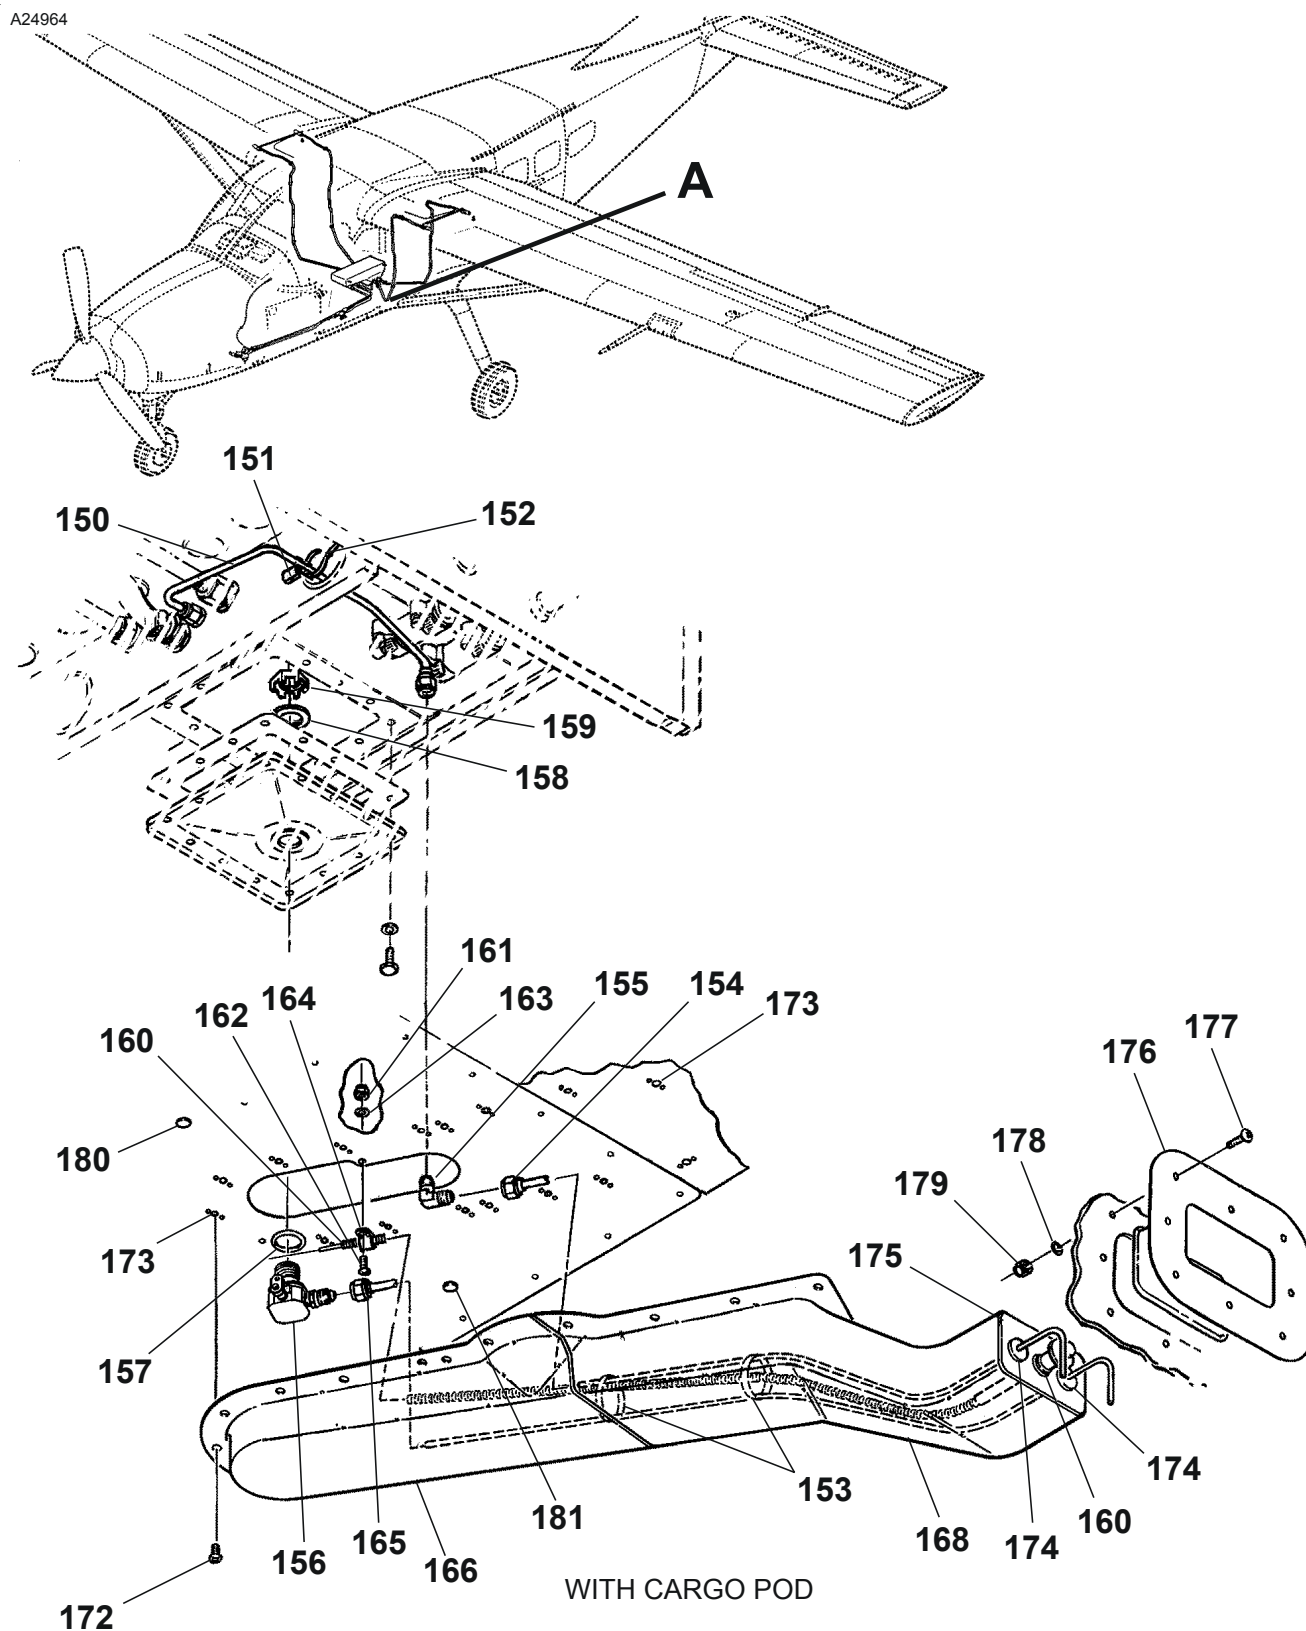

WITH CARGO POD

DETAIL A

FUEL RESERVOIR COMPONENTS
Figure 01. (Sheet 3)

26161013
 A26162008

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL RESERVOIR COMPONENTS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

		NOMENCLATURE									UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
150	2600101-61	.	LINE ASSEMBLY - DRAIN WITH CARGO POD							(208) 0001 & ON (208B) 0001 & ON	01
			NOTE: THIS PART IS NOT REQUIRED WHEN ALTERNATE (2C6-8) FUEL BOOST PUMP IS INSTALLED								
151	S4132-1	.	ANCHOR - WITH CARGO POD							(208) 0001 & ON (208B) 0001 & ON	01
			NOTE: THIS PART IS NOT REQUIRED WHEN ALTERNATE (2C6-8) FUEL BOOST PUMP IS INSTALLED								
152	S2209-1	.	STA STRAP WITH CARGO POD							(208) 0001 & ON (208B) 0001 & ON	01
			NOTE: THIS PART IS NOT REQUIRED WHEN ALTERNATE (2C6-8) FUEL BOOST PUMP IS INSTALLED								
153	S2209-1	.	STA STRAP WITH CARGO POD							(208) 0001 & ON (208B) 0001 & ON	02
154	2600101-62	.	LINE ASSEMBLY - DRAIN WITH CARGO POD							(208) 0001 & ON (208B) 0001 & ON	01
			NOTE: THIS PART IS NOT REQUIRED WHEN ALTERNATE (2C6-8) FUEL BOOST PUMP IS INSTALLED								
155	AS1034D0404	.	ELBOW							(208) 0001 & ON (208B) 0001 & ON	01
156	180C4	.	VALVE ASSEMBLY - FUEL DRAIN WITH CARGO POD				91511		(208) 0001 & ON (208B) 0001 & ON	01	
157	M83248/1-021	.	O-RING - WITH CARGO POD							(208) 0001 & ON (208B) 0001 & ON	01
158	NAS1149D1290K	.	WASHER - WITH CARGO POD							(208) 0001 & ON (208B) 0001 & ON	01
159	856A2	.	NUT - VALVE WITH CARGO POD				91511		(208) 0001 & ON (208B) 0001 & ON	01	
160	S1239-49	.	CONTROL ASSEMBLY - FUEL RESERVOIR DRAIN VALVE WITH CARGO POD							(208) 0001 & ON (208B) 0001 & ON	01
			ATTACHING PARTS								
161	MS21044N3	.	NUT - WITH CARGO POD				4W953		(208) 0001 & ON (208B) 0001 & ON	01	
162	MS35207-262	.	SCREW - WITH CARGO POD				80205		(208) 0001 & ON (208B) 0001 & ON	01	
163	NAS1149F0332P	.	WASHER - WITH CARGO POD							(208) 0001 & ON (208B) 0001 & ON	01
164	AN742D3	.	CLAMP - WITH CARGO POD							(208) 0001 & ON (208B) 0001 & ON	01
			--*--								
165	2600101-63	.	LINE ASSEMBLY - FUEL RESERVOIR DRAIN WITH CARGO POD							(208) 0001 & ON (208B) 0001 & ON	01
166	2601210-2	.	COVER - FUEL DRAIN INBOARD WITH CARGO POD							(208) 0001 - 0085	01
			NOTE: WHEN INITIALLY ORDERING FOR SPARES PRIOR TO (208) -0086, COVERS 2601210-7 AND 2601343-2 MUST BE ORDERED.								
- 167	2601210-7	.	COVER - FUEL DRAIN INBOARD WITH CARGO POD							(208) 0086 & ON (208B) 0001 & ON	01
168	2601210-1	.	COVER - FUEL DRAIN OUTBOARD WITH CARGO							(208) 0001 - 0085	01
			NOTE: WHEN INITIALLY ORDERING FOR SPARES PRIOR TO (208) -0086 COVERS 2601210-7 AND 2601343-2 MUST BE ORDERED.								
- 169	2601210-6	.	COVER - FUEL DRAIN OUTBOARD WITH CARGO POD							(208) 0086 - 0106	NP
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL RESERVOIR COMPONENTS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

		NOMENCLATURE									UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
- 170	2601343-1	.	COVER - FUEL DRAIN OUTBOARD WITH CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2601343-2							(208) 0107 - 0107 (208B) 0001 - 0184	NP
- 171	2601343-2	.	COVER - FUEL DRAIN OUTBOARD WITH CARGO POD SPARES REPLACEMENT FOR: 2601343-1							(208) 0158 & ON (208B) 0185 & ON	01
172	MS35207-262	.	SCREW - WITH CARGO POD							80205 (208) 0001 & ON (208B) 0001 & ON	21
173	MS21047L3	.	NUTPLATE - WITH CARGO POD							13499 (208) 0001 & ON (208B) 0001 & ON	21
174	MS35489-6	.	GROMMET - WITH CARGO POD							(208) 0001 & ON (208B) 0001 & ON	02
175	2601210-4	.	COVER - FUEL DRAIN WITH CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2601210-8							(208) 0001 - 0261 (208B) 0001 - 0610	NP
176	2601210-3	.	COVER - FUEL DRAIN OUTBOARD CARGO POD							(208) 0001 - 0261 (208B) 0001 - 0610	01
- 176A	2601210-9	.	COVER ASSEMBLY - FUEL DRAIN WITH CARGO POD							(208) 0262 & ON (208B) 0611 & ON	01
- 176B	2601210-8	.	.	COVER - FUEL DRAIN WITH CARGO POD SPARES REPLACEMENT FOR: 2601210-4						(208) 0001 & ON (208B) 0001 & ON	01
- 176C	2601210-3	.	.	COVER - FUEL DRAIN OUTBOARD CARGO POD						(208) 0001 & ON (208B) 0001 & ON	01
177	AN525-10R8	.	SCREW - WITH CARGO POD							(208) 0001 & ON (208B) 0001 & ON	08
178	NAS1149F0332P	.	WASHER - WITH CARGO POD							(208) 0001 & ON (208B) 0001 & ON	08
179	MS21044N3	.	NUT - WITH CARGO POD							4W953 (208) 0001 & ON (208B) 0001 & ON	08
180	CM2692-14J1S	.	PLUG BUTTON - WITH CARGO POD							(208) 0001 & ON (208B) 0001 & ON	01
181	CM2692-8J1S	.	PLUG BUTTON - WITH CARGO POD							(208) 0001 & ON (208B) 0001 & ON	01
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

28-22-01


TKS FUEL SUMP INSTALLATION - FAIRING

AIRPLANES (208) 0518 & ON AND AIRPLANES (208B) 2000 & ON

**THIS FIGURE ALSO CONTAINS PRODUCTION PARTS AND ASSEMBLIES
INSTALLED WITH THE TKS AND/OR LOW AIRSPEED AWARENESS (LAA)
SYSTEMS. TO ORDER PARTS FOR SERIAL SPECIFIC CONFIGURATIONS/
INSTALLATIONS MODIFIED BY SK208-174, SK208-175, SK208-179,
SK208-180, CAB09-9, AND CAB08-7, PLEASE REFER TO THE LATEST
APPLICABLE REVISION OF THE SPECIFIC CARAVAN BULLETIN (CAB)
AND/OR SERVICE KIT (SK) FOR DETAILED INFORMATION.**

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A82035

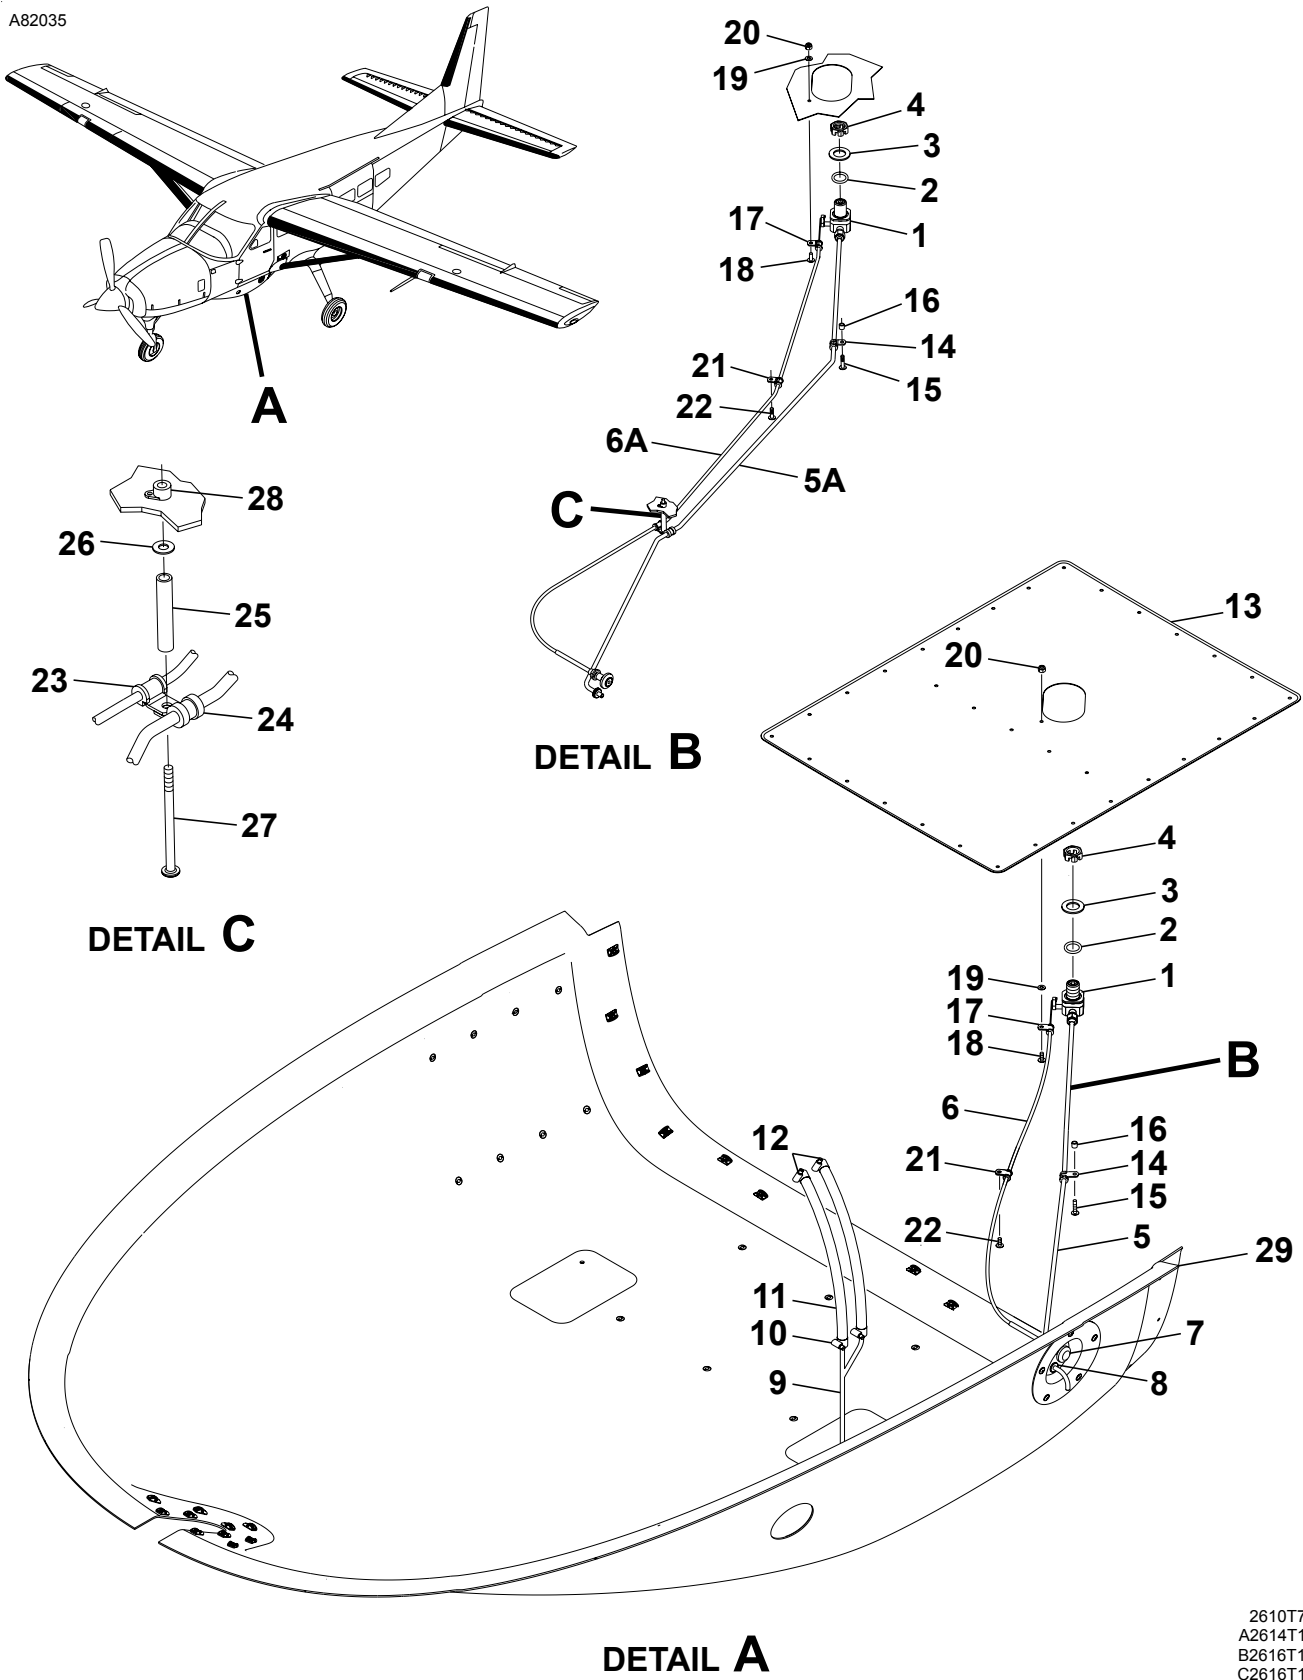

DETAIL A
TKS FUEL SUMP INSTALLATION - FAIRING
Figure 01. (Sheet 1)

2610T7002
 A2614T1442
 B2616T1042
 C2616T1042

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

TKS FUEL SUMP INSTALLATION - FAIRING

AIRPLANES (208) 0518 & ON AND AIRPLANES (208B) 2000 & ON

THIS FIGURE ALSO CONTAINS PRODUCTION PARTS AND ASSEMBLIES INSTALLED WITH THE TKS AND/OR LOW AIRSPEED AWARENESS (LAA) SYSTEMS. TO ORDER PARTS FOR SERIAL SPECIFIC CONFIGURATIONS/INSTALLATIONS MODIFIED BY SK208-174, SK208-175, SK208-179, SK208-180, CAB09-9, AND CAB08-7, PLEASE REFER TO THE LATEST APPLICABLE REVISION OF THE SPECIFIC CARAVAN BULLETIN (CAB) AND/OR SERVICE KIT (SK) FOR DETAILED INFORMATION.

ITEM	PART NUMBER	NOMENCLATURE						EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6		
1	180C4	.	VALVE ASSEMBLY					91511 (208) 0518 & ON (208B) 2000 & ON	01
			ATTACHING PARTS						
2	M83248/1-021	.	O-RING					(208) 0518 & ON (208B) 2000 & ON	01
3	NAS1149D1290K	.	WASHER					(208) 0518 & ON (208B) 2000 & ON	01
4	856A2	.	NUT					91511 (208) 0518 & ON (208B) 2000 & ON	01
			--*--						
5	2616033-4	.	TUBE ASSEMBLY - SUMP					(208) 0518 & ON (208B) 2000 & ON	01
5A	2616033-8	.	TUBE ASSEMBLY - SUMP					(208) 0518 & ON (208B) 2000 & ON	01
6	S1212-37	.	CONTROL					(208) 0518 & ON (208B) 2000 & ON	01
6A	S1212-66	.	CONTROL					(208B) 2000 & ON	01
7	S1979-1	.	KNOB ASSEMBLY					(208) 0518 & ON (208B) 2000 & ON	01
8	MS35489-6	.	GROMMET					(208) 0518 & ON (208B) 2000 & ON	01
9	2616033-5	.	DRAIN TUBE ASSEMBLY - WELDED					(208) 0518 & ON (208B) 2000 & ON	01
10	AN737TW22	.	CLAMP					(208) 0518 & ON (208B) 2000 & ON	02
11	S2548-4-6.00	.	HOSE					(208) 0518 & ON (208B) 2000 & ON	01
12		.	FUEL DISTRIBUTION SYSTEM REFER TO 28-21-00 FIGURE 01 .						RF
13	2616033-3	.	SKIN PANEL - REMOVABLE					(208) 0518 & ON (208B) 2000 & ON	01
14	MS21919WDG4	.	CLAMP					OTWO (208) 0518 & ON (208B) 2000 & ON	01
			ATTACHING PARTS						
15	AN525-10R14	.	SCREW					(208) 0518 & ON (208B) 2000 & ON	01
16	NAS43DD3-18FC	.	SPACER					(208) 0518 & ON (208B) 2000 & ON	01
			--*--						
17	MS21919WDG3	.	CLAMP					70436 (208) 0518 & ON (208B) 2000 & ON	01
			ATTACHING PARTS						
18	AN525-10R8	.	SCREW					(208) 0518 & ON (208B) 2000 & ON	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

TKS FUEL SUMP INSTALLATION - FAIRING

AIRPLANES (208) 0518 & ON AND AIRPLANES (208B) 2000 & ON

THIS FIGURE ALSO CONTAINS PRODUCTION PARTS AND ASSEMBLIES INSTALLED WITH THE TKS AND/OR LOW AIRSPEED AWARENESS (LAA) SYSTEMS. TO ORDER PARTS FOR SERIAL SPECIFIC CONFIGURATIONS/INSTALLATIONS MODIFIED BY SK208-174, SK208-175, SK208-179, SK208-180, CAB09-9, AND CAB08-7, PLEASE REFER TO THE LATEST APPLICABLE REVISION OF THE SPECIFIC CARAVAN BULLETIN (CAB) AND/OR SERVICE KIT (SK) FOR DETAILED INFORMATION.

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
19	NAS1149F0332P	.	WASHER						(208) 0518 & ON (208B) 2000 & ON	01
20	MS21044N3	.	NUT					4W953	(208) 0518 & ON (208B) 2000 & ON	01
			--*--							
21	MS21919WDG3	.	CLAMP					70436	(208) 0518 & ON (208B) 2000 & ON	01
			ATTACHING PARTS							
22	AN525-10R11	.	SCREW						(208) 0518 & ON (208B) 2000 & ON	01
			--*--							
23	MS21919WDG3	.	CLAMP					70436	(208B) 2000 & ON	01
24	MS21919WDG4	.	CLAMP					OTWO	(208B) 2000 & ON	01
			ATTACHING PARTS							
25	NAS43DD3-109FC	.	SPACER						(208B) 2000 & ON	01
26	NAS1149F0332P	.	WASHER						(208B) 2000 & ON	01
27	MS35207-273	.	SCREW						(208B) 2000 & ON	01
28	MS21073L3	.	NUTPLATE						(208B) 2000 & ON	01
			--*--							
29		.	TKS FAIRING INSTALLATION							RF
			REFER TO 53-30-01 FIGURE 03 .							

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG


28-23-00

FUEL SELECTOR CONTROLS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24965

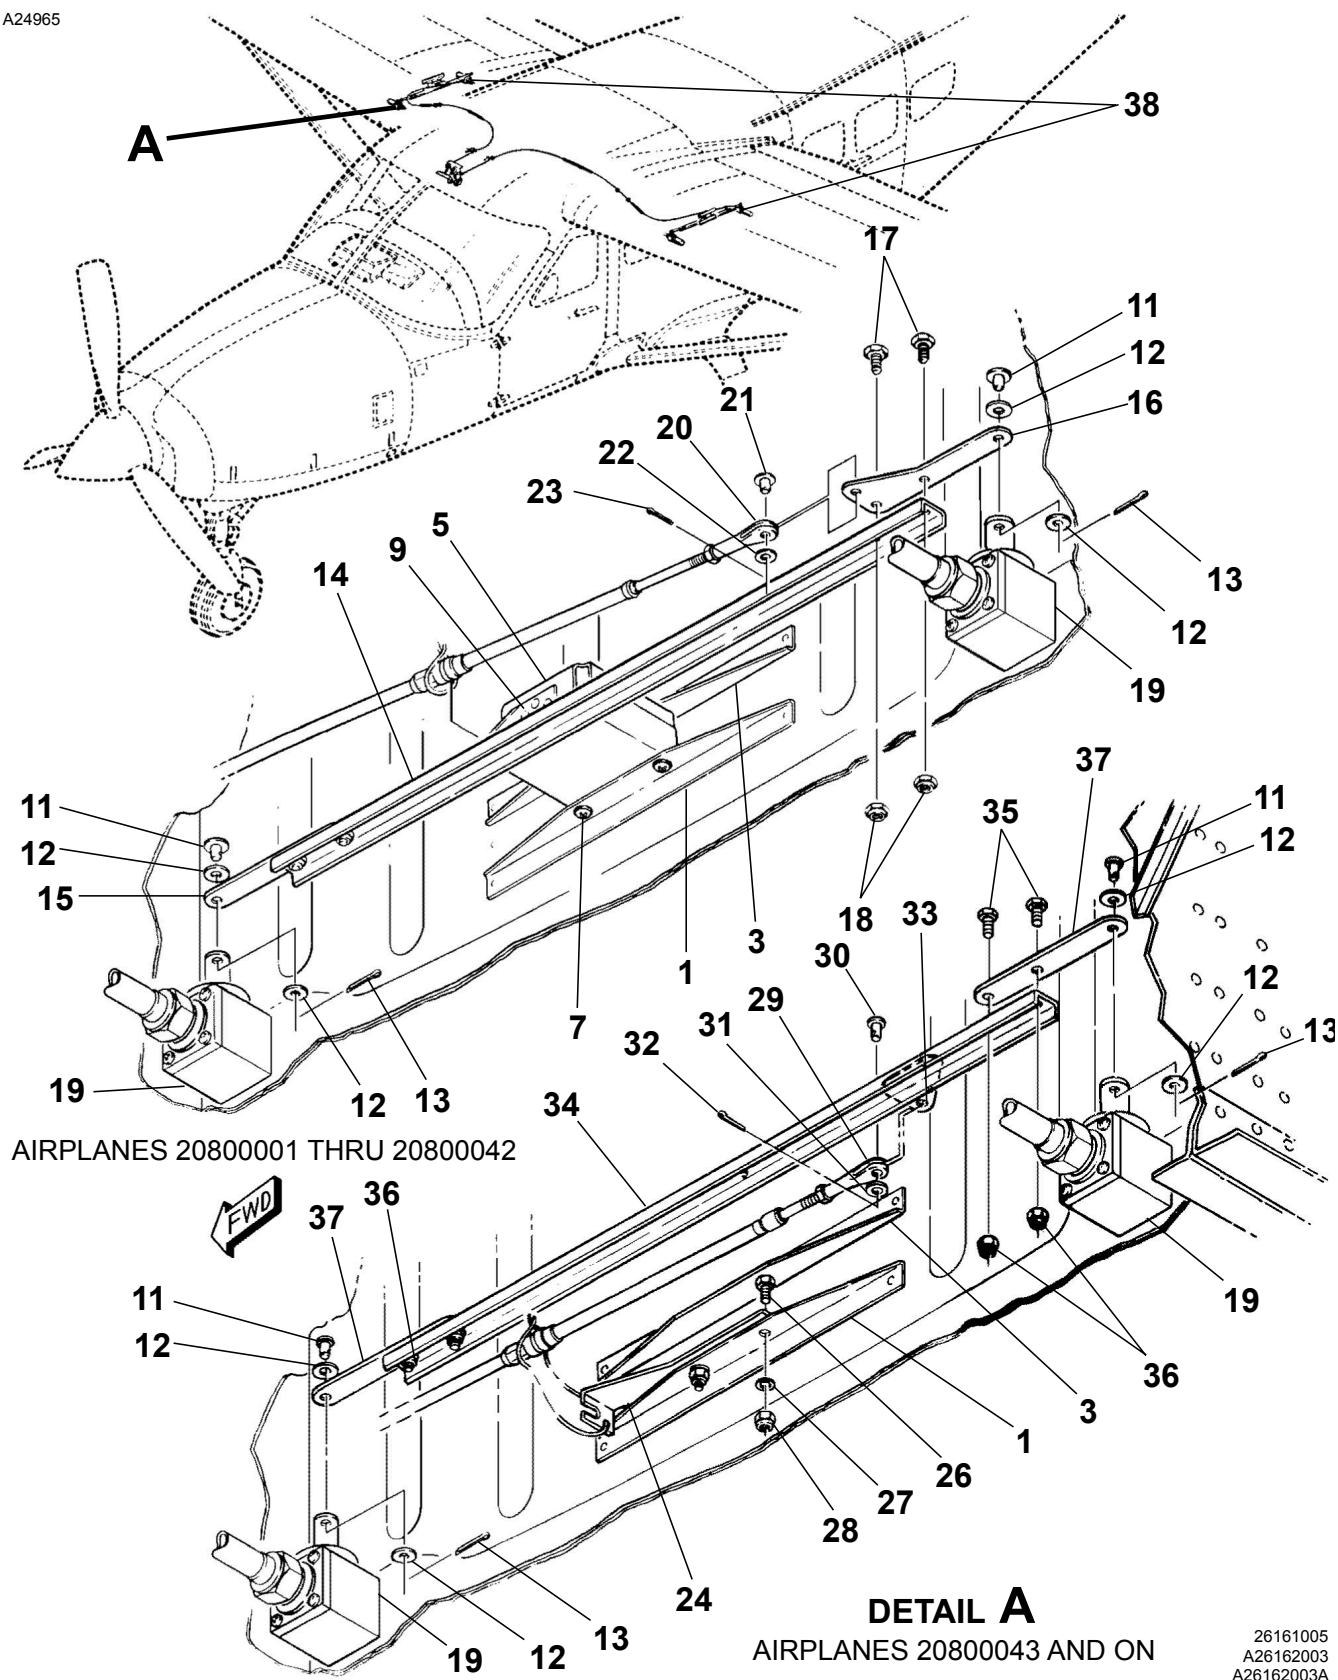

FUEL SELECTOR CONTROLS
 Figure 01. (Sheet 1)

26161005
 A26162003
 A26162003A

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL SELECTOR CONTROLS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	2611140-4	.							(208) 0001 & ON (208B) 0001 & ON	01
- 2	2611140-2	.							(208) 0001 & ON (208B) 0001 & ON	01
3	2611140-3	.							(208) 0001 & ON (208B) 0001 & ON	01
- 4	2611140-1	.							(208) 0001 & ON (208B) 0001 & ON	01
5	2616013-1	.							(208) 0001 - 0042	01
- 6	2616013-2	.							(208) 0001 - 0042	01
									ATTACHING PARTS	
7	NAS525-10R7	.							(208) 0001 - 0042	04
									--*--	
- 8	MS21073L3	.	.						(208) 0001 - 0042	04
9	2616012-1	.	.						(208) 0001 - 0042	01
- 10	2616012-2	.	.						(208) 0001 - 0042	01
11	MS20392-2C9	.							(208) 0001 & ON (208B) 0001 & ON	02
12	NAS1149F0332P	.							(208) 0001 & ON (208B) 0001 & ON	04
13	MS24665-132	.							(208) 0001 & ON (208B) 0001 & ON	02
14	2616023-15	.							(208) 0001 & ON (208B) 0001 & ON	01
15	2616023-16	.							(208) 0001 & ON (208B) 0001 & ON	01
16	2616023-17	.							(208) 0001 & ON (208B) 0001 & ON	01
									ATTACHING PARTS	
17	AN3-4A	.						80205	(208) 0001 & ON (208B) 0001 & ON	02
18	MS20365-1032	.							(208) 0001 & ON (208B) 0001 & ON	02
									--*--	
19		.							FUEL SHUTOFF VALVE REFER TO 28-23-01 FIGURE 01.	RF
20	1452535-3	.							(208) 0001 & ON (208B) 0001 & ON	02
									ATTACHING PARTS	
21	MS20392-3C11	.							(208) 0001 & ON (208B) 0001 & ON	01
22	NAS1149F0432P	.							(208) 0001 & ON (208B) 0001 & ON	01
23	MS24665-132	.							(208) 0001 & ON (208B) 0001 & ON	01
									--*--	
24	2616029-2	.							(208) 0043 - 0084	01
- 24A	2616029-6	.							(208) 0085 & ON	01
- 25	2616029-1	.							(208) 0043 - 0084	01
- 25A	2616029-5	.							(208) 0085 & ON	01
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL SELECTOR CONTROLS


AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
		ATTACHING PARTS								
26	AN3-3A	.	BOLT						(208) 0043 & ON	02
27	NAS1149F0332P	.	WASHER						(208) 0043 & ON	02
28	MS21045L3	.	NUT						(208) 0043 & ON	02
		--*--								
29	1452535-3	.	TERMINAL - CONTROL CABLE						(208) 0043 & ON	02
		ATTACHING PARTS								
30	MS20392-3C15	.	PIN						(208) 0043 & ON	01
31	NAS1149F0432P	.	WASHER						(208) 0043 & ON	01
32	MS24665-132	.	PIN - COTTER						(208) 0043 & ON	01
		--*--								
33	2616029-3	.	SUPPORT PLATE - CONTROL CABLE						(208) 0043 & ON	02
34	2616023-18	.	CHANNEL						(208) 0043 & ON	02
		ATTACHING PARTS								
35	AN3-4A	.	BOLT					80205	(208) 0043 & ON	04
36	MS21044N3	.	NUT					4W953	(208) 0043 & ON	04
		--*--								
37	2616023-16	.	LINK						(208) 0043 & ON	04
38		.	FUEL OFF WARNING SYSTEM							RF
		REFER TO 28-42-01 FIGURE 01.								

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24966

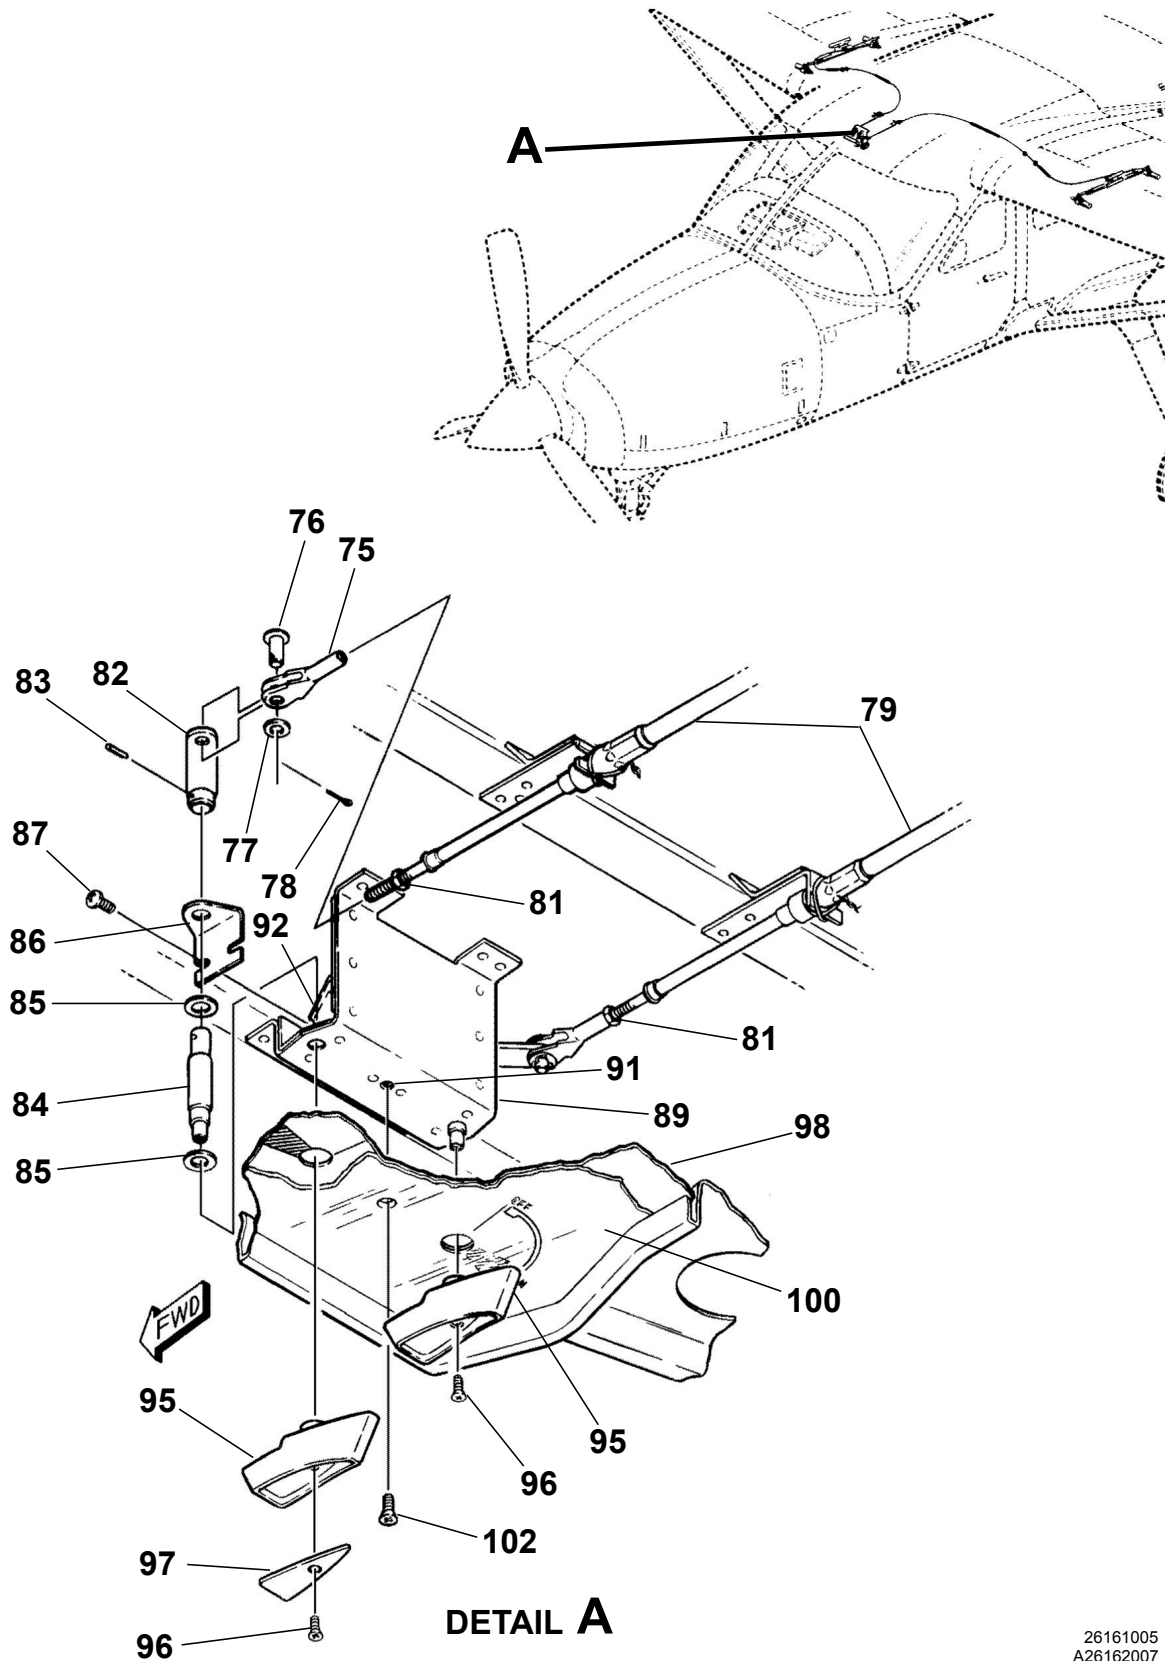

FUEL SELECTOR CONTROLS
 Figure 01. (Sheet 2)

26161005
 A26162007

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL SELECTOR CONTROLS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
75	1452535-2	.	TERMINAL - CONTROL CABLE						(208) 0001 - 0223 (208B) 0001 - 0326	02
			ATTACHING PARTS							
76	MS20392-3C11	.	PIN						(208) 0001 - 0223 (208B) 0001 - 0326	01
77	NAS1149F0432P	.	WASHER						(208) 0001 - 0223 (208B) 0001 - 0326	01
78	MS24665-132	.	PIN - COTTER						(208) 0001 - 0223 (208B) 0001 - 0326	01
			--*--							
79	C299516-0101	.	CONTROL - FUEL SELECTOR						(208) 0001 - 0223	02
- 80	C299516-0102	.	CONTROL - FUEL SELECTOR						(208B) 0001 - 0326	02
81	AN315-3R	.	NUT					72962	(208) 0001 & ON (208B) 0001 & ON	02
82	1516212-17	.	LEVER ASSEMBLY - LEFT & RIGHT						(208) 0001 - 0223 (208B) 0001 - 0326	01
			ATTACHING PARTS							
83	NAS561-3-7	.	PIN - SPRING						(208) 0001 - 0223 (208B) 0001 - 0326	01
			--*--							
84	1516212-16	.	SHAFT						(208) 0001 - 0223 (208B) 0001 - 0326	02
85	NAS1149F0532P	.	WASHER					61526	(208) 0001 - 0223 (208B) 0001 - 0326	04
86	2616023-4	.	RETAINER						(208) 0001 - 0223 (208B) 0001 - 0326	02
			ATTACHING PARTS							
87	MS35207-262	.	SCREW					80205	(208) 0001 - 0223 (208B) 0001 - 0326	02
			--*--							
- 88	2616023-5	.	BRACKET ASSEMBLY - SELECTOR HANDLE						(208) 0001 - 0223 (208B) 0001 - 0326	01
89	2616023-6	.	BRACKET						(208) 0001 - 0046	01
- 90	2616023-19	.	BRACKET						(208) 0047 - 0223 (208B) 0001 - 0326	01
91	MS21047L3	.	NUTPLATE					13499	(208) 0001 - 0223 (208B) 0001 - 0326	01
92	2616023-7	.	BRACKET ASSEMBLY - END LEFT						(208) 0001 - 0223 (208B) 0001 - 0326	01
- 93	2616023-8	.	BRACKET ASSEMBLY - END RIGHT						(208) 0001 - 0223 (208B) 0001 - 0326	01
- 94	MS21069L3	.	NUTPLATE						(208) 0001 - 0223 (208B) 0001 - 0326	04
95	1516033-1	.	KNOB ASSEMBLY - FUEL SELECTOR						(208) 0001 - 0223 (208B) 0001 - 0326	02
			ATTACHING PARTS							
96	LP22F40P8	.	SCREW					03038	(208) 0001 - 0223 (208B) 0001 - 0326	01
			--*--							

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


FUEL SELECTOR CONTROLS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
97	1516033-3	.	.	.	COVER - KNOB				(208) 0001 - 0223 (208B) 0001 - 0326	01
98	2606030-15	.			PLATE ASSEMBLY - FUEL SELECT PANEL				(208) 0001 - 0223 (208B) 0001 - 0326	01
- 99		.			PLATE ASSEMBLY - FUEL SELECT PANEL USED WITH OXYGEN REFER TO 35-10-00 FIGURE 01 .					RF
100	2606030-5	.			GLASS ASSEMBLY - FUEL SELECT PANEL				(208) 0001 - 0223 (208B) 0001 - 0326	01
- 101		.			GLASS ASSEMBLY - FUEL SELECT PANEL USED WITH OXYGEN REFER TO 35-10-00 FIGURE 01 . ATTACHING PARTS					RF
102	MS24694-S52	.			SCREW				(208) 0001 - 0223 (208B) 0001 - 0326	06
					--*--					
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24967

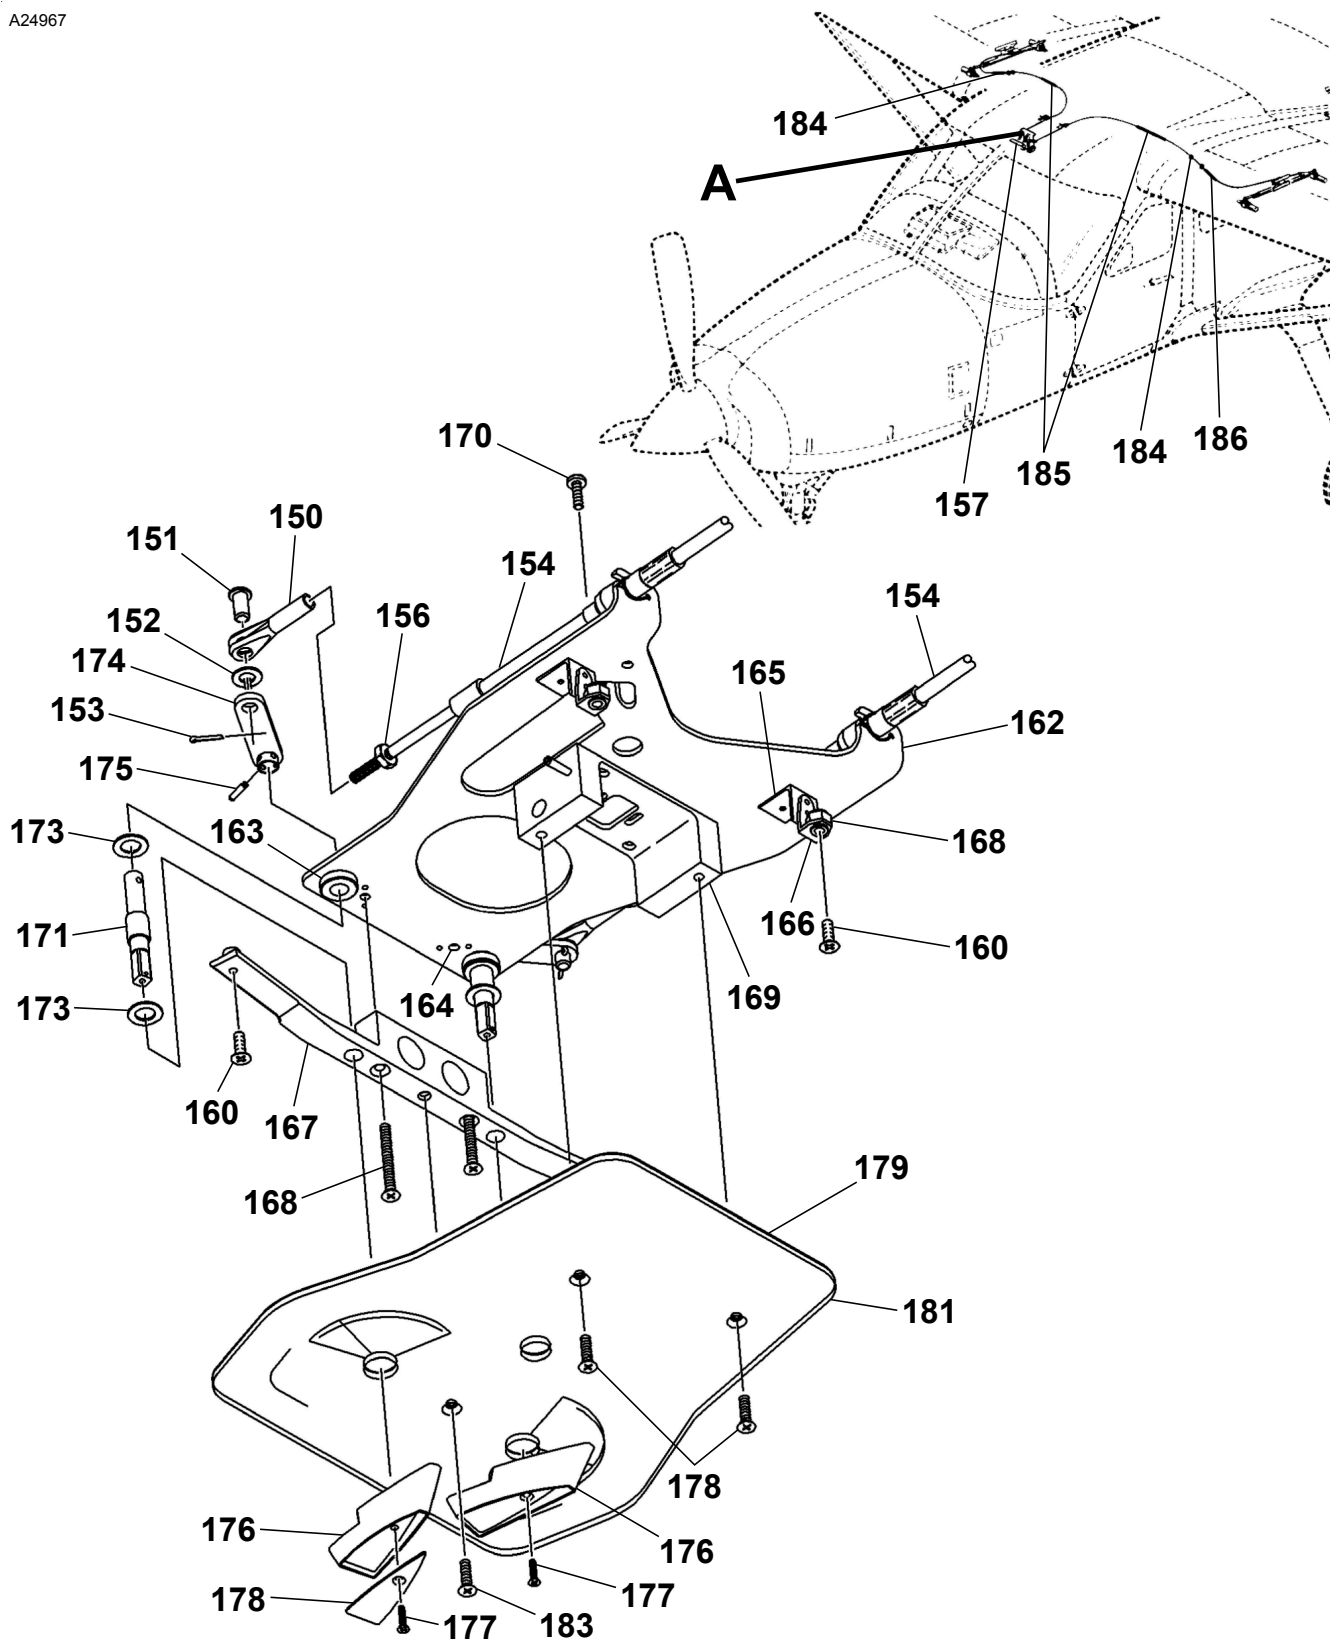

DETAIL A
FUEL SELECTOR CONTROLS
 Figure 01. (Sheet 3)

2616R1005
 A2616R2007A

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL SELECTOR CONTROLS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 172	2613428-3	.	.	SHAFT ASSEMBLY					(208B) 5000 & ON	02
173	NAS1149F0532P	.	.	WASHER				61526	(208) 0224 & ON (208B) 0327 & ON	04
174	1516212-17	.	.	LEVER ASSEMBLY					(208) 0224 & ON (208B) 0327 & ON	02
				ATTACHING PARTS						
175	NAS561-3-7	.	.	PIN					(208) 0224 & ON (208B) 0327 & ON	01
				--*--						
176	1516033-1	.		KNOB ASSEMBLY - FUEL SELECTOR					(208) 0224 & ON (208B) 0327 & ON	02
				ATTACHING PARTS						
177	LP22F40P8	.		SCREW				03038	(208) 0224 & ON (208B) 0327 & ON	01
				--*--						
178	1516016-3	.	.	INSERT - KNOB					(208) 0224 & ON (208B) 0327 & ON	01
179	2613437-1	.		PLATE ASSEMBLY - FUEL SELECT PANEL					(208) 0224 & ON (208B) 0327 & ON	01
- 180		.		PLATE ASSEMBLY - FUEL SELECT PANEL USED WITH OXYGEN REFER TO 35-14-00 FIGURE 01 .						RF
181	2613437-7	.		GLASS ASSEMBLY - FUEL SELECT PANEL					(208) 0224 & ON (208B) 0327 & ON	01
- 182		.		GLASS ASSEMBLY - FUEL SELECT PANEL USED WITH OXYGEN REFER TO 35-14-00 FIGURE 01 .						RF
				ATTACHING PARTS						
183	MS24693BB51	.		SCREW					(208) 0224 & ON (208B) 0327 & ON	03
				--*--						
184	MS35489-7S	.		GROMMET					(208B) 0001 - 4999	04
- 184A	MS35489-7	.		GROMMET					(208B) 5000 & ON	04
185	S1399-1	.		WRAP 12.00 IN LG BULK ITEM					(208) 0001 & ON (208B) 0001 & ON	02
186	S1399-1	.		WRAP 6.00 IN LG BULK ITEM					(208) 0001 & ON (208B) 0001 & ON	02
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG


28-23-01

FUEL SHUTOFF VALVES

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24954

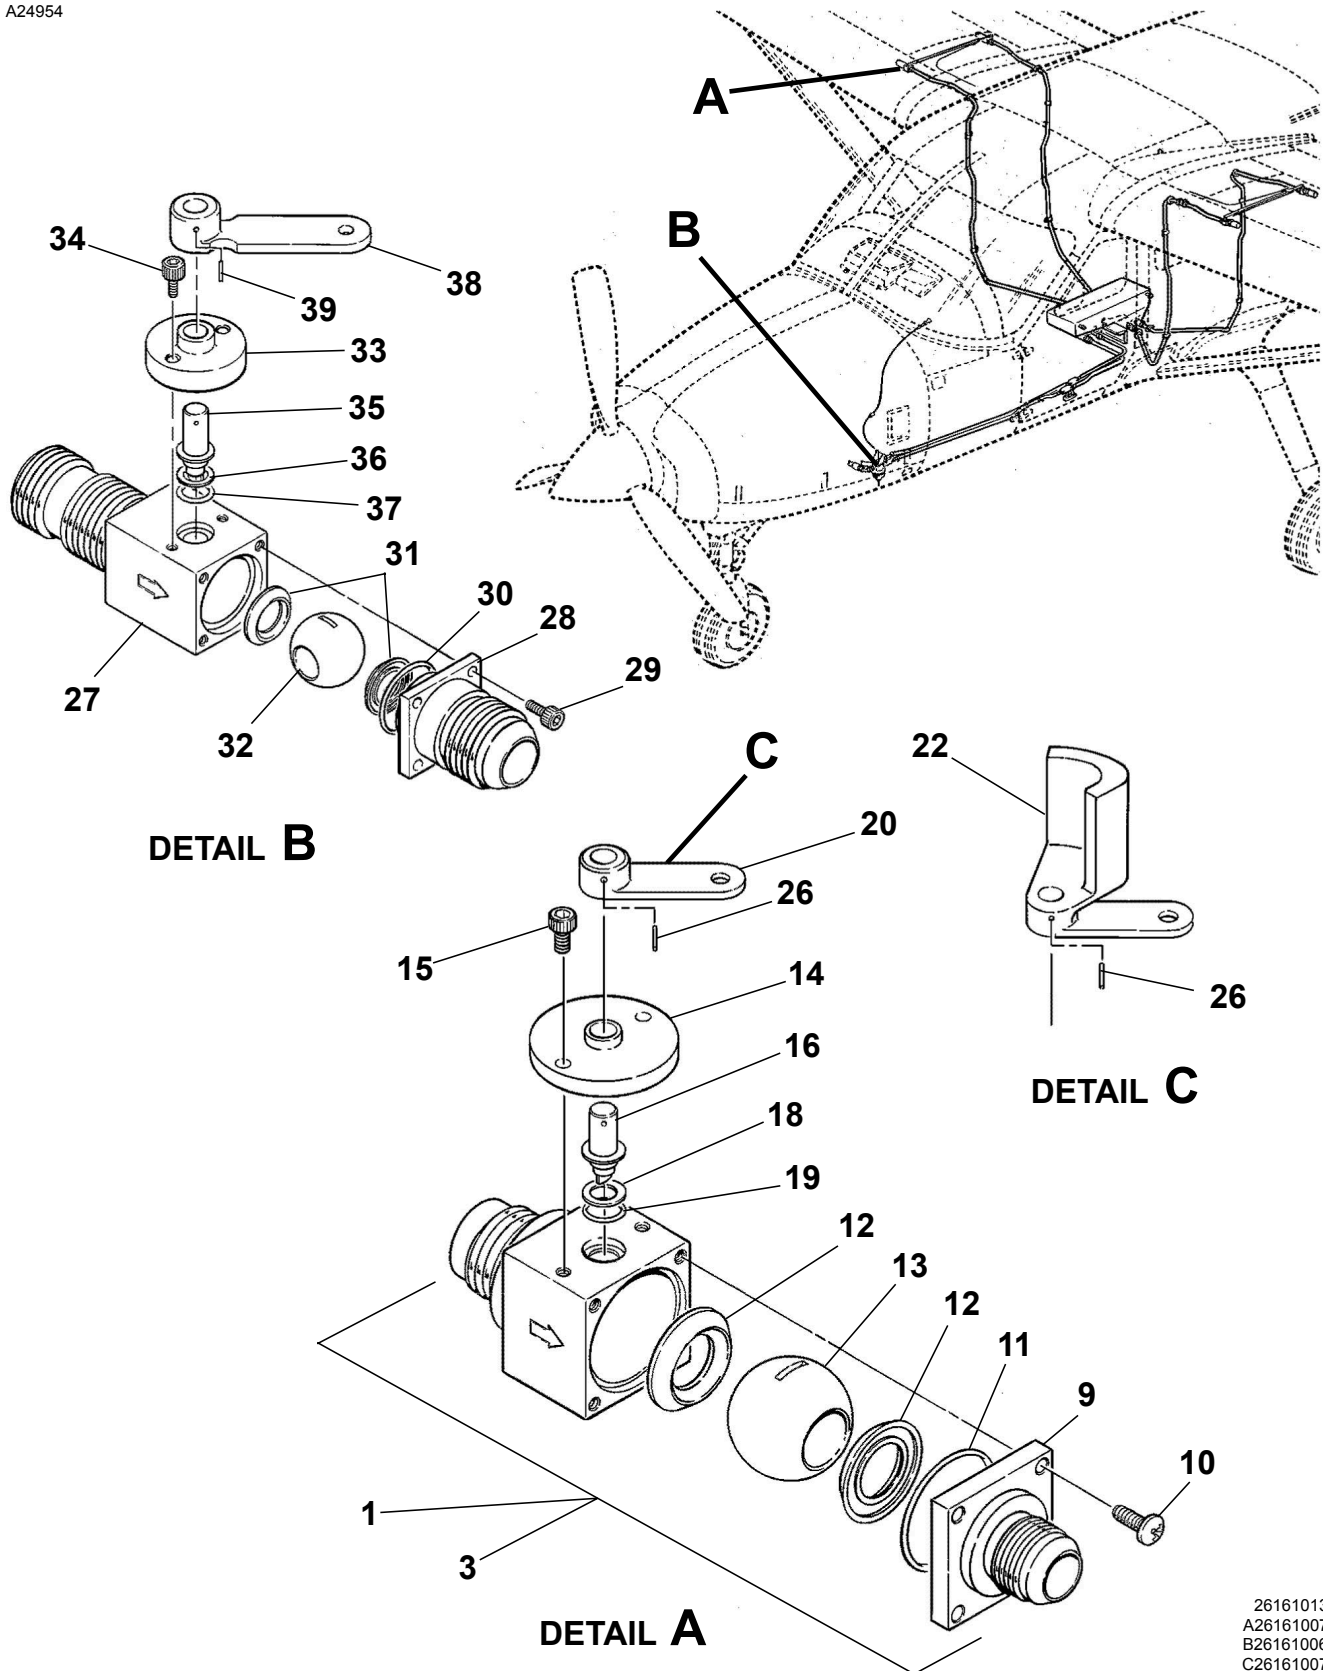

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

FUEL SHUTOFF VALVES

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	72C12C-4	.							91511	(208) 0001 - 0105	02
- 2	72C12C-5	.							91511	(208) 0001 - 0105	02
3	72C12C-4	.							91511	(208) 0106 & ON	01
		.								(208) *0001 - 0105	
		.								(208B) 0001 & ON	
- 4	72C12C-5	.							91511	(208) 0106 & ON	01
		.								(208) *0001 - 0105	
		.								(208B) 0001 & ON	
- 5	2616030-2	.								(208) 0106 - 0198	NP
		.								(208) *0001 - 0105	
		.								(208B) 0001 - 0239	
- 6	2616030-4	.								(208) 0199 & ON	01
		.								(208B) 0240 & ON	
		.									
- 7	2616030-1	.								(208) 0106 - 0198	NP
		.								(208) *0001 - 0105	
		.								(208B) 0001 - 0239	
		.									
- 8	2616030-3	.								(208) 0199 & ON	01
		.								(208B) 0240 & ON	
		.									
9	72102C12	.	.						91511	(208) 0001 & ON	01
		.	.							(208B) 0001 & ON	
		.	.								
		.	.								
10	MS21090-0837	.	.							(208) 0001 & ON	04
		.	.							(208B) 0001 & ON	
		.	.								
		.	.								
11	MS29513-025	.	.							(208) 0001 & ON	01
		.	.							(208B) 0001 & ON	
12	72083C	.	.						91511	(208) 0001 & ON	02
		.	.							(208B) 0001 & ON	
13	72124B	.	.						91511	(208) 0001 & ON	01
		.	.							(208B) 0001 & ON	
14	72089B4	.	.						91511	(208) 0001 & ON	01
		.	.							(208B) 0001 & ON	
		.	.								
		.	.								
15	NAS1352-06LE8P	.	.							(208) 0001 & ON	02
		.	.							(208B) 0001 & ON	
		.	.								
		.	.								
16	72127B2-4	.	.						91511	(208) 0001 & ON	01
		.	.							(208B) 0001 & ON	
- 17	72127B2-5	.	.						91511	(208) 0001 & ON	01
		.	.							(208B) 0001 & ON	
18	14A	.	.						91511	(208) 0001 & ON	01
		.	.							(208B) 0001 & ON	
19	MS29513-011	.	.							(208) 0001 & ON	01
		.	.							(208B) 0001 & ON	
20	72086B3	.	.						91511	(208) 0001 - 0105	01
- ITEM NOT ILLUSTRATED											

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

FUEL SHUTOFF VALVES

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY	
- 21	72086B3	.	.	HANDLE - FORWARD VALVE				91511	(208) 0106 & ON	01
				* AIRPLANES (208) 0001 THRU 0105 INCORPORATING SK208-20					(208) *0001 - 0105 (208B) 0001 & ON	
22	2606004-2	.	.	LEVER - RIGHT AFT VALVE					(208) 0106 - 0198	NP
				FOR SPARES ORDER (MUST REPLACE WITH):					(208) *0001 - 0105	
				2606004-6					(208B) 0001 - 0239	
				* AIRPLANES (208) 0001 THRU 0105 INCORPORATING SK208-20						
- 23	2606004-6	.	.	LEVER - RIGHT AFT VALVE					(208) 0199 & ON	01
				SPARES REPLACEMENT FOR:					(208B) 0240 & ON	
				2606004-2						
- 24	2606004-1	.	.	LEVER - LEFT AFT VALVE					(208) 0106 - 0198	NP
				FOR SPARES ORDER (MUST REPLACE WITH):					(208) *0001 - 0105	
				2606004-5					(208B) 0001 - 0239	
				* AIRPLANES (208) 0001 THRU 0105 INCORPORATING SK208-20						
- 25	2606004-5	.	.	LEVER - LEFT AFT VALVE					(208) 0199 & ON	01
				SPARES REPLACEMENT FOR:					(208B) 0240 & ON	
				2606004-1						
				ATTACHING PARTS						
26	MS16562-35	.	.	PIN					(208) 0001 & ON	01
									(208B) 0001 & ON	
				--*--						
27	72D10C	.	.	FUEL SHUTOFF VALVE - FIREWALL				91511	(208B) 0001 - 4999	01
- 27A	72DA0358	.	.	FUEL SHUTOFF VALVE - FIREWALL				91511	(208B) 5000 & ON	01
28	72082C9	.	.	FITTING - OUTLET				91511	(208) 0001 & ON	01
									(208B) 0001 & ON	
				ATTACHING PARTS						
29	MS21295-13	.	.	SCREW					(208) 0001 & ON	04
									(208B) 0001 & ON	
				--*--						
30	MS29513-018	.	.	O-RING					(208) 0001 & ON	01
									(208B) 0001 & ON	
31	72083C	.	.	SEAL				91511	(208) 0001 & ON	02
									(208B) 0001 & ON	
32	72084B6	.	.	BALL				91511	(208) 0001 & ON	01
									(208B) 0001 & ON	
33	72089B9	.	.	RETAINER				91511	(208) 0001 & ON	01
									(208B) 0001 & ON	
				ATTACHING PARTS						
34	MS21295-19	.	.	SCREW - CAP					(208) 0001 & ON	02
									(208B) 0001 & ON	
				--*--						
35	72087B9	.	.	SHAFT				91511	(208) 0001 & ON	01
									(208B) 0001 & ON	
36	14A	.	.	SEAL				91511	(208) 0001 & ON	01
									(208B) 0001 & ON	
37	MS29513-010	.	.	O-RING				91511	(208) 0001 & ON	01
									(208B) 0001 & ON	
38	72086B9	.	.	HANDLE				91511	(208) 0001 & ON	01
									(208B) 0001 & ON	
				ATTACHING PARTS						

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL SHUTOFF VALVES

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
39	MS16562-213	.	.	PIN					(208) 0001 & ON (208B) 0001 & ON	01
				--*--						
- ITEM NOT ILLUSTRATED										



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

28-40-00

SIGNAL CONDITIONER INSTALLATION
AIRPLANES (208) 0500 THRU 0650 AND AIRPLANES (208B) 2000 THRU
5500

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

A81177

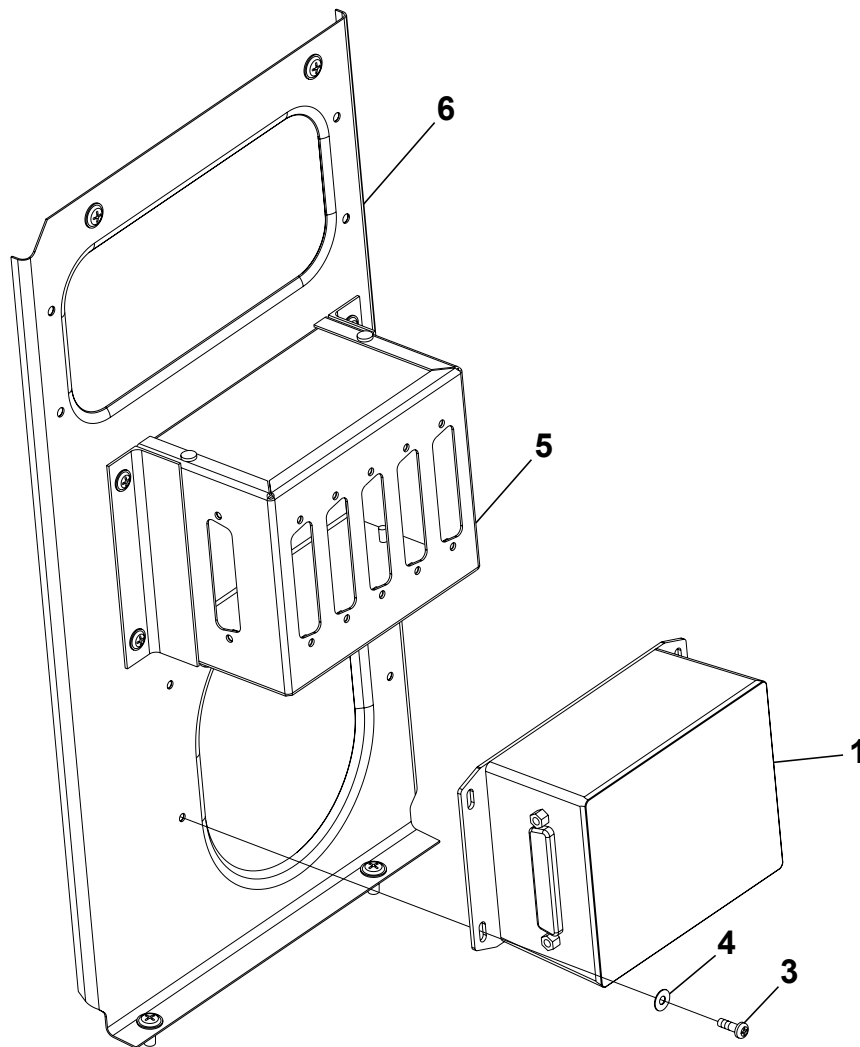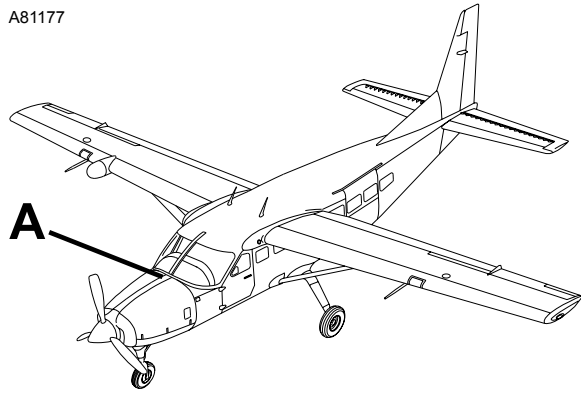

DETAIL A

SIGNAL CONDITIONER INSTALLATION
Figure 01. (Sheet 1)

2610T7002
A2618T1449

Figure 01
Page 2
28-40-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

SIGNAL CONDITIONER INSTALLATION

AIRPLANES (208) 0500 THRU 0650 AND AIRPLANES (208B) 2000 THRU 5500

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	85-292-1	.	SIGNAL CONDITIONER UI024 FOR SPARES ORDER (MUST REPLACE WITH): 85-292-5						58880	(208) 0500 - 0564 (208B) 2000 - 4999	NP
- 2	85-292-5	.	SIGNAL CONDITIONER UI024 SPARES REPLACEMENT FOR: 85-292-1 ATTACHING PARTS						58880	(208) 0565 - 0650 (208B) 5000 - 5500	01
3	MS35206-229	.	SCREW							(208) 0500 - 0650 (208B) 2000 - 5500	04
4	NAS1149FN616P	.	WASHER						2X920	(208) 0500 - 0650 (208B) 2000 - 5500	04
			--*--								
5		.	AVIONICS JBOX REFER TO 24-50-03 FIGURE 02								RF
6		.	AVIONICS RACK REFER TO 25-70-00 FIGURE 01								RF
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG


28-41-00

FUEL INDICATING SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24955

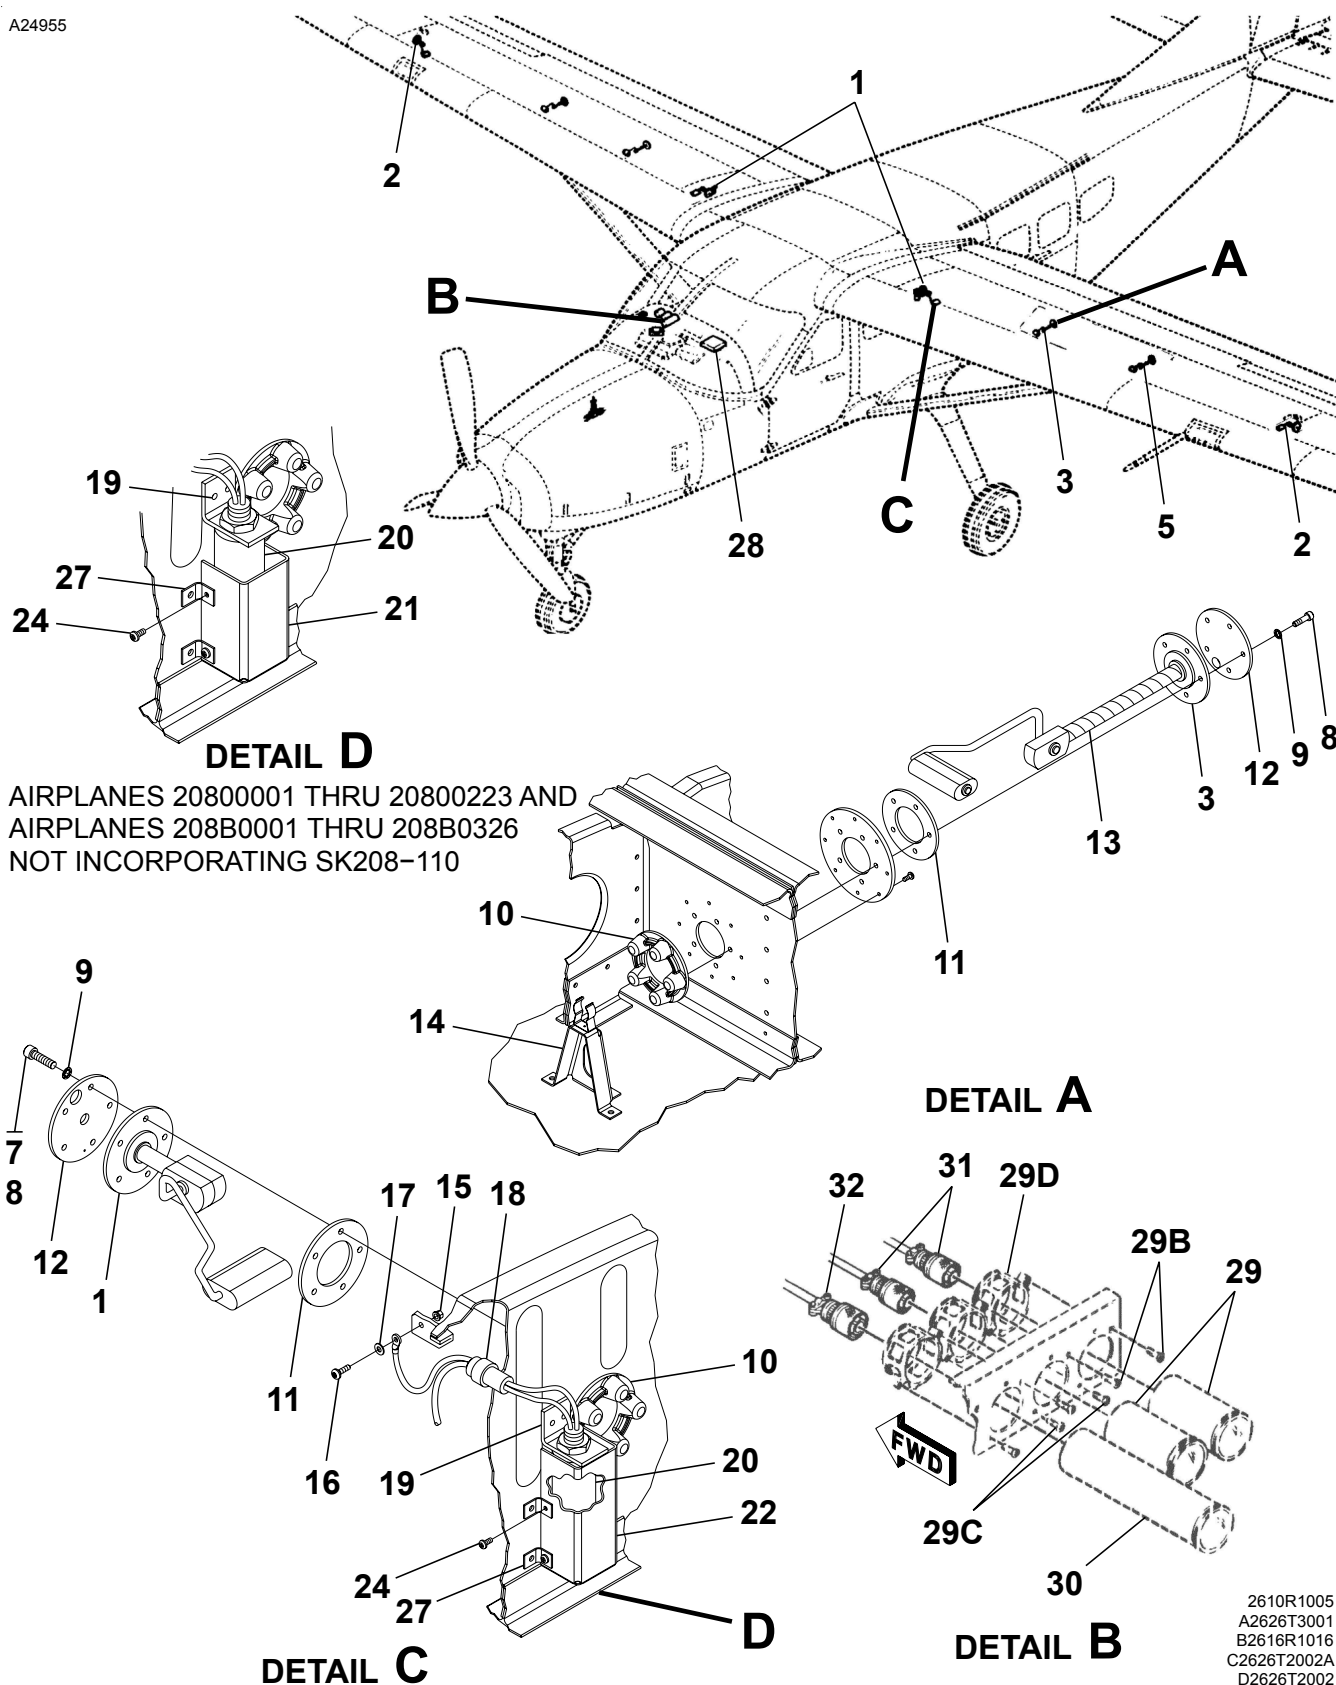

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

- ITEM NOT ILLUSTRATED

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

FUEL INDICATING SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
18	MS3116E8-33S	.	CONNECTOR						(208) 0001 & ON (208B) 0001 & ON	02
19		.	BRACKET - LOW FUEL LEVEL SWITCH REFER TO 57-10-02 FIGURE 01							RF
20	GF5500-81	.	SWITCH - LOW FUEL LEVEL LEFT SL002				58918		(208) 0001 & ON (208B) 0001 & ON	01
- 20A	GF5500-81	.	SWITCH - LOW FUEL LEVEL RIGHT SR002				58918		(208) 0001 & ON (208B) 0001 & ON	01
21	2622253-1	.	COVER ASSEMBLY - LOW FUEL LEVEL SWITCH FOR SPARES ORDER (MUST REPLACE WITH): 2622286-1 2622286-4						(208) 0001 - 0223 (208B) 0001 - 0326	NP
			NOTE: FOR LEFT HAND COVER, ORDER 2662286-1 FOR SPARES. FOR RIGHT HAND COVER, ORDER 2662286-4 FOR SPARES							
22	2622286-1	.	COVER ASSEMBLY - LOW FUEL LEVEL SWITCH LEFT SPARES REPLACEMENT FOR: 2622253-1 * AIRPLANES (208) 0001 THRU 0223 INCORPORATING SK208-110 * AIRPLANES (208B) 0001 THRU 0326 INCORPORATING SK208-110						(208) 0224 & ON (208) *0001 - 0223 (208B) 0327 & ON (208B) *0001 - 0326	01
			NOTE: WHEN ORDERING THIS PART, REFER TO SK208-110 FOR INSTALLATION PROCEDURES.							
- 23	2622286-4	.	COVER ASSEMBLY - LOW FUEL LEVEL SWITCH RIGHT SPARES REPLACEMENT FOR: 2622253-1 * AIRPLANES (208) 0001 THRU 0223 INCORPORATING SK208-110 * AIRPLANES (208B) 0001 THRU 0326 INCORPORATING SK208-110						(208) 0224 & ON (208) *0001 - 0223 (208B) 0327 & ON (208B) *0001 - 0326	01
			NOTE: WHEN ORDERING THIS PART, REFER TO SK208-110 FOR INSTALLATION PROCEDURES.							
			ATTACHING PARTS							
24	MS35206-227	.	SCREW				72914		(208) 0001 & ON (208B) 0001 & ON	04
			--*--							
- 25	MS21047L06	.	NUTPLATE						(208) 0001 & ON (208B) 0001 & ON	02
- 26	MS21055L06	.	NUTPLATE						(208) 0001 & ON (208B) 0001 & ON	02
27		.	BRACKET REFER TO 57-10-02 FIGURE 01							RF
28		.	LOW FUEL INDICATOR LIGHT REFER TO 31-00-00 FIGURE 01							RF
29	C662041-0101	.	FUEL QTY INDICATOR - LEFT & RIGHT						(208) 0001 - 0066	02
- 29A	C662041-0102	.	FUEL QTY INDICATOR - LEFT & RIGHT						(208) 0067 - 0499 (208B) 0001 - 1999	02
			ATTACHING PARTS							
29B	MS24693BB50	.	SCREW						(208) 0001 - 0499 (208B) 0001 - 1999	01
29C	MS35214-43	.	SCREW						(208) 0001 - 0499 (208B) 0001 - 1999	01
29D	MS28042-1A	.	CLAMP				77820		(208) 0001 - 0499 (208B) 0001 - 1999	01
			--*--							

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL INDICATING SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
30		.						FUEL FLOW GAUGE REFER TO 73-30-00 FIGURE 01		RF
31	S2654-5	.						CONNECTOR ASSEMBLY - FUEL QTY GAUGE	(208) 0001 - 0499 (208B) 0001 - 1999	02
32	S2654-6	.						CONNECTOR ASSEMBLY - FUEL FLOW GAUGE	(208) 0001 - 0499 (208B) 0001 - 1999	01
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG



28-41-00

FUEL SENSOR


AIRPLANES (208) 0500 & ON AND AIRPLANES (208B) 2000 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


A68776

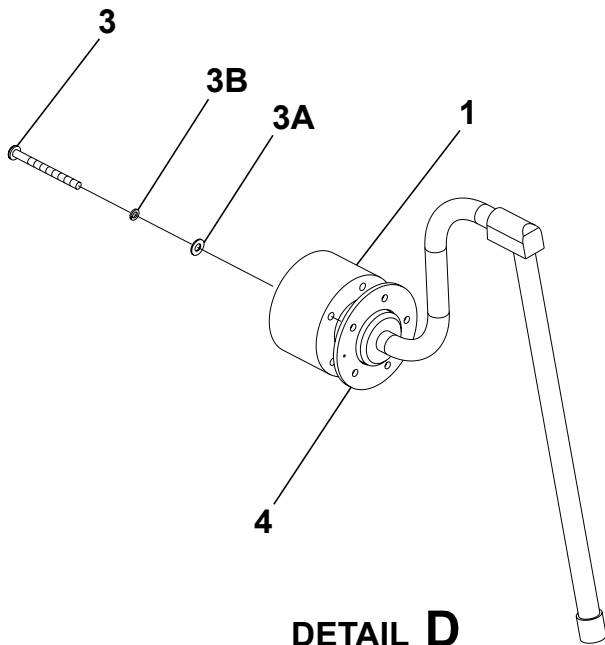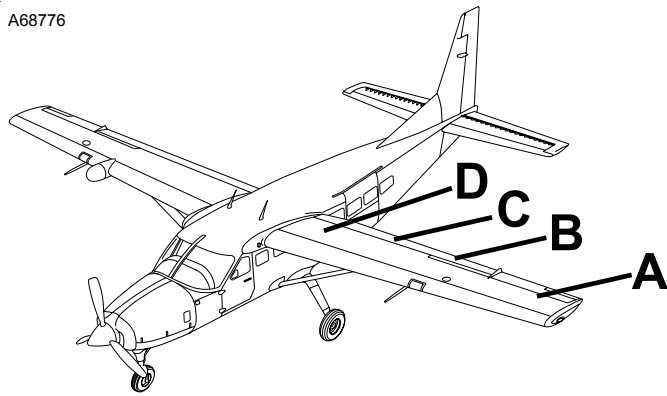


DETAIL D

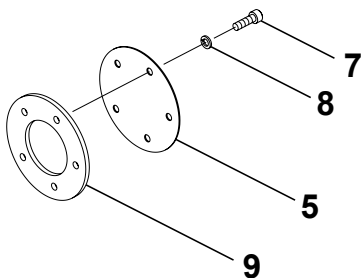

DETAIL C

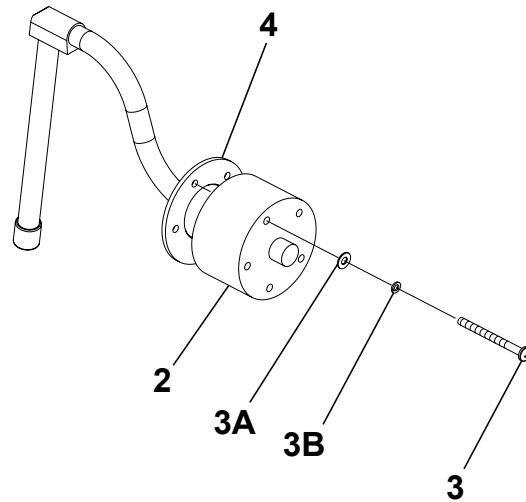

DETAIL A

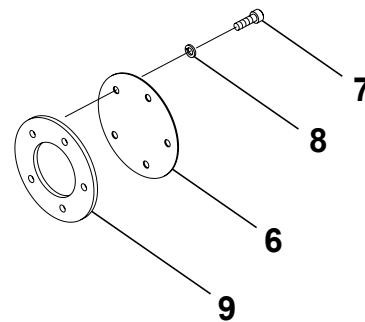

DETAIL B

FUEL SENSOR
Figure 02. (Sheet 1)

2610T7005
 A2616T1039
 B2616T1039
 C2616T1039
 D2616T1039

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

FUEL SENSOR

AIRPLANES (208) 0500 & ON AND AIRPLANES (208B) 2000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	76-207-1	.	FUEL LEVEL SENSOR - LEFT WS 53.00 UL001					58880	(208) 0500 - 0533 (208B) 2000 - 2335	01
			ALTERNATE SPARE (PERMISSIBLE TO ALSO USE): S3100-630							
- 1A	76-207-1	.	FUEL LEVEL SENSOR - RIGHT WS 53.00 UR001					58880	(208) 0500 - 0533 (208B) 2000 - 2335	NP
			ALTERNATE SPARE (PERMISSIBLE TO ALSO USE): S3100-630							
- 1B	76-207-11	.	FUEL LEVEL SENSOR - LEFT UL001 WS 53.00 UR001					58880	(208) 0534 - 0537 (208B) 2336 - 2341	01
			ALTERNATE SPARE (PERMISSIBLE TO ALSO USE): S3100-630							
- 1C	76-207-11	.	FUEL LEVEL SENSOR - RIGHT UR001 WS 53.00					58880	(208) 0534 - 0537 (208B) 2336 - 2341	01
			ALTERNATE SPARE (PERMISSIBLE TO ALSO USE): S3100-630							
- 1D	S3100-576	.	FUEL LEVEL SENSOR - LEFT UL001 WS 53.00 REFERENCE						(208) 0538 - 0540 (208B) 2342 - 2353	01
			SUPPLIER PART NUMBER 76-207-11 (MOD 1 & ON) ALTERNATE SPARE (PERMISSIBLE TO ALSO USE): S3100-630							
- 1E	S3100-576	.	FUEL LEVEL SENSOR - RIGHT UR001 WS 53.00 REFERENCE						(208) 0538 - 0540 (208B) 2342 - 2353	01
			SUPPLIER PART NUMBER 76-207-11 (MOD 1 & ON) ALTERNATE SPARE (PERMISSIBLE TO ALSO USE): S3100-630							
- 1F	S3100-581	.	FUEL LEVEL SENSOR - LEFT UL001 WS 53.00 REFERENCE						(208) 0541 - 0590 (208B) 2354 - 5334	01
			SUPPLIER PART NUMBER 76-207-11 (MOD 2) ALTERNATE SPARE (PERMISSIBLE TO ALSO USE): S3100-630							
- 1G	S3100-581	.	FUEL LEVEL SENSOR - RIGHT UR001 WS 53.00 REFERENCE						(208) 0541 - 0590 (208B) 2354 - 5334	01
			SUPPLIER PART NUMBER 76-207-11 (MOD 2) ALTERNATE SPARE (PERMISSIBLE TO ALSO USE): S3100-630							
- 1H	S3100-630	.	FUEL LEVEL SENSOR - LEFT UL001 WS 53.00 REFERENCE						(208) 0591 & ON (208B) 5335 & ON	02
			SUPPLIER PART NUMBER 76-207-11 (MOD 3)							
- 1J	S3100-630	.	FUEL LEVEL SENSOR - RIGHT UR001 WS 53.00						(208) 0591 & ON (208B) 5335 & ON	02
2	76-207-2	.	FUEL LEVEL SENSOR - LEFT WS 214.30 UL002					58880	(208) 0500 - 0532 (208B) 2000 - 2323	01
			FOR SPARES ORDER (MUST REPLACE WITH): S3100-629							
- 2A	76-207-2	.	FUEL LEVEL SENSOR - RIGHT WS 214.30 UR002					58880	(208) 0500 - 0532 (208B) 2000 - 2323	01
			ALTERNATE SPARE (PERMISSIBLE TO ALSO USE): S3100-629							
- 2B	76-207-12	.	FUEL LEVEL SENSOR - LEFT UL002 WS 214.30 UR002					58880	(208) 0533 - 0537 (208B) 2324 - 2341	01
			FOR SPARES ORDER (MUST REPLACE WITH): S3100-629							
- 2C	76-207-12	.	FUEL LEVEL SENSOR - RIGHT WS 214.30 UR002					58880	(208) 0533 - 0537 (208B) 2324 - 2341	01
			ALTERNATE SPARE (PERMISSIBLE TO ALSO USE): S3100-629							
- 2D	S3100-577	.	FUEL LEVEL SENSOR - LEFT UL002 WS 214.30						(208) 0538 - 0540 (208B) 2342 - 2353	01
			FOR SPARES ORDER (MUST REPLACE WITH): S3100-629							
- 2E	S3100-577	.	FUEL LEVEL SENSOR - RIGHT UR002 WS 214.30						(208) 0538 - 0540 (208B) 2342 - 2353	01
			ALTERNATE SPARE (PERMISSIBLE TO ALSO USE): S3100-629							
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL SENSOR

AIRPLANES (208) 0500 & ON AND AIRPLANES (208B) 2000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 2F	S3100-582	.	FUEL LEVEL SENSOR - LEFT UL002 WS 214.30						(208) 0541 - 0590	01
			FOR SPARES ORDER (MUST REPLACE WITH):						(208B) 2354 - 5334	
			S3100-629							
- 2G	S3100-582	.	FUEL LEVEL SENSOR - RIGHT UR002 WS 214.30						(208) 0541 - 0590	01
			ALTERNATE SPARE (PERMISSIBLE TO ALSO USE):						(208B) 2354 - 5334	
			S3100-629							
- 2H	S3100-629	.	FUEL LEVEL SENSOR - LEFT UL002 WS 214.30						(208) 0591 & ON	01
			SPARES REPLACEMENT FOR:						(208B) 5335 & ON	
			76-207-2							
			76-207-12							
			S3100-577							
			S3100-582							
- 2J	S3100-629	.	FUEL LEVEL SENSOR - RIGHT UR002 WS 214.30						(208) 0591 & ON	01
									(208B) 5335 & ON	
			ATTACHING PARTS							
3	MS35206-272	.	SCREW						(208) 0500 & ON	10
									(208B) 2000 & ON	
3A	NAS1149F0332P	.	WASHER						(208) 0500 & ON	10
									(208B) 2000 & ON	
3B	MS35338-43	.	LOCK WASHER					80205	(208) 0500 & ON	10
									(208B) 2000 & ON	
4	S2670-1	.	GASKET					09393	(208) 0500 & ON	02
									(208B) 2000 & ON	
			--*--							
5	2670175-4	.	COVER - FUEL SENSOR WS 97.50						(208) 0500 - 0552	01
									(208B) 2000 - 5075	
6	2670175-4	.	COVER - FUEL SENSOR WS 141.20						(208) 0500 - 0552	01
									(208B) 2000 - 5075	
			ATTACHING PARTS							
7	NAS1352-3-10	.	SCREW						(208) 0500 - 0552	10
									(208B) 2000 - 5075	
8	MS35338-43	.	LOCK WASHER					80205	(208) 0500 - 0552	10
									(208B) 2000 - 5075	
			--*--							
9	S2670-1	.	GASKET					09393	(208) 0500 - 0552	02
									(208B) 2000 - 5075	

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG


28-42-01

FUEL SELECTORS OFF WARNING SYSTEM

**AIRPLANES (208) 0106 & ON AND AIRPLANES (208) 0001 THRU 0105
INCORPORATING SK208-20 AND AIRPLANES (208B) 0001 & ON**

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24957

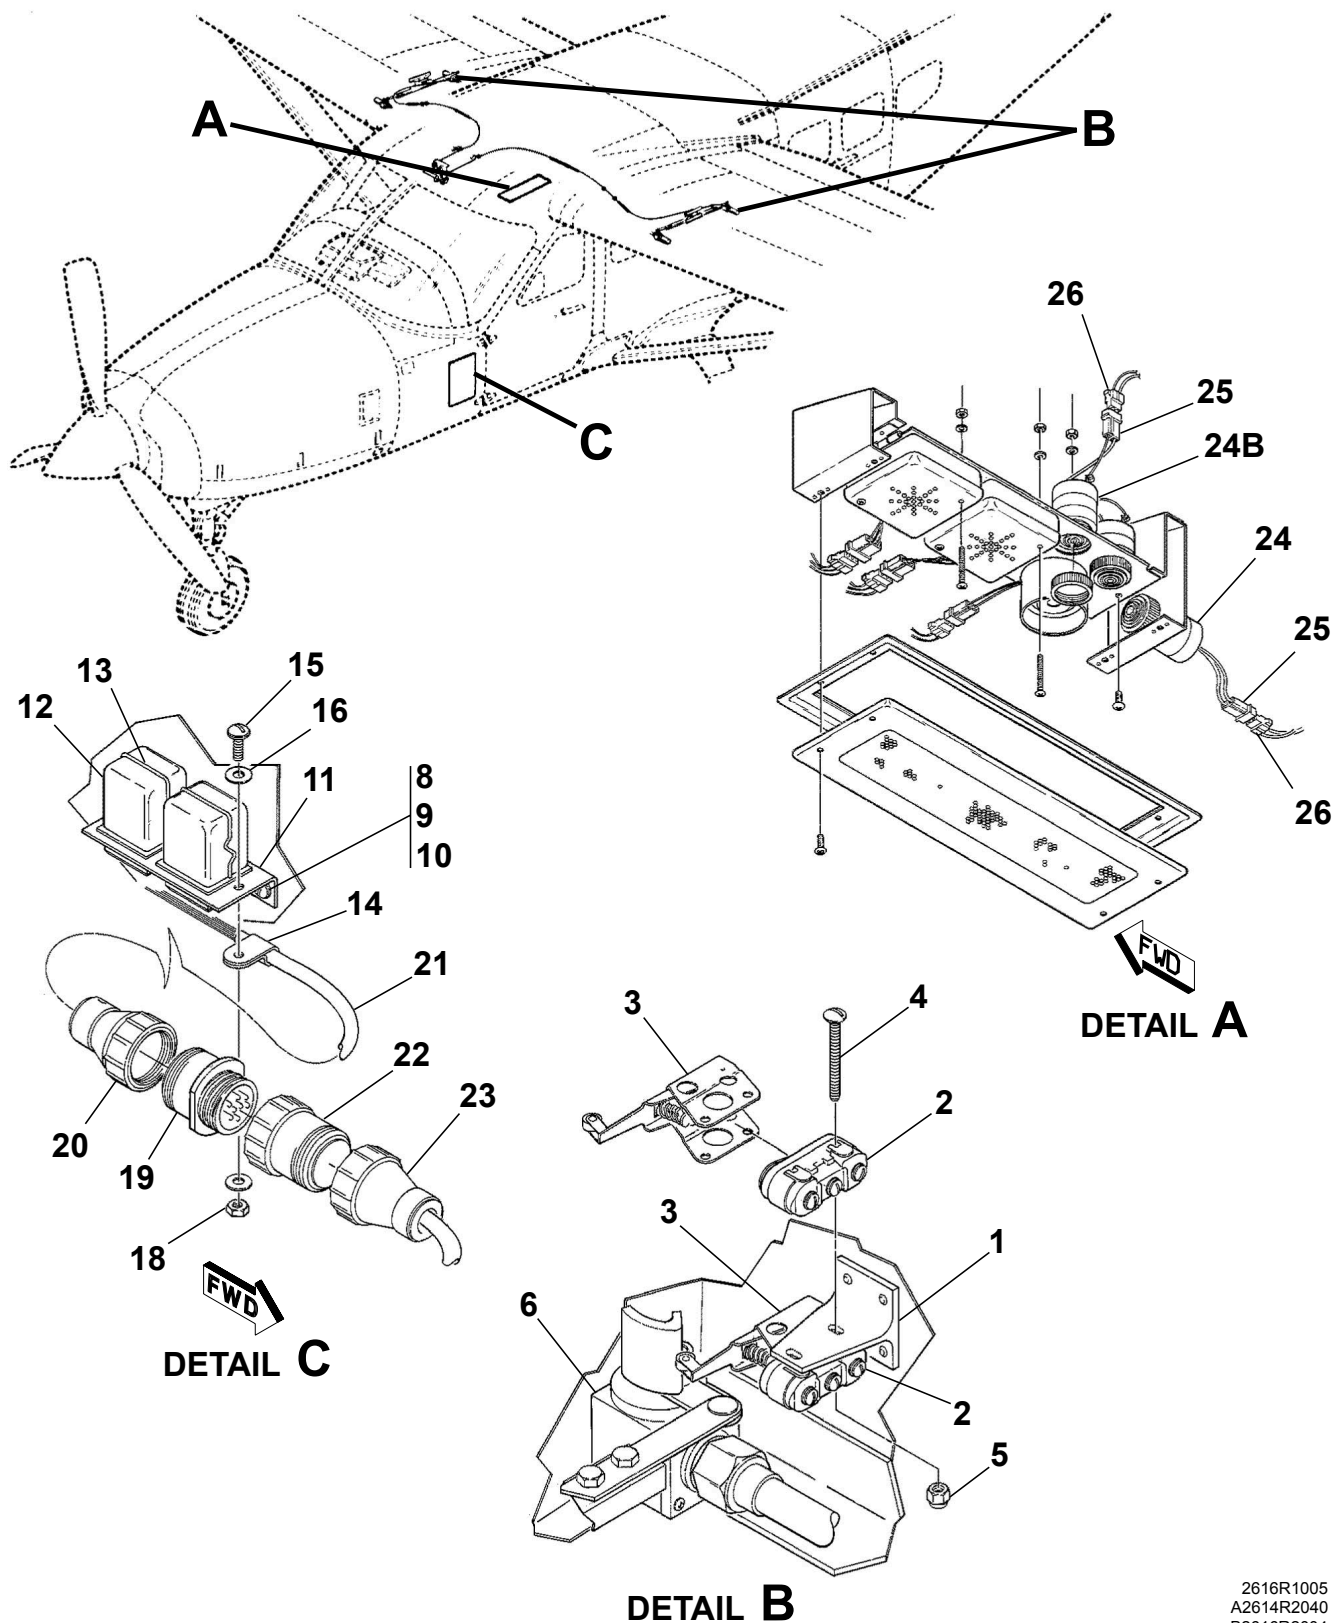

FUEL SELECTORS OFF WARNING SYSTEM
 Figure 01. (Sheet 1)

2616R1005
 A2614R2040
 B2616R2004
 C2616R1011

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL SELECTORS OFF WARNING SYSTEM

**AIRPLANES (208) 0106 & ON AND AIRPLANES (208) 0001 THRU 0105 INCORPORATING SK208-20 AND
 AIRPLANES (208B) 0001 & ON**

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	2606004-3	.	TEE - SWITCH SUPPORT						(208) 0001 & ON (208B) 0001 & ON	02
2	1HS6	.	SWITCH - FUEL SELECTOR OFF WARNING LEFT & RIGHT				91929		(208) 0001 & ON (208B) 0001 & ON	04
3	ADH3721R2	.	ACTUATOR - SWITCH				91929		(208) 0106 - 0499 (208B) 0001 - 1999	04
- 3A	ADH3721R2	.	ACTUATOR - SWITCH				91929		(208) 0500 & ON (208B) 2000 & ON	02
			ATTACHING PARTS							
4	MS35206-328	.	SCREW - RIGHT & LEFT						(208) 0001 & ON (208B) 0001 & ON	04
5	MS21044N08	.	NUT - RIGHT & LEFT				72914		(208) 0001 & ON (208B) 0001 & ON	04
			--*--							
6		.	VALVE ASSEMBLY - LEFT & RIGHT REFER TO 28-23-01 FIGURE 01 .							RF
- 7	2670088-1	.	RELAY BRACKET ASSEMBLY						(208) 0001 & ON (208B) 0001 & ON	01
			ATTACHING PARTS							
8	MS35206-230	.	SCREW				80205		(208) 0001 & ON (208B) 0001 & ON	02
9	NAS1149FN632P	.	WASHER				4W953		(208) 0001 & ON (208B) 0001 & ON	04
10	MS21044N06	.	NUT				K5788		(208) 0001 & ON (208B) 0001 & ON	02
			--*--							
11	2670088-2	.	RELAY BRACKET						(208) 0001 & ON (208B) 0001 & ON	01
12	S4039-1	.	RELAY - FUEL SELECTOR OFF WARNING						(208) 0001 & ON (208B) 0001 & ON	02
13	S2032-3	.	SPRING						(208) 0001 & ON (208B) 0001 & ON	02
14	S1155-4	.	CLAMP						(208) 0001 & ON (208B) 0001 & ON	01
			ATTACHING PARTS							
15	MS35207-262	.	SCREW				80205		(208) 0001 & ON (208B) 0001 & ON	01
16	NAS1149F0332P	.	WASHER - UNDER SCREW HEAD						(208) 0001 & ON (208B) 0001 & ON	01
- 17	NAS1149F0363P	.	WASHER - UNDER NUT				73197		(208) 0001 & ON (208B) 0001 & ON	01
18	AN316-3R	.	NUT						(208) 0001 & ON (208B) 0001 & ON	01
			--*--							
19	S2350-3	.	RECEPTACLE						(208) 0001 & ON (208B) 0001 & ON	01
20	S2351-1	.	CLAMP				00779		(208) 0001 & ON (208B) 0001 & ON	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL SELECTORS OFF WARNING SYSTEM

**AIRPLANES (208) 0106 & ON AND AIRPLANES (208) 0001 THRU 0105 INCORPORATING SK208-20 AND
 AIRPLANES (208B) 0001 & ON**

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
21	S1694-4	.	.						(208) 0001 & ON (208B) 0001 & ON	01
22	S2349-1	.			CONNECTOR			00779	(208) 0001 & ON (208B) 0001 & ON	01
23	S2351-1	.			CLAMP			00779	(208) 0001 & ON (208B) 0001 & ON	01
24	SC628P	.			SONALERT - WARNING HORN UC003 ALTERNATE SPARE (PERMISSIBLE TO ALSO USE): SC628PR			37942	(208) 0001 & ON (208B) 0001 & ON	01
- 24A	SC628PR	.			SONALERT - WARNING HORN UC003			37942	(208) 0001 & ON (208B) 0001 & ON	02
24B	SC628ANP	.			SONALERT SIGNAL UC004 ALTERNATE SPARE (PERMISSIBLE TO ALSO USE): SC628ANPR			37942	(208) 0001 & ON (208B) 0001 & ON	01
- 24C	SC628ANPR	.			SONALERT SIGNAL UC004			37942	(208) 0001 & ON (208B) 0001 & ON	01
25	S2035-1	.	.		HOUSING - CAP				(208) 0001 & ON (208B) 0001 & ON	01
26	S2035-2	.			HOUSING - PLUG			00779	(208) 0001 & ON (208B) 0001 & ON	02

- ITEM NOT ILLUSTRATED