

FRESH AIR DISTRIBUTION - ADJUSTMENT/TEST**1. General**

- A. This section has the inspections and checks necessary to keep the fresh air distribution system in a serviceable condition.

2. Ventilation Outlet and Controls Operational Check

A. General

- (1) This section gives the information needed to complete the operational check of the ventilation outlet and controls.

B. Special Tools

- (1) None

C. Access

- (1) None

D. Do the Ventilation Outlet and Controls Operational Check.

- (1) Examine the control and cable attachment for condition and security of installation.
- (2) Examine the wiring at the switch for evidence of damage and security of the connections.
- (3) Examine the WEMAC outlet for condition, security, and correct operation.
- (a) Make sure that the WEMAC does not stick in the closed position.
- (4) Examine the clamps, hoses, valves, inlet screens, and ventilation system for condition, evidence of moisture intrusion, and security of the components.
- (5) Examine the internal hose wire for condition.
- (6) Examine all vent outlets for condition, security, and correct operation of the ON/OFF control and outlet vanes.
- (7) Visually examine the accessible air ducts for condition and security.

E. Restore Access

- (1) None