COMPRESSOR BLEED AIR HEATER - TROUBLESHOOTING

1. General

- A. Troubleshooting of the compressor bleed air heater and/or flow control valve should be performed anytime output flow falls below normal parameters.
- B. Troubleshooting charts have been prepared to aid the maintenance technician in system troubleshooting. Refer to Figure 101 for compressor bleed air troubleshooting diagram. Refer to Figure 102 for flow control valve troubleshooting diagram. Refer to Figure 103 and Figure 104 for cabin heating and windshield defrosting troubleshooting diagrams.

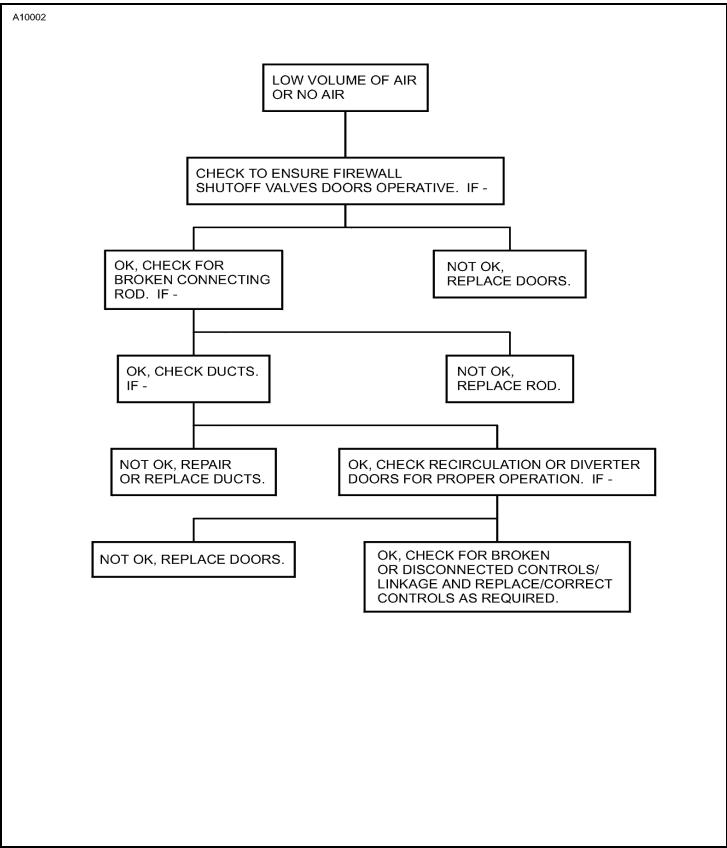
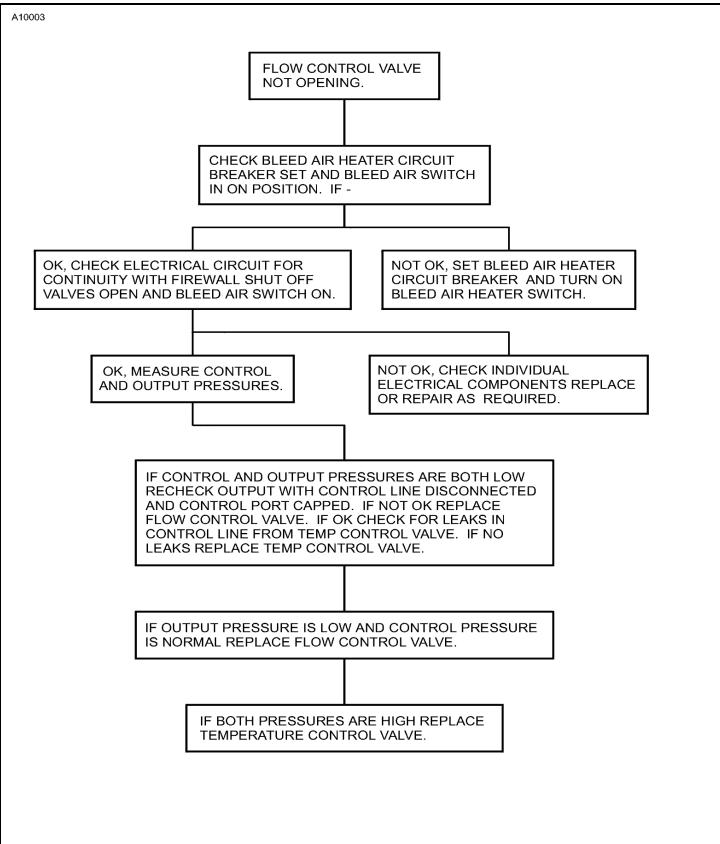
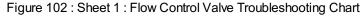
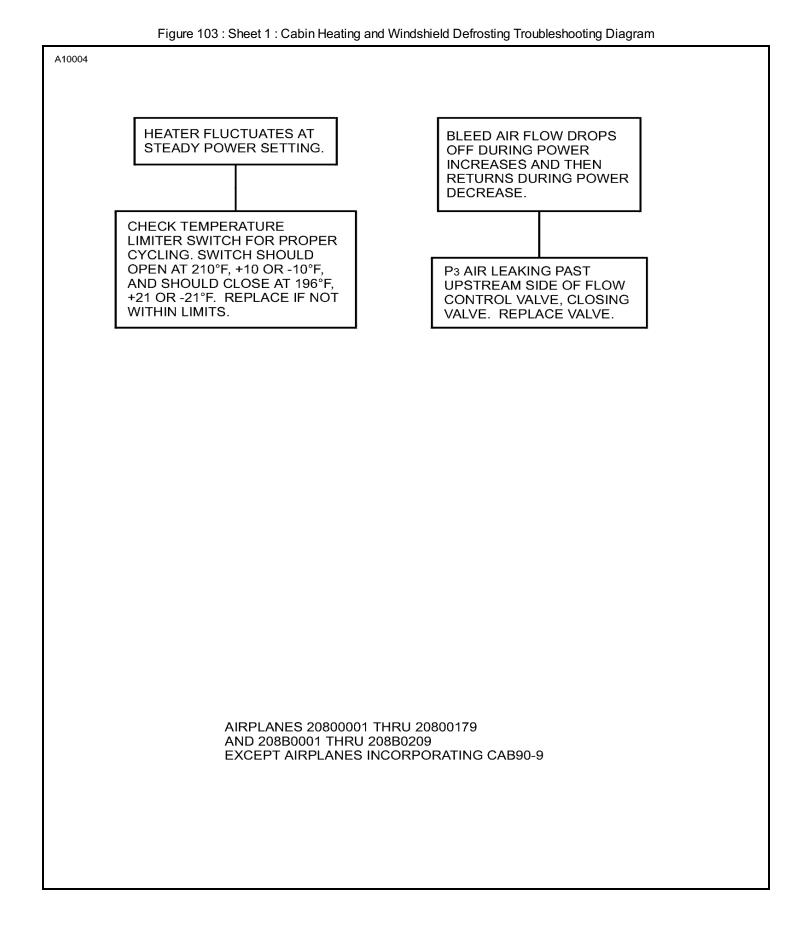


Figure 101 : Sheet 1 : Compressor Bleed Air Heater Troubleshooting Diagram







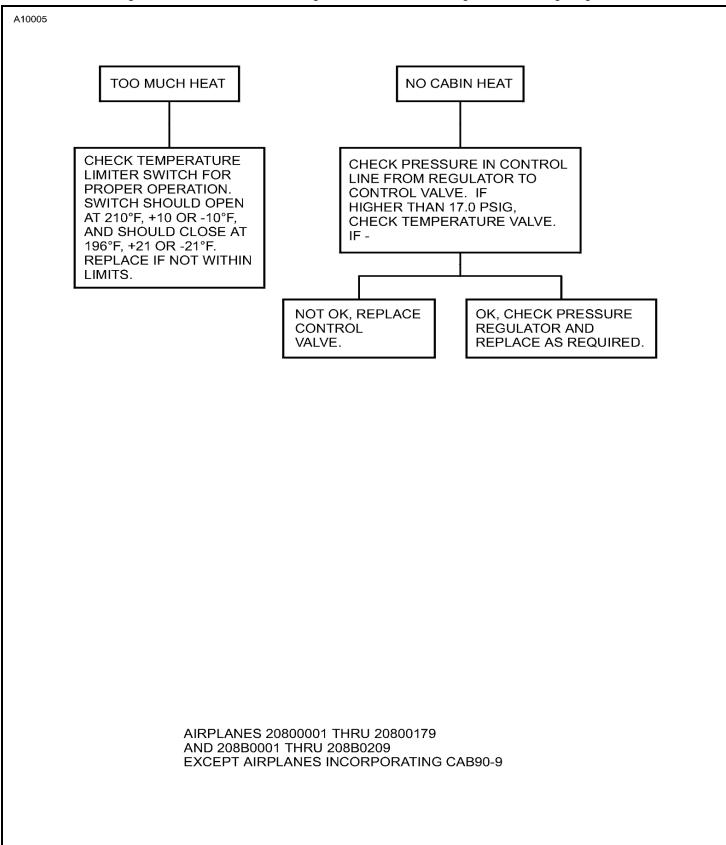


Figure 103 : Sheet 2 : Cabin Heating and Windshield Defrosting Troubleshooting Diagram

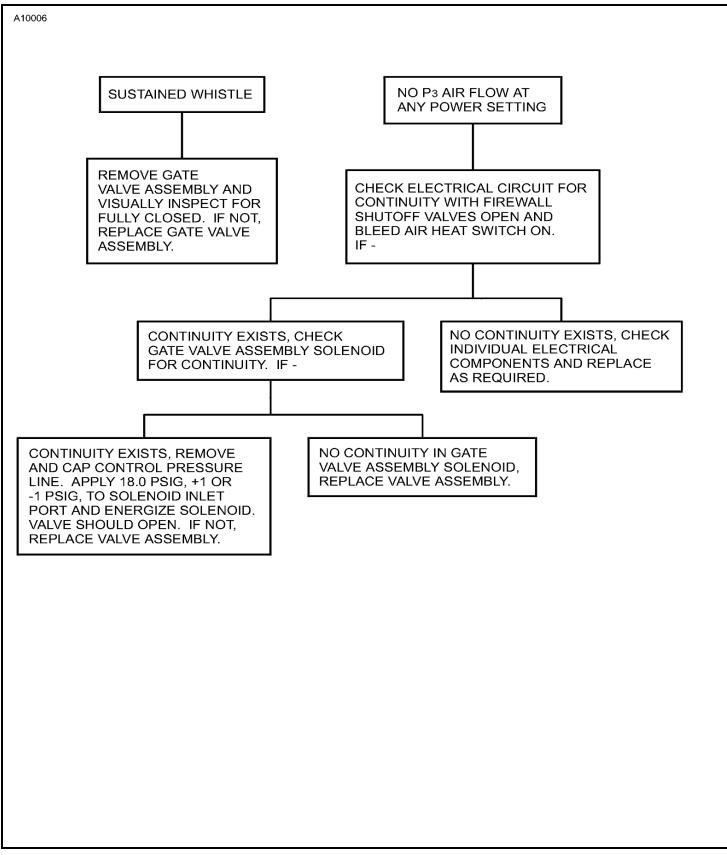


Figure 103 : Sheet 3 : Cabin Heating and Windshield Defrosting Troubleshooting Diagram

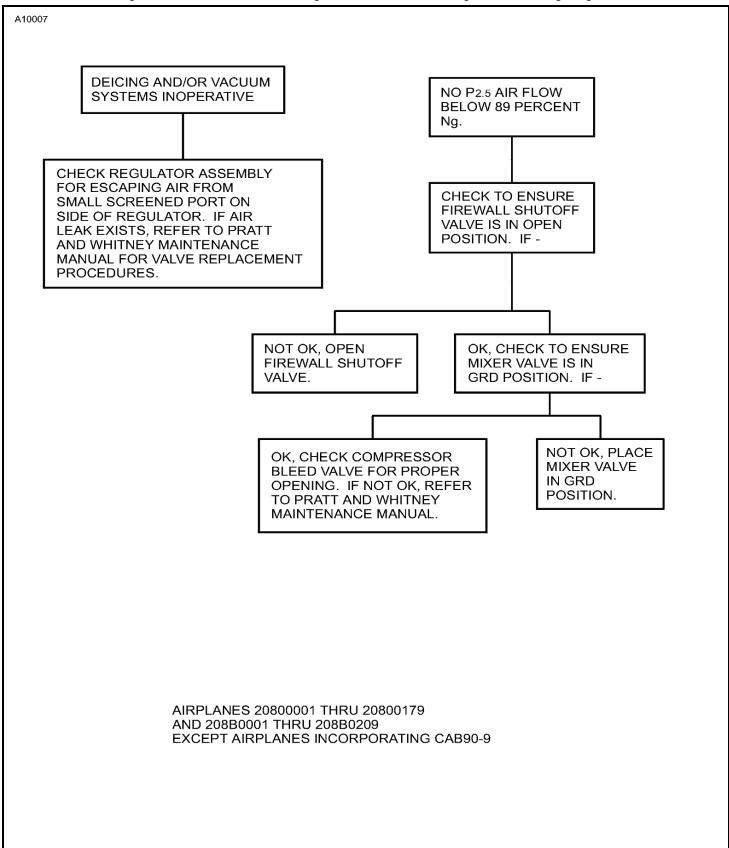


Figure 103 : Sheet 4 : Cabin Heating and Windshield Defrosting Troubleshooting Diagram

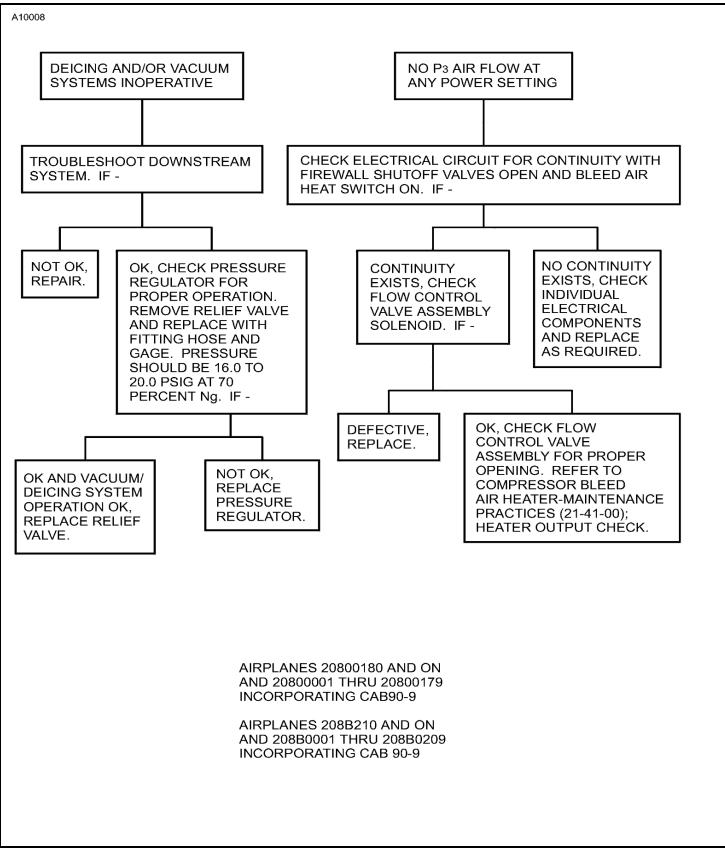


Figure 104 : Sheet 1 : Cabin Heating and Windshield Defrosting Troubleshooting Diagram

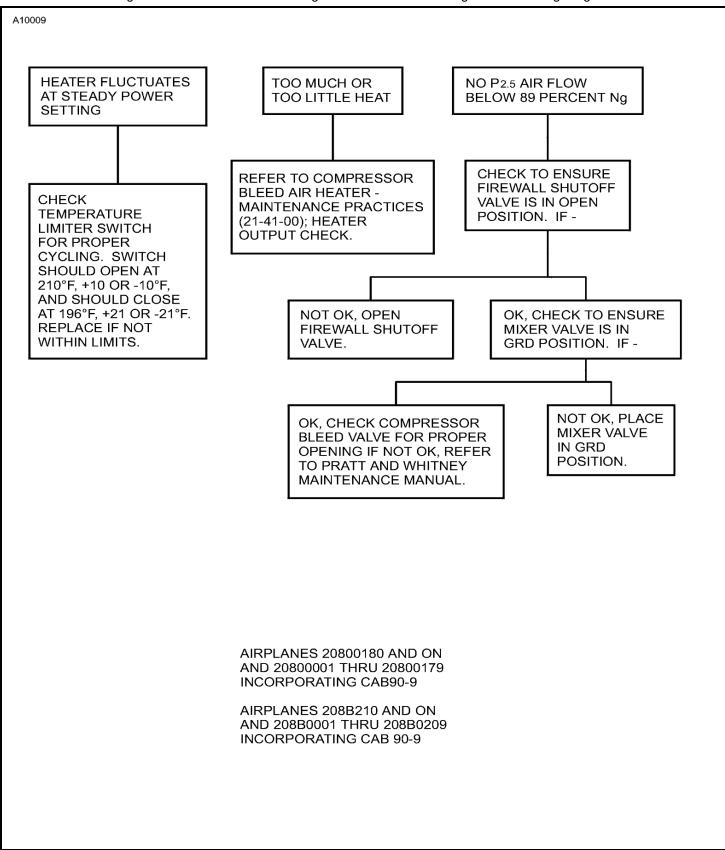


Figure 104 : Sheet 2 : Cabin Heating and Windshield Defrosting Troubleshooting Diagram