

**INCANDESCENT ICE DETECTOR LIGHT - MAINTENANCE PRACTICES****1. General**

- A. This section gives the procedures for the removal/installation of the incandescent ice detector light.

**2. Ice Detector Light Removal/Installation**

- A. Remove Ice Detector Light (Refer to Figure 201).

- (1) Remove three screws (8), lens retainer (7), and lens (6).
- (2) Press in slightly on bulb (9) and turn counterclockwise to remove bulb from socket (3).
- (3) Remove old sealer from housing assembly (10) and lens (6), taking care not to scratch lens.

- B. Install Ice Detector Light (Refer to Figure 201).

- (1) Insert bulb (9) into socket (6), press in slightly, and turn clockwise.
- (2) Apply Acryl-R-5525 sealant, or equivalent, around opening in housing assembly (10). Take care to apply sealant sparingly.
- (3) Press lens (6) into place and secure lens retainer (7) using three screws (8).