

INCANDESCENT COURTESY LIGHTS - MAINTENANCE PRACTICES**1. General**

- A. This section gives the procedures for the removal/installation of the incandescent courtesy lights and the timer.

2. Courtesy Light Removal/Installation

- A. Remove Courtesy Light (Refer to Figure 201).
- (1) Remove screws (14) securing plate (12) and remove plate.
 - (2) Pull pin (3) from socket (2), and remove entire assembly from wing.
 - (3) Remove screws (13), nuts (5 and 6) and remove plate (12) from shield assembly (7).
 - (4) Press in on bulb (11) and turn counterclockwise to remove bulb from socket (8).
- B. Install Courtesy Light (Refer to Figure 201).
- (1) Insert bulb (11) into socket (8), press bulb into socket slightly, and turn clockwise.
 - (2) Attach shield assembly (7) to plate (12) using screws (13), nuts (5 and 6), making sure ground wire (4) is connected as shown.
 - (3) Insert pin (3) into socket (2).
 - (4) Secure plate (12) by using screws (14).

3. Timer Removal/Installation

- A. Remove Timer (Refer to Figure 201).
- (1) Disconnect electrical plug (17).
 - (2) Remove four screws (16) securing timer (15).
 - (3) Remove timer (15) from brackets (18).
- B. Install Timer (Refer to Figure 201).
- (1) Position timer (15) to brackets (18).
 - (2) Install four screws (16) securing timer (15).
 - (3) Connect electrical plug (17).