

**VACUUM DISTRIBUTION - INSPECTION/CHECK****1. General**

- A. This section has the inspections and checks necessary to keep the vacuum distribution system in a serviceable condition.

**TASK 37-10-00-960****2. Vacuum System Central Air Filter Discard**

**CAUTION:** Do not operate the vacuum system with the filter removed or a vacuum line disconnected. Dust and other foreign objects can enter the system and damage the vacuum operated instruments.

A. General

- (1) This task gives the instructions to discard the vacuum system central air filter.

B. Special Tools

- (1) None

C. Access

- (1) None

D. Discard the Vacuum System Central Air Filter.

- (1) Remove the vacuum system central air filter. Refer to Chapter 12, Vacuum System Central Air Filter - Servicing.  
(a) Discard the filter.  
(2) Install a new vacuum system central air filter. Refer to Chapter 12, Vacuum System Central Air Filter - Servicing.

E. Restore Access

- (1) None

**END OF TASK****TASK 37-10-00-961****3. Vacuum Relief Valve Filter Discard**

**CAUTION:** Do not operate the vacuum system with the filter removed or a vacuum line disconnected. Dust and other foreign objects can enter the system and damage the vacuum operated instruments.

A. General

- (1) This task gives the instructions to discard the vacuum relief valve filter.

B. Special Tools

- (1) None

C. Access

- (1) None

D. Discard the Vacuum Relief Valve Filter.

- (1) Get access to the relief valve behind the attitude gyro.  
(2) Carefully stretch the foam element filter over the top of the retaining bezel.  
(3) Remove the filter from the relief valve and discard it.  
(4) Stretch a new relief valve filter over the top of the retaining bezel.  
(5) Make sure that the filter is secure on the relief valve.

E. Restore Access

- (1) None

**END OF TASK**