

PEDESTAL - DESCRIPTION AND OPERATION

1. General

- A. This section provides a description of the cockpit mounted pedestal.

2. Description

- A. The pedestal is located in the flight compartment between crew seats. The pedestal contains flight controls, power levers, flap control, propeller feather, fuel lever, emergency power lever and flood lights which illuminate the lower center portion of the instrument panel. The pedestal incorporates removable access plates which allow access to various controls.
 - (1) For removal and installation of flight controls, refer to Chapter 27, Flight Controls - General.
 - (2) For removal and installation of fuel shutoff, refer to Chapter 28, Fuel - General.
 - (3) For removal and installation of engine controls, refer to Chapter 76, Engine Controls - General.
- B. Refer to Figure 1 for an illustration of the pedestal.

Figure 1 : Sheet 1 : Pedestal

