

REVISION SUMMARY

1. General

- A. This section shows a table that gives operators and maintenance personnel a list of the changes that were made to different documents in the manual as part of Revision 33.
- B. The table has three columns. The three columns are entitled: Chapter-Section-Subject, Document Title, and Action.

2. Definition

- A. Columns
 - (1) Chapter-Section-Subject - This column gives the manual location for each document in the revision.
 - (2) Document Title - This column gives the name of the document as it is given at the top of the actual document and in the Table of Contents.
 - (3) Action - This column gives the step you must complete to include this revision in a paper copy of the manual. There are three different steps that can be given. The three steps are ADD, REPLACE, and REMOVE.

NOTE: This column does not apply to CD-ROM, DVD-ROM, or internet delivered publications.
- B. Rows
 - (1) Each row gives all the necessary data for one document that is part of the current revision.

3. Procedure

- A. Find the manual location for each document in the revision as given by the data in the Chapter-Section-Subject column.

NOTE: For data about document page numbers and how to put them in the manual, refer to Introduction, Page Number System. Also, pages 1 - 99 are used for both "General", and "Description And Operation" documents.
- B. Make sure that the title of the document that you remove and/or the title of the document that you add agree with the data in the Document Title column of the table.
- C. Complete the step given in the Action column as directed below:
 - (1) ADD - This step is for a new document that was not in the manual before. Put it in the applicable location.
 - (2) REPLACE - This step is for an existing document that was changed in the current revision. Remove the existing document and put the revised one in its place.
 - (3) REMOVE - This step is for an existing document that is no longer applicable. Remove it from the manual.

CHAPTER SECTION SUBJECT	DOCUMENT TITLE	ACTION
	REVISION SUMMARY	REPLACE
Introduction	LIST OF EFFECTIVE PAGES	REPLACE
Introduction	TABLE OF CONTENTS	REPLACE
Introduction	INSPECTION PROGRAM CHANGE SUMMARY	REPLACE
Introduction	LIST OF REVISIONS	REPLACE
Introduction	ICA SUPPLEMENT LIST	REPLACE
Introduction	SUPPLIER PUBLICATION LIST	REPLACE
Chapter 5	LIST OF EFFECTIVE PAGES	REPLACE
Chapter 5	TABLE OF CONTENTS	REPLACE
5-10-01	INSPECTION TIME LIMITS	REPLACE
5-15-09	INSPECTION DOCUMENT 09	REPLACE
Chapter 12	LIST OF EFFECTIVE PAGES	REPLACE
Chapter 12	TABLE OF CONTENTS	REPLACE
12-21-02	FLIGHT CONTROLS - SERVICING	REPLACE

Chapter 22	LIST OF EFFECTIVE PAGES	REPLACE
Chapter 22	TABLE OF CONTENTS	REPLACE
22-12-00	GFC 700 AUTOPILOT - ADJUSTMENT/TEST	REPLACE
Chapter 24	LIST OF EFFECTIVE PAGES	REPLACE
Chapter 24	TABLE OF CONTENTS	REPLACE
24-52-01	ELECTRICAL LOAD ANALYSIS - DESCRIPTION AND OPERATION	REPLACE
Chapter 34	LIST OF EFFECTIVE PAGES	REPLACE
Chapter 34	TABLE OF CONTENTS	REPLACE
34-11-00	PITOT/STATIC SYSTEM - DESCRIPTION AND OPERATION	REPLACE
34-11-10	GARMIN G1000 AIR DATA COMPUTER SYSTEM - DESCRIPTION AND OPERATION	ADD
34-11-10	GARMIN G1000 AIR DATA COMPUTER SYSTEM - TROUBLESHOOTING	REPLACE
34-11-10	GARMIN G1000 GDC-74A AIR DATA COMPUTER - MAINTENANCE PRACTICES	REMOVE
34-11-10	GARMIN G1000 AIR DATA COMPUTER SYSTEM - REMOVAL/INSTALLATION	REPLACE
34-11-11	GARMIN G1000 GDC-74A ADC CONFIGURATION MODULE - REMOVAL/INSTALLATION	REMOVE
34-24-05	GARMIN GMU 44 MAGNETOMETER - REMOVAL/INSTALLATION	REMOVE
34-25-00	GARMIN G1000 ATTITUDE HEADING REFERENCE SYSTEM - DESCRIPTION AND OPERATION	REPLACE
34-25-00	GARMIN G1000 ATTITUDE HEADING REFERENCE SYSTEM - TROUBLESHOOTING	REPLACE
34-25-00	GARMIN G1000 ATTITUDE HEADING REFERENCE SYSTEM - REMOVAL/INSTALLATION	REPLACE
34-25-00	GARMIN G1000 ATTITUDE HEADING REFERENCE SYSTEM - ADJUSTMENT/TEST	REPLACE
34-25-10	GARMIN G1000 GRS 77 AHRS CONFIGURATION MODULE - REMOVAL/INSTALLATION	REMOVE
34-41-00	GARMIN GWX-68/70 WEATHER RADAR SYSTEM - DESCRIPTION AND OPERATION	REPLACE
34-50-00	DEPENDENT POSITION DETERMINING - DESCRIPTION AND OPERATION	REPLACE
34-54-00	GARMIN GTX 327 TRANSPONDER - MAINTENANCE PRACTICES	REMOVE
34-54-10	GARMIN GTX 330 TRANSPONDER - MAINTENANCE PRACTICES	REMOVE
34-54-20	GARMIN GTX SERIES TRANSPONDER SYSTEM - DESCRIPTION AND OPERATION	REPLACE
34-54-20	GARMIN GTX SERIES TRANSPONDER SYSTEM - TROUBLESHOOTING	REPLACE
34-54-20	GARMIN GTX SERIES TRANSPONDER SYSTEM - REMOVAL/INSTALLATION	ADD
34-54-20	GARMIN GTX SERIES TRANSPONDER SYSTEM - ADJUSTMENT/TEST	REPLACE
34-54-25	GARMIN GTX 33/GTX 33ES TRANSPONDER SYSTEM - REMOVAL/INSTALLATION	REMOVE
34-55-00	GARMIN DATA LINK SYSTEM - DESCRIPTION AND OPERATION	REPLACE
34-55-00	GARMIN DATA LINK SYSTEM - TROUBLESHOOTING	REPLACE
34-55-00	GARMIN DATA LINK SYSTEM - MAINTENANCE PRACTICES	REMOVE
34-55-00	GARMIN DATA LINK SYSTEM - REMOVAL/INSTALLATION	ADD
34-55-00	GARMIN DATA LINK SYSTEM - ADJUSTMENT/TEST	REPLACE
34-55-05	GARMIN GDL 69A XM DATA LINK - REMOVAL/INSTALLATION	REMOVE
34-60-00	GARMIN G1000 INTEGRATED AVIONICS SYSTEM - DESCRIPTION AND OPERATION	REPLACE
34-60-00	GARMIN G1000 INTEGRATED AVIONICS SYSTEM - TROUBLESHOOTING	REPLACE

34-60-00	GARMIN G1000 INTEGRATED AVIONICS SYSTEM - ADJUSTMENT/TEST	REPLACE
34-60-05	GARMIN DISPLAY UNIT - REMOVAL/INSTALLATION	REPLACE
Chapter 53	LIST OF EFFECTIVE PAGES	REPLACE
Chapter 53	TABLE OF CONTENTS	REPLACE
53-25-00	SEAT RAILS - MAINTENANCE PRACTICES	REPLACE