

## SUNVISORS - MAINTENANCE PRACTICES

### 1. General

- A. Maintenance includes the removal and installation of the sunvisors.
- B. There are two types of sun visors for the 208 Caravan. One type of sun visor has components that include an adjustable friction nut, and the other has a mounting plate that is adjustable.


### 2. Sunvisor Removal/Installation

- A. Remove the Sunvisor (Refer to Figure 201).
  - (1) Remove the screws that attach the sunvisor to the airplane.
- B. Install the Sunvisor (Refer to Figure 201).
  - (1) Install the sunvisor with the screws.

**NOTE:** You can loosen or tighten the screws to adjust the sunvisors. Also, if installed on the sunvisor, the friction nut can be used to adjust the sunvisor.

Figure 201 : Sheet 1 : Sunvisor Installation

A22639

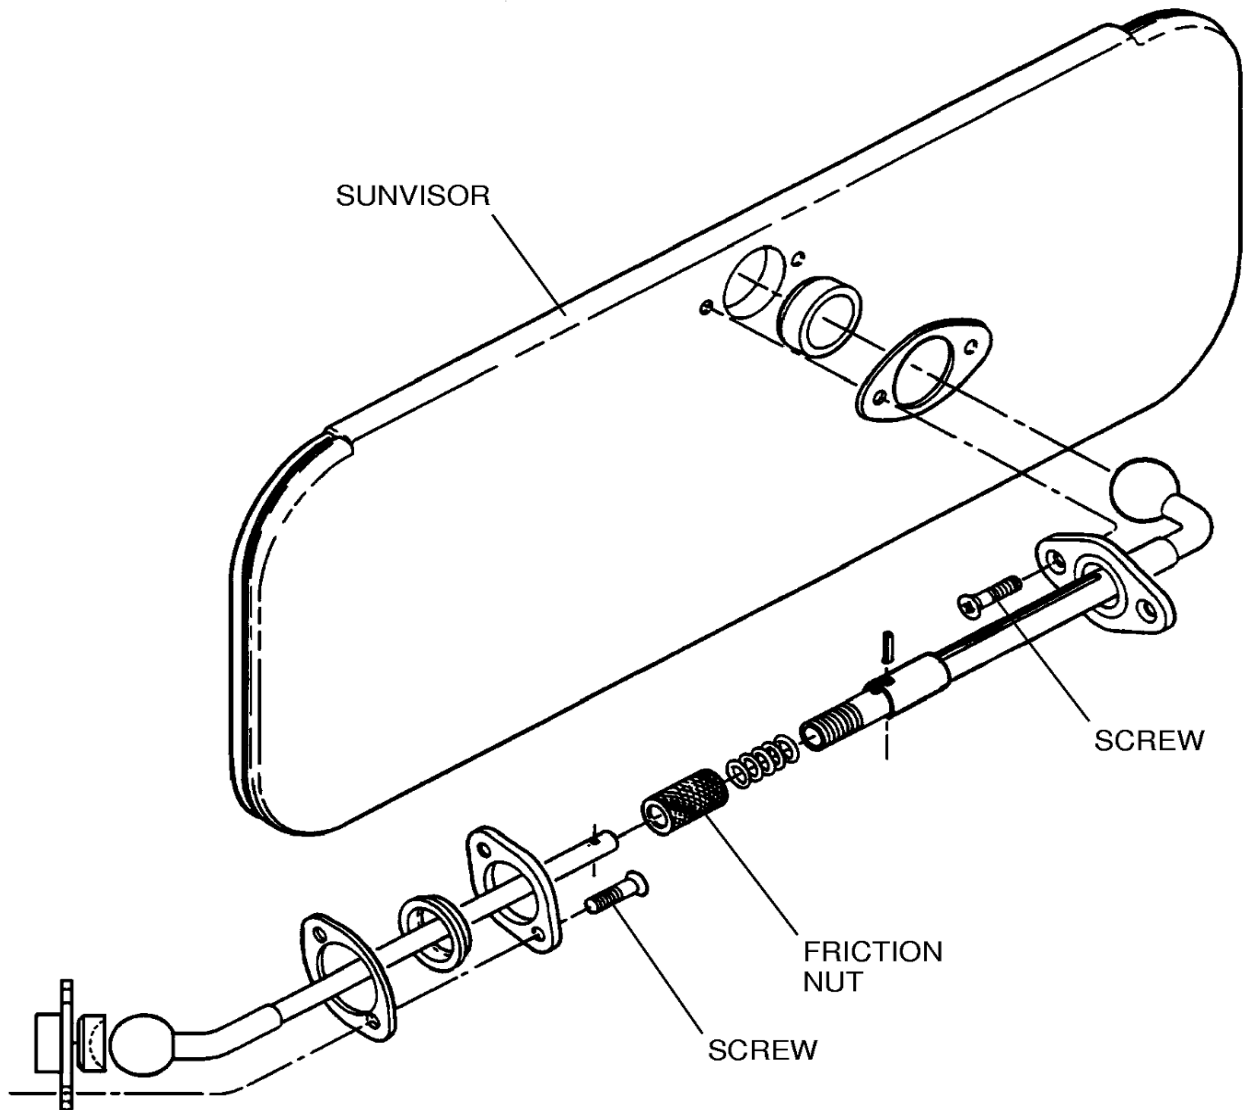

2619X1088

Figure 201 : Sheet 2 : Sunvisor Installation

