

FLOOR COVERING/CONTROL COLUMN COVER - MAINTENANCE PRACTICES

1. General

- A. This maintenance practice covers control column cover removal/installation and vinyl floor covering removal/installation. For maintenance practices related to airplanes equipped with plywood floorboards, refer to Chapter 53, Floorboards - Maintenance Practices.

2. Control Column Cover Removal/Installation

- A. Remove Control Column Cover (Refer to Figure 201).
 - (1) Remove screws securing top of control column cover to structure.
 - (2) Remove screws securing bottom of control column cover to floor.
 - (3) Remove bolts and washers on aft side of control column cover and remove control column cover from airplane.
- B. Install Control Column Cover (Refer to Figure 201).
 - (1) Position control column cover around control column.
 - (2) Secure aft end of control column cover together using bolts and washers.
 - (3) Attach control column cover to structure using screws.

3. Floor Covering Removal/Installation

- A. Remove Floor Covering on Airplanes 20800001 Thru 20800242 and 208B0001 Thru 208B0458 (Refer to Figure 201).
 - (1) Using a dull putty knife between floor covering and floorboard, carefully separate floor covering from floorboard.
 - (2) Remove floor covering from floorboard.
- B. Install Floor Covering on Airplanes 20800001 Thru 20800242 and 208B0001 Thru 208B0458 (Refer to Figure 201).
 - (1) Position floor covering on floorboard.
 - (2) Apply industrial grade rubber cement to outer edges of floor covering to hold in place.
- C. Floor Covering on Airplanes 20800243 and On and 208B0459 and On (Refer to Figure 201).

NOTE: The floor covering is held in place by a hook type fastener stitched to the floor covering and a hook attached to the floor panels using pressure sensitive adhesive backed fasteners. After removal of the outer edge strips, secured with bolts, removal and/or installation of the floor covering is simply a matter of pulling off the covering or pressing back in place.

Figure 201 : Sheet 1 : Cabin Floor Covering and Control Column Cover


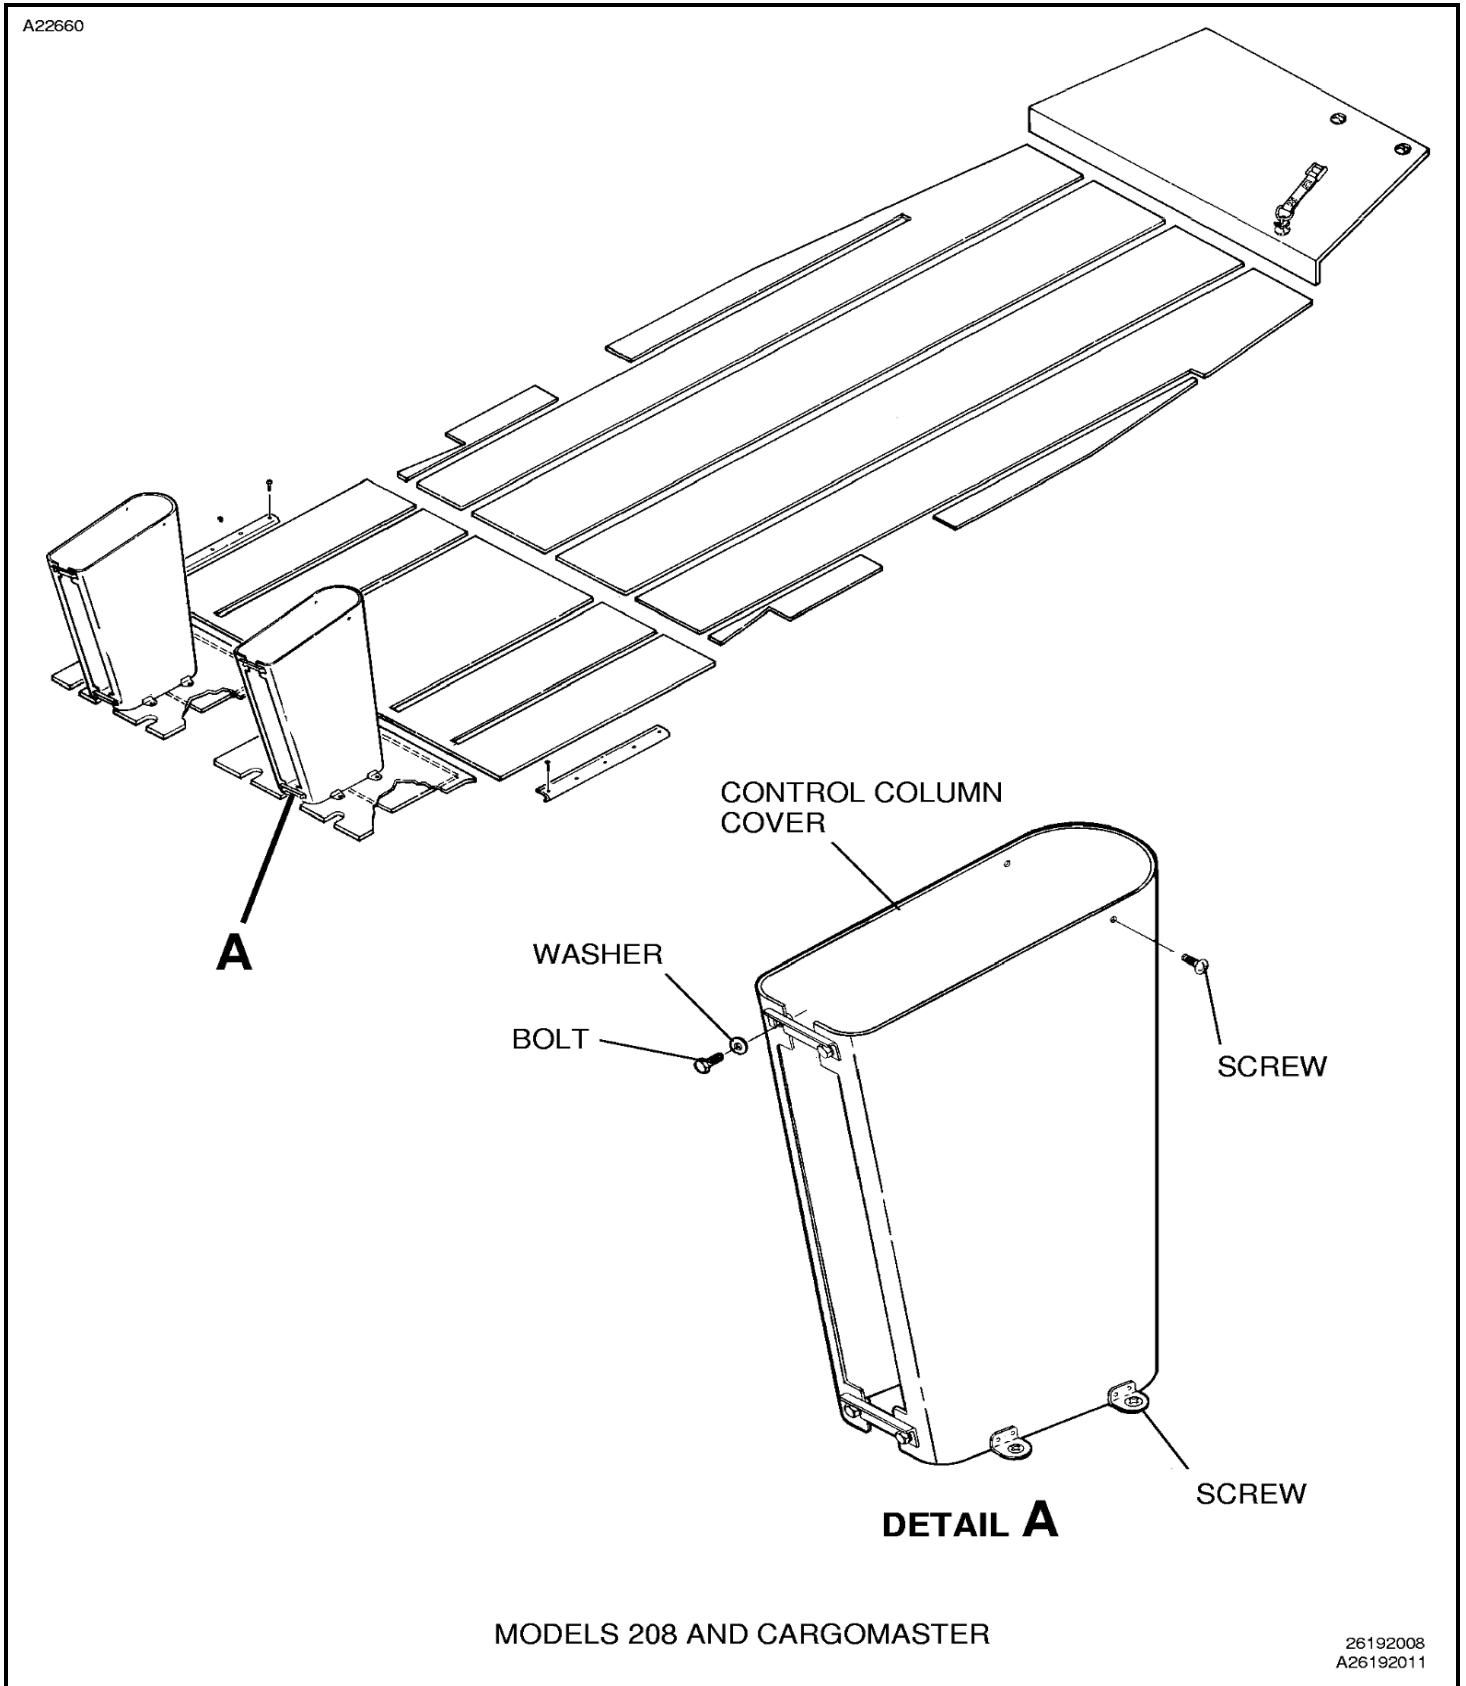


Figure 201 : Sheet 2 : Cabin Floor Covering and Control Column Cover

A22661

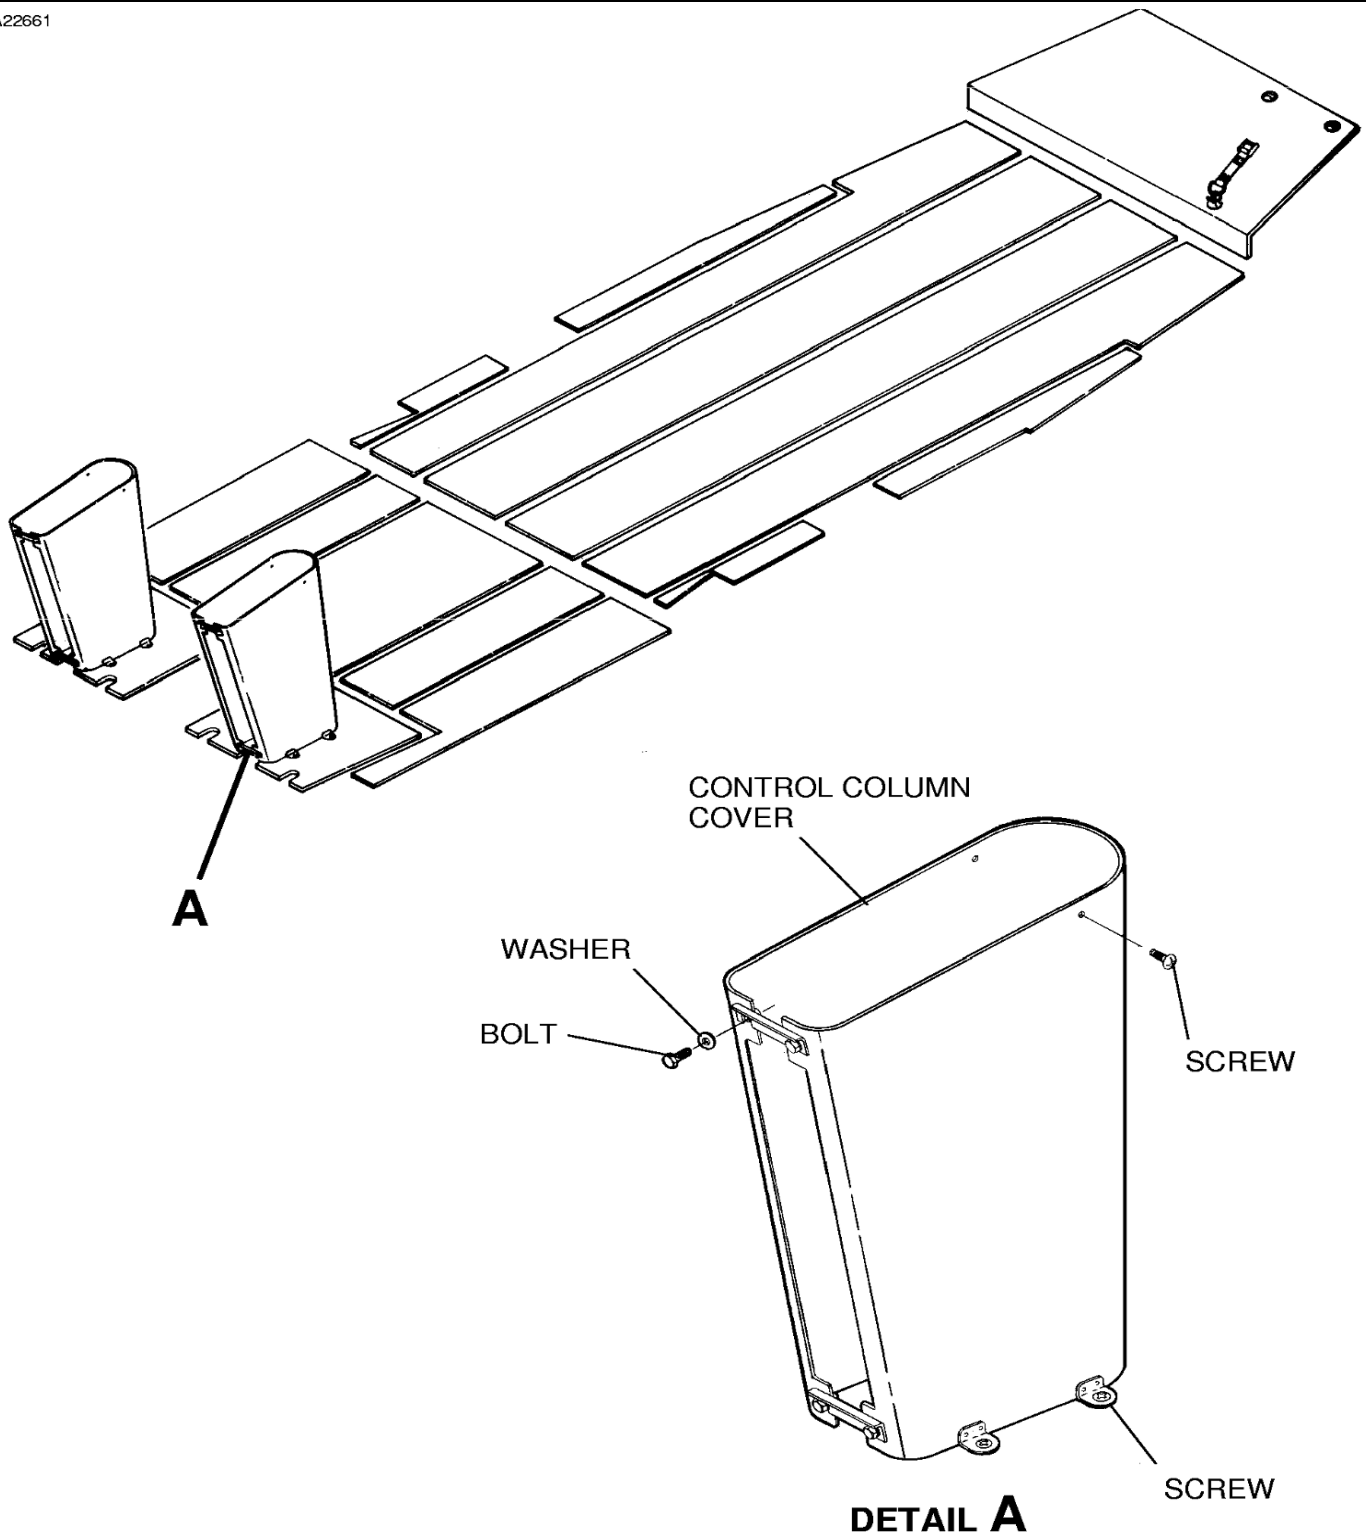

MODEL 208B PASSENGER

26192008
A26192011