

## LOADING ZONE WEIGHT LIMITS - CLEANING/PAINTING

### 1. General

- A. The cargo compartment of the Model 208 and 208B is divided into six loading zones. Painted on the sidewalls of each zone is the weight limit for that zone. Refer to Figure 701 for painting/repainting procedures and details.

Figure 701 : Sheet 1 : Loading Zone Limits - Painting Instructions

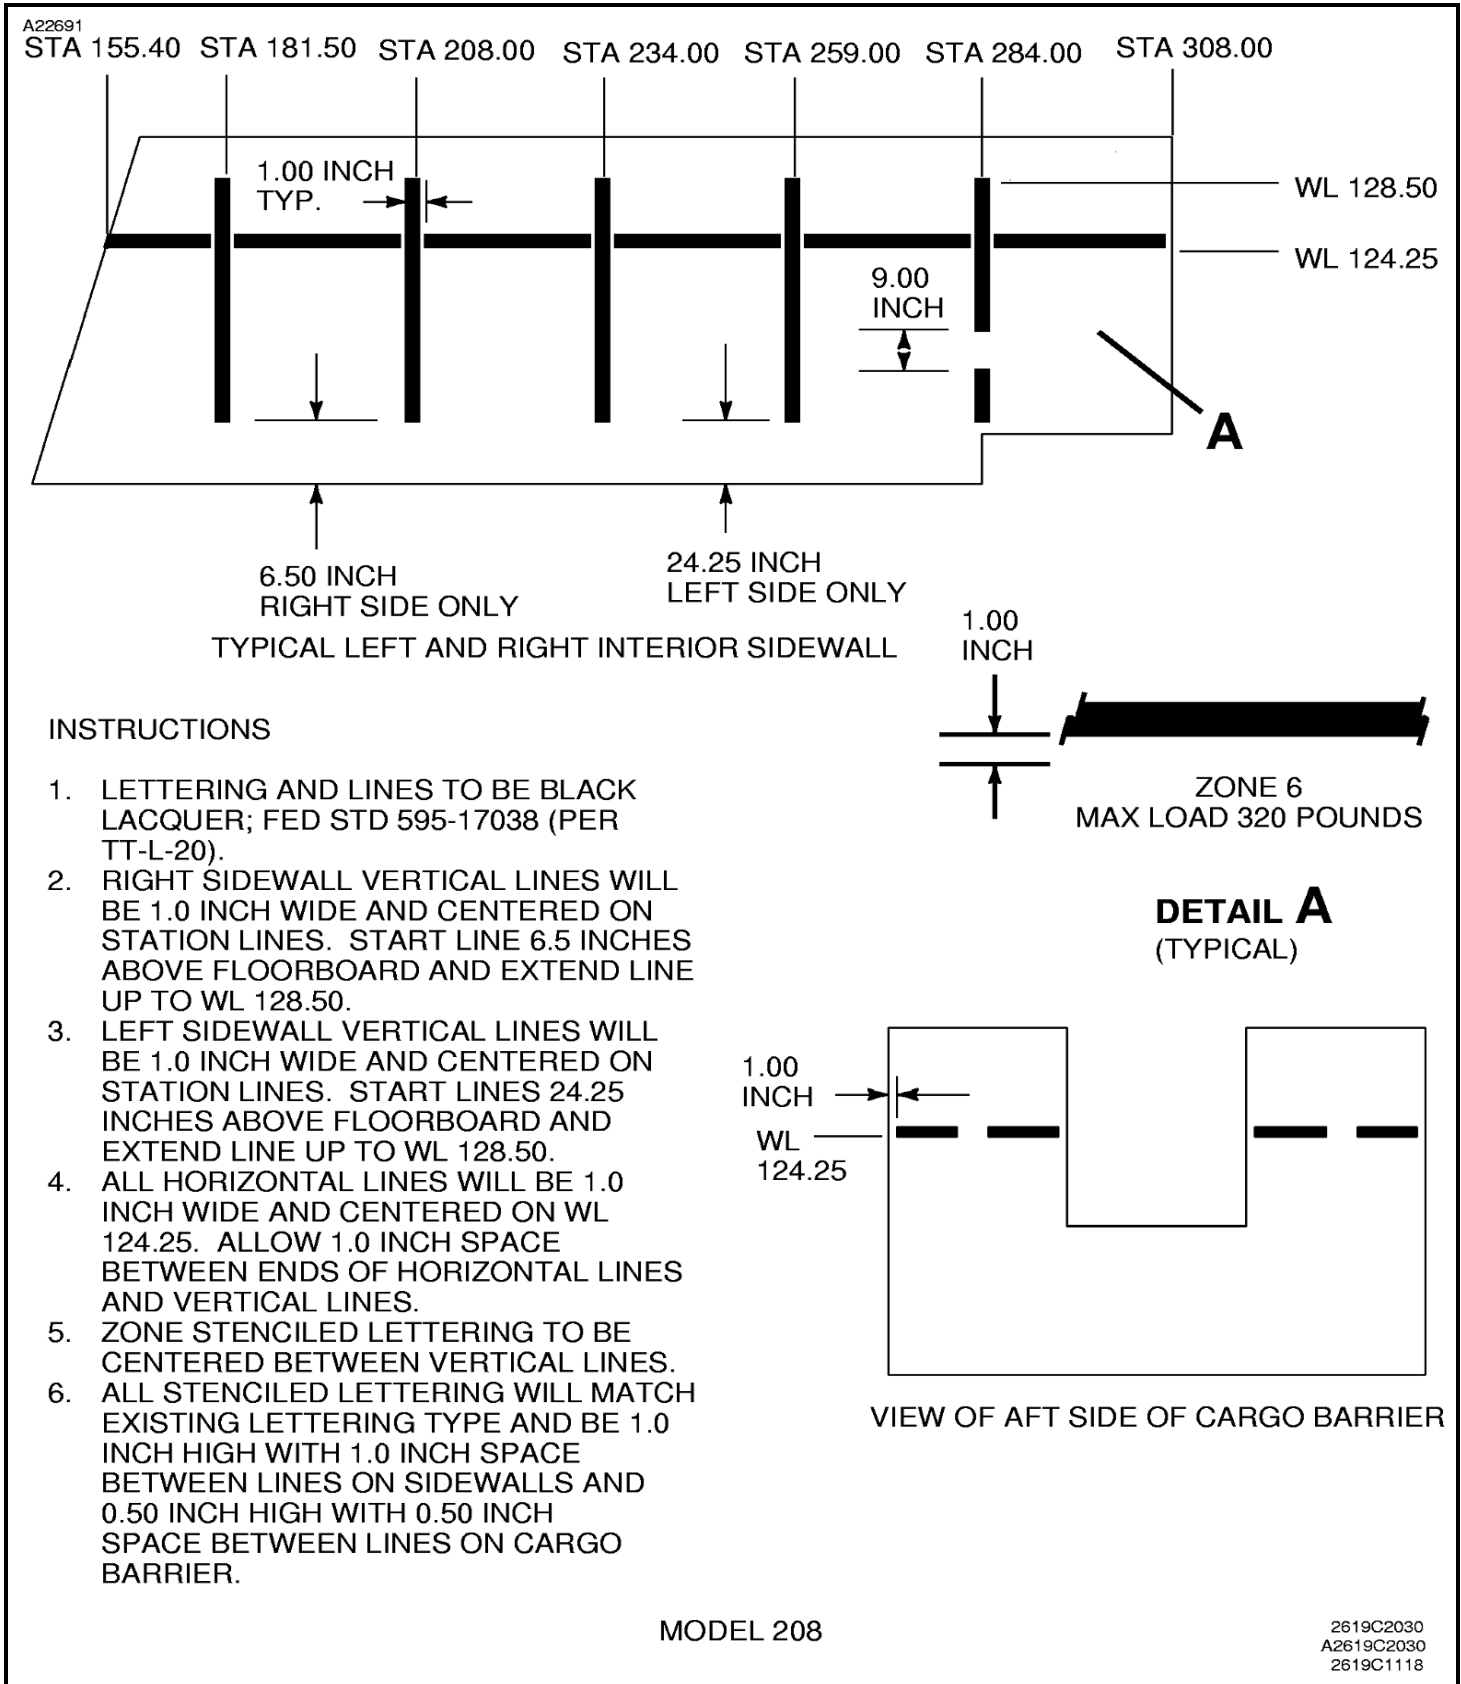


Figure 701 : Sheet 2 : Loading Zone Limits - Painting Instructions

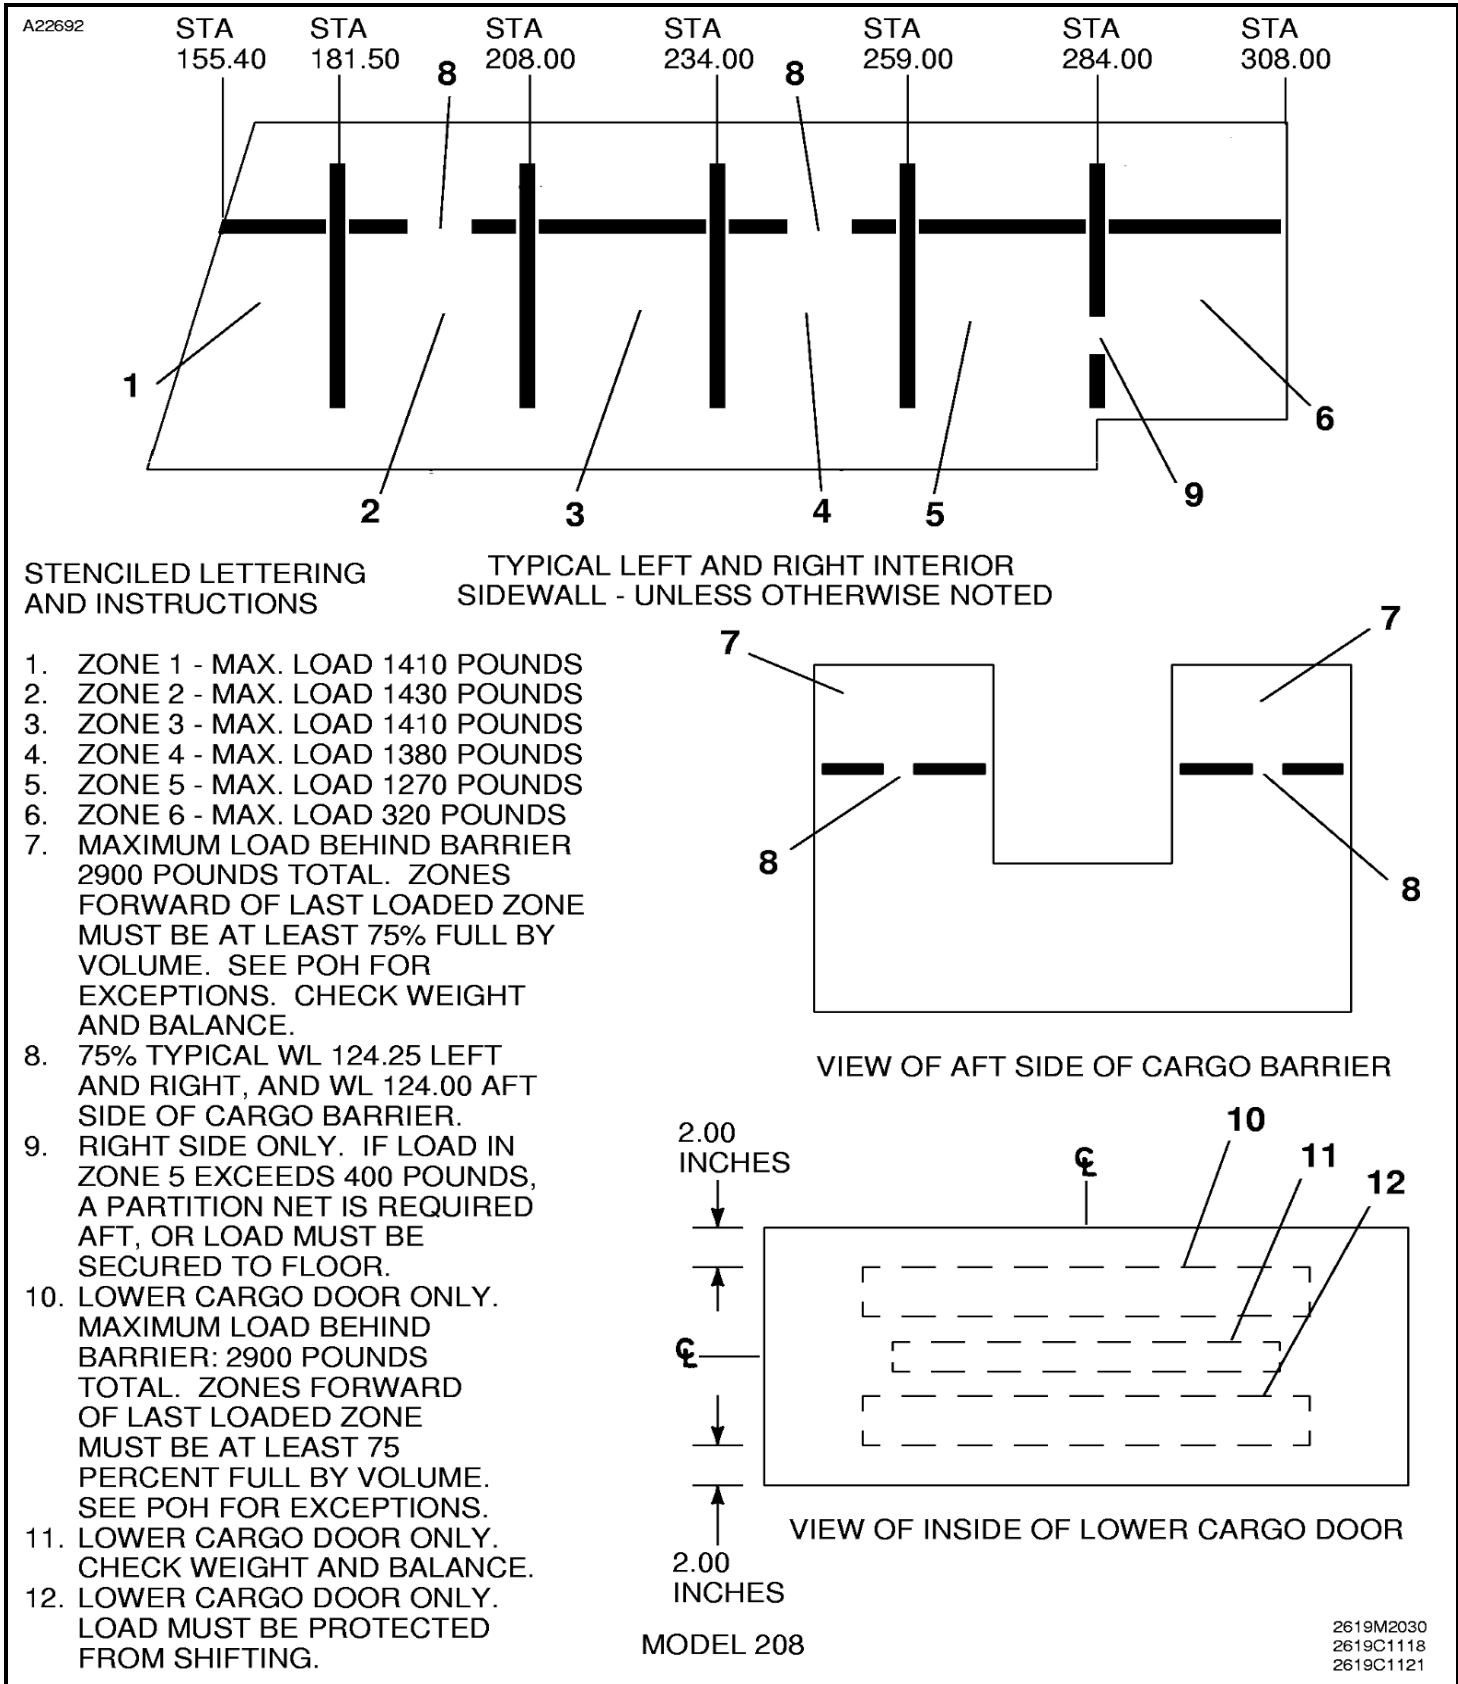


Figure 701 : Sheet 3 : Loading Zone Limits - Painting Instructions

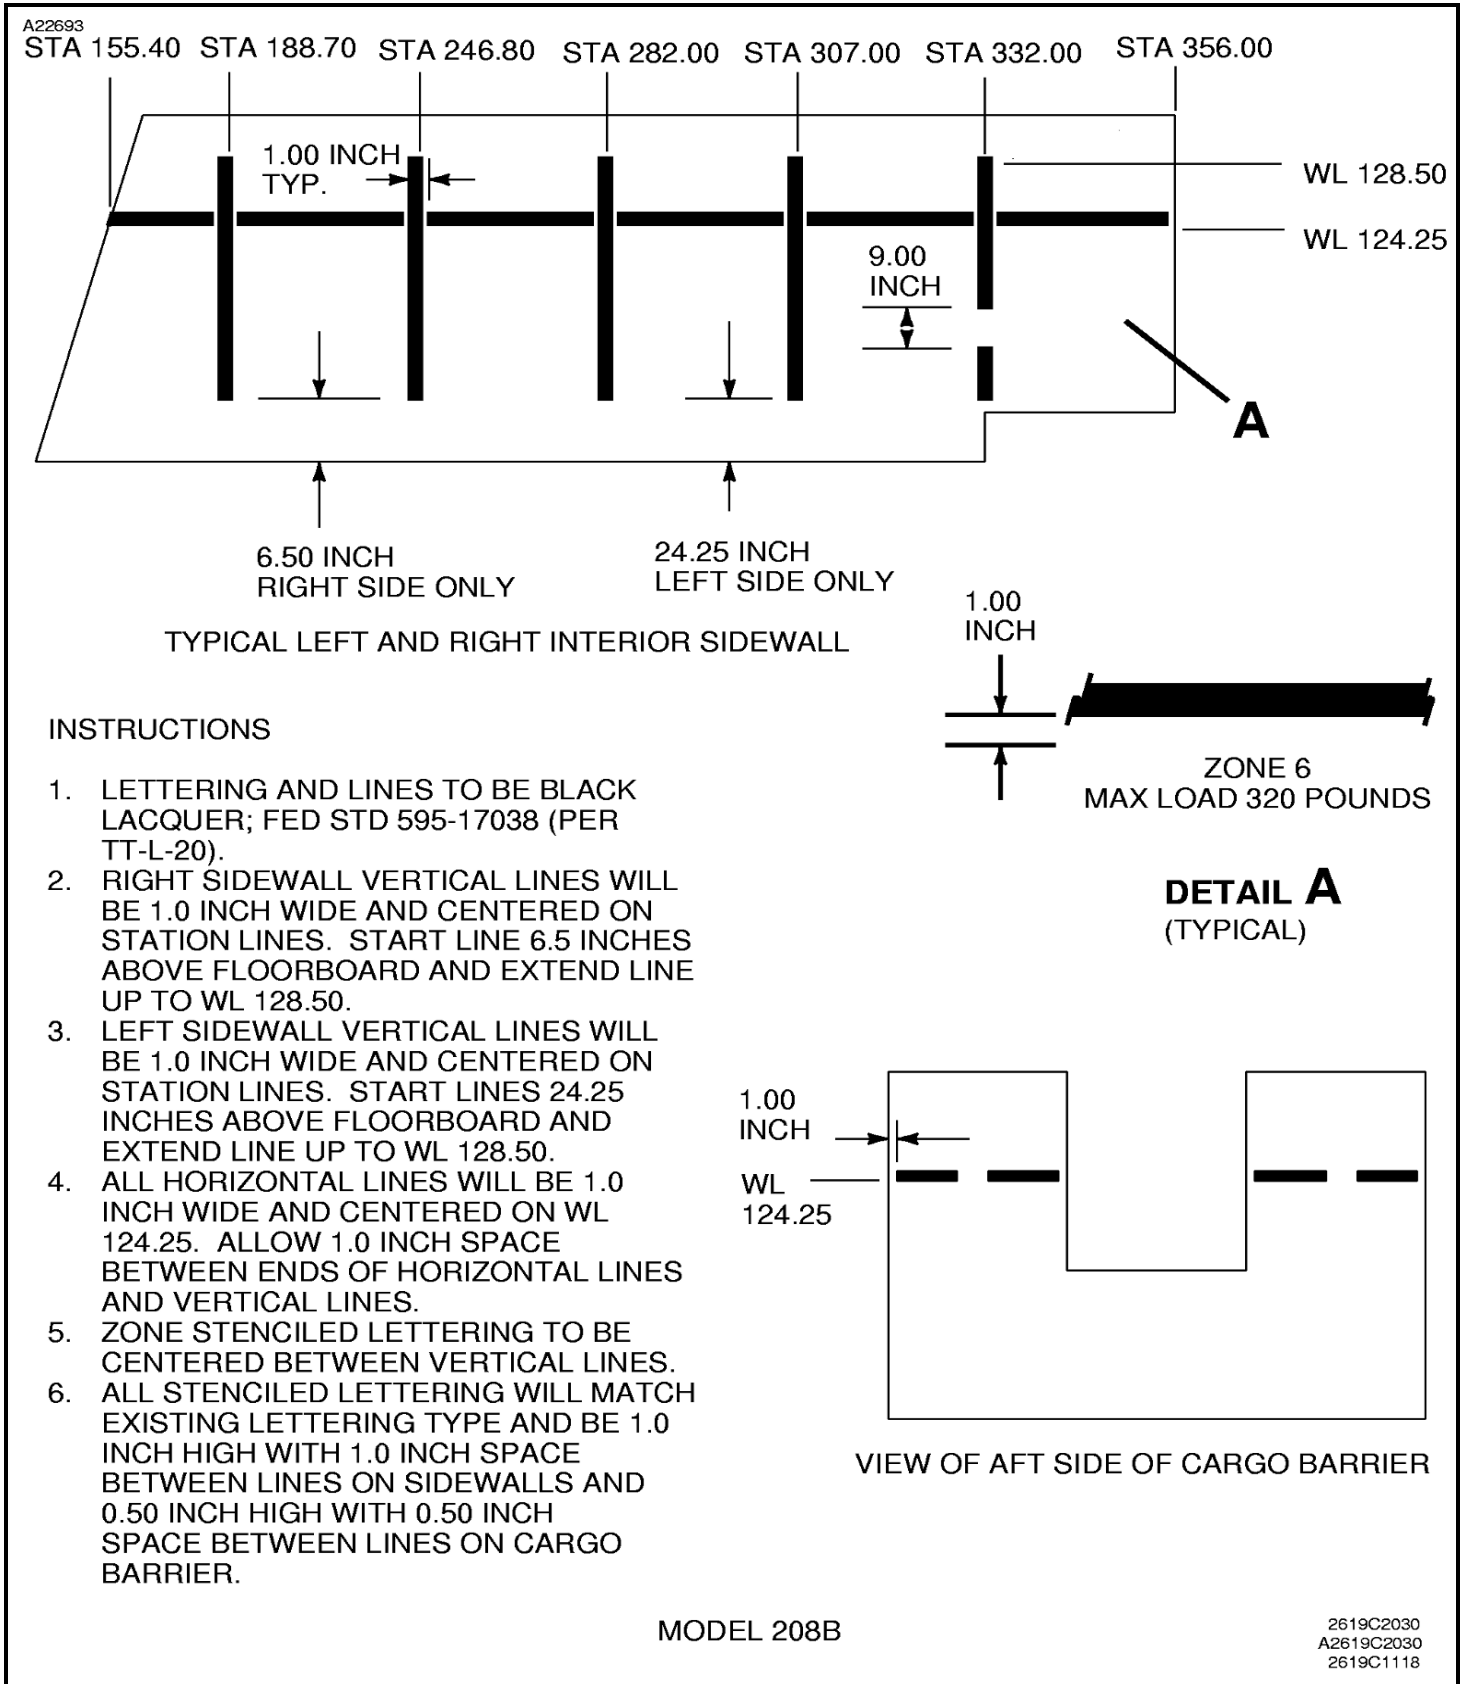


Figure 701 : Sheet 4 : Loading Zone Limits - Painting Instructions

