

FUEL SELECTOR CONTROLS - INSPECTION/CHECK**1. General**

- A. This section has the inspections and checks necessary to keep the fuel selector controls in a serviceable condition.

TASK 28-23-00-640**2. Wing Shutoff Valve Linkage Lubrication****A. General**

- (1) This task gives the procedures to do the lubrication of the wing shutoff valve linkage.

B. Special Tools

- (1) LPS 1 Lubricant, or Equivalent

C. Access

- (1) Remove lower wing access panels 511AB and 611AB to get access to the wing shutoff valves. Refer to Chapter 6, Access Plates and Panels Identification - Description and Operation.

D. Do a Lubrication of the Wing Shutoff Valve Linkage

- (1) Apply lubricant to the pins that connect the interconnect link to the valve handle on all four valves.
(2) Apply lubricant to the exposed part of the shutoff cable.
(3) Operate the fuel selectors several times.
(4) Wipe off any unwanted lubricant.

E. Restore Access

- (1) Install lower wing access panels 511AB and 611AB. Refer to Chapter 6, Access Plates and Panels Identification - Description and Operation.

END OF TASK