

## WINDSHIELDS AND WINDOWS - INSPECTION/CHECK

### 1. General

- A. This section has the inspections and checks necessary to keep the windshield and the windows in a serviceable condition.

#### TASK 56-00-01-220

### 2. Windshield and Attachment Structure Detailed Inspection

#### A. General

- (1) This task includes the Supplemental Inspection Document (SID) requirements necessary to keep the windshield and attachment structure in a serviceable condition.

#### B. Special Tools

- (1) None

#### C. Access

- (1) None

#### D. Do a Detailed Inspection of the Windshield and Attachment Structure.

- (1) Do a visual inspection of the windshield retainer for cracks.
- (2) Do a visual inspection for cracks in the skin around the windshield.
- (3) Do a visual inspection of the door post for cracks out of the fastener holes.
- (4) If cracks are found, replace or repair the damaged part(s). Refer to Flight Compartment Windows - Removal/Installation or the Model 208 Structural Repair Manual.

#### E. Do a Detailed Inspection of the Cabin and Door Windows.

- (1) Do a visual inspection of the cabin and door window retainers and fasteners for cracks and corrosion.
- (2) If cracks are found, replace or repair the damaged part(s). Refer to Flight Compartment Windows - Removal/Installation or the Model 208 Structural Repair Manual.
- (3) If corrosion is found, repair or replace the damaged part(s). Refer to Chapter 51, Corrosion Prevention and Control Program - Description and Operation for more information.

#### F. Restore Access

- (1) None

### END OF TASK