

INTERTURBINE TEMPERATURE INDICATOR - MAINTENANCE PRACTICES**1. General**

A. Interturbine temperature indicator maintenance practices consist of inter-turbine temperature indicator removal/installation.

2. Interturbine Temperature Indicator Removal/Installation

A. Remove Interturbine Temperature Indicator (Refer to Figure 201).



- (1) Loosen mounting screw (10) and slide indicator (11) out of instrument panel.
- (2) Disconnect electrical connector (12) from indicator (11).

B. Install Interturbine Temperature Indicator (Refer to Figure 201).

- (1) Connect electrical connector (12) to indicator (11).
- (2) Slide indicator into instrument panel and tighten mounting screw (10).

Figure 201 : Sheet 1 : ITT Indicator Installation

A21694

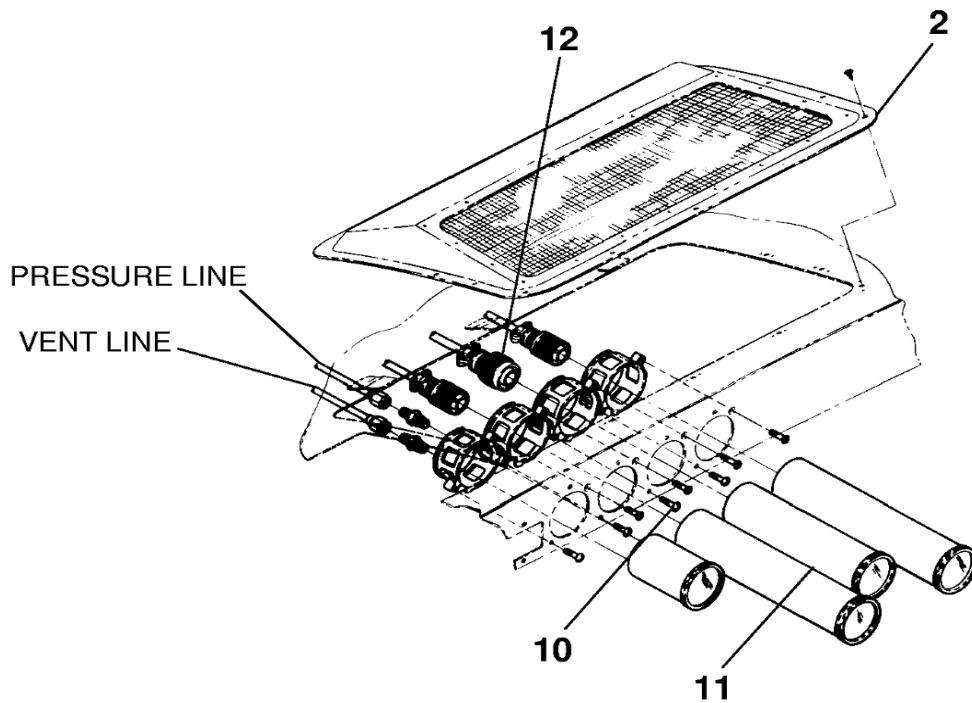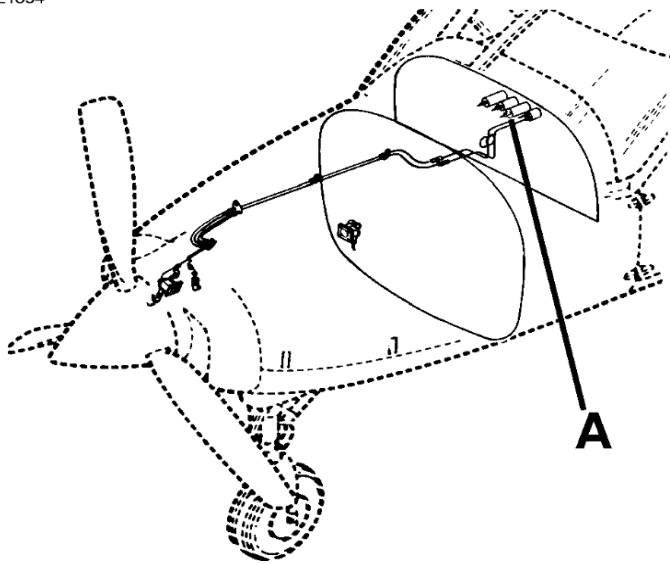

DETAIL A

- 2. COWL DECK COVER
- 10. SCREW
- 11. ITT INDICATOR
- 12. CONNECTOR

26551004
A26553001