

CHAPTER

71

POWER PLANT

RECORD OF TEMPORARY REVISIONS

[illegible]

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

CHAPTER/ SECTION/ SUBJECT	START PAGE OR FIGURE	NUMBER OF PAGES	DATE
71 - TITLE		1	
71 - LIST OF EFFECTIVE PAGES	Page 1	1	Nov 29, 2022
71 - TABLE OF CONTENTS	Page 1	1	Nov 29, 2022
71-00-01	Figure 01	6	Nov 4, 2021
71-10-00	Figure 01	9	Nov 29, 2022
71-10-00	Figure 02	18	Nov 4, 2021
71-10-00	Figure 03	7	Nov 4, 2021
71-10-00	Figure 04	7	Nov 4, 2021
71-10-01	Figure 01	5	Nov 4, 2021
71-20-00	Figure 01	8	Nov 4, 2021
71-20-00	Figure 02	4	Nov 4, 2021
71-41-00	Figure 01	4	Nov 4, 2021
71-60-00	Figure 01	8	Nov 29, 2022
71-60-00	Figure 02	13	Nov 29, 2022
71-60-00	Figure 03	3	Nov 29, 2022
71-60-01	Figure 01	16	Nov 4, 2021
71-60-01	Figure 02	12	Nov 4, 2021
71-70-00	Figure 01	15	Nov 29, 2022
71-70-00	Figure 02	8	Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

<u>SUBJECT</u>	<u>LOCATION</u>	<u>EFFECTIVITY</u>	
		<u>START</u>	<u>END</u>
ENGINE INSTALLATION.	71-00-01 Figure 01	(208) 0001 (208B) 0001	& ON & ON
UPPER COWLS AND DOORS INSTALLATION.	71-10-00 Figure 01	(208) 0001 (208B) 0001	& ON & ON
LOWER COWL INSTALLATION.	71-10-00 Figure 02	(208) 0001 (208B) 0001	& ON & ON
NOSE GEAR FAIRING PANEL INSTALLATION.	71-10-00 Figure 03	(208) 0001 (208B) 0001	& ON & ON
COWL ASSEMBLY - LOWER LH USED WITH AIR CONDITIONING.	71-10-00 Figure 04	(208) 0140 (208B) 0214	& ON & ON
NOSE CAP AND COWL BULKHEAD INSTALLATION. .	71-10-01 Figure 01	(208) 0001 (208B) 0001	& ON & ON
ENGINE MOUNTING.	71-20-00 Figure 01	(208) 0001 (208B) 0001	& ON 4999
ENGINE MOUNTING.	71-20-00 Figure 02	(208B) 5000	& ON
COMPRESSOR WASHRING INSTALLATION.	71-41-00 Figure 01	(208) 0001 (208B) 0001	& ON & ON
INERTIAL SEPARATOR INSTALLATION.	71-60-00 Figure 01	(208) 0001 (208B) 0001	& ON & ON
INERTIAL SEPARATOR ACTUATOR INSTALLATION. .	71-60-00 Figure 02	(208) 0001 (208B) 0001	& ON & ON
ICE VANE SWITCH INSTALLATION.	71-60-00 Figure 03	(208) 0382 (208B) 1087	& ON & ON
INDUCTION AIR PLENUM INSTALLATION.	71-60-01 Figure 01	(208) 0001 (208B) 0001	& ON 4999
INDUCTION AIR PLENUM INSTALLATION.	71-60-01 Figure 02	(208B) 5000	& ON
OIL BREATHER AND ENGINE DRAINS INSTALLATION.	71-70-00 Figure 01	(208) 0001 (208B) 0001	& ON 4999
OIL BREATHER AND ENGINE DRAINS INSTALLATION.	71-70-00 Figure 02	(208B) 5000	& ON

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG


71-00-01

ENGINE INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

A24515

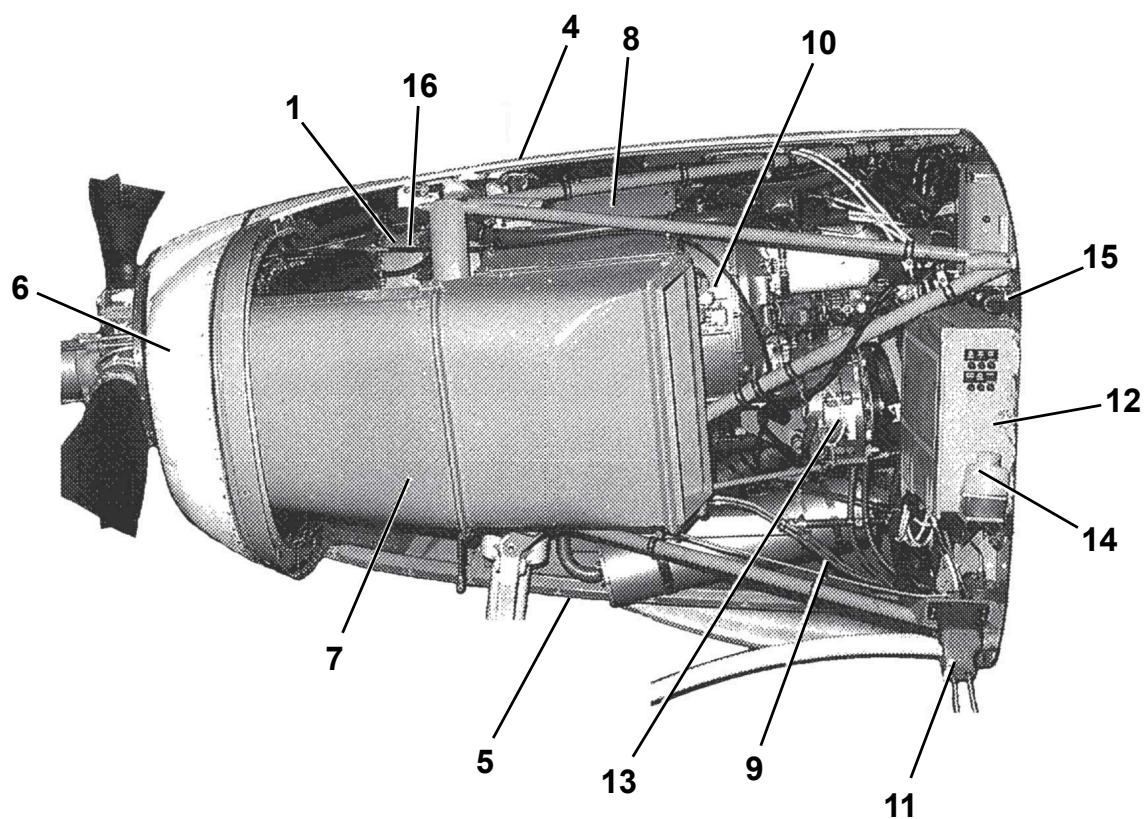

ENGINE INSTALLATION
Figure 01. (Sheet 1)

2650R6001

Figure 01
Page 2
71-00-01 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


ENGINE INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

		NOMENCLATURE								UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	9910579-1	.	ENGINE ASSEMBLY - TURBO PROPELLER 600SHP * AIRPLANES (208B) 0001 THRU 0229 INCORPORATING SK208-80							(208) 0001 - 0276 (208B) *0001 - 0229	01
- 2	9910589-1	.	ENGINE ASSEMBLY - TURBO PROPELLER 675SHP * AIRPLANES (208B) 0230 & ON INCORPORATING SK208-84							(208) 0277 & ON (208B) *0230 & ON	01
- 3	9910850-1	.	ENGINE ASSEMBLY - TURBO PROPELLER 867SHP							(208B) 5000 & ON	01
4		.	UPPER COWLS & DOORS INSTALLATION REFER TO 71-10-00 FIGURE 01								RF
5		.	LOWER COWL INSTALLATION REFER TO 71-10-00 FIGURE 02								RF
6		.	NOSE CAP & COWL BULKHEAD INSTALLATION REFER TO 71-10-01 FIGURE 01								RF
7		.	INERTIAL SEPARATOR INSTALLATION REFER TO 71-60-00 FIGURE 01								RF
8		.	INDUCTION AIR PLENUM INSTALLATION REFER TO 71-60-01 FIGURE 01								RF
9		.	OIL BREATHER & ENGINE DRAINS INSTL REFER TO 71-70-00 FIGURE 01								RF
10		.	COMPRESSOR WASHRING INSTALLATION REFER TO 71-41-00 FIGURE 01								RF
11		.	RECEPTACLE - GROUND SERVICE REFER TO 24-40-00 FIGURE 01								RF
12		.	ELECTRICAL POWER BOX INSTALLATION REFER TO 24-50-02 FIGURE 01								RF
13		.	STANDBY ALTERNATOR INSTALLATION REFER TO 24-36-01 FIGURE 01								RF
14		.	BRAKE FLUID RESERVOIR REFER TO 32-41-00 FIGURE 01								RF
15		.	VACUUM SYSTEM REFER TO 37-10-00 FIGURE 01								RF
16		.	ENGINE CONTROLS REFER TO 76-10-01 FIGURE 01								RF
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

A24516

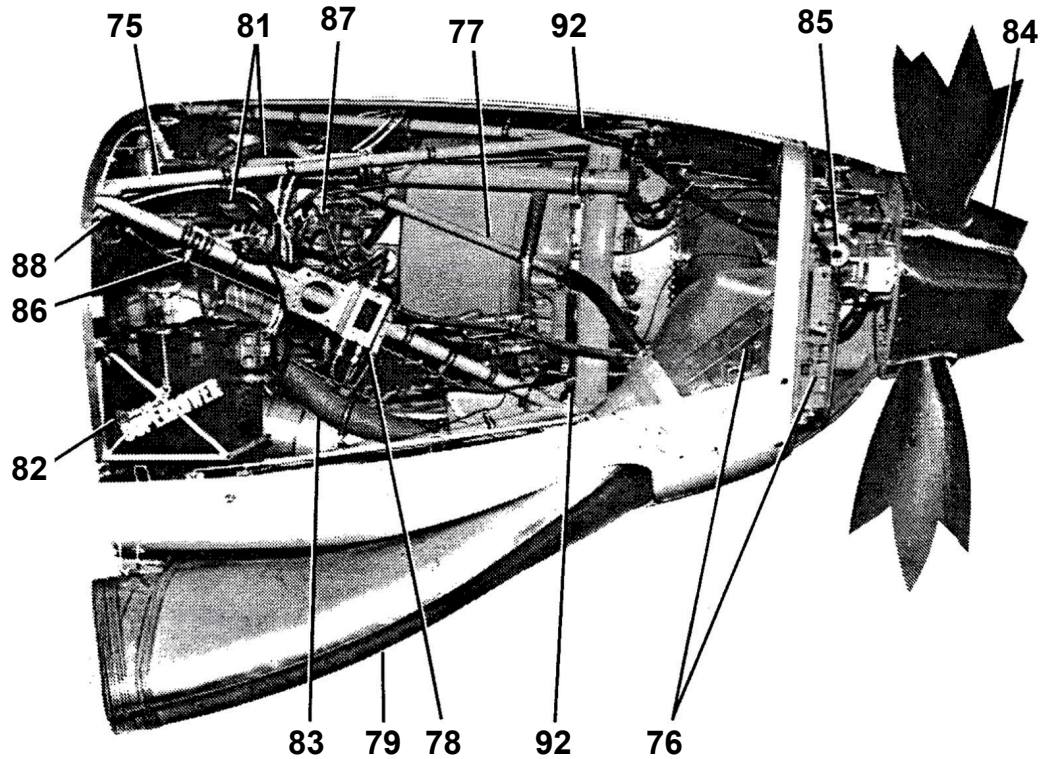

2650R6003

ENGINE INSTALLATION
Figure 01. (Sheet 2)

Figure 01
Page 4
71-00-01 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ENGINE INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

		NOMENCLATURE									UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
75		.	ENGINE MOUNTING REFER TO 71-20-00 FIGURE 01								RF
76		.	ENGINE OIL COOLING SYSTEM REFER TO 79-20-00 FIGURE 01								RF
77		.	OIL BREATHER AND ENGINE DRAINS INSTL REFER TO 71-70-00 FIGURE 01								RF
78		.	IGNITION EXCITER INSTALLATION REFER TO 74-10-00 FIGURE 01								RF
79		.	ENGINE EXHAUST DUCT INSTALLATION REFER TO 78-10-00 FIGURE 01								RF
- 80		.	ENGINE EXHAUST DUCT INSTALLATION REFER TO 78-10-00 FIGURE 02								RF
81		.	STARTER/GENERATOR INSTALLATION REFER TO 80-10-01 FIGURE 01								RF
82		.	BATTERY INSTALLATION REFER TO 24-34-00 FIGURE 01								RF
83		.	BLEED AIR HEATER COMPONENTS REFER TO 21-41-01 FIGURE 01								RF
84		.	PROPELLER AND SPINNER INSTALLATION REFER TO 61-10-00 FIGURE 01								RF
85		.	ENGINE INDICATING REFER TO 77-11-00 FIGURE 01								RF
86		.	FIRE DETECTION SYSTEM REFER TO 26-10-00 FIGURE 01								RF
87		.	ENGINE CONTROLS REFER TO 76-10-01 FIGURE 01								RF
88	0412007-6	.	GROUND STRAP - ENGINE							(208) 0001 & ON (208B) 0001 & ON	01
			ATTACHING PARTS								
- 89	AN4-5A	.	BOLT ATTACH AT ENGINE MOUNT				88044		(208) 0001 & ON (208B) 0001 & ON	01	
- 90	NAS1149D0463J	.	WASHER ATTACH AT ENGINE MOUNT						(208) 0001 & ON (208B) 0001 & ON	01	
- 91	MS21044N4	.	NUT ATTACH AT ENGINE MOUNT				33269		(208) 0001 & ON (208B) 0001 & ON	01	
			--*--								
92	0412007-6	.	GROUND STRAP - ENGINE							(208) 0001 & ON (208B) 0001 & ON	02
			ATTACHING PARTS								
- 93	AN4-5A	.	BOLT ATTACH AT ENGINE MOUNT				88044		(208) 0001 & ON (208B) 0001 & ON	01	
- 94	NAS1149D0463J	.	WASHER ATTACH AT ENGINE MOUNT						(208) 0001 & ON (208B) 0001 & ON	01	
- 95	MS21044N4	.	NUT ATTACH AT ENGINE MOUNT				33269		(208) 0001 & ON (208B) 0001 & ON	01	
- 96	AN5-5A	.	BOLT ATTACH AT ENGINE SHOCK MOUNT BRACKET				88044		(208) 0001 & ON (208B) 0001 & ON	01	
- 97	NAS1149D0463J	.	WASHER ATTACH AT ENGINE SHOCK MOUNT BRACKET						(208) 0001 & ON (208B) 0001 & ON	01	
- 98	MS21044N4	.	NUT ATTACH AT ENGINE SHOCK MOUNT BRACKET				33269		(208) 0001 & ON (208B) 0001 & ON	01	
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

ENGINE INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS
		1	2	3	4	5	6	7		PER ASSY

--*--

- ITEM NOT ILLUSTRATED



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

71-10-00

UPPER COWLS AND DOORS INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24517

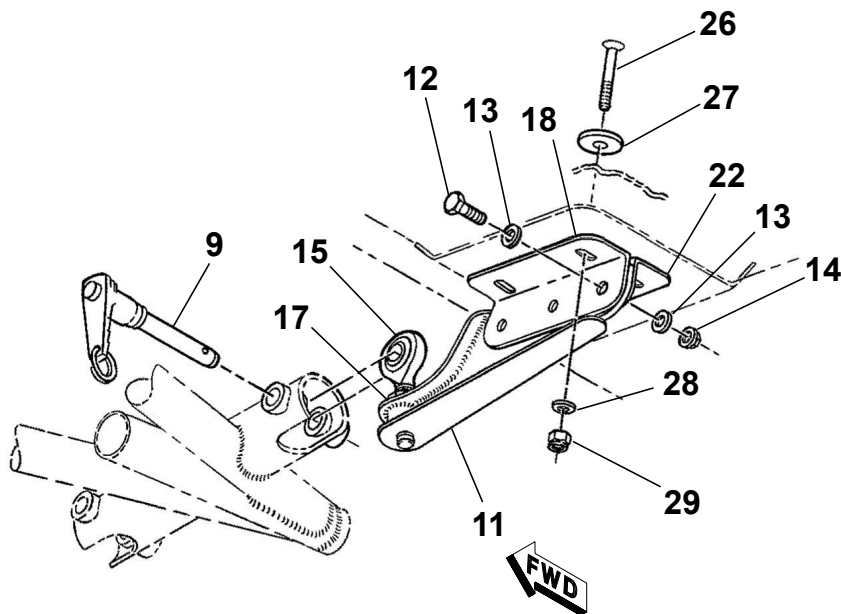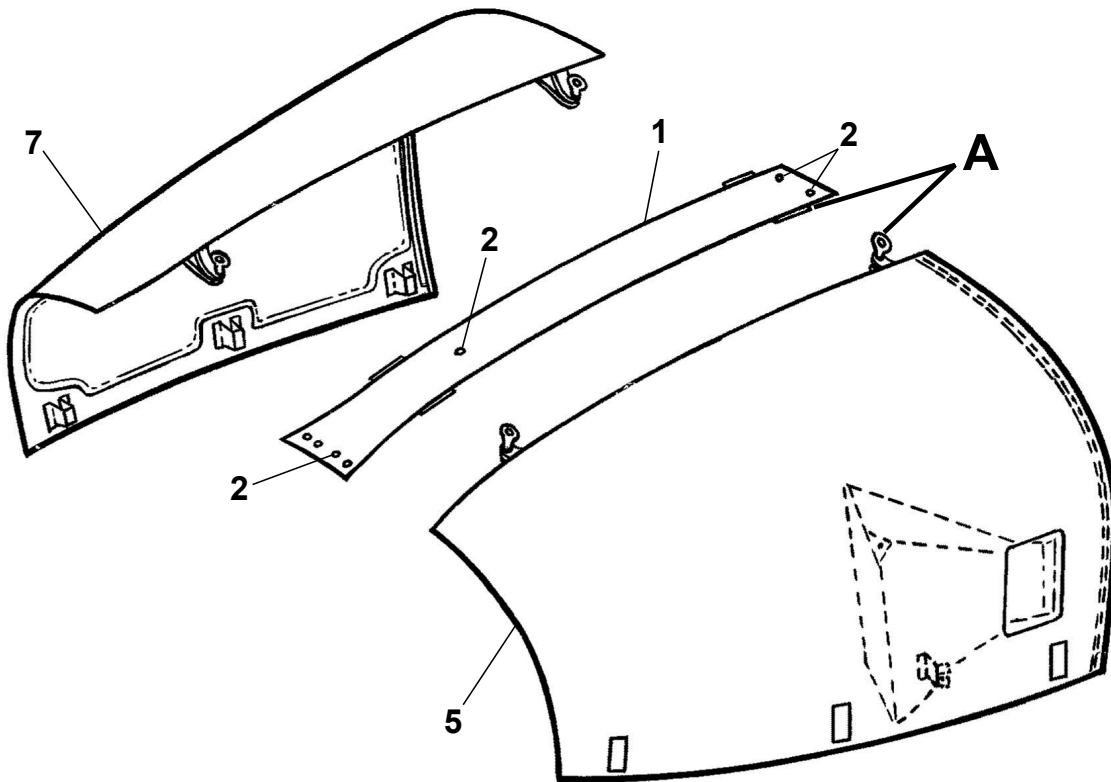

DETAIL A

UPPER COWLS AND DOORS INSTALLATION
 Figure 01. (Sheet 1)

26521001
 A26521004

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

UPPER COWLS AND DOORS INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	2652013-1	.							(208) 0001 - 0515 (208B) 0180 - 2120	NP
- 1A	2652035-1	.							(208) 0516 & ON (208B) 2121 & ON	01
- 1B	2652013-6	.							(208) 0505 - 0515 (208B) 2000 - 2120	NP
- 1C	2652035-10	.							(208) 0516 & ON (208B) 2121 & ON	01
2	S3413-104	.	.					71286	(208) 0001 & ON (208B) 0001 & ON	07
- 3	S2319-63	.	.						(208) 0505 - 0515 (208B) 2000 - 2120	07
- 3A	S2319-64	.	.					71286	(208) 0516 & ON (208B) 2121 & ON	07
- 4	CM2791-1	.	.					71286	(208) 0001 & ON (208B) 0001 & ON	07
- 4A	S3413-104	.	.					71286	(208) 0059 & ON	07
- 4B	S3413-104	.	.					71286	(208B) 0001 & ON	07
5	2652016-21	.							(208) 0001 - 0129 (208B) 0001 - 0067	NP
- 6	2652016-71	.							(208) 0130 & ON (208) 0130 - 0384 (208) *0001 - 0129 (208B) 0068 & ON (208B) 0068 - 1102 (208B) *0001 - 0067	01
- 6A	2652016-87	.							(208) 0385 - 0403 (208B) 1103 - 1190	NP
- 6B	2652016-89	.							(208) 0404 - 0609 (208B) 1191 - 5426	01
- 6C	2652016-91	.							(208) 0610 & ON (208B) 5427 & ON	01
7	2652016-22	.							(208) 0001 - 0129 (208B) 0001 - 0067	NP
- 8	2652016-72	.							(208) 0130 & ON (208) 0130 - 0384 (208) *0001 - 0129 (208B) 0068 & ON (208B) 0068 - 1102 (208B) *0001 - 0067	01
- ITEM NOT ILLUSTRATED										

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

UPPER COWLS AND DOORS INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 8A	2652016-86	.	DOOR ASSEMBLY - RIGHT UPPER COWL FOR SPARES ORDER (MUST REPLACE WITH): 2652100-9 * AIRPLANES (208) 0001 THRU 0129 INCORPORATING SK208-47 * AIRPLANES (208B) 0001 THRU 0067 INCORPORATING SK208-47						(208) 0130 & ON (208) 0385 - 0403 (208) *0001 - 0129 (208B) 0068 & ON (208B) 1103 - 1190 (208B) *0001 - 0067	NP
- 8B	2652016-88	.	DOOR ASSEMBLY - RIGHT UPPER COWL FOR SPARES ORDER (MUST REPLACE WITH): 2652100-9						(208) 0404 - 0578 (208B) 1191 - 4999	NP
- 8C	2652100-9	.	DOOR ASSEMBLY - RIGHT UPPER COWL SPARES REPLACEMENT FOR: 2652016-86 2652016-88 ATTACHING PARTS						(208) 0579 & ON (208B) 5000 & ON	01
9	NAS1336C5C19K	.	PIN ALTERNATE SPARE (INTERCHANGEABLE WITH): LG6CL1.820 NAS1336C5C19						(208) 0001 & ON (208B) 0001 & ON	02
- 9A	LG6CL1.820	.	PIN - LOCKWELL SINGLE ACTING ALTERNATE SPARE (INTERCHANGEABLE WITH): NAS1336C5C19K					83014	(208) 0001 & ON (208B) 0001 & ON	02
- 10	NAS1336C5C19	.	PIN - SINGLE ACTING ALTERNATE SPARE (INTERCHANGEABLE WITH): NAS1336C5C19K --*--						(208) 0001 & ON (208B) 0001 & ON	02
11	2652014-1	.	HINGE ASSEMBLY - COWL DOOR ATTACHING PARTS						(208) 0001 & ON (208B) 0001 & ON	04
12	AN3-5A	.	BOLT						(208) 0001 & ON (208B) 0001 & ON	03
13	NAS1149F0363P	.	WASHER					73197	(208) 0001 & ON (208B) 0001 & ON	06
14	MS21042-3	.	NUT						(208) 0001 & ON (208B) 0001 & ON	03
15	HM6C	.	BEARING ALTERNATE SPARE (INTERCHANGEABLE WITH): MBM6					73134	(208) 0001 & ON (208B) 0001 & ON	01
- 16	MBM6	.	BEARING ALTERNATE SPARE (INTERCHANGEABLE WITH): HM6C					NARD	(208) 0001 & ON (208B) 0001 & ON	01
17	AN316-6R	.	NUT						(208) 0001 & ON (208B) 0001 & ON	01
18	2652016-23	.	HINGE BRACKET - LEFT FORWARD STA 95.35						(208) 0001 & ON (208B) 0001 & ON	01
- 19	2652016-24	.	HINGE BRACKET - RIGHT FORWARD STA 95.35						(208) 0001 & ON (208B) 0001 & ON	01
- 20	2652016-17	.	HINGE BRACKET - LEFT FORWARD STA 53.80						(208) 0001 & ON (208B) 0001 & ON	01
- 21	2652016-18	.	HINGE BRACKET - RIGHT FORWARD STA 53.80						(208) 0001 & ON (208B) 0001 & ON	01
- ITEM NOT ILLUSTRATED										



UPPER COWLS AND DOORS INSTALLATION

		NOMENCLATURE									UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
22	2652016-25	.	.					HINGE BRACKET - LEFT AFT STA 95.35	(208) 0001 & ON (208B) 0001 & ON		01
- 23	2652016-26	.	.					HINGE BRACKET - RIGHT AFT STA 95.35	(208) 0001 & ON (208B) 0001 & ON		01
- 24	2652016-19	.	.					HINGE BRACKET - LEFT AFT STA 53.80	(208) 0001 & ON (208B) 0001 & ON		01
- 25	2652016-20	.	.					HINGE BRACKET - RIGHT AFT STA 53.80	(208) 0001 & ON (208B) 0001 & ON		01
								ATTACHING PARTS			
26	MS24694-S60	.	.					SCREW	(208) 0001 & ON (208B) 0001 & ON		04
27	S3420-2	.	.					WASHER	(208) 0001 & ON (208B) 0001 & ON		02
28	NAS1149F0363P	.	.					WASHER	73197 (208) 0001 & ON (208B) 0001 & ON		02
29	MS21044N3	.	.					NUT	4W953 (208) 0001 & ON (208B) 0001 & ON		02

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A13564

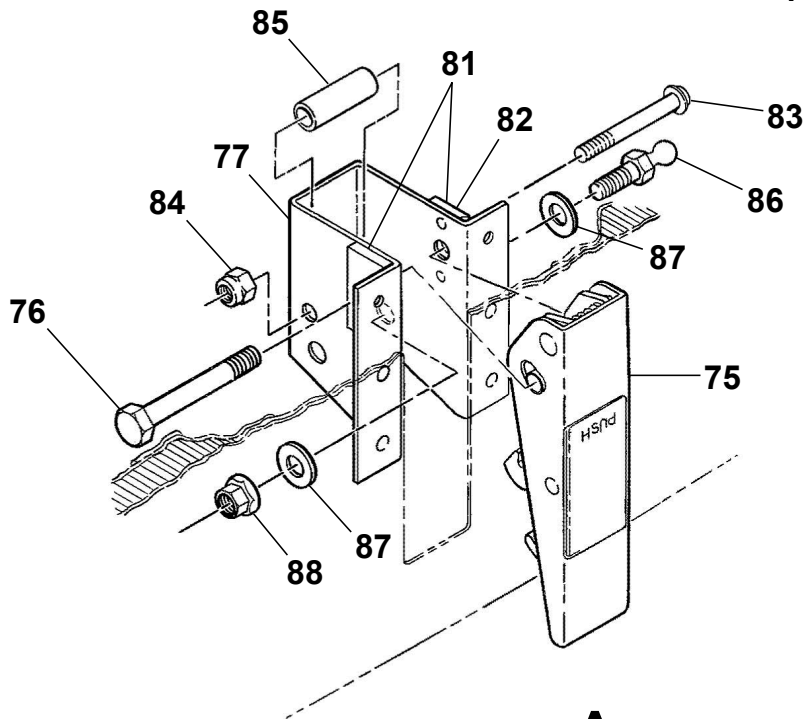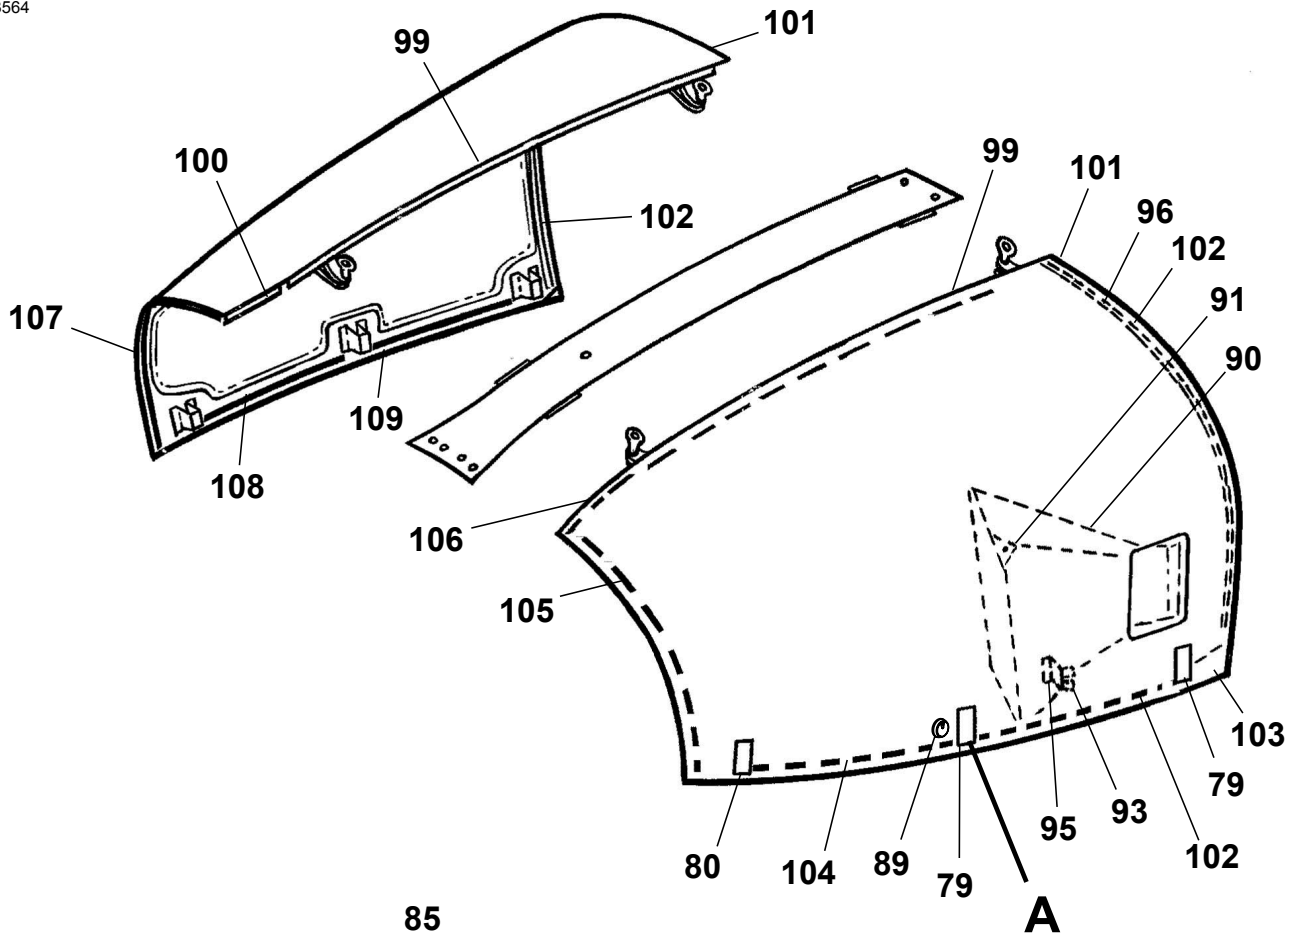

DETAIL A

UPPER COWLS AND DOORS INSTALLATION
 Figure 01. (Sheet 2)

26521001
 A26521002A

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

UPPER COWLS AND DOORS INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
75	S3247-1	.	.					LATCH ASSEMBLY - HOOK	(208) 0001 & ON (208B) 0001 & ON	03
								ATTACHING PARTS		
76	AN3-15A	.	.					BOLT	(208) 0001 & ON (208B) 0001 & ON	01
								--*--		
77	2652019-10	.	.					BRACKET ASSEMBLY - DOOR LATCH LEFT CENTER	(208) 0082 - 0384 (208B) 0001 - 1102	01
- 77A	2652019-12	.	.					BRACKET ASSEMBLY - DOOR LATCH LEFT CENTER	(208) 0385 - 0403 (208B) 1103 - 1190	01
- 77B	2652019-17	.	.					BRACKET ASSEMBLY - DOOR LATCH LEFT CENTER	(208) 0404 & ON (208B) 1191 & ON	01
- 78	2652019-11	.	.					BRACKET ASSEMBLY - DOOR LATCH RIGHT CENTER	(208) 0082 - 0384 (208B) 0001 - 1102	01
- 78A	2652019-13	.	.					BRACKET ASSEMBLY - DOOR LATCH RIGHT CENTER	(208) 0385 - 0403 (208B) 1103 & ON	01
- 78B	2652019-18	.	.					BRACKET ASSEMBLY - DOOR LATCH RIGHT CENTER	(208) 0404 & ON (208B) 1191 & ON	01
79	2652019-7	.	.					BRACKET ASSEMBLY - DOOR LATCH LEFT & RIGHT FORWARD	(208) 0082 - 0403 (208B) 0001 - 1190	01
- 79A	2652019-15	.	.					BRACKET ASSEMBLY - DOOR LATCH LEFT & RIGHT FORWARD	(208) 0404 & ON (208B) 1191 & ON	01
80	2652019-8	.	.					BRACKET ASSEMBLY - DOOR LATCH LEFT & RIGHT AFT	(208) 0082 - 0403 (208B) 0001 - 1190	01
- 80A	2652019-16	.	.					BRACKET ASSEMBLY - DOOR LATCH LEFT & RIGHT AFT	(208) 0404 & ON (208B) 1191 & ON	01
81	2652019-6	.	.	.	.			SPACER	(208) 0001 & ON (208B) 0001 & ON	02
82	MS21047L3	.	.	.	.			NUTPLATE	13499 (208) 0001 & ON (208B) 0001 & ON	01
83	AN525-832R22	.	.	.	.			SCREW	(208) 0001 & ON (208B) 0001 & ON	01
84	MS21044C08	.	.	.	.			NUT	73197 (208) 0001 & ON (208B) 0001 & ON	01
85	NAS43HT3-62	.	.	.	.			SPACER	(208) 0001 & ON (208B) 0001 & ON	01
86	S1442-4	.	.	.	.			BALL - CENTER BRACKETS ONLY FOR SPARES ORDER (MUST REPLACE WITH): S1442-5	(208) 0001 & ON (208B) 0001 & ON	NP
- 86A	S1442-5	.	.	.	.			BALL - CENTER BRACKETS ONLY SPARES REPLACEMENT FOR: S1442-4	(208) 0001 & ON (208B) 0001 & ON	01
87	NAS1149F0363P	.	.	.	.			WASHER - CENTER BRACKETS ONLY	73197 (208) 0001 & ON (208B) 0001 & ON	02
88	MS21043-4	.	.	.	.			NUT - CENTER BRACKETS ONLY	(208) 0001 & ON (208B) 0001 & ON	01
89	ASCV208B-3D	.	.					LOCK KIT - WITHOUT CARGO POD	1DWF8 (208) 0001 & ON (208B) 0001 & ON	02
- 89A	ASCV208BS-6D	.	.					LOCK KIT - WITH CARGO POD	(208) 0001 & ON (208B) 0001 & ON	02
- ITEM NOT ILLUSTRATED										

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

UPPER COWLS AND DOORS INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 89B	ASCV208B-7D	.	.	LOCK KIT - PASSENGER VERSION WITH CARGO POD					(208) 0001 & ON (208B) 0001 & ON	02
90	2652023-1	.	.	DUCT ASSEMBLY - INERTIAL SEPERATOR LEFT DOOR					(208) 0001 & ON (208B) 0001 & ON	01
				ATTACHING PARTS						
91	MS35207-261	.	.	SCREW				07187	(208) 0001 & ON (208B) 0001 & ON	01
- 92	S3420-2	.	.	WASHER					(208) 0001 & ON (208B) 0001 & ON	01
93	AN3-3A	.	.	BOLT					(208) 0001 & ON (208B) 0001 & ON	02
- 94	NAS1149F0363P	.	.	WASHER				73197	(208) 0001 & ON (208B) 0001 & ON	02
				--*--						
95	2652023-8	.	.	BRACE					(208) 0001 & ON (208B) 0001 & ON	01
96	2652016-53	.	.	SEAL ASSEMBLY - LEFT					(208) 0001 & ON (208B) 0001 & ON	01
- 97	2652016-48	.	.	SEAL ASSEMBLY - RIGHT					(208) 0001 & ON (208B) 0001 & ON	01
- 98	2652016-51	.	.	SEAL					(208) 0001 & ON (208B) 0001 & ON	01
99	2652016-75	.	.	RUBSTRIP - TOP LEFT & RIGHT					(208) 0130 & ON	04
				* AIRPLANES (208) 0001 THRU 0129 INCORPORATING SK208-47					(208) *0001 - 0129	
				* AIRPLANES (208B) 0001 THRU 0067 INCORPORATING SK208-47					(208B) 0068 & ON (208B) *0001 - 0067	
100	2652016-76	.	.	RUBSTRIP - TOP RIGHT					(208) 0130 & ON	01
				* AIRPLANES (208) 0001 THRU 0129 INCORPORATING SK208-47					(208) *0001 - 0129	
				* AIRPLANES (208B) 0001 THRU 0067 INCORPORATING SK208-47					(208B) 0068 & ON (208B) *0001 - 0067	
101	2652016-77	.	.	RUBSTRIP - LEFT & RIGHT AFT					(208) 0130 & ON	02
				* AIRPLANES (208) 0001 THRU 0129 INCORPORATING SK208-47					(208) *0001 - 0129	
				* AIRPLANES (208B) 0001 THRU 0067 INCORPORATING SK208-47					(208B) 0068 & ON (208B) *0001 - 0067	
102	2652016-78	.	.	RUBSTRIP - LEFT & RIGHT LOWER AFT					(208) 0130 & ON	02
				* AIRPLANES (208) 0001 THRU 0129 INCORPORATING SK208-47					(208) *0001 - 0129	
				* AIRPLANES (208B) 0001 THRU 0067 INCORPORATING SK208-47					(208B) 0068 & ON (208B) *0001 - 0067	
103	2652016-79	.	.	RUBSTRIP - LEFT LOWER AFT					(208) 0130 & ON	01
				* AIRPLANES (208) 0001 THRU 0129 INCORPORATING SK208-47					(208) *0001 - 0129	
				* AIRPLANES (208B) 0001 THRU 0067 INCORPORATING SK208-47					(208B) 0068 & ON (208B) *0001 - 0067	
104	2652016-80	.	.	RUBSTRIP - LEFT LOWER FORWARD LEFT					(208) 0130 & ON	01
				* AIRPLANES (208) 0001 THRU 0129 INCORPORATING SK208-47					(208) *0001 - 0129	
				* AIRPLANES (208B) 0001 THRU 0067 INCORPORATING SK208-47					(208B) 0068 & ON (208B) *0001 - 0067	
105	2652016-81	.	.	RUBSTRIP - LEFT FORWARD					(208) 0130 & ON	01
				* AIRPLANES (208) 0001 THRU 0129 INCORPORATING SK208-47					(208) *0001 - 0129	
				* AIRPLANES (208B) 0001 THRU 0067 INCORPORATING SK208-47					(208B) 0068 & ON (208B) *0001 - 0067	

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

UPPER COWLS AND DOORS INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
106	2652016-82	.	.						RUBSTRIP - LEFT UPPER * AIRPLANES (208) 0001 THRU 0129 INCORPORATING SK208-47 * AIRPLANES (208B) 0001 THRU 0067 INCORPORATING SK208-47	(208) 0130 & ON (208) *0001 - 0129 (208B) 0068 & ON (208B) *0001 - 0067	01
107	2652016-83	.	.						RUBSTRIP - RIGHT FORWARD * AIRPLANES (208) 0001 THRU 0129 INCORPORATING SK208-47 * AIRPLANES (208B) 0001 THRU 0067 INCORPORATING SK208-47	(208) 0130 & ON (208) *0001 - 0129 (208B) 0068 & ON (208B) *0001 - 0067	01
108	2652016-84	.	.						RUBSTRIP - RIGHT LOWER FORWARD * AIRPLANES (208) 0001 THRU 0129 INCORPORATING SK208-47 * AIRPLANES (208B) 0001 THRU 0067 INCORPORATING SK208-47	(208) 0130 & ON (208) *0001 - 0129 (208B) 0068 & ON (208B) *0001 - 0067	01
109	2652016-85	.	.						RUBSTRIP - RIGHT LOWER AFT RIGHT * AIRPLANES (208) 0001 THRU 0129 INCORPORATING SK208-47 * AIRPLANES (208B) 0001 THRU 0067 INCORPORATING SK208-47	(208) 0130 & ON (208) *0001 - 0129 (208B) 0068 & ON (208B) *0001 - 0067	01
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG


71-10-00

LOWER COWL INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24518

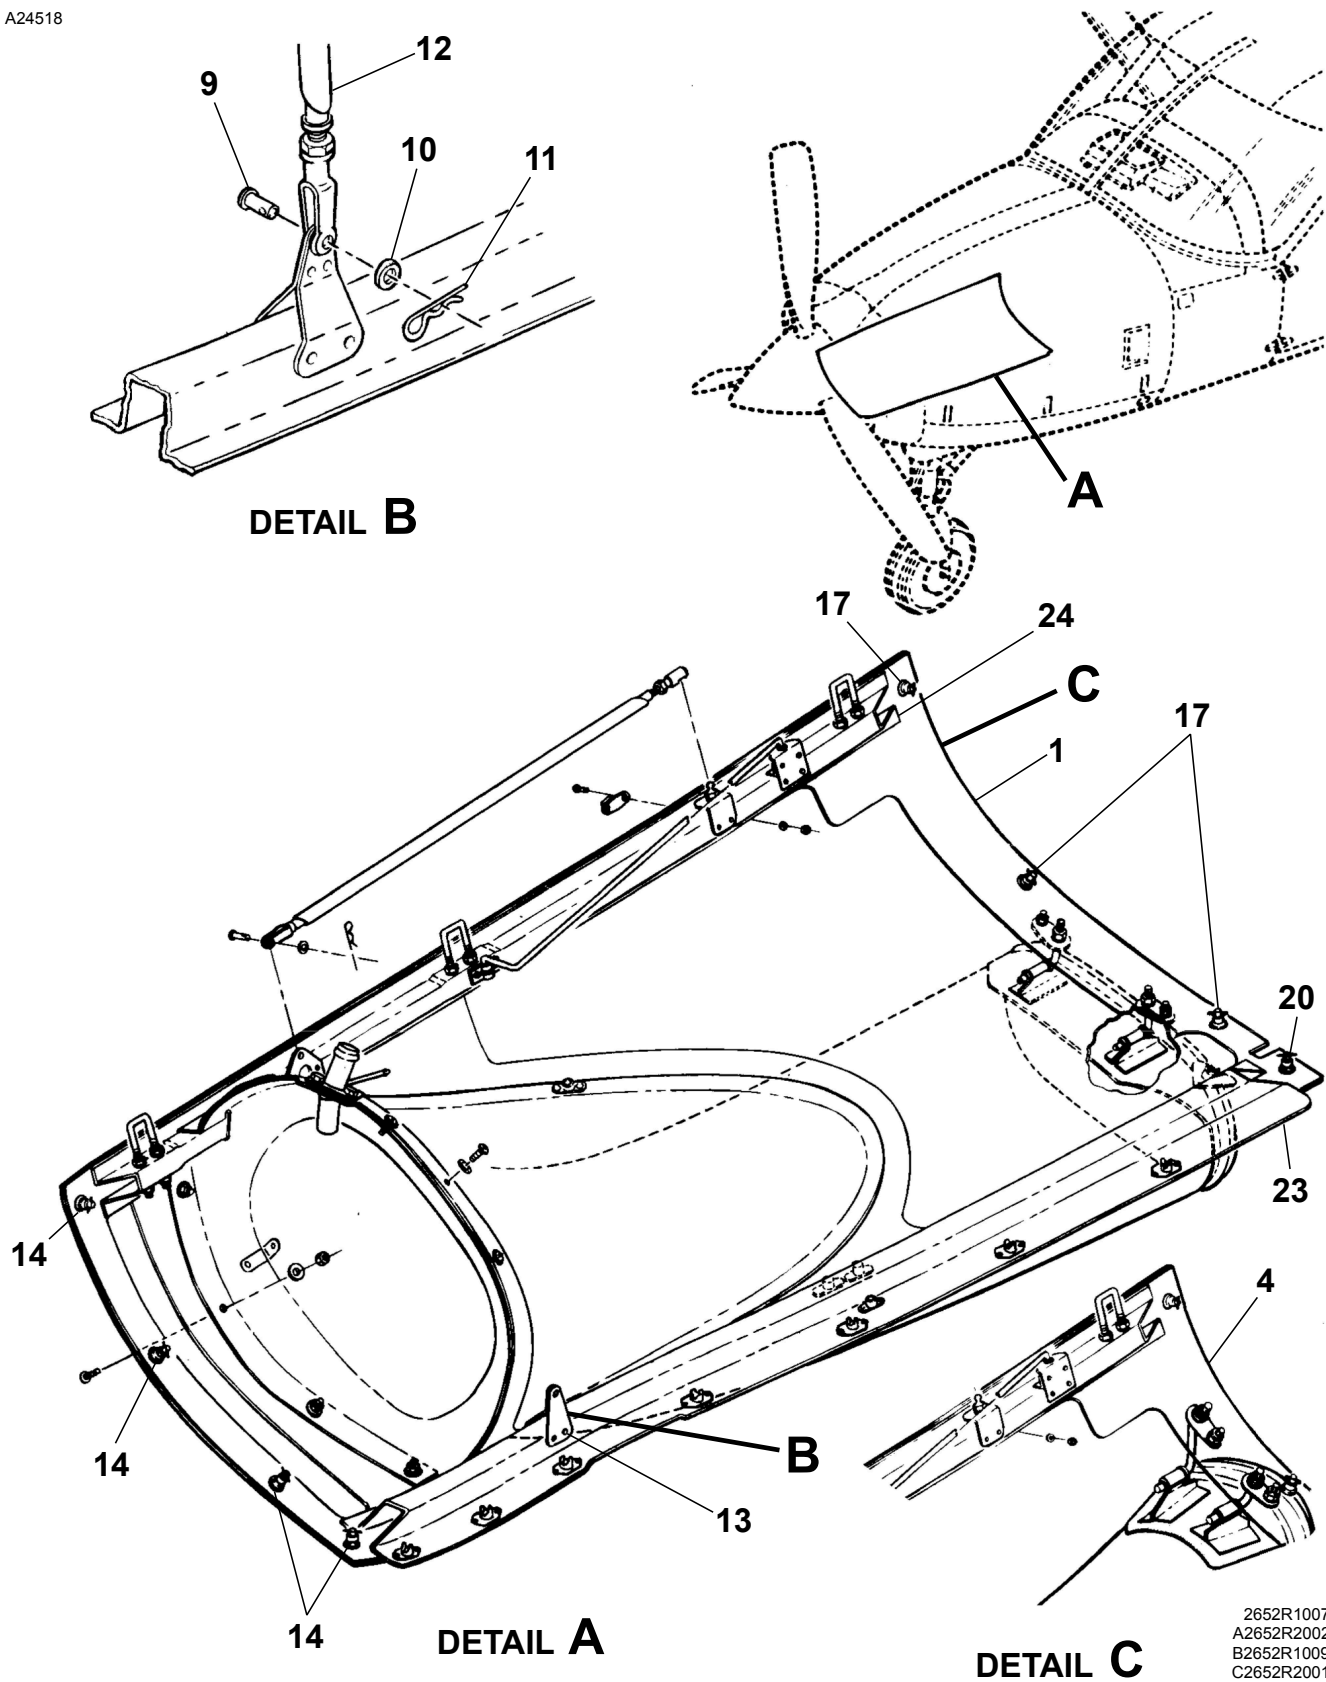

LOWER COWL INSTALLATION
Figure 02. (Sheet 1)

CESSNA®
MODEL 208

LOWER COWL INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

		NOMENCLATURE									UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	2652022-1	.	COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-204							(208) 0001 - 0122	NP
- 2	2652022-32	.	COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-204							(208) 0123 - 0218 (208B) 0180 - 0307	NP
- 3	2652022-60	.	COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-204							(208) 0219 - 0241 (208B) 0308 - 0434	NP
- 3A	2652032-201	.	COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD FOR SPARES ORDER: 2652032-204							(208) 0001 - 0241 (208B) 0001 - 0434	NP
- 3B	2652032-204	.	COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD FOR SPARES ONLY SPARES REPLACEMENT FOR: 2652022-1 2652022-32 2652022-60 SPARES ONLY FOR: 2652032-201							(208) 0001 - 0241 (208B) 0001 - 0434	01
- 3C	2652022-64	.	COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-203							(208) 0242 - 0260 (208B) 0435 - 0597	NP
- 3D	2652022-72	.	COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-203							(208) 0261 - 0328 (208B) 0598 - 0844	NP
- 3E	2652022-87	.	COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-203							(208) 0329 - 0329 (208B) 0845 - 1301	NP
- 3F	2652032-200	.	COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD FOR SPARES ONLY FOR SPARES ORDER: 2652032-203							(208) 0242 - 0329 (208B) 0435 - 1301	NP
- 3G	2652032-203	.	COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD FOR SPARES ONLY SPARES REPLACEMENT FOR: 2652022-64 2652022-72 2652022-87 SPARES ONLY FOR: 2652032-200							(208) 0242 - 0329 (208B) 0435 - 1301	01
- 3H	2652032-202	.	COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD FOR SPARES ORDER: 2652032-2							(208) 0345 - 0346	NP
- 3J	2652022-97	.	COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-2							(208) 0330 - 0359	NP
- 3K	2652022-111	.	COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-2							(208) 0360 - 0373	NP
- 3L	2652022-127	.	COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-2							(208) 0374 - 0416	NP
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

LOWER COWL INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 3M	2652032-1	.	COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-2						(208) 0417 - 0678 (208B) 1302 - 5643	NP
- 3N	2652032-2	.	COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD SPARES ONLY FOR: 2652032-202 SPARES REPLACEMENT FOR: 2652022-97 2652022-111 2652022-127 2652032-1						(208) 0679 & ON (208B) 5644 & ON	01
4	2652022-24	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-204						(208) 0061 - 0105	NP
- 4A	2652022-31	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-204						(208) 0106 - 0122	NP
- 4B	2652022-38	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-204						(208) 0123 - 0169 (208B) 0180 - 0198	NP
- 4C	2652022-48	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-204						(208) 0170 - 0199 (208B) 0199 - 0249	NP
- 4D	2652022-54	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-204						(208) 0200 - 0218 (208B) 0250 - 0307	NP
- 4E	2652022-62	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-204						(208) 0219 - 0241 (208B) 0308 - 0434	NP
- 4F	2652032-201	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ONLY FOR SPARES ORDER: 2652032-204						(208) 0001 - 0241 (208B) 0001 - 0434	NP
- 4G	2652032-204	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ONLY SPARES REPLACEMENT FOR: 2652022-24 2652022-31 2652022-38 2652022-48 2652022-54 2652022-62 SPARES ONLY FOR: 2652032-201						(208) 0061 - 0241 (208B) 0180 - 0434	01
- 5	2652022-68	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-203						(208) 0242 - 0260 (208B) 0435 - 0597	NP
- 6	2652022-76	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-203						(208) 0261 - 0328 (208B) 0598 - 0839	NP
- 7	2652032-200	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ONLY FOR SPARES ORDER: 2652032-203						(208) 0242 - 0329 (208B) 0435 & ON	NP
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

LOWER COWL INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 7A	2652032-203	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ONLY SPARES REPLACEMENT FOR: 2652022-68 2652022-76 2652022-83 2652022-109 2652022-122 SPARES ONLY FOR: 2652032-200						(208) 0242 - 0329 (208B) 0435 - 1301	01
- 7B	2652022-83	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-203						(208) 0329 - 0329 (208B) 0840 - 0977	NP
- 7C	2652022-109	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-203						(208B) 0978 - 1048	NP
- 7D	2652022-122	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-203						(208B) 1049 - 1301	NP
- 8	2652022-92	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-2						(208) 0330 - 0359	NP
- 8A	2652022-110	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-2						(208) 0360 - 0373	NP
- 8B	2652022-128	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-2						(208) 0374 - 0395	NP
- 8C	2652022-127	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-2						(208) 0396 - 0416	NP
- 8D	2652032-1	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ORDER (MUST REPLACE WITH): 2652032-2						(208) 0417 - 0678 (208B) 1302 - 5643	NP
- 8E	2652032-2	.	COWL ASSEMBLY - LOWER RIGHT W/O CARGO POD SPARES REPLACEMENT FOR: 2652022-92 2652022-110 2652022-128 2652022-127 2652032-1						(208) 0679 & ON (208B) 5644 & ON	01
- 8F	2652032-202	.	COWL ASSEMBLY - LOWER RIGHT WITH CARGO POD FOR SPARES ORDER: 2652032-205						(208) 0345 - 0346	NP
- 8G	2652032-205	.	COWL ASSEMBLY SPARES ONLY FOR: 2652032-202 ATTACHING PARTS						(208) 0345 - 0346 (208) 0679 & ON	01
9	MS20392-3C13	.	PIN						(208) 0001 & ON (208B) 0001 & ON	02
10	NAS1149F0463P	.	WASHER					99321	(208) 0001 & ON (208B) 0001 & ON	02
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

LOWER COWL INSTALLATION


AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
11	AA55487-5	.	PIN						(208) 0001 & ON (208B) 0001 & ON	02
12		.	TUBE ASSEMBLY - RIGHT							RF
			REFER TO 71-20-00 FIGURE 01							
			--*--							
13	2652020-2	.	BRACKET ASSEMBLY - RIGHT COWL SUPPORT						(208) 0001 & ON (208B) 0001 & ON	01
14	S3413-105	.	FASTENER					71286	(208) 0001 & ON (208B) 0001 & ON	04
- 15	S2319-64	.	GROMMET					71286	(208) 0001 & ON (208B) 0001 & ON	04
- 16	CM2791-1	.	SNAP RING					71286	(208) 0001 & ON (208B) 0001 & ON	04
17	S3413-108	.	FASTENER					71286	(208) 0001 & ON (208B) 0001 & ON	03
- 18	S2319-64	.	GROMMET					71286	(208) 0001 & ON (208B) 0001 & ON	03
- 19	CM2791-1	.	SNAP RING					71286	(208) 0001 & ON (208B) 0001 & ON	03
20	S3413-109	.	FASTENER					71286	(208) 0001 & ON (208B) 0001 & ON	01
- 21	S2319-64	.	GROMMET					71286	(208) 0001 & ON (208B) 0001 & ON	01
- 22	CM2791-1	.	SNAP RING					71286	(208) 0001 & ON (208B) 0001 & ON	01
23	2652022-61	.	STRINGER - LEFT						(208) 0001 & ON (208B) 0001 & ON	01
24	2652022-4	.	STRINGER - RIGHT						(208) 0001 & ON (208B) 0001 & ON	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24519

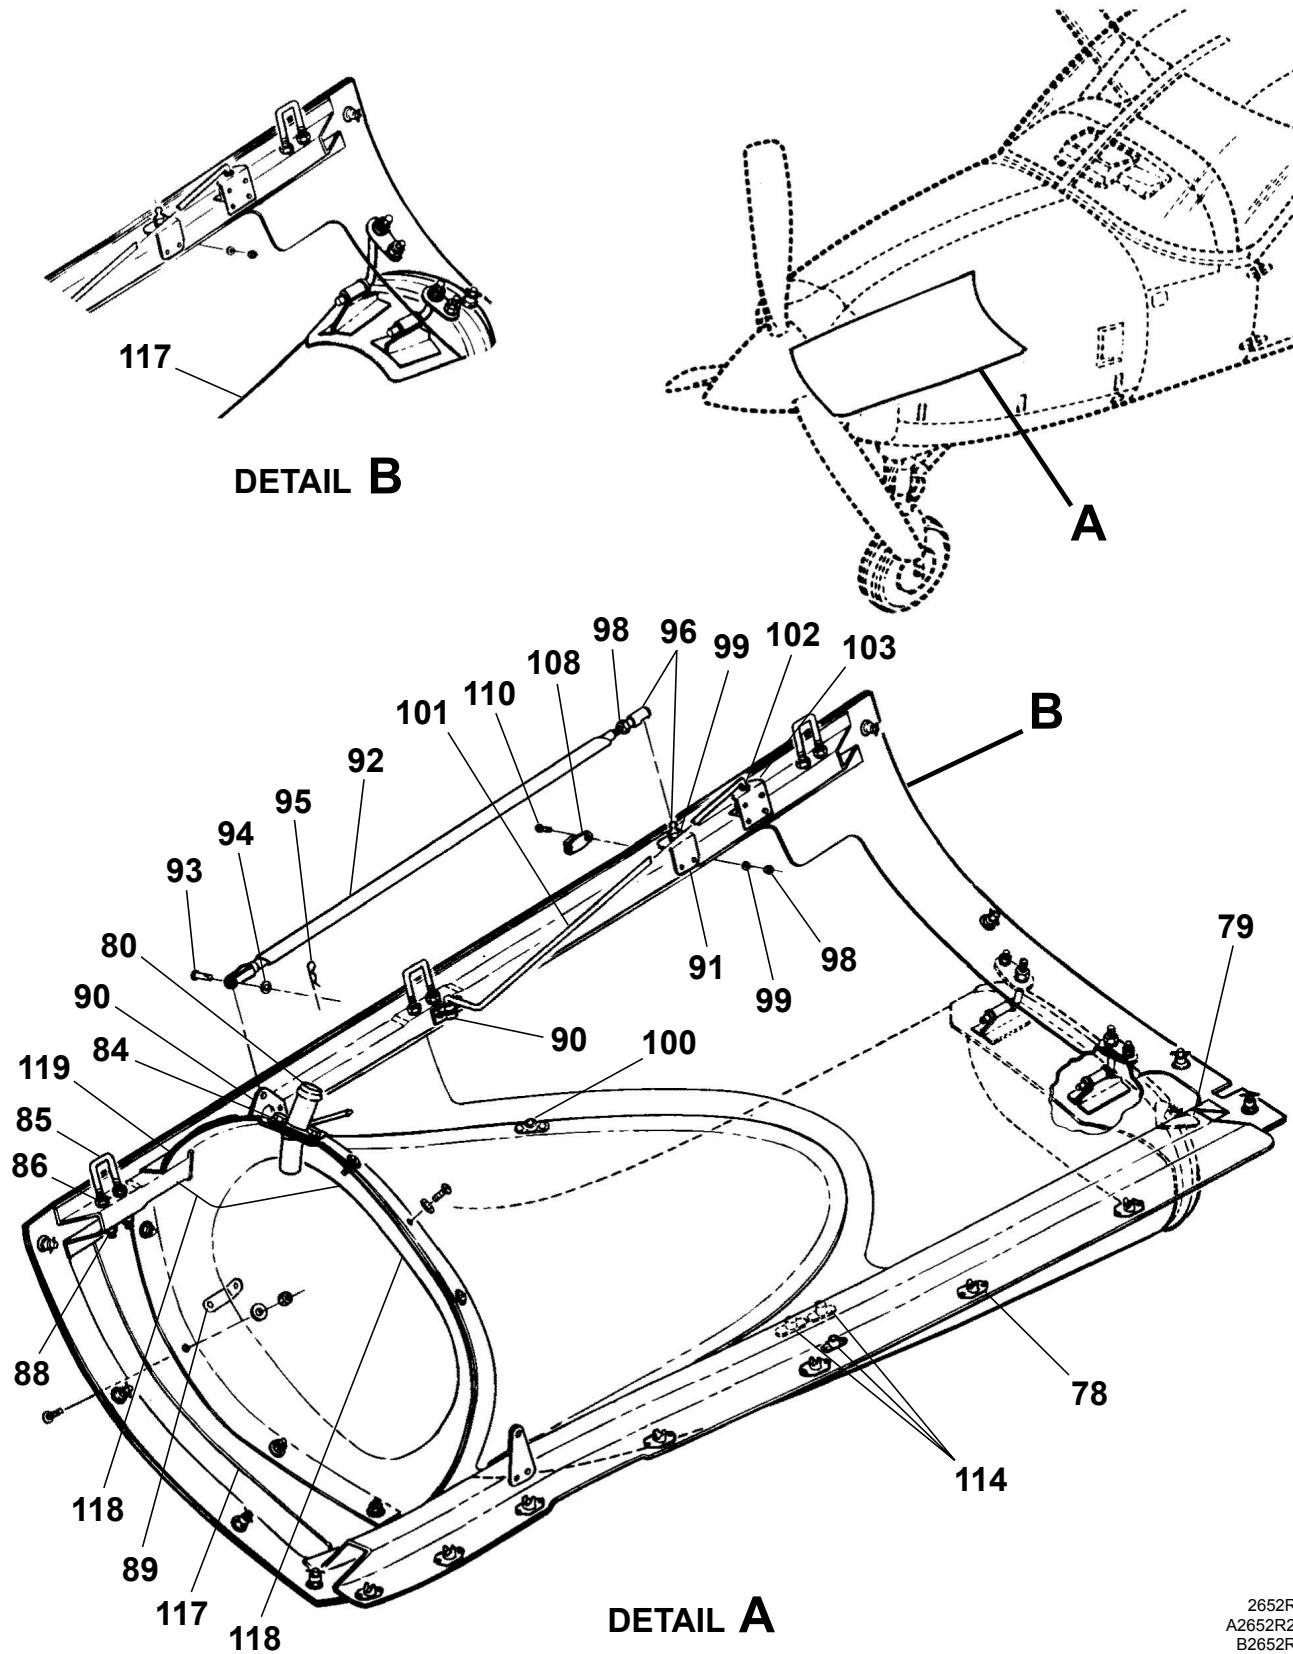

DETAIL A
LOWER COWL INSTALLATION
Figure 02. (Sheet 2)

2652R1007
 A2652R2002A
 B2652R2001

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

LOWER COWL INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY	
- 75	S3413-114	.	.	FASTENER				71286	(208) 0330 & ON	AR
NOTE: S3413-114, S3413-115, AND S3413-116 ARE INTERCHANGEABLE TO ALLOW THE BEST FIT OF THE LOWER COWL.										
- 76	S3413-115	.	.	FASTENER				71286	(208) 0330 & ON	AR
NOTE: S3413-114, S3413-115, AND S3413-116 ARE INTERCHANGEABLE TO ALLOW THE BEST FIT OF THE LOWER COWL.										
- 77	S3413-116	.	.	FASTENER				71286	(208) 0330 & ON	AR
NOTE: S3413-114, S3413-115, AND S3413-116 ARE INTERCHANGEABLE TO ALLOW THE BEST FIT OF THE LOWER COWL.										
78	S2319-50	.	.	RECEPTACLE					(208) 0001 & ON (208B) 0001 & ON	07
79	0823337-1	.	.	GROMMET					(208) 0001 & ON (208B) 0001 & ON	01
80	2656008-1	.	.	ADAPTER ASSEMBLY - OIL VENT LINE					(208) 0001 - 0241 (208B) 0001 - 0434	01
- 80A	2656008-7	.	.	ADAPTER ASSEMBLY - OIL VENT LINE					(208) 0417 & ON (208B) 0435 & ON	01
ATTACHING PARTS										
- 81	AN3C4	.	.	BOLT					(208) 0001 & ON (208B) 0001 & ON	03
- 82	NAS1149C0363R	.	.	WASHER					(208) 0001 & ON (208B) 0001 & ON	03
- 83	MS21043-3	.	.	NUT					(208) 0001 & ON (208B) 0001 & ON	02
--*--										
84	NAS682A3	.	.	NUTPLATE					(208) 0001 & ON (208B) 0001 & ON	01
85	2652021-80	.	.	BOLT					(208) 0001 & ON (208B) 0001 & ON	03
86	NAS1149F0363P	.	.	WASHER				73197	(208) 0001 & ON (208B) 0001 & ON	04
- 87	AN315C3R	.	.	NUT					(208) 0001 & ON (208B) 0001 & ON	02
88	MS21042L3	.	.	NUT				00624	(208) 0001 & ON (208B) 0001 & ON	02
89	2652022-43	.	.	BRACKET - PROP ANCHOR ATTACH					(208) 0128 & ON (208B) 0055 & ON	01
90	2652017-1	.	.	BRACKET - COWL DOOR SUPPORT					(208) 0001 & ON (208B) 0001 & ON	01
91	2652018-1	.	.	BRACKET					(208) 0001 & ON (208B) 0001 & ON	01
92	2652022-18	.	.	TUBE ASSEMBLY					(208) 0001 & ON (208B) 0001 & ON	01
ATTACHING PARTS										
93	MS20392-3C13	.	.	PIN					(208) 0001 & ON (208B) 0001 & ON	01
94	NAS1149F0463P	.	.	WASHER				99321	(208) 0001 & ON (208B) 0001 & ON	01
95	AA55487-5	.	.	PIN					(208) 0001 & ON (208B) 0001 & ON	01
--*--										

- ITEM NOT ILLUSTRATED

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

LOWER COWL INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE									UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY	
96	S1442-2	.	.	BALL JOINT - QUICK DISCONNECT FOR SPARES ORDER (MUST REPLACE WITH): S1442-6					(208) 0001 & ON (208B) 0001 & ON	NP
- 97	S1442-6	.	.	BALL JOINT - QUICK DISCONNECT SPARES REPLACEMENT FOR: S1442-2 ATTACHING PARTS					(208) 0001 & ON (208B) 0001 & ON	01
98	AN316-4R	.	.	NUT					(208) 0001 & ON (208B) 0001 & ON	01
99	NAS1149F0463P	.	.	WASHER					99321 (208) 0001 & ON (208B) 0001 & ON	02
100	MS21043-4	.	.	NUT					(208) 0001 & ON (208B) 0001 & ON	01
				--*--						
101	2617090-2	.	.	ROD ASSEMBLY - RIGHT					(208) 0001 & ON (208B) 0001 & ON	01
102	MS21042L3	.	.	NUT					00624 (208) 0001 & ON (208B) 0001 & ON	01
103	2617090-11	.	.	SUPPORT					(208) 0001 & ON (208B) 0001 & ON	01
- 104	2617090-12	.	.	SUPPORT					(208) 0001 & ON (208B) 0001 & ON	01
- 105	2617090-7	.	.	CLIP - ROD					(208) 0001 & ON (208B) 0001 & ON	01
- 106	2617090-9	.	.	PLATE					(208) 0001 & ON (208B) 0001 & ON	01
- 107	2617090-13	.	.	SPRING					(208) 0001 & ON (208B) 0001 & ON	01
108	401	.	.	STUD					90763 (208) 0001 - 0131 (208B) 0001 - 0054 (208B) *0001 & ON	01
				* AIRPLANES (208B) 0001 & ON NOT INCORPORATING SK208-29						
- 109	2615112-3	.	.	STAPLE					(208) 0132 & ON	01
				* AIRPLANES (208) 0001 THRU 0131 INCORPORATING SK208-29					(208) *0001 - 0131	
				* AIRPLANES (208B) 0001 THRU 0054 INCORPORATING SK208-29					(208B) 0055 & ON (208B) *0001 - 0054	
				ATTACHING PARTS						
110	AN509-8R10	.	.	SCREW					(208) 0001 & ON (208B) 0001 & ON	02
				ALTERNATE SPARE (INTERCHANGEABLE WITH): MS24694-S7						
- 111	MS24694-S7	.	.	SCREW					(208) 0001 & ON (208B) 0001 & ON	02
				ALTERNATE SPARE (INTERCHANGEABLE WITH): AN509-8R10						
- 112	NAS1149FN832P	.	.	WASHER					80205 (208) 0001 & ON (208B) 0001 & ON	02
- 113	MS21044N08	.	.	NUT					72914 (208) 0001 & ON (208B) 0001 & ON	02
				--*--						
114	MS21047L4	.	.	NUTPLATE - WITH CARGO POD					(208) 0106 & ON (208B) 0001 & ON	03
- 115	MS21047L3	.	.	NUTPLATE - WITH CARGO POD					13499 (208) 0106 & ON (208B) 0001 & ON	01
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG




LOWER COWL INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

		NOMENCLATURE								UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
- 116		.	ENGINE EXHAUST DUCT INSTL W/O CARGO POD REFER TO 78-10-00 FIGURE 01								RF
117		.	ENGINE EXHAUST DUCT INSTL WITH CARGO POD REFER TO 78-10-00 FIGURE 02								RF
118	2652022-6	.	SHROUD - LEFT							(208) 0001 - 0005	01
- 118A	2652022-19	.	SHROUD - LEFT FOR SPARES ORDER (MUST REPLACE WITH): 2652022-102							(208) 0006 - 0416 (208B) 0001 - 1301	NP
- 118B	2652022-102	.	SHROUD - LEFT SPARES REPLACEMENT FOR: 2652022-19							(208) 0417 & ON (208B) 1302 & ON	01
119	2652022-7	.	SHROUD - RIGHT 2652022-103							(208) 0001 - 0416 (208B) 0001 - 1301	NP
- 119A	2652022-103	.	SHROUD - RIGHT							(208) 0417 & ON (208B) 1302 & ON	01
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24520

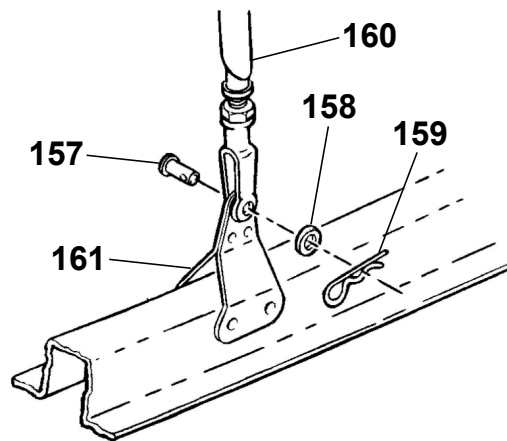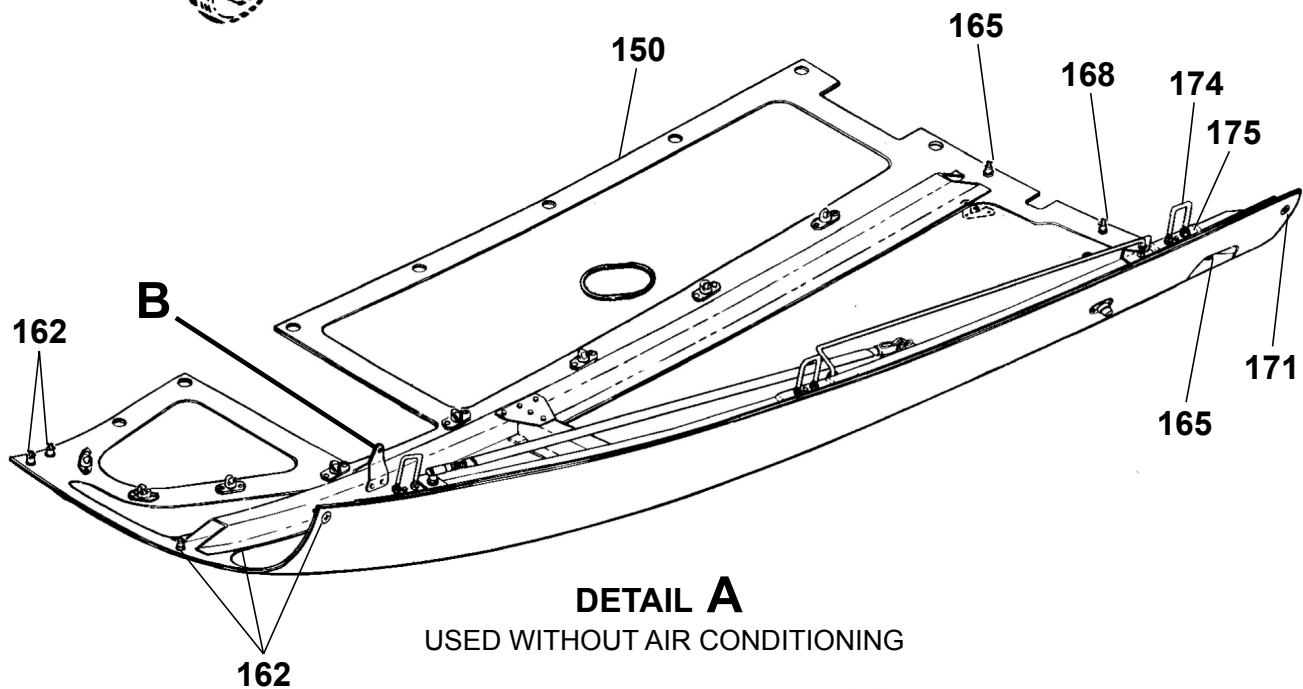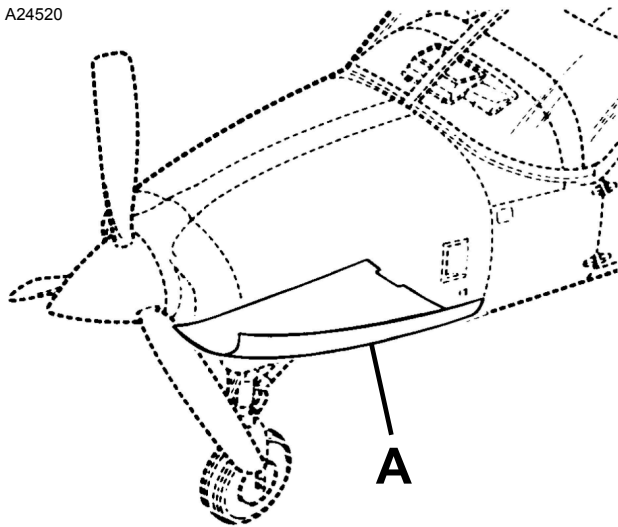

LOWER COWL INSTALLATION
 Figure 02. (Sheet 3)

2652R1008
 A2652R2004A
 B2652R1009

**CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG**

LOWER COWL INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
150	2652021-1	.							(208) 0001 - 0010	NP
- 151	2652021-19	.							(208) 0011 - 0122	NP
- 152	2652021-27	.							(208) 0123 - 0143	NP
- 153	2652021-33	.							(208) 0144 - 0218 (208B) 0180 - 0307	NP
- 153A	2652021-43	.							(208) 0219 - 0219 (208B) 0308 - 0311	NP
- 154	2652021-38	.							(208) 0220 - 0329 (208B) 0312 - 0928	NP
- 154A	2652021-62	.							(208B) 1049 - 1170	NP
- 154B	2652021-52	.							(208) 0330 - 0373	NP
- 154C	2652021-67	.							(208) 0374 - 0395	NP
- 155	2652021-48								(208) 0001 & ON (208B) 0001 & ON	
- 155A	2652031-203	.							(208) *0001 - 0680 (208B) *0001 - 5649	01
- 155B	2652021-57	.							(208) 0330 - 0352	NP
- 155C	2652021-72	.							(208) 0001 - 0329 (208B) 0001 - 1301	NP
- 155D	2652021-76	.							(208) 0396 - 0416	NP
- 155E	2652031-3	.							(208) 0417 - 0499 (208B) 1302 - 1999	01
- 155F	2652031-5	.							(208) 0500 & ON (208B) 2000 - 4999	01
- ITEM NOT ILLUSTRATED										

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

LOWER COWL INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

		NOMENCLATURE								UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY	
- 155G	2652031-7	.							(208B) 5000 & ON	01
- 155H	2652021-48	.							(208) *0238 - 0329 (208B) *0365 - 1048	NP
- 155I	2652021-57	.							(208) *0330 - 0373	NP
- 155J	2652021-76	.							(208) *0374 - 0395	NP
- 155K	2652021-72	.							(208B) *1049 - 1170	NP
- 155L	2652031-202	.							(208) 0001 & ON (208B) 0001 & ON	01
- 156		.								RF
157	MS20392-3C13	.							(208) 0001 & ON (208B) 0001 & ON	01
158	NAS1149F0463P	.						99321	(208) 0001 & ON (208B) 0001 & ON	01
159	AA55487-5	.							(208) 0001 & ON (208B) 0001 & ON	01
160		.								RF
161	2652020-1	.	.						(208) 0001 & ON (208B) 0001 & ON	01
162	S3413-105	.	.					71286	(208) 0001 & ON (208B) 0001 & ON	05
- 163	S2319-64	.	.					71286	(208) 0001 & ON (208B) 0001 & ON	05
- 164	CM2791-1	.	.					71286	(208) 0001 & ON (208B) 0001 & ON	05
- ITEM NOT ILLUSTRATED										

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG



LOWER COWL INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
165	S3413-109	.	.	STUD					71286	(208) 0001 & ON (208B) 0001 & ON	02
- 165A	S3413-116	.	.	FASTENER					71286	(208) 0330 & ON	AR
NOTE: S3413-114, S3413-115, AND S3413-116 ARE INTERCHANGEABLE TO ALLOW THE BEST FIT OF THE LOWER COWL.											
- 166	S2319-64	.	.	GROMMET					71286	(208) 0001 & ON (208B) 0001 & ON	02
- 167	CM2791-1	.	.	SNAP RING					71286	(208) 0001 & ON (208B) 0001 & ON	02
168	S3413-110	.	.	STUD					71286	(208) 0001 & ON (208B) 0001 & ON	01
- 168A	S3413-115	.	.	FASTENER					71286	(208) 0330 & ON	AR
NOTE: S3413-114, S3413-115, AND S3413-116 ARE INTERCHANGEABLE TO ALLOW THE BEST FIT OF THE LOWER COWL.											
- 169	S2319-64	.	.	GROMMET					71286	(208) 0001 & ON (208B) 0001 & ON	01
- 170	CM2791-1	.	.	SNAP RING					71286	(208) 0001 & ON (208B) 0001 & ON	01
171	S3413-108	.	.	STUD					71286	(208) 0001 & ON (208B) 0001 & ON	01
- 171A	S3413-114	.	.	FASTENER					71286	(208) 0330 & ON	AR
NOTE: S3413-114, S3413-115, AND S3413-116 ARE INTERCHANGEABLE TO ALLOW THE BEST FIT OF THE LOWER COWL.											
- 172	S2319-64	.	.	GROMMET					71286	(208) 0001 & ON (208B) 0001 & ON	01
- 173	CM2791-1	.	.	SNAP RING					71286	(208) 0001 & ON (208B) 0001 & ON	01
174	2652021-80	.	.	BOLT - U						(208) 0001 & ON (208B) 0001 & ON	03
ATTACHING PARTS											
175	NAS1149F0363P	.	.	WASHER					73197	(208) 0001 & ON (208B) 0001 & ON	04
- 176	MS21042L3	.	.	NUT					00624	(208) 0001 & ON (208B) 0001 & ON	02
- 177	AN315C3R	.	.	NUT						(208) 0001 & ON (208B) 0001 & ON	02
--*--											
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24522

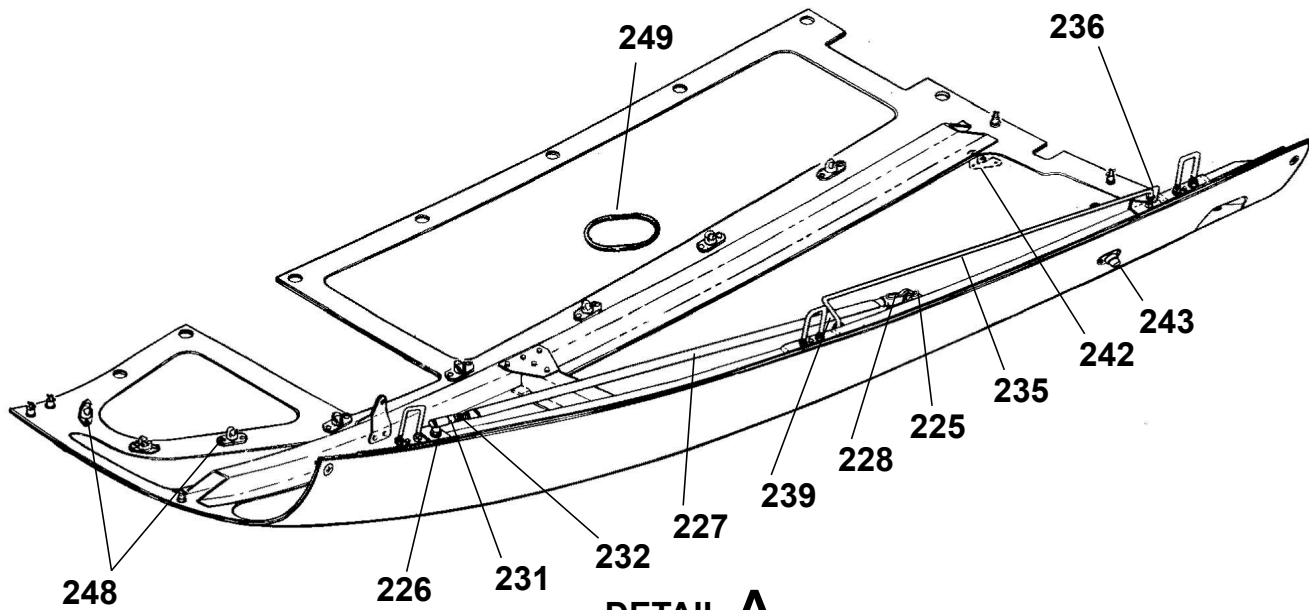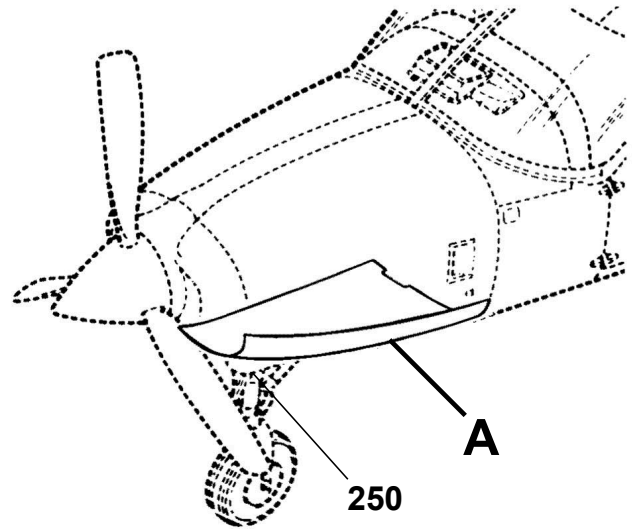

DETAIL A
 USED WITHOUT AIR CONDITIONING

LOWER COWL INSTALLATION
Figure 02. (Sheet 4)

26521008
 A26522004A

Figure 02
 Page 16
71-10-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

LOWER COWL INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
225	2652017-1	.	.						(208) 0001 & ON (208B) 0001 & ON	01
226	2652018-1	.	.						(208) 0001 & ON (208B) 0001 & ON	01
227	2652021-18	.	.						(208) 0001 & ON (208B) 0001 & ON	01
									ATTACHING PARTS	
228	MS20392-3C13	.	.						(208) 0001 & ON (208B) 0001 & ON	01
- 229	NAS1149F0463P	.	.					99321	(208) 0001 & ON (208B) 0001 & ON	01
- 230	AA55487-5	.	.						(208) 0001 & ON (208B) 0001 & ON	01
									--*--	
231	S1442-2	.	.						(208) 0001 & ON (208B) 0001 & ON	NP
									FOR SPARES ORDER (MUST REPLACE WITH): S1442-6	
- 231A	S1442-6	.	.						(208) 0001 & ON (208B) 0001 & ON	01
									SPARES REPLACEMENT FOR: S1442-2	
									ATTACHING PARTS	
232	AN316-4R	.	.						(208) 0001 & ON (208B) 0001 & ON	02
- 233	NAS1149F0463P	.	.					99321	(208) 0001 & ON (208B) 0001 & ON	02
- 234	MS21043-4	.	.						(208) 0001 & ON (208B) 0001 & ON	01
									--*--	
235	2617090-1	.	.						(208) 0001 & ON (208B) 0001 & ON	01
236	MS21042L3	.	.	.				00624	(208) 0001 & ON (208B) 0001 & ON	01
- 237	2617090-11	.	.	.					(208) 0001 & ON (208B) 0001 & ON	01
- 238	2617090-12	.	.						(208) 0001 & ON (208B) 0001 & ON	01
239	2617090-7	.	.						(208) 0001 & ON (208B) 0001 & ON	01
- 240	2617090-9	.	.						(208) 0001 & ON (208B) 0001 & ON	01
- 241	2617090-13	.	.						(208) 0001 & ON (208B) 0001 & ON	01
242	0823337-1	.	.						(208) 0123 & ON	02
243	401	.	.					90763	(208) 0001 - 0131 (208B) 0001 - 0054	01
									* AIRPLANES (208B) 0001 & ON NOT INCORPORATING SK208-29	
- 244	2615112-3	.	.						(208B) *0001 & ON (208) 0132 & ON	01
									* AIRPLANES (208) 0001 THRU 0131 INCORPORATING SK208-29 * AIRPLANES (208B) 0001 THRU 0054 INCORPORATING SK208-29	
									(208B) 0055 & ON (208B) *0001 - 0054	
									ATTACHING PARTS	
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

LOWER COWL INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 245	AN509-8R10	.	.	SCREW					(208) 0500 - 0500 (208B) 2000 - 4999	02
				ALTERNATE SPARE (INTERCHANGEABLE WITH):						
				MS24694-S7						
- 245A	MS24694-S7	.	.	SCREW					(208B) 5000 & ON	02
				ALTERNATE SPARE (INTERCHANGEABLE WITH):						
				AN509-8R10						
- 246	NAS1149FN832P	.	.	WASHER				80205	(208) 0001 & ON (208B) 0001 & ON	02
- 247	MS21044N08	.	.	NUT				72914	(208) 0001 & ON (208B) 0001 & ON	02
				--*--						
248	S2319-50	.	.	RECEPTACLE					(208) 0001 & ON (208B) 0001 & ON	08
249	S1050-1	.	.	GROMMET - 9.86 INCHES BULK ITEM				10402	(208) *0001 & ON (208B) *0001 & ON	01
				* BRITISH CERTIFIED AIRPLANES (208) 0001 & ON						
				* BRITISH CERTIFIED AIRPLANES (208B) 0001 & ON						
250		.		NOSE GEAR FAIRING PANEL						RF
				REFER TO 71-10-00 FIGURE 03						
- ITEM NOT ILLUSTRATED										



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

71-10-00

NOSE GEAR FAIRING PANEL INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON


CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24523

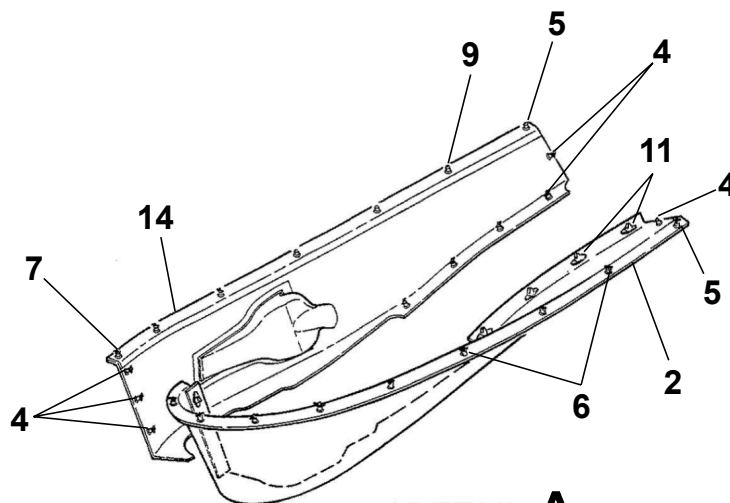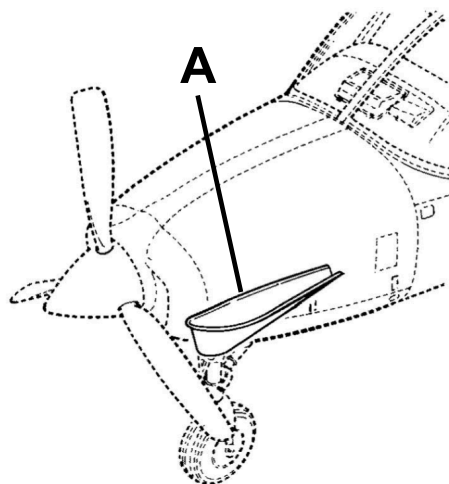


DETAIL A

AIRPLANES 20800224 AND ON BRITISH
 CERTIFIED AIRPLANES

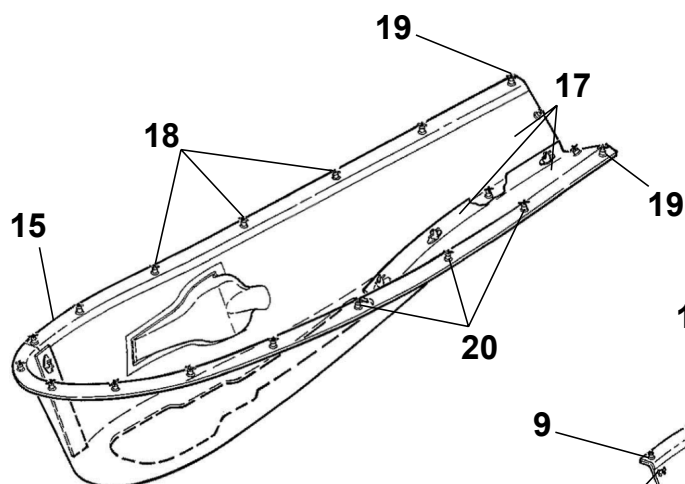


DETAIL A

AIRPLANES 20800224 AND ON BRITISH
 CERTIFIED AIRPLANES

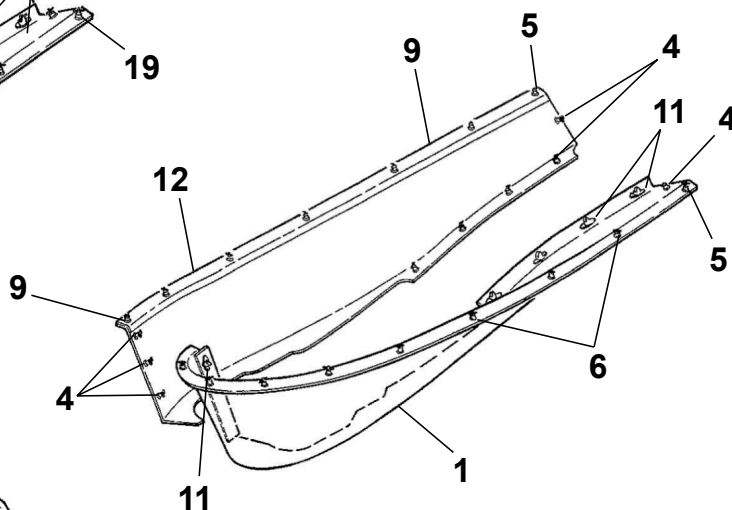

DETAIL A

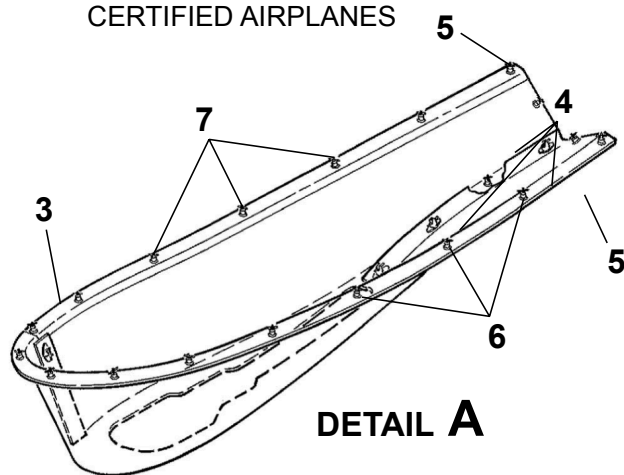

DETAIL A

NOSE GEAR FAIRING PANEL INSTALLATION
Figure 03. (Sheet 1)

26521003
 A2652M1006
 A26521006
 A26522009
 A2652M2009

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

NOSE GEAR FAIRING PANEL INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

		NOMENCLATURE								UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY	
1	2613303-3	.							(208) 0001 - 0010	01
		NOTE: WHEN ORDERING ONE OR ANY COMBINATION OF 2613303-3, -17, OR -25 LH FAIRING ASSY OR 2613303-7 OR 2613303-22 RH FAIRING ASSY, ORDER 2613303-201 ONE PIECE FAIRING ASSY. IF AIRPLANE HAS BEEN MODIFIED BY SK208-90, ORDER 2613303-44 FAIRING ASSY.								
- 1A	2613303-17	.							(208) 0011 - 0164 (208B) 0001 - 0194	01
		NOTE: WHEN ORDERING ONE OR ANY COMBINATION OF 2613303-3, -17, OR -25 LH FAIRING ASSY OR 2613303-7 OR 2613303-22 RH FAIRING ASSY, ORDER 2613303-201 ONE PIECE FAIRING ASSY. IF AIRPLANE HAS BEEN MODIFIED BY SK208-90, ORDER 2613303-44 FAIRING ASSY.								
2	2613303-25	.							(208) 0165 - 0258 (208B) 0195 - 0213	01
		NOTE: WHEN ORDERING ONE OR ANY COMBINATION OF 2613303-3, -17, OR -25 LH FAIRING ASSY OR 2613303-7 OR 2613303-22 RH FAIRING ASSY, ORDER 2613303-201 ONE PIECE FAIRING ASSY. IF AIRPLANE HAS BEEN MODIFIED BY SK208-90, ORDER 2613303-44 FAIRING ASSY.								
3	2613303-201	.							(208) 0259 & ON (208B) 0214 & ON	01
4	S3413-104	.	.	STUD				71286	(208) 0001 & ON (208B) 0001 & ON	10
5	S3413-110	.	.	STUD				71286	(208) 0001 & ON (208B) 0001 & ON	02
6	S3413-107	.	.	STUD				71286	(208) 0001 & ON (208B) 0001 & ON	08
7	S3413-109	.	.	STUD				71286	(208) 0001 & ON (208B) 0001 & ON	06
- 8	S2319-64	.	.	GROMMET				71286	(208) 0001 & ON (208B) 0001 & ON	26
9	S2319-23	.	.	GROMMET					(208) 0001 & ON (208B) 0001 & ON	16
- 9A	S2319-10	.	.	STUD					(208) 0001 & ON (208B) 0001 & ON	01
- 10	CM2791-1	.	.	SNAP RING				71286	(208) 0001 & ON (208B) 0001 & ON	23
11	S2319-30	.	.	RECEPTACLE					(208) 0001 & ON (208B) 0001 & ON	07
12	2613303-7	.							(208) 0001 - 0164 (208B) 0001 - 0194	NP
		NOTE: WHEN ORDERING ONE OR ANY COMBINATION OF 2613303-3, -17, OR -25 LH FAIRING ASSY OR 2613303-7 OR 2613303-22 RH FAIRING ASSY, ORDER 2613303-201 ONE PIECE FAIRING ASSY. IF AIRPLANE HAS BEEN MODIFIED BY SK208-90, ORDER 2613303-44 FAIRING ASSY.								
- 13	2613303-22	.							(208) 0165 - 0258 (208B) 0195 - 0559	NP
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

NOSE GEAR FAIRING PANEL INSTALLATION


AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

		NOMENCLATURE									UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
NOTE: WHEN ORDERING ONE OR ANY COMBINATION OF 2613303-3, -17, OR -25 LH FAIRING ASSY OR 2613303-7 OR 2613303-22 RH FAIRING ASSY, ORDER 2613303-201 ONE PIECE FAIRING ASSY. IF AIRPLANE HAS BEEN MODIFIED BY SK208-90, ORDER 2613303-44 FAIRING ASSY.											
14	2613303-34	.							PANEL ASSEMBLY - NOSE GEAR FAIRING RIGHT REMOVABLE FOR SPARES ORDER (MUST REPLACE WITH): 2613303-44 * BRITISH CERTIFIED AIRPLANES (208) 0238 THRU 0258 * BRITISH CERTIFIED AIRPLANES (208B) 0365 THRU 0559	(208) *0238 - 0258 (208B) *0365 - 0559	NP
15	2613303-44	.							PANEL ASSEMBLY - SCOOP OPT NOSE GEAR ONE-PIECE FAIRING SPARES REPLACEMENT FOR: 2613303-34 * BRITISH CERTIFIED AIRPLANES (208) 0259 & ON * BRITISH CERTIFIED AIRPLANES (208B) 0560 & ON	(208) *0259 & ON (208B) *0560 & ON	01
- 16	2613303-44	.							PANEL ASSEMBLY - SCOOP OPT NOSE GEAR ONE-PIECE FAIRING * AIRPLANES (208) 0544 THRU 0572 INCORPORATING CAB-32-05 * AIRPLANES (208B) 5000 THRU 5223 AND 5225 THRU 5239 INCORPORATING CAB-32-05	(208) 0259 & ON (208) *0544 - 0572 (208B) 0560 & ON (208B) *5000 - 5223 (208B) *5225 - 5239	01
17	S3413-104	.	.						STUD 71286	(208) 0001 & ON (208B) 0001 & ON	10
18	S3413-109	.	.						STUD 71286	(208) 0001 & ON (208B) 0001 & ON	06
19	S3413-110	.	.						STUD 71286	(208) 0001 & ON (208B) 0001 & ON	02
20	S3413-107	.	.						STUD 71286	(208) 0001 & ON (208B) 0001 & ON	08
- 21	S2319-10	.	.						STUD	(208) 0001 & ON (208B) 0001 & ON	01
- 22	S3413-120	.	.						STUD	(208) 0001 & ON (208B) 0001 & ON	02
- 23	S2319-64	.	.						GROMMET 71286	(208) 0001 & ON (208B) 0001 & ON	26
- 24	S2319-23	.	.						GROMMET	(208) 0001 & ON (208B) 0001 & ON	16
- 25	CM2791-1	.	.						SNAP RING 71286	(208) 0001 & ON (208B) 0001 & ON	23
- ITEM NOT ILLUSTRATED											

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24524

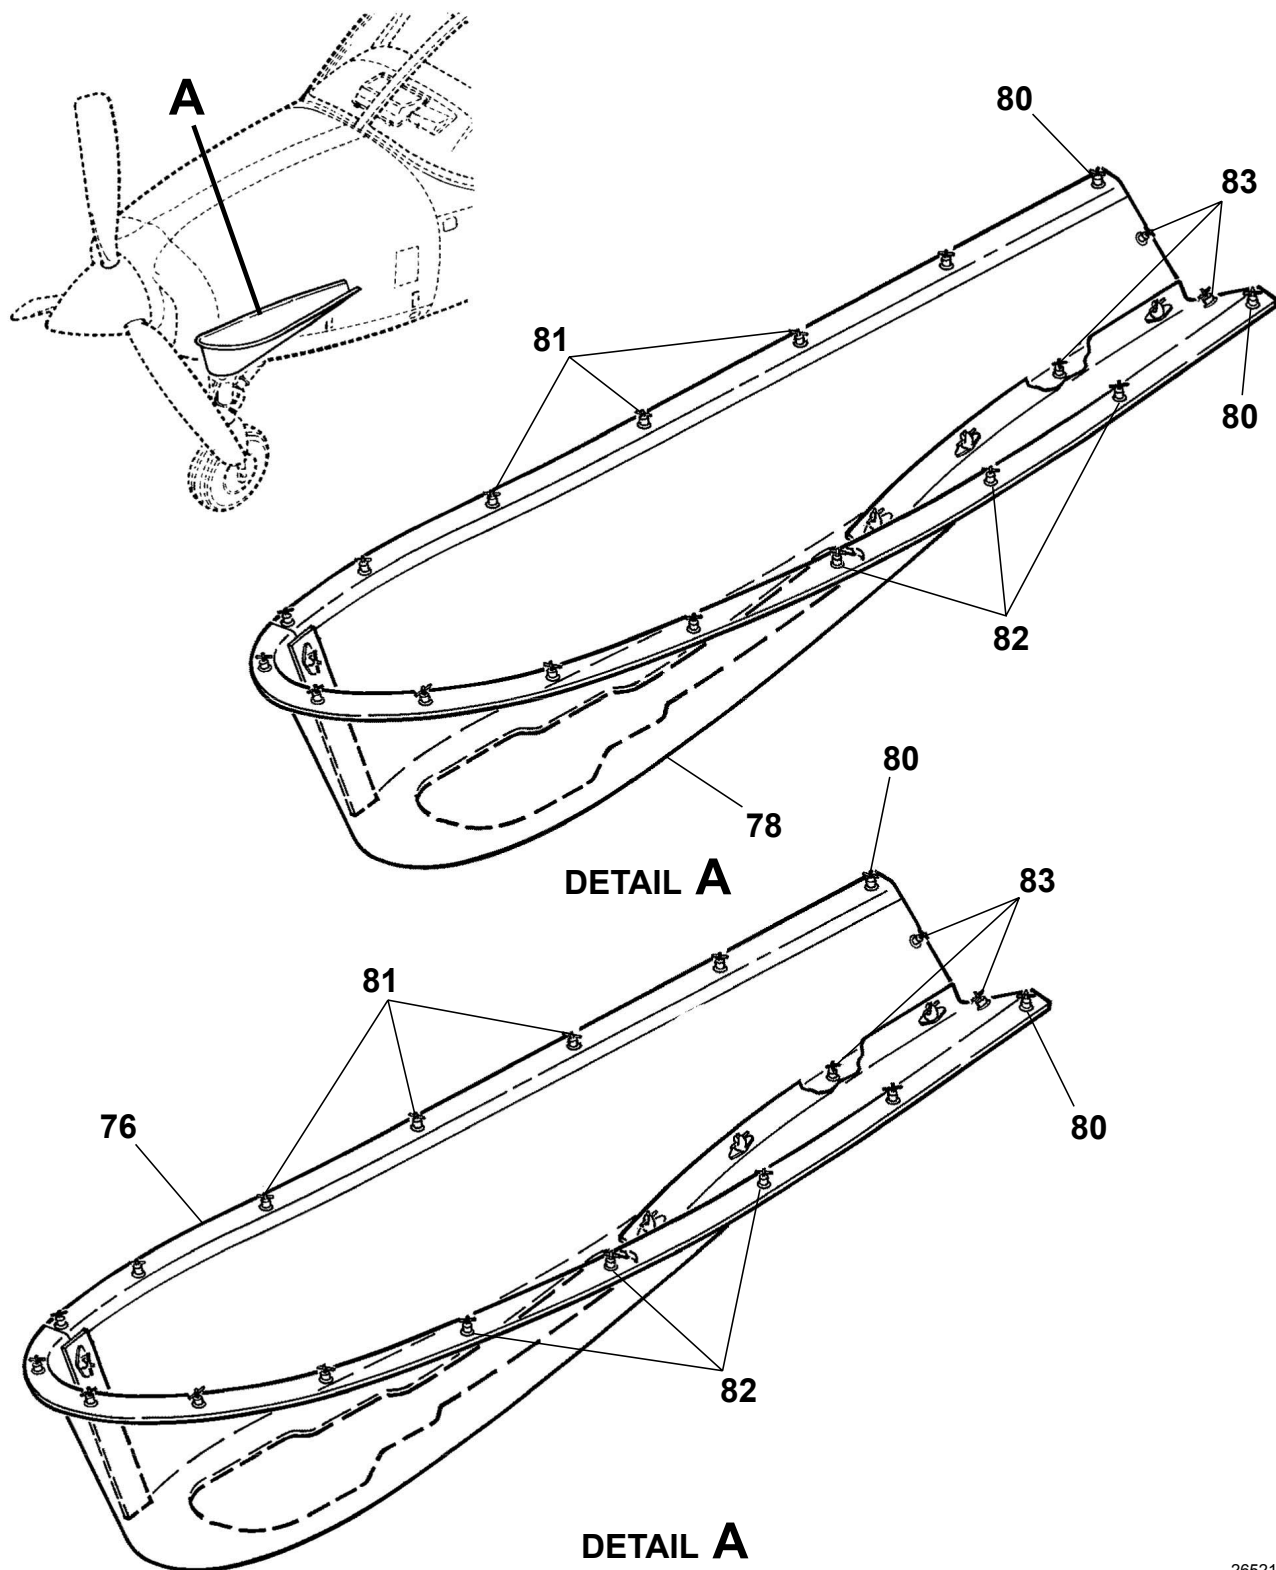

NOSE GEAR FAIRING PANEL INSTALLATION
Figure 03. (Sheet 2)

26521003
 A2652M2009
 A26522009

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

NOSE GEAR FAIRING PANEL INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 75	2613303-29	.	.	.	.	.	.	.	(208) 0198 - 0219 (208B) 0234 - 0311	NP
		NOTE: FOR SPARES ORDER 2613303-201. IF AIRCRAFT HAS BEEN MODIFIED BY SK208-90, ORDER 2613303-43.								
76	2613303-201	.	.	.	.	.	.	.	(208) 0259 & ON (208B) 0560 & ON	01
		NOTE: FOR SPARES ORDER 2613303-201. IF AIRCRAFT HAS BEEN MODIFIED BY SK208-90, ORDER 2613303-43.								
- 77	2613303-31	.	.	.	.	.	.	.	(208) 0220 - 0258 (208B) 0312 - 0559	NP
		PANEL ASSEMBLY - NOSE GEAR FAIRING FORWARD FOR SPARES ORDER (MUST REPLACE WITH): 2613303-43								
78	2613303-43	.	.	.	.	.	.	.	(208) 0259 & ON (208B) 0560 & ON	01
		PANEL ASSEMBLY - SCOOP OPT NOSE GEAR ONE-PIECE FAIRING FORWARD SPARES REPLACEMENT FOR: 2613303-31								
		NOTE: ALSO AIRPLANES -0198 THRU -0219 AND -B0234 THRU -B0303 INCORPORATING SK208-90.								
80	S3413-110	.	.	.	.	.	.	71286	(208) 0198 - 0219 (208B) 0234 - 0311	02
- 80A	S3413-120	.	.	.	.	.	.		(208) 0220 & ON (208B) 0312 & ON	02
81	S3413-109	.	.	.	.	.	.	71286	(208) 0198 & ON (208B) 0234 & ON	06
82	S3413-107	.	.	.	.	.	.	71286	(208) 0198 & ON (208B) 0234 & ON	08
83	S3413-104	.	.	.	.	.	.	71286	(208) 0198 & ON (208B) 0234 & ON	10
- 84	S2319-10	.	.	.	.	.	.		(208) 0198 & ON (208B) 0234 & ON	01
- 85	S2319-64	.	.	.	.	.	.	71286	(208) 0198 & ON (208B) 0234 & ON	26
- 86	S2319-23	.	.	.	.	.	.		(208) 0198 & ON (208B) 0234 & ON	16
- 87	CM2791-1	.	.	.	.	.	.	71286	(208) 0198 & ON (208B) 0234 & ON	23
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG


71-10-00

**COWL ASSEMBLY - LOWER LH USED WITH AIR
CONDITIONING**

AIRPLANES (208) 0140 & ON AND AIRPLANES (208B) 0214 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24525

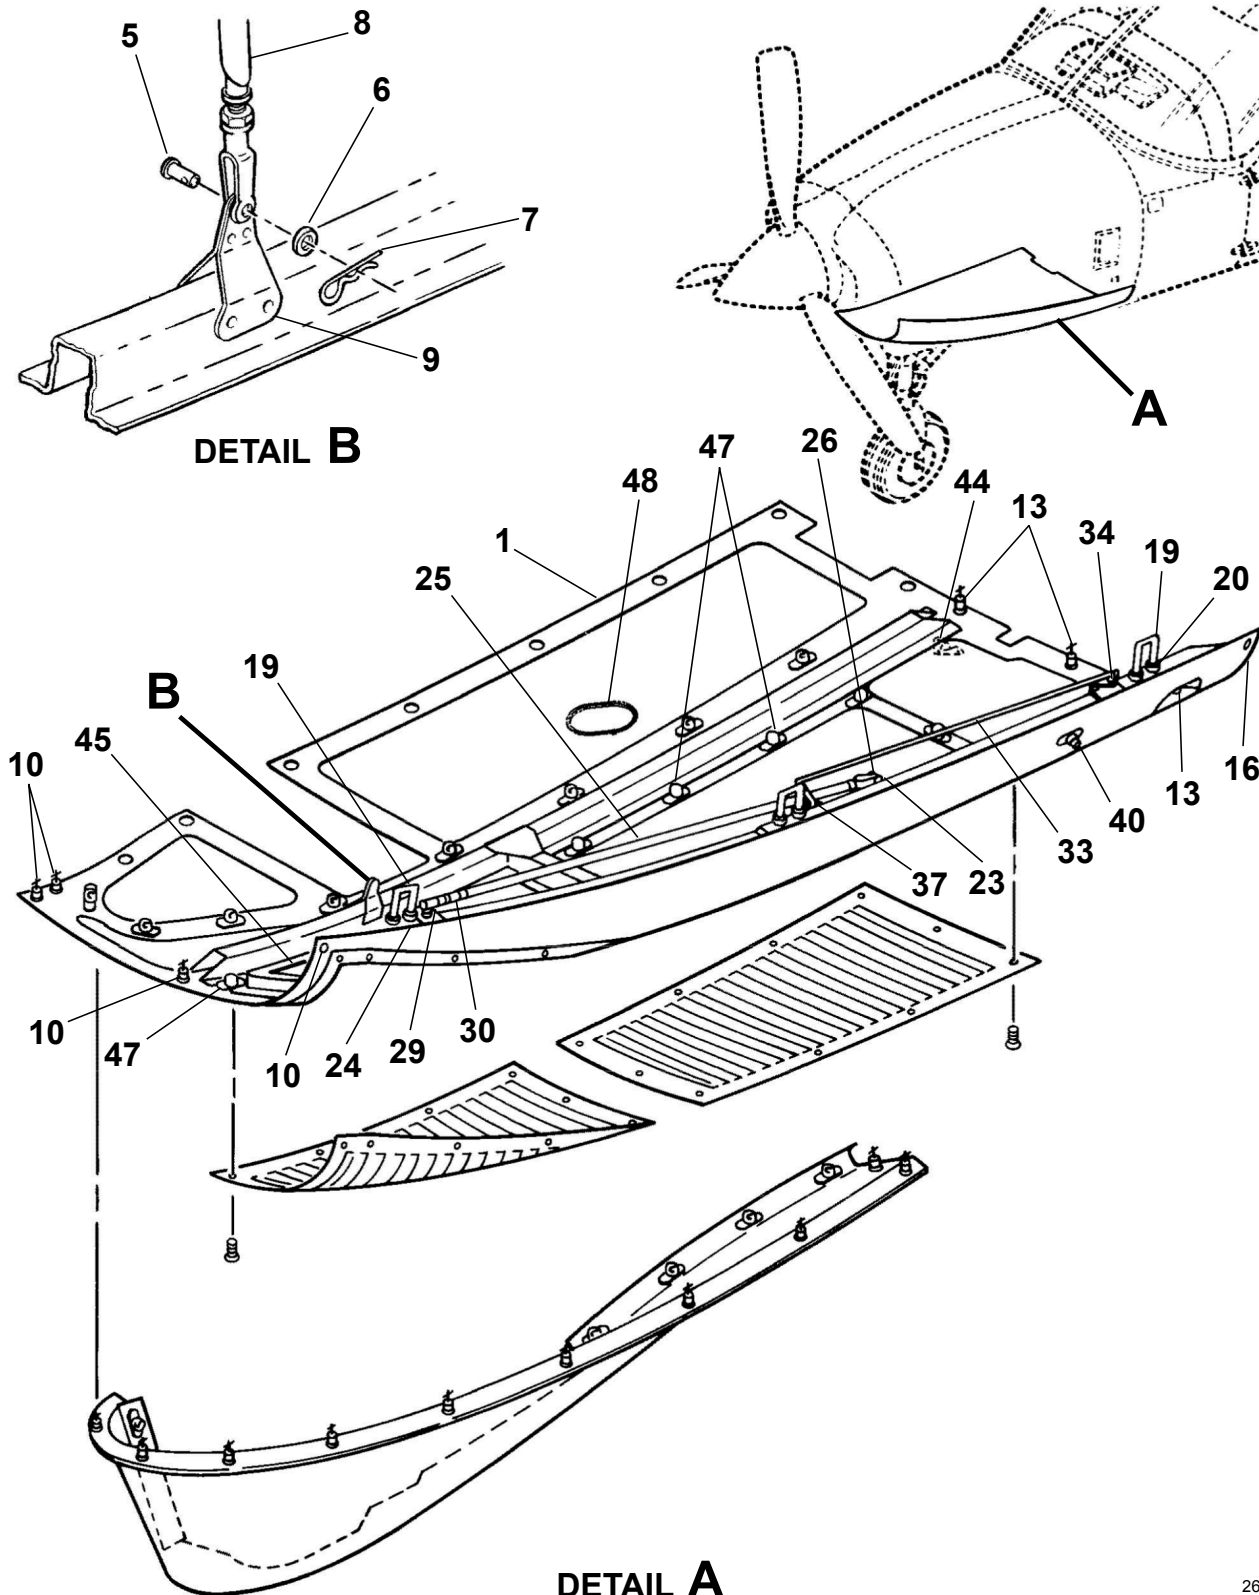

COWL ASSEMBLY - LOWER LH USED WITH AIR CONDITIONING
 Figure 04. (Sheet 1)

26521008
 A26522007
 A2652T2004
 B26521009

Figure 04
 Page 2
71-10-00 Nov 4, 2021

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

COWL ASSEMBLY - LOWER LH USED WITH AIR CONDITIONING

AIRPLANES (208) 0140 & ON AND AIRPLANES (208B) 0214 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	2601319-1	.	COWL ASSEMBLY FOR SPARES ORDER: 2652031-209						(208) 0140 - 0143	NP
- 2	2601319-12	.	COWL ASSEMBLY FOR SPARES ORDER: 2652031-209						(208) 0144 - 0218 (208B) 0214 - 0307	NP
- 3	2601319-13	.	COWL ASSEMBLY FOR SPARES ORDER: 2652031-209						(208) 0220 - 0329 (208B) 0312 - 1048	NP
- 3A	2601319-27	.	COWL ASSEMBLY FOR SPARES ORDER (MUST REPLACE WITH): 2652031-6						(208) 0329 - 0373	NP
- 3B	2601319-46	.	COWL ASSEMBLY FOR SPARES ORDER (MUST REPLACE WITH): 2652031-4						(208) 0374 - 0395	NP
- 3C	2601319-55	.	COWL ASSEMBLY FOR SPARES ORDER (MUST REPLACE WITH): 2652031-4						(208) 0374 - 0395 (208) 0396 - 0416	NP
- 3D	2601319-41	.	COWL ASSEMBLY FOR SPARES ORDER: 2652031-209						(208B) 1049 - 1170	NP
- 3E	2601319-51	.	COWL ASSEMBLY FOR SPARES ORDER: 2652031-209						(208B) 1171 - 1301	NP
- 4	2601319-23	.	COWL ASSEMBLY FOR SPARES ORDER: 2652031-209 * BRITISH CERTIFIED AIRPLANES (208) 0238 THRU 0329 * BRITISH CERTIFIED AIRPLANES (208B) 0365 THRU 1047						(208) *0238 - 0329 (208B) *0365 - 1047	NP
- 4A	2601319-32	.	COWL ASSEMBLY FOR SPARES ORDER (MUST REPLACE WITH): 2652031-6 * BRITISH CERTIFIED AIRPLANES (208) 0330 THRU 0373						(208) *0330 - 0373	NP
- 4B	2652031-4	.	COWL ASSEMBLY SPARES REPLACEMENT FOR: 2601319-46 2601319-55						(208) 0417 - 0499 (208B) 1302 - 1999	01
- 4C	2652031-6	.	COWL ASSEMBLY SPARES REPLACEMENT FOR: 2601319-27 2601319-32						(208) 0500 & ON (208B) 2000 - 4999	01
- 4D	2652031-8	.	COWL ASSEMBLY						(208B) 5000 & ON	01
- 4E	2652031-209	.	COWL ASSEMBLY SPARES ONLY FOR: 2601319-1 2601319-12 2601319-13 2601319-41 2601319-51 2601319-23						(208) 0140 & ON (208B) 0214 & ON	01
5	MS20392-3C13	.	PIN						(208) 0140 & ON (208B) 0214 & ON	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

COWL ASSEMBLY - LOWER LH USED WITH AIR CONDITIONING
AIRPLANES (208) 0140 & ON AND AIRPLANES (208B) 0214 & ON

NOMENCLATURE										UNITS PER ASSY		
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY			
6	NAS1149F0463P	.		WASHER					99321	(208) 0140 & ON (208B) 0214 & ON	01	
7	AA55487-5	.		PIN - LOCK						(208) 0140 & ON (208B) 0214 & ON	01	
8		.		TUBE ASSEMBLY - LEFT REFER TO 71-20-00 FIGURE 01							RF	
9	2652020-1	.	.	BRACKET ASSEMBLY - LEFT COWL SUPPORT						(208) 0140 & ON (208B) 0214 & ON	01	
10	S3413-105	.	.	FASTENER					71286	(208) 0140 & ON (208B) 0214 & ON	05	
- 11	S2319-64	.	.	GROMMET					71286	(208) 0140 & ON (208B) 0214 & ON	05	
- 12	CM2791-1	.	.	SNAP RING					71286	(208) 0140 & ON (208B) 0214 & ON	05	
13	S3413-108	.	.	FASTENER					71286	(208) 0140 & ON (208B) 0214 & ON	03	
- 14	S2319-64	.	.	GROMMET					71286	(208) 0140 & ON (208B) 0214 & ON	03	
- 15	CM2791-1	.	.	SNAP RING					71286	(208) 0140 & ON (208B) 0214 & ON	03	
16	S3413-109	.	.	FASTENER					71286	(208) 0140 & ON (208B) 0214 & ON	01	
- 17	S2319-64	.	.	GROMMET					71286	(208) 0140 & ON (208B) 0214 & ON	01	
- 18	CM2791-1	.	.	SNAP RING					71286	(208) 0140 & ON (208B) 0214 & ON	01	
- 18A	S3413-114	.	.	FASTENER					71286	(208) 0329 & ON	AR	
				NOTE: S3413-114, S3413-115, AND S3413-116 ARE INTERCHANGEABLE TO ALLOW THE BEST FIT OF THE LOWER COWL								
- 18B	S3413-115	.	.	FASTENER					71286	(208) 0329 & ON	AR	
				NOTE: S3413-114, S3413-115, AND S3413-116 ARE INTERCHANGEABLE TO ALLOW THE BEST FIT OF THE LOWER COWL								
- 18C	S3413-116	.	.	FASTENER					71286	(208) 0329 & ON	AR	
				NOTE: S3413-114, S3413-115, AND S3413-116 ARE INTERCHANGEABLE TO ALLOW THE BEST FIT OF THE LOWER COWL								
19	2652021-80	.	.	BOLT						(208) 0140 & ON (208B) 0214 & ON	03	
20	NAS1149F0363P	.	.	WASHER					73197	(208) 0140 & ON (208B) 0214 & ON	04	
- 21	MS21042L3	.	.	NUT					00624	(208) 0140 & ON (208B) 0214 & ON	02	
- 22	AN315C3R	.	.	NUT						(208) 0140 & ON (208B) 0214 & ON	02	
23	2652017-1	.	.	BRACKET - COWL DOOR SUPPORT						(208) 0140 & ON (208B) 0214 & ON	01	
24	2652018-1	.	.	BRACKET						(208) 0140 & ON (208B) 0214 & ON	01	
25	2652021-18	.	.	TUBE ASSEMBLY						(208) 0140 & ON (208B) 0214 & ON	01	
26	MS20392-3C13	.	.	PIN						(208) 0140 & ON (208B) 0214 & ON	01	
- ITEM NOT ILLUSTRATED												


CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

COWL ASSEMBLY - LOWER LH USED WITH AIR CONDITIONING
AIRPLANES (208) 0140 & ON AND AIRPLANES (208B) 0214 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
- 27	NAS1149F0463P	.	.		WASHER				99321	(208) 0140 & ON (208B) 0214 & ON	01
- 28	AA55487-5	.	.		PIN - LOCK					(208) 0140 & ON (208B) 0214 & ON	01
29	S1442-2	.	.		BALL JOINT - QUICK DISCONNECT FOR SPARES ORDER (MUST REPLACE WITH): S1442-6					(208) 0140 & ON (208B) 0214 & ON	NP
- 29A	S1442-6	.	.		BALL JOINT - QUICK DISCONNECT SPARES REPLACEMENT FOR: S1442-2					(208) 0140 & ON (208B) 0214 & ON	01
30	AN316-4R	.	.		NUT					(208) 0140 & ON (208B) 0214 & ON	02
- 31	NAS1149F0463P	.	.		WASHER				99321	(208) 0140 & ON (208B) 0214 & ON	02
- 32	MS21043-4	.	.		NUT					(208) 0140 & ON (208B) 0214 & ON	01
33	2617090-1	.	.		ROD ASSEMBLY - LEFT					(208) 0140 & ON (208B) 0214 & ON	01
34	2617090-11	.	.	.	SUPPORT					(208) 0140 & ON (208B) 0214 & ON	01
- 35	MS21042L3	.	.	.	NUT				00624	(208) 0140 & ON (208B) 0214 & ON	01
- 36	2617090-12	.	.		SUPPORT					(208) 0140 & ON (208B) 0214 & ON	01
37	2617090-7	.	.		CLIP					(208) 0140 & ON (208B) 0214 & ON	01
- 38	2617090-9	.	.		PLATE					(208) 0140 & ON (208B) 0214 & ON	01
- 39	2617090-13	.	.		SPRING					(208) 0140 & ON (208B) 0214 & ON	01
40	2615112-3	.	.		STAPLE					(208) 0140 & ON (208B) 0214 & ON	01
- 41	AN509-8R10	.	.		SCREW					(208) 0140 & ON (208B) 0124 - 4999	02
- 41A	MS24694-S7	.	.		SCREW					(208B) 5000 & ON	02
- 42	NAS1149FN832P	.	.		WASHER				80205	(208) 0140 & ON (208B) 0214 & ON	02
- 43	MS21044N08	.	.		NUT				72914	(208) 0140 & ON (208B) 0214 & ON	04
44	0823337-1	.	.		GROMMET					(208) 0140 & ON (208B) 0214 & ON	02
45	2601320-1	.	.		SEAL SUPPORT ASSEMBLY - INLET DUCT					(208) 0140 & ON (208B) 0214 & ON	01
- 46	CM3923-1	.	.	.	SEAL BULK ITEM					(208) 0140 & ON (208B) 0214 & ON	04
47	MS21061L3	.	.		NUTPLATE					(208) 0140 & ON (208B) 0214 & ON	21
48	S1050-1	.	.		GROMMET - 9.86 INCHES BULK ITEM				10402	(208) 0240 & ON	01
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24521

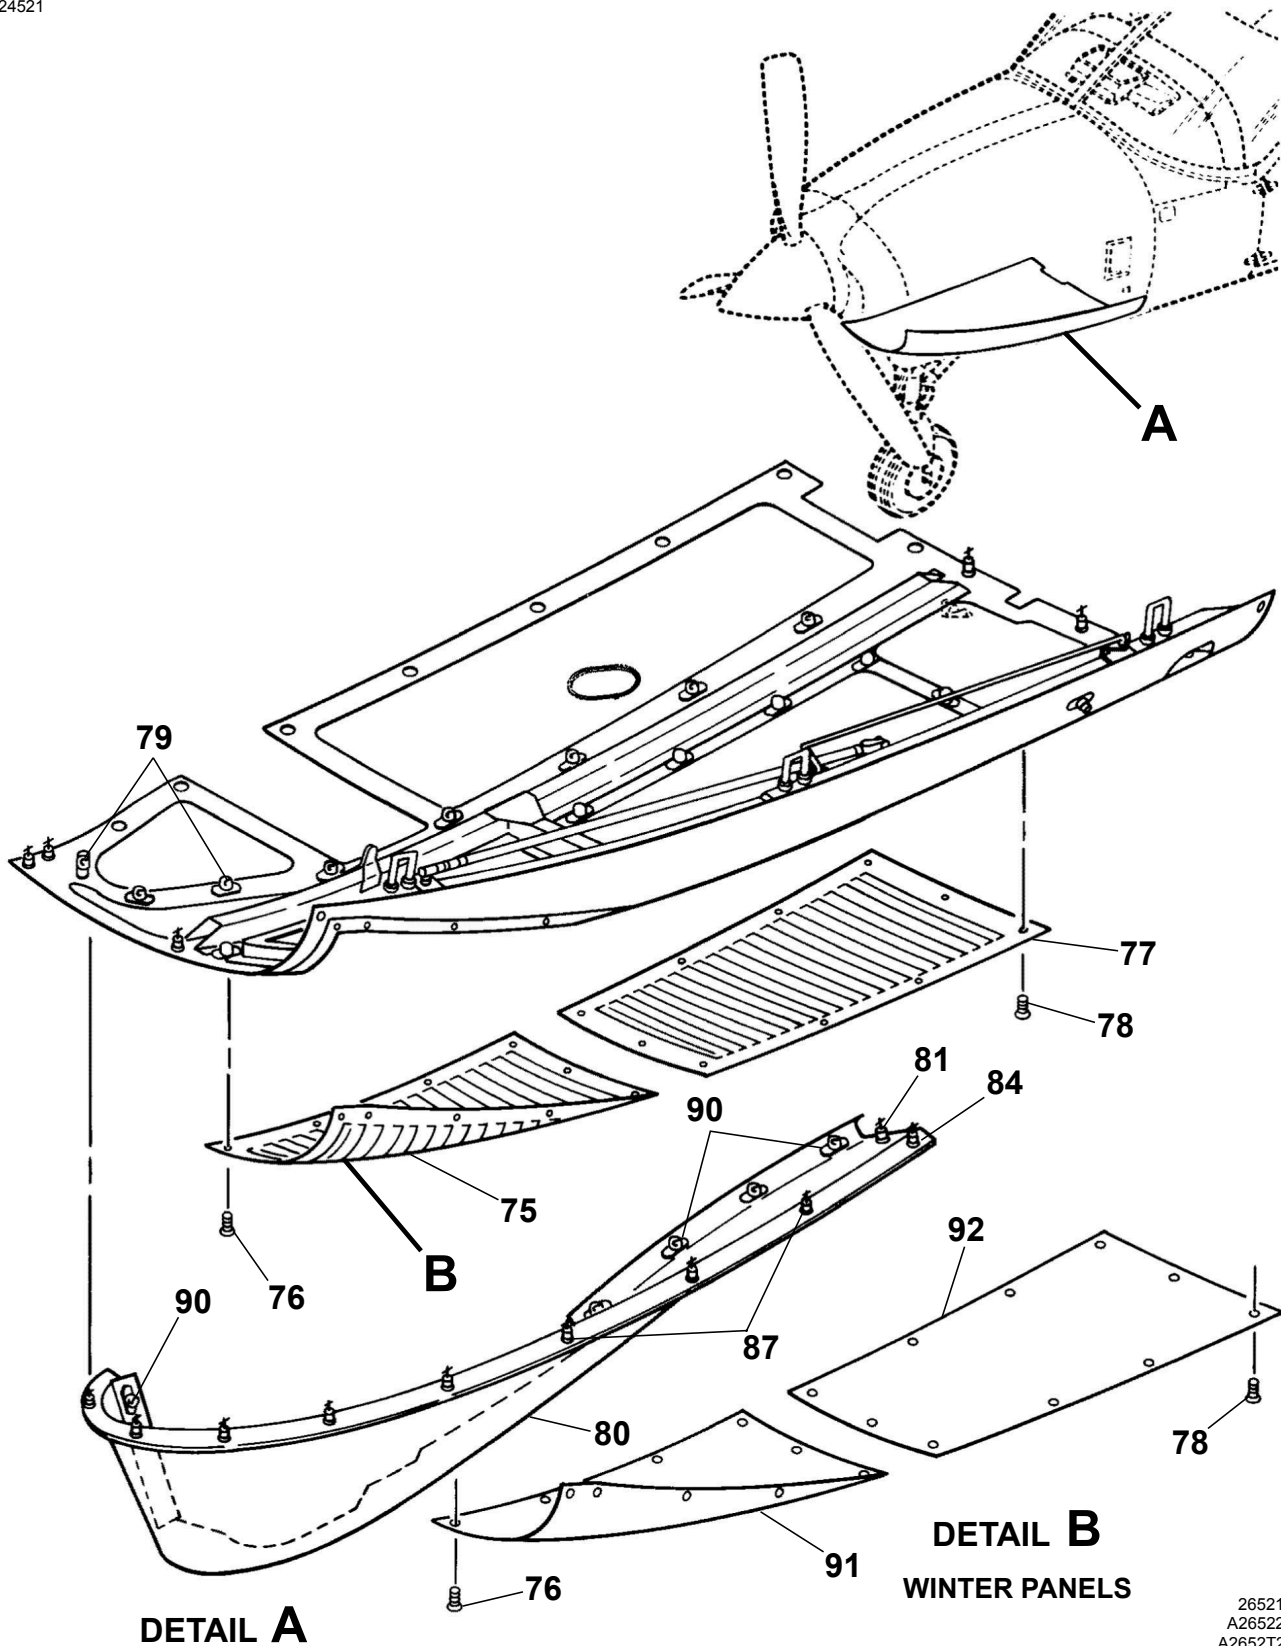

COWL ASSEMBLY - LOWER LH USED WITH AIR CONDITIONING
Figure 04. (Sheet 2)

26521008
 A26522007
 A2652T2004
 B26522007

Figure 04
 Page 6
71-10-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

COWL ASSEMBLY - LOWER LH USED WITH AIR CONDITIONING

AIRPLANES (208) 0140 & ON AND AIRPLANES (208B) 0214 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
75	2601322-3	.	.						(208) 0140 & ON (208B) 0214 & ON	01
76	AN525-10R8	.	.						(208) 0140 & ON (208B) 0214 & ON	11
77	2601323-3	.	.						(208) 0140 & ON (208B) 0214 & ON	01
78	AN525-10R8	.	.						(208) 0140 & ON (208B) 0214 & ON	10
79	S2319-50	.	.						(208) 0140 & ON (208B) 0214 & ON	08
80		.	.							RF
81	S3413-104	.	.	.				71286	(208) 0140 & ON (208B) 0214 & ON	01
- 82	S2319-64	.	.	.				71286	(208) 0140 & ON (208B) 0214 & ON	01
- 83	CM2791-1	.	.	.				71286	(208) 0140 & ON (208B) 0214 & ON	01
84	S3413-110	.	.	.				71286	(208) 0140 & ON (208B) 0214 & ON	01
- 85	S2319-64	.	.	.				71286	(208) 0140 & ON (208B) 0214 & ON	01
- 86	CM2791-1	.	.	.				71286	(208) 0140 & ON (208B) 0214 & ON	01
87	S3413-107	.	.	.				71286	(208) 0140 & ON (208B) 0214 & ON	08
- 88	S2319-64	.	.	.				71286	(208) 0140 & ON (208B) 0214 & ON	08
- 89	CM2791-1	.	.	.				71286	(208) 0140 & ON (208B) 0214 & ON	08
90	S2319-30	.	.	.					(208) 0140 & ON (208B) 0214 & ON	07
91	2601322-4	.							(208) 0140 & ON (208B) 0214 & ON	01
92	2601323-4	.							(208) 0140 & ON (208B) 0214 & ON	01

- ITEM NOT ILLUSTRATED


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

71-10-01


NOSE CAP AND COWL BULKHEAD INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG



A24526

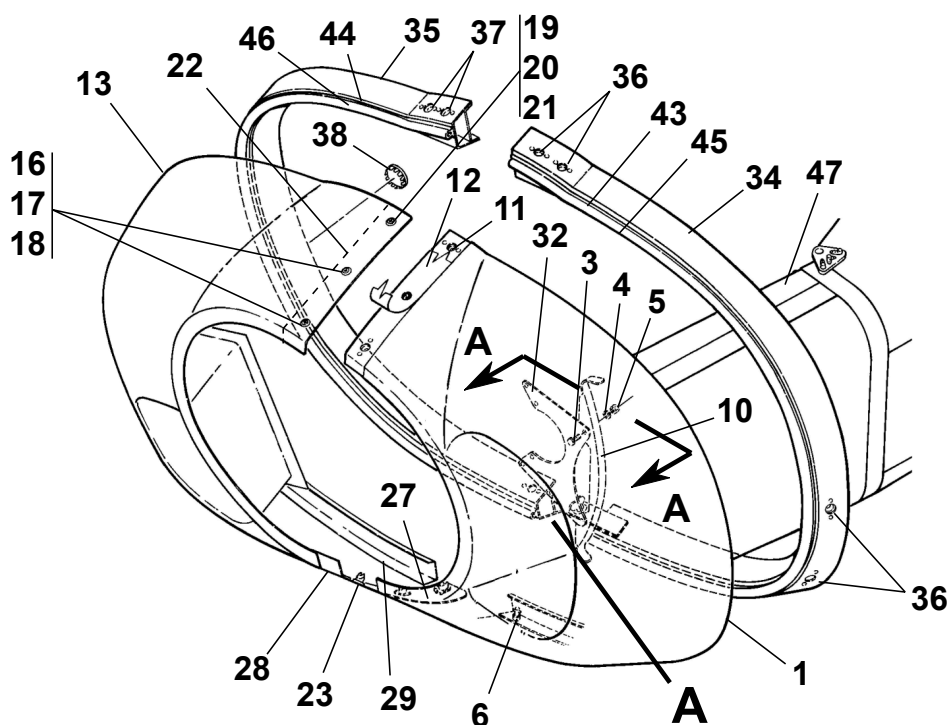

AIRPLANES 0001 AND ON AND
 B0001 THRU B4999

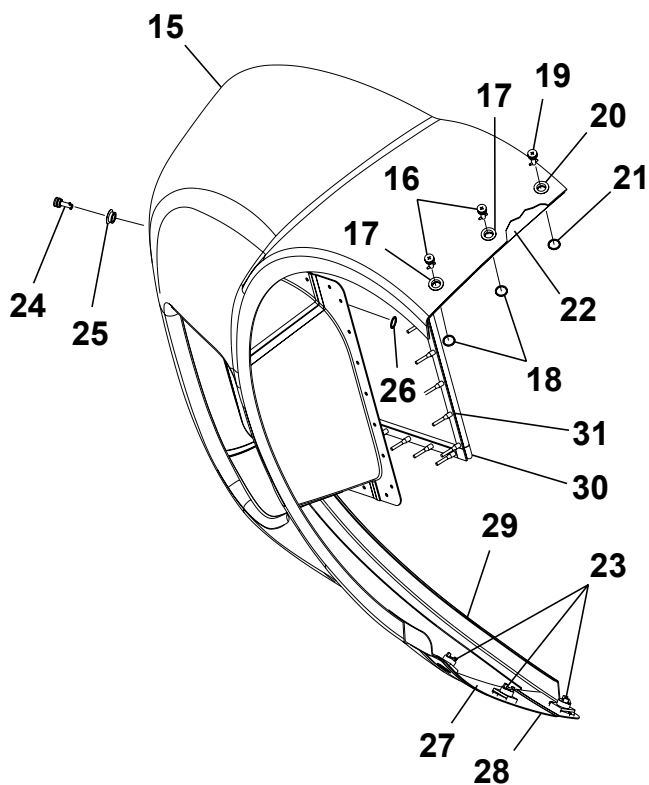

AIRPLANES B5000 AND ON

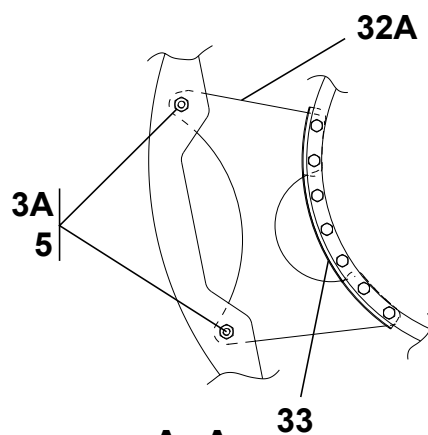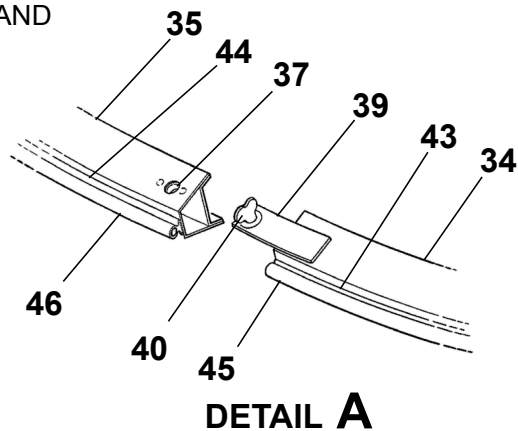

NOSE CAP AND COWL BULKHEAD INSTALLATION
Figure 01. (Sheet 1)

2652R3001
 2652T1026
 A26521005
 AA2652T1021

NOSE CAP AND COWL BULKHEAD INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

NOSE CAP AND COWL BULKHEAD INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
20	S2319-64	.	.	GROMMET					71286	(208) 0001 & ON (208B) 0001 & ON	01
21	CM2791-1	.	.	SNAP RING					71286	(208) 0001 & ON (208B) 0001 & ON	01
22	2652001-13	.	.	DOUBLER						(208) 0001 & ON (208B) 0001 & ON	01
23	S2319-50	.	.	RECEPTACLE						(208) 0001 & ON (208B) 0001 & ON	03
24	S3413-105	.	.	STUD					71286	(208) 0001 & ON (208B) 0001 & ON	02
25	S2319-64	.	.	GROMMET					71286	(208) 0001 & ON (208B) 0001 & ON	02
26	CM2791-1	.	.	SNAP RING					71286	(208) 0001 & ON (208B) 0001 & ON	02
27	P840272	.	.	TAPE						(208) 0001 & ON (208B) 0001 & ON	AR
28	2652001-7	.	.	FLANGE						(208) 0001 & ON (208B) 0001 & ON	01
29	2652001-4	.	.	STIFFENER						(208) 0001 & ON (208B) 0001 & ON	01
30	CM2022-1	.	.	SEALING CORNER						(208B) 5000 & ON	04
31	CM2610-1-09.32	.	.	SEAL						(208B) 5000 & ON	04
32	2652010-1	.		SUPPORT - LEFT NOSE CAP/INDUCTION INLET						(208) 0001 - 0240 (208B) 0001 - 0419	01
32A	2652010-2	.		SUPPORT - LEFT NOSE CAP/INDUCTION INLET * AIRPLANES (208) 0001 THRU 0240 INCORPORATING CAB95-1 * AIRPLANES (208B) 0001 THRU 0419 INCORPORATING CAB95-1						(208) 0241 & ON (208) *0001 - 0240 (208B) 0420 & ON (208B) *0001 - 0419	01
33	2652028-1	.		GUARD - ENGINE FLANGE * AIRPLANES (208) 0001 THRU 0240 INCORPORATING CAB95-1 * AIRPLANES (208B) 0001 THRU 0419 INCORPORATING CAB95-1						(208) 0241 & ON (208) *0001 - 0240 (208B) 0420 & ON (208B) *0001 - 0419	01
34	2652005-1	.		BULKHEAD ASSEMBLY - FORWARD COWL ATTACH LEFT						(208) 0001 & ON (208B) 0001 & ON	01
35	2652005-2	.		BULKHEAD ASSEMBLY - FORWARD COWL ATTACH RIGHT						(208) 0001 & ON (208B) 0001 & ON	01
36	S2319-50	.	.	RECEPTACLE LEFT						(208) 0001 & ON (208B) 0001 & ON	05
37	S2319-50	.	.	RECEPTACLE RIGHT						(208) 0001 & ON (208B) 0001 & ON	07
38	CM2692-36J1S	.	.	PLUG BUTTON RIGHT						(208) 0001 & ON (208B) 0001 & ON	03
39	2652005-7	.	.	PLATE - BULKHEAD ATTACH LEFT						(208) 0001 & ON (208B) 0001 & ON	01
40	S3413-104	.	.	STUD LEFT					71286	(208) 0001 & ON (208B) 0001 & ON	01
- 41	S2319-64	.	.	GROMMET LEFT					71286	(208) 0001 & ON (208B) 0001 & ON	01
- 42	CM2791-1	.	.	SNAP RING LEFT					71286	(208) 0001 & ON (208B) 0001 & ON	01
43	2652005-11	.	.	CHANNEL - SEAL RETAINER LEFT						(208) 0001 & ON (208B) 0001 & ON	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

NOSE CAP AND COWL BULKHEAD INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
44	2652005-10	.	.						(208) 0001 & ON (208B) 0001 & ON	01
45	2652005-9	.	.						(208) 0001 & ON (208B) 0001 & ON	01
46	2652005-8	.	.						(208) 0001 & ON (208B) 0001 & ON	01
47		.	.							RF
									INERTIAL SEPARATOR INSTALLATION REFER TO 71-60-00 FIGURE 01	
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG


71-20-00

ENGINE MOUNTING

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24527

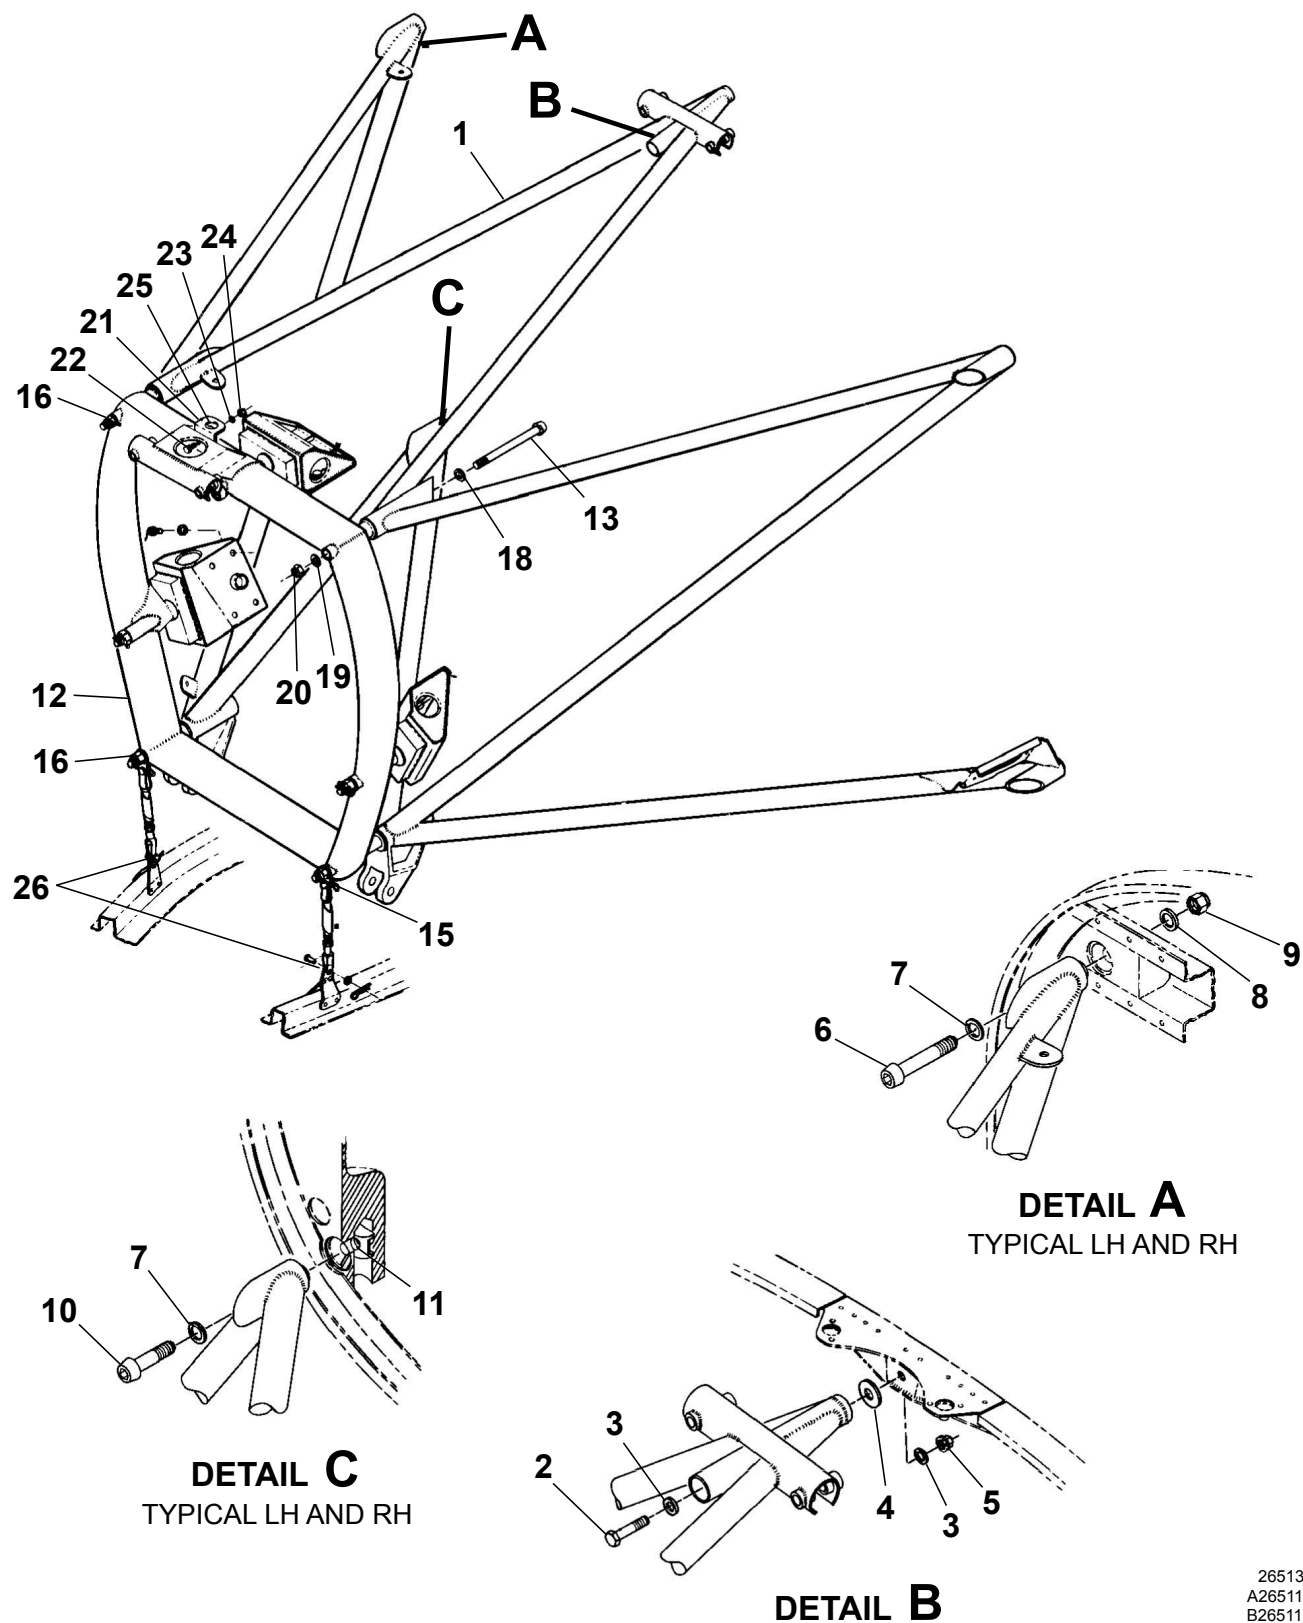

ENGINE MOUNTING
 Figure 01. (Sheet 1)

26513001
 A26511002
 B26511003
 C26512001

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ENGINE MOUNTING

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999



		NOMENCLATURE								UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	2651023-1	.	ENGINE MOUNT ASSEMBLY FOR SPARES ORDER (MUST REPLACE WITH): 2651023-23 NOTE: WHEN INITIALLY ORDERING THIS PART FOR AIRPLANES -0007, -0009 OR -0011, YOU MUST ORDER ATTACHING HARDWARE FOR TORQUE PRESSURE TRANSMITTER-REFER TO CHAPTER 77 ENGINE INDICATING.							(208) 0001 - 0131 (208B) 0001 - 0054	NP
- 1A	2651023-19	.	ENGINE MOUNT ASSEMBLY FOR SPARES ORDER (MUST REPLACE WITH): 2651023-23 NOTE: WHEN INITIALLY ORDERING THIS PART FOR AIRPLANES -0007, -0009 OR -0011, YOU MUST ORDER ATTACHING HARDWARE FOR TORQUE PRESSURE TRANSMITTER-REFER TO CHAPTER 77 ENGINE INDICATING.							(208) 0132 - 0404 (208B) 0055 - 1231	NP
- 1B	2651023-23	.	ENGINE MOUNT ASSEMBLY SPARES REPLACEMENT FOR: 2651023-1 2651023-19 FOR SPARES ORDER (MUST REPLACE WITH): 2651040-2							(208) 0405 & ON (208B) 1232 - 4999	NP
- 1C	2651040-2	.	ENGINE MOUNT WELD ASSEMBLY SPARES REPLACEMENT FOR: 2651023-23 ATTACHING PARTS							(208) 0001 & ON (208B) 0001 - 4999	01
2	AN5C12A	.	BOLT							(208) 0001 & ON (208B) 0001 - 4999	01
3	NAS1149C0563R	.	WASHER							(208) 0001 & ON (208B) 0001 - 4999	02
4	S1450-5H16-032	.	WASHER							(208) 0001 & ON (208B) 0001 - 4999	AR
5	MS21042L5	.	NUT							(208) 0001 & ON (208B) 0001 - 4999	01
6	MS20007-30	.	BOLT - UPPER LEFT & RIGHT							(208) 0001 & ON (208B) 0001 - 4999	02
7	MS20002C7	.	WASHER							(208) 0001 & ON (208B) 0001 - 4999	04
8	NAS1149F0732P	.	WASHER							(208) 0001 & ON (208B) 0001 - 4999	02
9	MS21044N7	.	NUT							(208) 0001 & ON (208B) 0001 - 4999	02
10	MS20007-16	.	BOLT - LOWER LEFT & RIGHT							(208) 0001 & ON (208B) 0001 - 4999	02
11	F2552-070	.	NUT							72962 (208) 0001 & ON (208B) 0001 - 4999	02
		.	--*--								
12	2651022-1	.	RING ASSEMBLY - ENGINE MOUNT FOR SPARES ORDER (MUST REPLACE WITH): 2651022-20							(208) 0001 - 0114 (208B) 0001 - 0020	NP
- 12A	2651022-15	.	RING ASSEMBLY - ENGINE MOUNT FOR SPARES ORDER (MUST REPLACE WITH): 2651022-20							(208) 0115 - 0348 (208B) 0021 - 0907	NP
- ITEM NOT ILLUSTRATED											

ENGINE MOUNTING


		NOMENCLATURE							EFFECTIVITY		UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7			
- 12B	2651022-18	.							RING ASSEMBLY - ENGINE MOUNT FOR SPARES ORDER (MUST REPLACE WITH): 2651022-20	(208) 0349 - 0516 (208B) 0908 - 2124	NP
- 12C	2651022-20	.							RING ASSEMBLY - ENGINE MOUNT SPARES REPLACEMENT FOR: 2651022-1 2651022-15 2651022-18 ATTACHING PARTS	(208) 0517 & ON (208B) 2125 & ON	01
13	MS20007-68	.							BOLT ALTERNATE SPARE (INTERCHANGEABLE WITH): NAS147-81	(208) 0001 & ON (208B) 0001 - 4999	01
- 14	NAS147-81	.							BOLT ALTERNATE SPARE (INTERCHANGEABLE WITH): MS20007-68	(208) 0001 & ON (208B) 0001 - 4999	01
15	NAS147-97	.							BOLT	(208) 0001 & ON (208B) 0001 - 4999	01
16	MS20007-70	.							BOLT ALTERNATE SPARE (INTERCHANGEABLE WITH): NAS147-84	(208) 0001 & ON (208B) 0001 - 4999	02
- 17	NAS147-84	.							BOLT ALTERNATE SPARE (INTERCHANGEABLE WITH): MS20007-70	(208) 0001 & ON (208B) 0001 - 4999	02
18	MS20002C7	.							WASHER	(208) 0001 & ON (208B) 0001 - 4999	04
19	NAS1149C0763R	.							WASHER	(208) 0001 & ON (208B) 0001 - 4999	04
20	AN363-720	.							NUT	(208) 0001 & ON (208B) 0001 - 4999	04
									--*--		
21	2651027-3	.	.						SUPPORT ASSEMBLY - CENTER SECTION	(208) 0001 & ON (208B) 0001 - 4999	01
									ATTACHING PARTS		
22	AN3-4A	.	.						BOLT	80205 (208) 0001 & ON (208B) 0001 - 4999	02
23	NAS1149F0363P	.	.						WASHER	73197 (208) 0001 & ON (208B) 0001 - 4999	02
24	MS21045-3	.	.						NUT	(208) 0001 & ON (208B) 0001 - 4999	02
									--*--		
25	S2319C5	.	.	.					STUD	(208) 0001 & ON (208B) 0001 - 4999	01
26		.							PIN - LOWER COWL ATTACH REFER TO 71-10-00 FIGURE 02		RF
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A99581

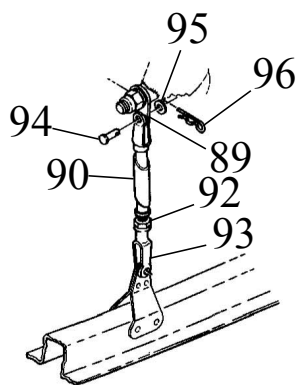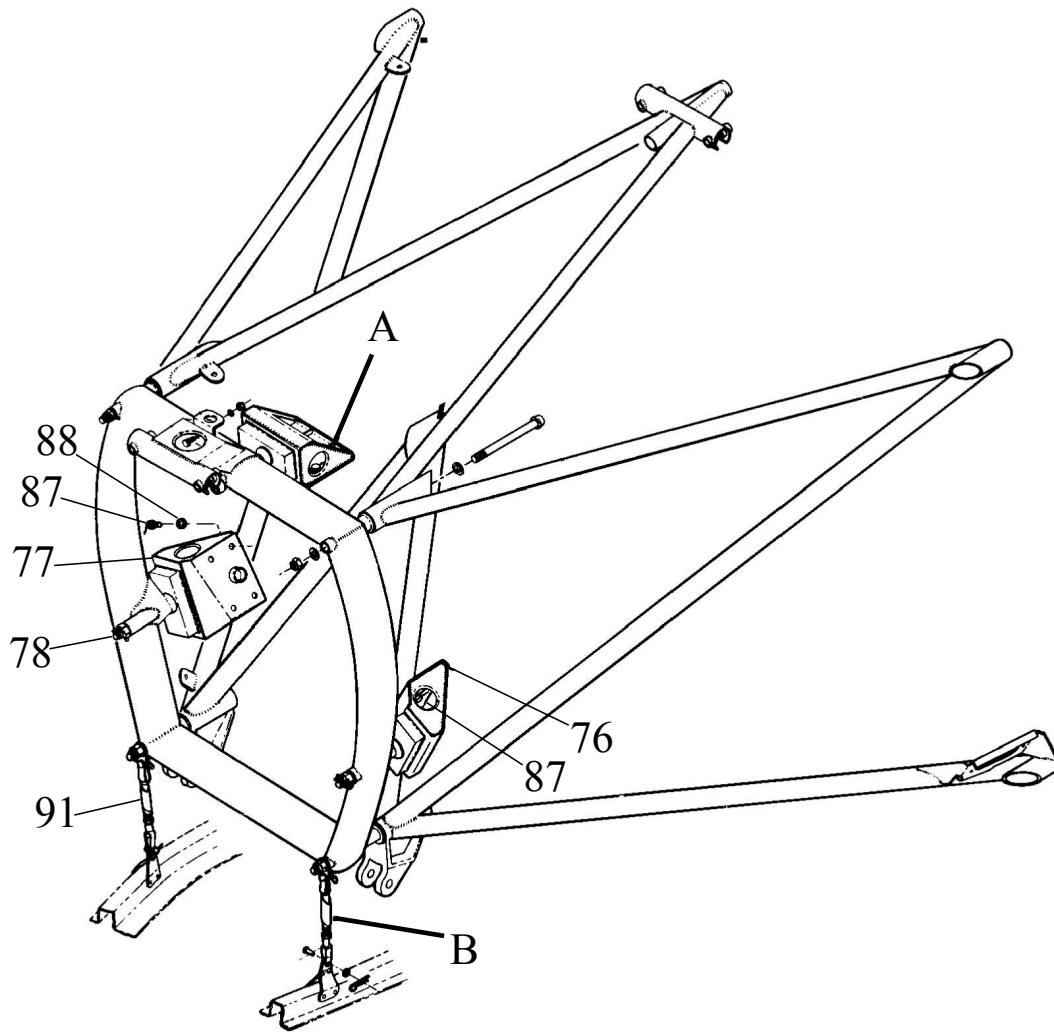

DETAIL B

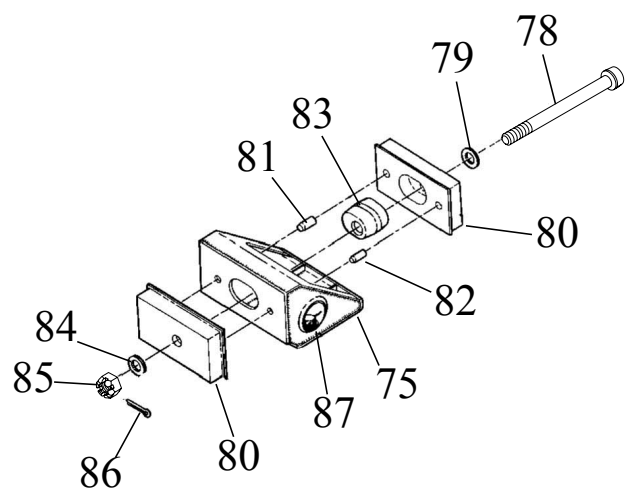

DETAIL A

2651
 A2651
 B265

ENGINE MOUNTING
 Figure 01. (Sheet 2)

**CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG**

ENGINE MOUNTING

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

		NOMENCLATURE								UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
75	2651008-8	.	BRACKET ASSEMBLY - ENGINE MOUNT UPPER CENTER							(208) 0001 & ON (208B) 0001 - 4999	01
76	2651012-7	.	BRACKET ASSEMBLY - ENGINE MOUNT LOWER LEFT							(208) 0001 & ON (208B) 0001 - 4999	01
77	2651011-9	.	BRACKET ASSEMBLY - ENGINE MOUNT LOWER RIGHT							(208) 0001 & ON (208B) 0001 - 4999	01
			ATTACHING PARTS								
78	NAS148A94	.	BOLT FOR SPARES ORDER (MUST REPLACE WITH): S3461-64							(208) 0001 - 0302 (208B) 0001 - 0735	NP
- 78A	S3461-64	.	BOLT MPI SPARES REPLACEMENT FOR: NAS148A94							(208) 0303 & ON (208B) 0736 & ON	01
79	MS20002C8	.	WASHER							(208) 0001 & ON (208B) 0001 - 4999	01
80	9910333-1	.	ENGINE MOUNT							(208) 0001 & ON (208B) 0001 - 4999	02
81	NAS607-5-5	.	PIN							(208) 0001 & ON (208B) 0001 - 4999	01
82	NAS607-4-5	.	PIN							(208) 0001 & ON (208B) 0001 - 4999	01
83	C299501-0402	.	SPACER - BONDED							(208) 0001 & ON (208B) 0001 - 4999	01
84	NAS1149C0863R	.	WASHER							(208) 0001 & ON (208B) 0001 - 4999	01
85	AN310C8	.	NUT							(208) 0001 & ON (208B) 0001 - 4999	01
86	MS24665-302	.	COTTER PIN							28839 (208) 0001 & ON (208B) 0001 - 4999	01
87	S3354-1	.	BOLT FOR SPARES ORDER (MUST REPLACE WITH): S3354-2							(208) 0001 & ON (208B) 0001 - 4999	NP
- 87A	S3354-2	.	BOLT SPARES REPLACEMENT FOR: S3354-1							(208) 0001 & ON (208B) 0001 - 4999	04
88	MS20002C6	.	WASHER							(208) 0001 & ON (208B) 0001 - 4999	04
89	2651030-1	.	BRACKET							(208) 0001 & ON (208B) 0001 - 4999	02
			--*--								
90	2651024-5	.	TUBE ASSEMBLY - LEFT FOR SPARES ORDER (MUST REPLACE WITH): 2651024-10							(208) 0001 - 0382 (208B) 0001 - 1098	NP
91	2651024-4	.	TUBE ASSEMBLY - RIGHT FOR SPARES ORDER (MUST REPLACE WITH): 2651024-10							(208) 0001 - 0382 (208B) 0001 - 1098	NP
- 91A	2651024-8	.	TUBE ASSEMBLY - LEFT AND RIGHT FOR SPARES ORDER (MUST REPLACE WITH): 2651024-10							(208) 0383 - 0403 (208B) 1099 - 1204	NP
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ENGINE MOUNTING

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
- 91B	2651024-10	.	COWL HANGER ASSEMBLY - FORWARD LOWER SPARES REPLACEMENT FOR: 2651024-5 2651024-4 2651024-8 ATTACHING PARTS							(208) 0404 & ON (208B) 1205 & ON	02
92	AN315C4R	.	NUT							(208) 0001 & ON (208B) 0001 - 4999	02
93	MS27975-2	.	CLEVIS - ROD END							(208) 0001 & ON (208B) 0001 - 4999	02
94	MS20392-3C13	.	PIN							(208) 0001 & ON (208B) 0001 - 4999	02
95	NAS1149F0463P	.	WASHER							99321 (208) 0001 & ON (208B) 0001 - 4999	02
96	AN415-5	.	PIN - LOCK							(208) 0001 & ON (208B) 0001 - 4999	02
		.	--*--								
- ITEM NOT ILLUSTRATED											



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

71-20-00

ENGINE MOUNTING
AIRPLANES (208B) 5000 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A90541

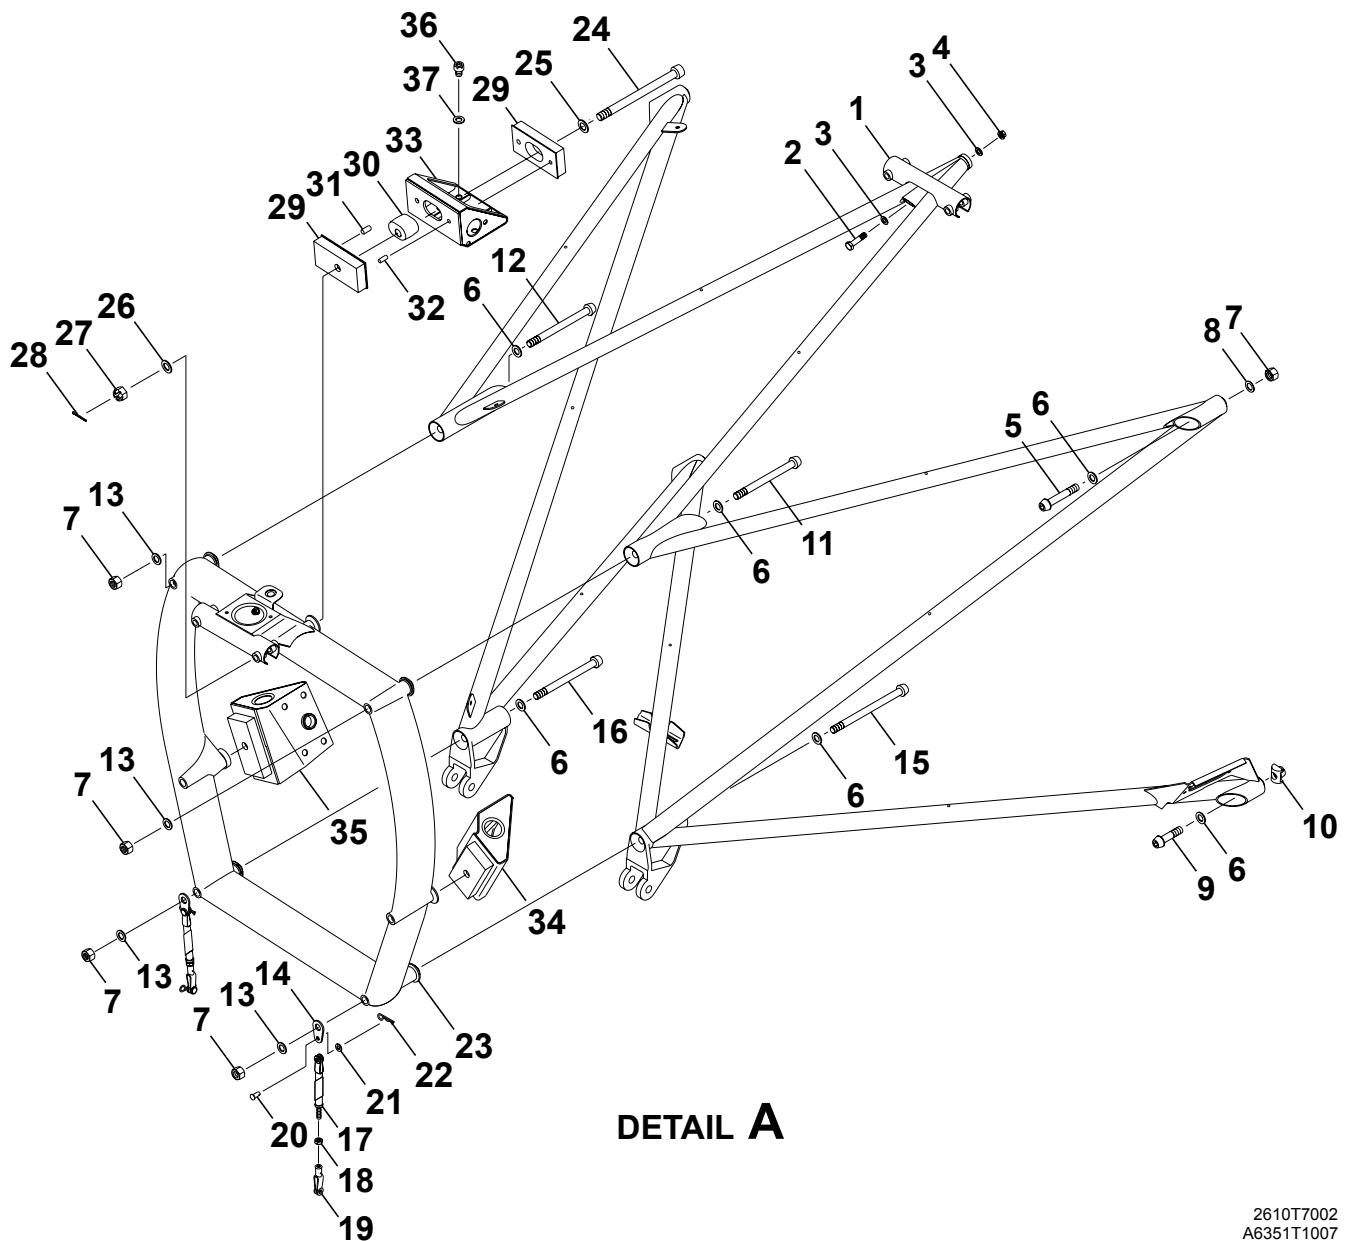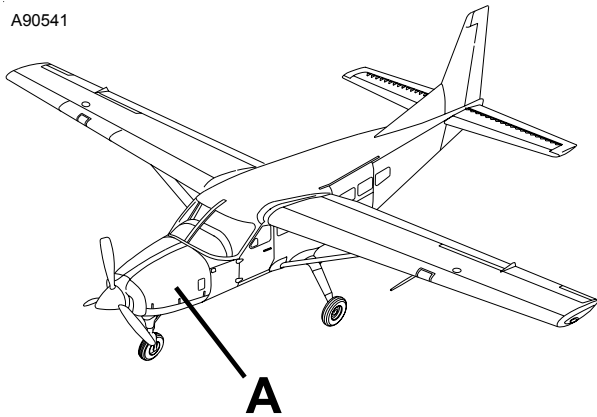

DETAIL A

ENGINE MOUNTING
Figure 02. (Sheet 1)

2610T7002
 A6351T1007

Figure 02
 Page 2
71-20-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ENGINE MOUNTING
AIRPLANES (208B) 5000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	2651040-2	.	ENGINE MOUNT WELD ASSEMBLY						(208B) 5000 & ON	01
2	AN5C12A	.	BOLT						(208B) 5000 & ON	01
3	NAS1149C0563R	.	WASHER						(208B) 5000 & ON	02
4	MS21042L5	.	NUT						(208B) 5000 & ON	01
5	MS20007-30	.	BOLT						(208B) 5000 & ON	02
6	MS20002C7	.	WASHER						(208B) 5000 & ON	02
7	MS21044N7	.	NUT						(208B) 5000 & ON	06
8	NAS1149F0732P	.	WASHER						(208B) 5000 & ON	02
9	MS20007-16	.	BOLT						(208B) 5000 & ON	02
10	2552-070	.	NUT					72962	(208B) 5000 & ON	02
11	NAS147-82	.	BOLT						(208B) 5000 & ON	01
12	NAS147-84	.	BOLT						(208B) 5000 & ON	01
13	NAS1149C0763R	.	WASHER						(208B) 5000 & ON	04
14	2651030-1	.	BRACKET						(208B) 5000 & ON	01
15	NAS147-97	.	BOLT						(208B) 5000 & ON	01
16	NAS147-84	.	BOLT						(208B) 5000 & ON	01
17	2651024-10	.	HANGER ASSEMBLY - FORWARD LOWER COWL						(208B) 5000 & ON	02
18	AN315C4R	.	NUT						(208B) 5000 & ON	02
19	MS27975-2	.	CLEVIS						(208B) 5000 & ON	02
20	MS20392-3C13	.	PIN						(208B) 5000 & ON	04
21	NAS1149F0463P	.	WASHER					99321	(208B) 5000 & ON	04
22	AA55487-5	.	PIN						(208B) 5000 & ON	04
23	2651022-20	.	RING ASSEMBLY - ENGINE MOUNT						(208B) 5000 & ON	01
24	S3461-64	.	BOLT MPI						(208B) 5000 & ON	03
25	MS20002C8	.	WASHER						(208B) 5000 & ON	03
26	NAS1149C0863R	.	WASHER						(208B) 5000 & ON	03
27	AN310C8	.	NUT						(208B) 5000 & ON	03
28	MS24665-302	.	COTTER PIN					28839	(208B) 5000 & ON	03
29	9910333-5	.	ENGINE MOUNT						(208B) 5000 - 5420	NP
			FOR SPARES ORDER (MUST REPLACE WITH):							
			9910333-7							
- 29A	9910333-7	.	ENGINE MOUNT						(208B) 5421 & ON	06
			SPARES REPLACEMENT FOR:							
			9910333-5							
30	9910333-6	.	SPACER						(208B) 5000 - 5420	NP
			FOR SPARES ORDER (MUST REPLACE WITH):							
			9910333-8							
- 30A	9910333-8	.	SPACER						(208B) 5421 & ON	03
			SPARES REPLACEMENT FOR:							
			9910333-6							
31	NAS607-5-5	.	PIN						(208B) 5000 & ON	03
32	NAS607-4-5	.	PIN						(208B) 5000 & ON	03
33	2651008-8	.	BRACKET ASSEMBLY - ENGINE MOUNT CENTER						(208B) 5000 & ON	01
34	2651012-7	.	BRACKET ASSEMBLY - ENGINE MOUNT LOWER LEFT						(208B) 5000 & ON	01
35	2651011-9	.	BRACKET ASSEMBLY - ENGINE MOUNT LOWER RIGHT						(208B) 5000 & ON	01
36	S3354-1	.	BOLT						(208B) 5000 & ON	NP
			FOR SPARES ORDER (MUST REPLACE WITH):							
			S3354-2							

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ENGINE MOUNTING
AIRPLANES (208B) 5000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 36A	S3354-2	.	BOLT						(208B) 5000 & ON	12
			SPARES REPLACEMENT FOR:							
			S3354-1							
37	MS20002C6	.	WASHER						(208B) 5000 & ON	12
- ITEM NOT ILLUSTRATED										


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

71-41-00

COMPRESSOR WASHRING INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24529

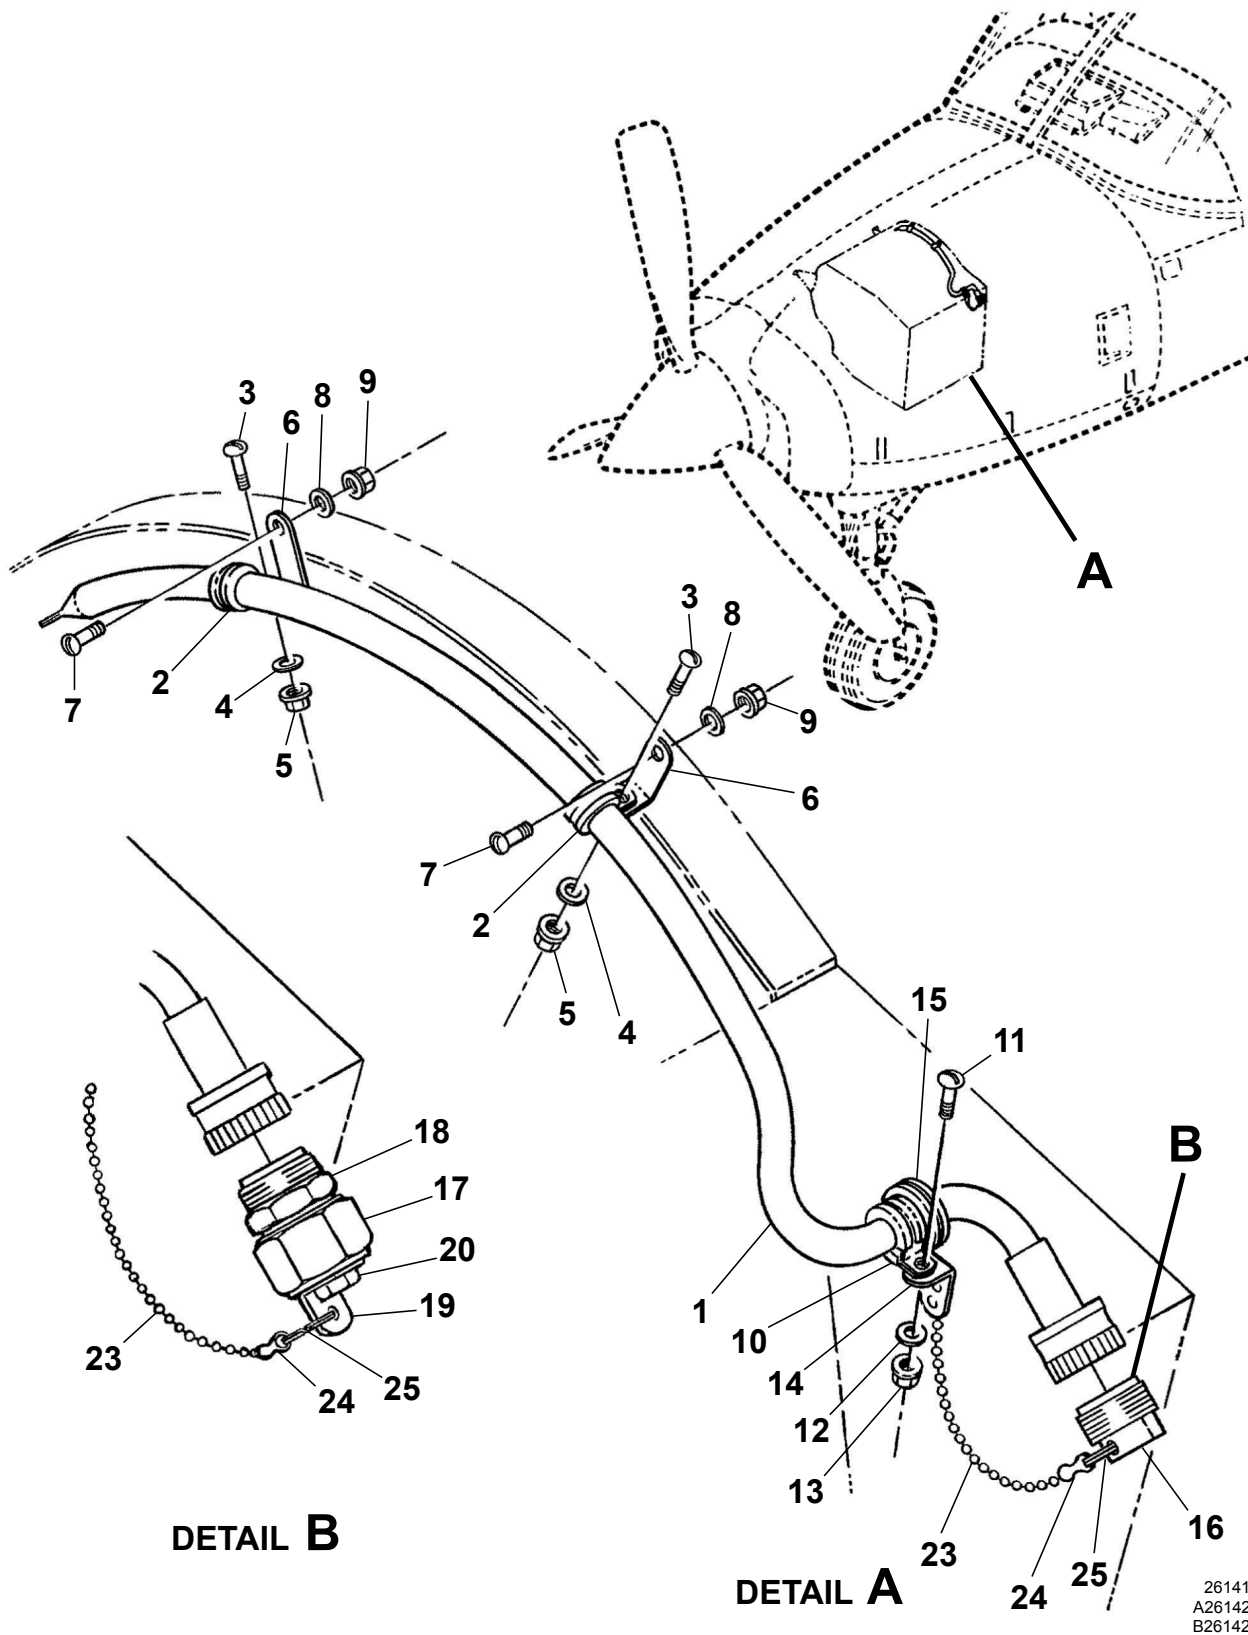

26141199
 A26142052
 B26142052

COMPRESSOR WASHING INSTALLATION
Figure 01. (Sheet 1)

Figure 01
 Page 2
71-41-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

COMPRESSOR WASHRING INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	2650044-3	.							(208) 0001 & ON (208B) 0001 & ON	01
2	MS21919DG8	.							(208) 0001 & ON (208B) 0001 & ON	02
									ATTACHING PARTS	
3	MS35207-261	.						07187	(208) 0001 & ON (208B) 0001 & ON	01
4	NAS1149F0332P	.							(208) 0001 & ON (208B) 0001 & ON	01
5	MS21042L3	.						00624	(208) 0001 & ON (208B) 0001 & ON	01
									--*--	
6	2650044-4	.							(208) 0001 & ON (208B) 0001 & ON	02
									ATTACHING PARTS	
7	MS35207-261	.						07187	(208) 0001 & ON (208B) 0001 & ON	01
8	NAS1149F0332P	.							(208) 0001 & ON (208B) 0001 & ON	01
9	MS21042L3	.						00624	(208) 0001 & ON (208B) 0001 & ON	01
									--*--	
10	MS21919DG8	.							(208) 0001 & ON (208B) 0001 & ON	01
									ATTACHING PARTS	
11	MS35207-263	.						80205	(208) 0001 & ON (208B) 0001 & ON	01
12	NAS1149F0332P	.							(208) 0001 & ON (208B) 0001 & ON	01
13	MS21042L3	.						00624	(208) 0001 & ON (208B) 0001 & ON	01
									--*--	
14	AN743P13	.							(208) 0001 & ON (208B) 0001 & ON	01
15	MS35489-14	.							(208) 0001 & ON (208B) 0001 & ON	01
16	2650044-5	.							(208) 0001 - 0012	01
17	2650044-7	.							(208) 0013 & ON (208B) 0001 & ON	01
18	2650044-8	.	.						(208) 0013 & ON (208B) 0001 & ON	01
19	AN743-12	.	.						(208) 0013 & ON (208B) 0001 & ON	01
20	AN3-4A	.	.					80205	(208) 0013 & ON (208B) 0001 & ON	01
- 21	NAS1149D0332J	.	.					80205	(208) 0013 & ON (208B) 0001 & ON	01
- 22	MS21043-3	.	.						(208) 0013 & ON (208B) 0001 & ON	01
23	S2420-1	.							(208) 0001 & ON (208B) 0001 & ON	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

COMPRESSOR WASHRING INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
24	S2420-2	.							(208) 0001 & ON (208B) 0001 & ON	02
25	CM3220-1	.							(208) 0001 - 0413 (208B) 0001 - 1254	01
- 25A	KR7	.							(208) 0414 & ON (208B) 1255 & ON	01
- ITEM NOT ILLUSTRATED										


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

71-60-00

INERTIAL SEPARATOR INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24531

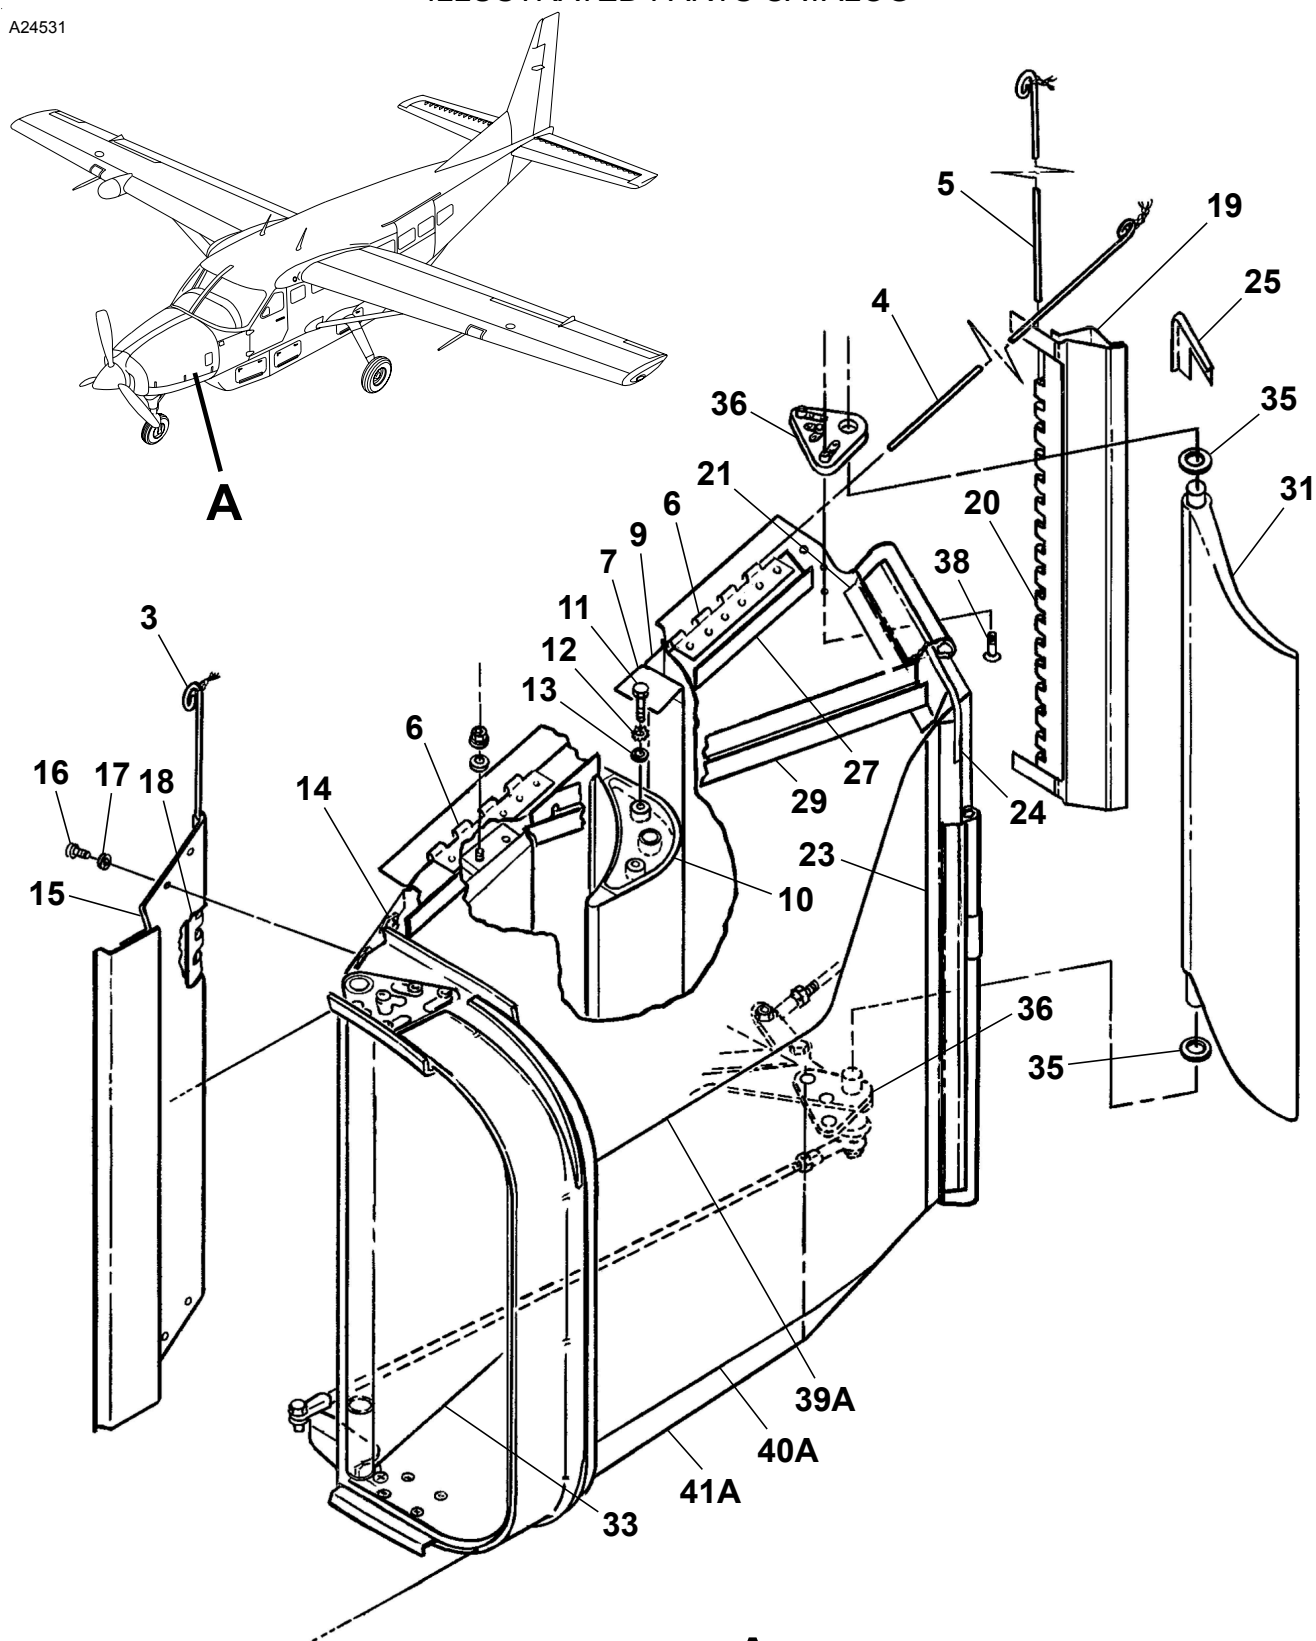

DETAIL A

INERTIAL SEPARATOR INSTALLATION
Figure 01. (Sheet 1)

2610T7004
 A2615R2002

Figure 01
 Page 2
71-60-00 Nov 29, 2022

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

- ITEM NOT ILLUSTRATED

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOTE: IT IS PERMISSIBLE TO USE WASHER P/N NAS1149F0863P ON TOP SIDE AND POSSIBLY ANOTHER WASHER P/N NAS1149C0832R OR P/N NAS1149F0832P TO ENSURE CLEARANCE ON AIRPLANES -B5086 AND ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


INERTIAL SEPARATOR INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
35	NAS1149C0832R	.							(208) 0001 & ON (208B) 0001 & ON	02
36	5955009-35	.							(208) 0001 - 0127 (208B) 0001 - 0069	02
- 37	5955009-43	.							(208) 0128 & ON (208) *0001 - 0127 (208B) 0070 & ON (208B) *0001 - 0069	02
									ATTACHING PARTS	
38	MS24694-S51	.							(208) 0001 & ON (208B) 0001 & ON	03
									--*--	
- 39	2658008-7	.							(208) 0001 & ON (208B) 0001 & ON	01
39A	5955153-9	.	.						(208) 0001 & ON (208B) 0001 & ON	01
- 40	2658008-3	.							(208) 0001 & ON (208B) 0001 & ON	01
40A	5955153-8	.	.						(208) 0001 & ON (208B) 0001 & ON	01
- 41	2658008-8	.							(208) 0001 & ON (208B) 0001 & ON	01
41A	5955153-10	.	.						(208) 0001 & ON (208B) 0001 & ON	01
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24534

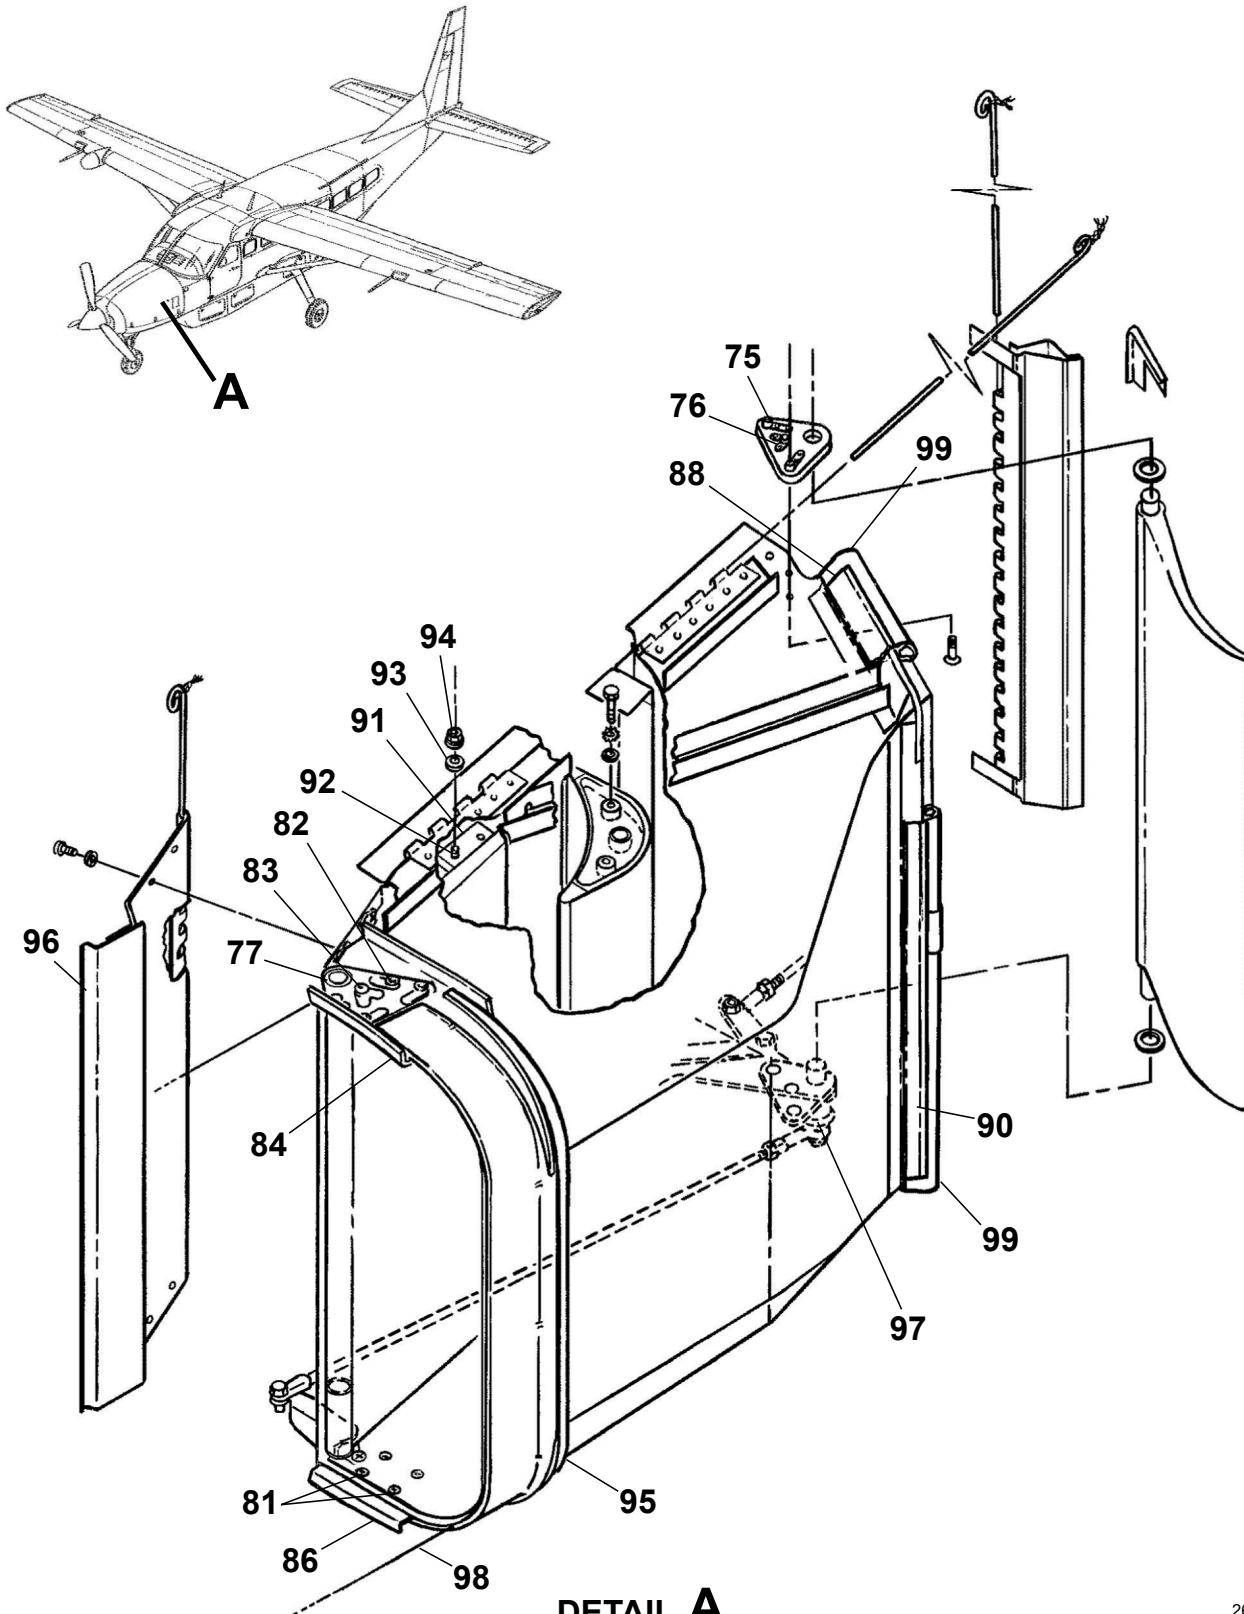

DETAIL A
INERTIAL SEPARATOR INSTALLATION
Figure 01. (Sheet 2)

26151002
 A2615M2002

Figure 01
 Page 6
71-60-00 Nov 29, 2022

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

INERTIAL SEPARATOR INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
75	MS21052L3	.	.					NUTPLATE	(208) 0001 & ON (208B) 0001 & ON	02
76	MS21056L3	.	.					NUTPLATE	(208) 0001 & ON (208B) 0001 & ON	01
77	2658059-1	.						BLOCK ASSEMBLY - INERTIAL SEPARATOR UPPER FORWARD	(208) 0001 - 0127 (208B) 0001 - 0069	01
- 78	2658059-9	.						BLOCK ASSEMBLY - INERTIAL SEPARATOR UPPER FORWARD * AIRPLANES (208) 0001 THRU 0127 INCORPORATING SK208-45 * AIRPLANES (208B) 0001 THRU 0069 INCORPORATING SK208-45	(208) 0128 & ON (208) *0001 - 0127 (208B) 0070 & ON (208B) *0001 - 0069	01
- 79	2658059-2	.						BLOCK ASSEMBLY - INERTIAL SEPARATOR LOWER FORWARD	(208) 0001 - 0127 (208B) 0001 - 0069	01
- 80	2658059-10	.						BLOCK ASSEMBLY - INERTIAL SEPARATOR LOWER FORWARD * AIRPLANES (208) 0001 THRU 0127 INCORPORATING SK208-45 * AIRPLANES (208B) 0001 THRU 0069 INCORPORATING SK208-45	(208) 0128 & ON (208) *0001 - 0127 (208B) 0070 & ON (208B) *0001 - 0069	01
ATTACHING PARTS										
81	MS24694-S51	.						SCREW	(208) 0001 & ON (208B) 0001 & ON	05
--*--										
- 81A	NAS76A8-008	.	.					BUSHING	(208) 0001 - 0127 (208B) 0001 - 0069	01
- 81B	NAS77A8-044	.	.					BUSHING	(208) 0128 & ON (208B) 0070 & ON	01
82	NAS682A3	.	.					NUTPLATE	(208) 0001 & ON (208B) 0001 & ON	04
83	NAS684A3	.	.					NUTPLATE	(208) 0001 & ON (208B) 0001 & ON	01
84	2658059-4	.						DOUBLER - UPPER FORWARD	(208) 0001 - 0127 (208B) 0001 - 0069	01
- 85	2658059-7	.						DOUBLER - UPPER FORWARD * AIRPLANES (208) 0001 THRU 0127 INCORPORATING SK208-45 * AIRPLANES (208B) 0001 THRU 0069 INCORPORATING SK208-45	(208) 0128 & ON (208) *0001 - 0127 (208B) 0070 & ON (208B) *0001 - 0069	01
86	2658059-5	.						DOUBLER LOWER FORWARD	(208) 0001 - 0127 (208B) 0001 - 0069	01
- 87	2658059-8	.						DOUBLER LOWER FORWARD * AIRPLANES (208) 0001 THRU 0127 INCORPORATING SK208-45 * AIRPLANES (208B) 0001 THRU 0069 INCORPORATING SK208-45	(208) 0128 & ON (208) *0001 - 0127 (208B) 0070 & ON (208B) *0001 - 0069	01
88	2658058-6	.						RETAINER - UPPER	(208) 0001 & ON (208B) 0001 & ON	02
- 89		.						DELETED - NOT USED		
90	2658058-4	.						RETAINER - SIDE	(208) 0001 & ON (208B) 0001 & ON	01
91	5955009-24	.						BLOCK - STOP	(208) 0001 & ON (208B) 0001 & ON	02
92	AN3-6A	.						BOLT	(208) 0001 & ON (208B) 0001 & ON	04
93	NAS1149F0332P	.						WASHER	(208) 0001 & ON (208B) 0001 & ON	04
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

INERTIAL SEPARATOR INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
94	MS21043-3	.	NUT						(208) 0001 & ON (208B) 0001 & ON	04
95	2650087-2	.	STIFFENER						(208) 0001 & ON (208B) 0001 & ON	01
96	2652011-1	.	STIFFENER - LEFT NOSECAP						(208) 0001 & ON (208B) 0001 & ON	01
97		.	INERTIAL SEPARATOR ACTUATOR INSTALLATION REFER TO 71-60-00 FIGURE 02 .							RF
98		.	NOSECAP INSTALLATION REFER TO 71-10-01 FIGURE 01 .							RF
99	2658058-2	.	SEAL						(208) 0001 & ON (208B) 0001 & ON	02
- ITEM NOT ILLUSTRATED										


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

71-60-00

INERTIAL SEPARATOR ACTUATOR INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24537

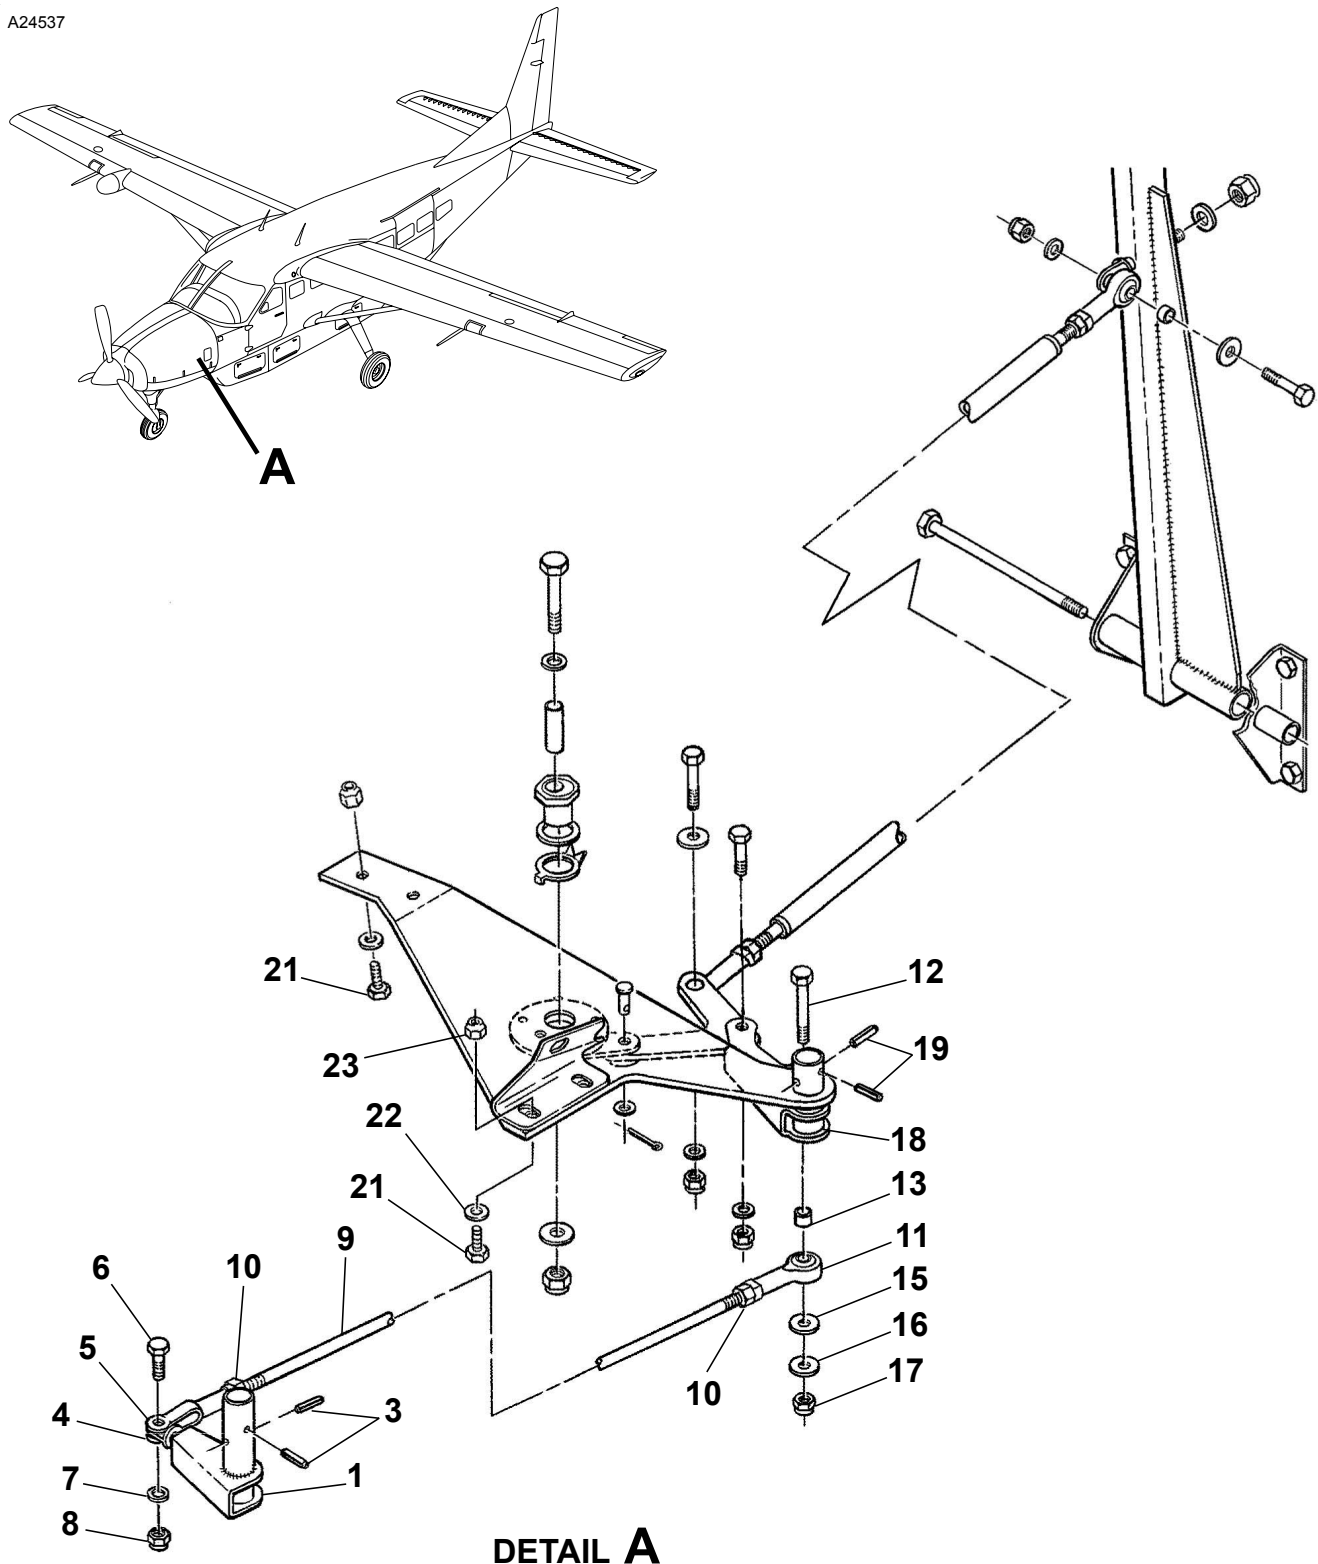

DETAIL A

INERTIAL SEPARATOR ACTUATOR INSTALLATION
Figure 02. (Sheet 1)

2610T7004
 A2615M3001
 A2615M2001

Figure 02
 Page 2
71-60-00 Nov 29, 2022

INERTIAL SEPARATOR ACTUATOR INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


INERTIAL SEPARATOR ACTUATOR INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
8	MS21044N3	.	NUT						4W953 (208) 0001 & ON (208B) 0001 & ON	01
			--*--							
9	NAS354-4-17.25	.	ROD						(208) 0001 & ON (208B) 0001 & ON	01
10	AN316-4R	.	NUT - CHECK						(208) 0001 & ON (208B) 0001 & ON	02
11	S1819-3	.	ROD END						(208) 0001 & ON (208B) 0001 & ON	01
			ATTACHING PARTS							
12	AN3-14A	.	BOLT						(208) 0001 & ON (208B) 0001 & ON	01
13	NAS43HT3-16	.	SPACER						(208) 0001 - 0663 (208B) 0001 - 5585	01
- 13A	NAS43HT3-10	.	SPACER						(208) 0664 & ON (208B) 5586 & ON	01
- 14	NAS43HT3-26A	.	SPACER						(208) 0001 & ON (208B) 0001 & ON	01
15	S1450-3-10-032	.	WASHER						(208) 0001 & ON (208B) 0001 & ON	01
16	NAS1149F0363P	.	WASHER					73197	(208) 0664 & ON (208B) 5586 & ON	01
17	MS21044N3	.	NUT					4W953	(208) 0001 & ON (208B) 0001 & ON	01
			--*--							
18	2652025-1	.	BELLCRANK ASSEMBLY - AFT						(208) 0001 - 0127 (208B) 0001 - 0069	01
- 18A	2652025-36	.	BELLCRANK ASSEMBLY - AFT						(208) 0128 & ON (208B) 0070 & ON	01
			ATTACHING PARTS							
19	NAS561C4-10	.	PIN						(208) 0001 & ON (208B) 0001 & ON	02
			ALTERNATE SPARE (INTERCHANGEABLE WITH): MS16562-223							
- 19A	MS16562-223	.	PIN						(208) 0001 & ON (208B) 0001 & ON	02
			ALTERNATE SPARE (INTERCHANGEABLE WITH): NAS561C4-10							
			--*--							
- 20	2652025-33	.	LINKAGE SUPPORT ASSEMBLY - ACTUATOR FOR SPARES ORDER (MUST REPLACE WITH): 2652025-41						(208) 0001 - 0127 (208B) 0001 - 0069	NP
- 20A	2652025-41	.	LINKAGE SUPPORT ASSEMBLY - ACTUATOR SPARES REPLACEMENT FOR: 2652025-33						(208) 0128 & ON (208B) 0070 & ON	01
			ATTACHING PARTS							
21	AN3-4A	.	BOLT					80205	(208) 0001 & ON (208B) 0001 & ON	02
22	NAS1149F0332P	.	WASHER						(208) 0001 & ON (208B) 0001 & ON	AR
23	MS21043-3	.	NUT						(208) 0001 & ON (208B) 0001 & ON	02
			--*--							

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24539

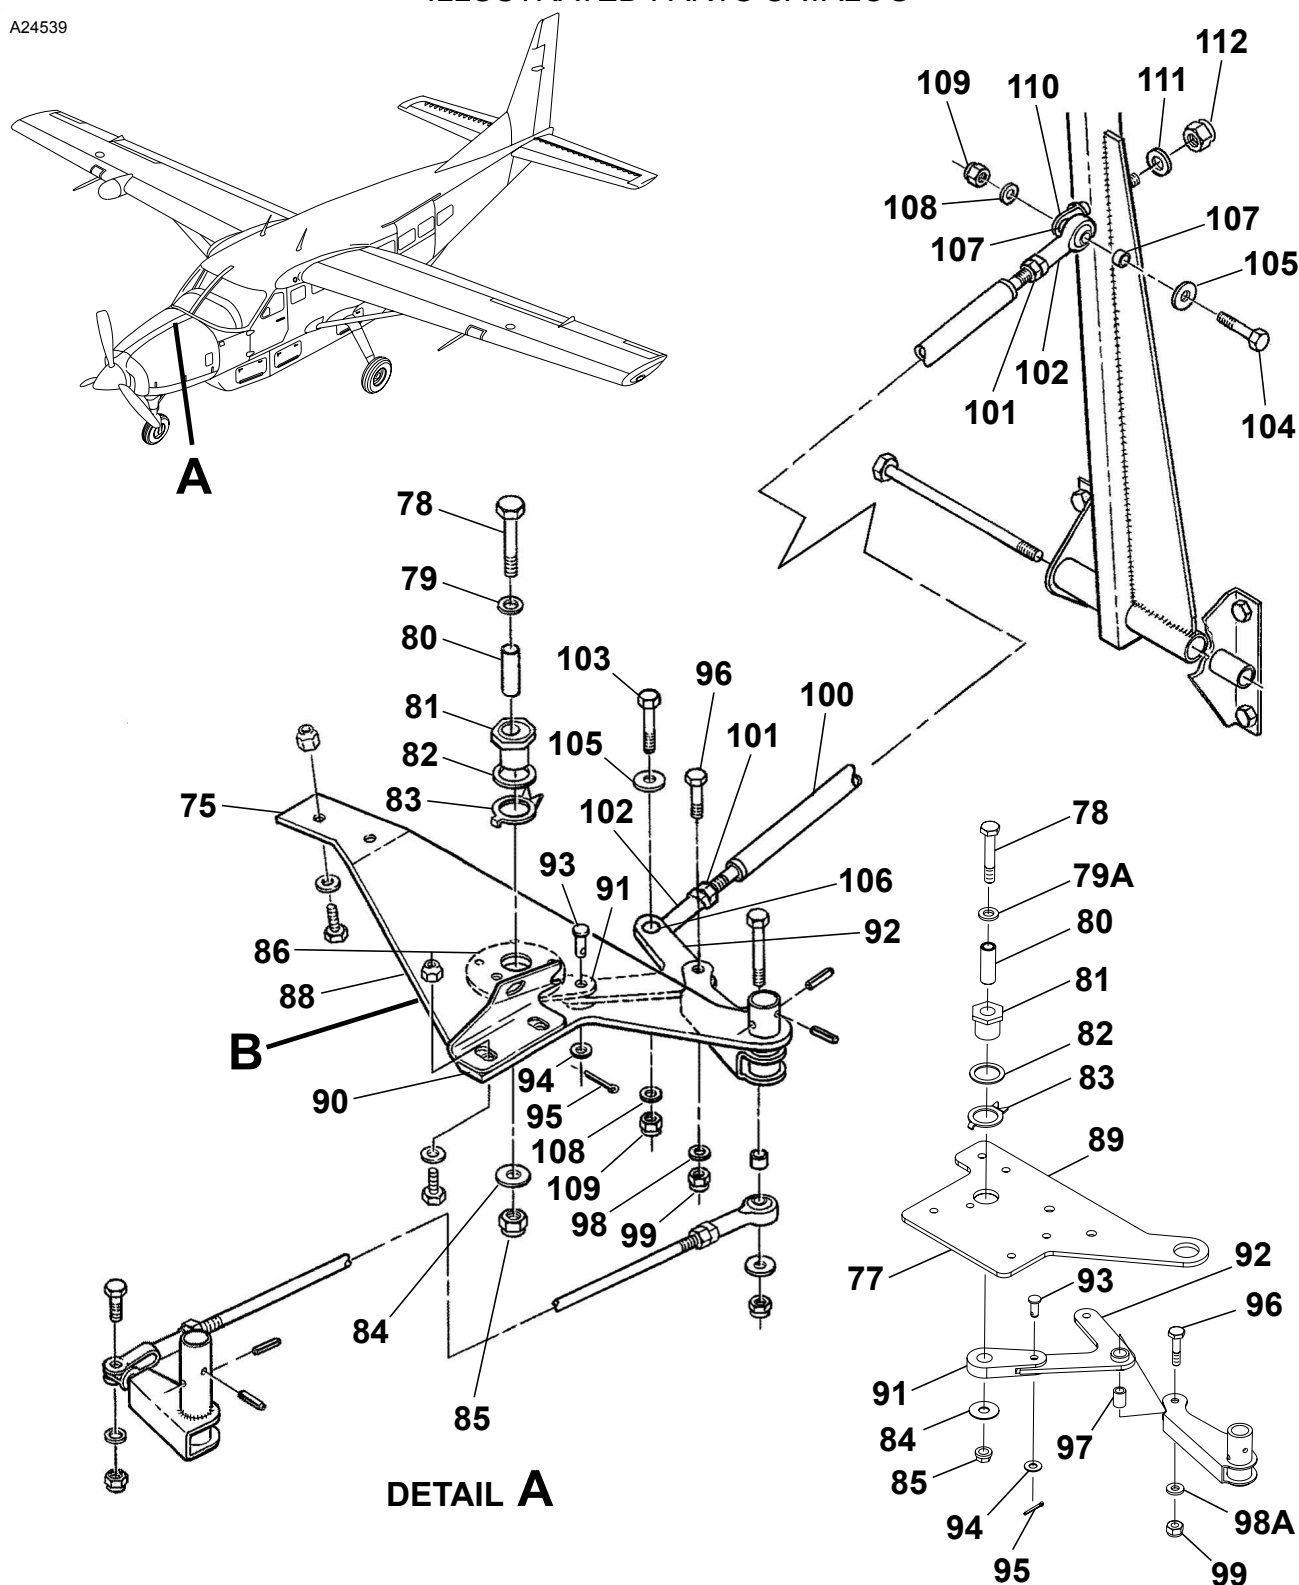

INERTIAL SEPARATOR ACTUATOR INSTALLATION
Figure 02. (Sheet 2)

AIRPLANES 208B5000 AND ON

2610T7004
 A2615R3001
 A2615R2001
 B2615T1047

Figure 02
 Page 6
71-60-00 Nov 29, 2022

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

INERTIAL SEPARATOR ACTUATOR INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
75	2652025-33	.							(208) 0128 - 0403 (208B) 0929 - 1197	01
- 76	2652025-41	.							(208) 0404 & ON (208B) 1198 - 4999	01
77	2652036-2	.							(208B) 5000 & ON	01
78	AN4-14A	.							(208) 0001 & ON (208B) 0001 & ON	01
79	NAS1149F0463P	.						99321	(208) 0001 & ON (208B) 0001 - 4999	01
79A	NAS1149C0463R	.							(208B) 5000 & ON	01
80	S133-4P1.062	.							(208) 0001 & ON (208B) 0001 & ON	01
81	2652025-26	.							(208) 0001 & ON (208B) 0001 & ON	01
82	S1450-10-14-040	.							(208) 0001 & ON (208B) 0001 & ON	01
83	2652025-32	.							(208) 0001 & ON (208B) 0001 & ON	01
84	S1450-4-12-032	.							(208) 0001 & ON (208B) 0001 & ON	01
85	MS21042L4	.							(208) 0001 & ON (208B) 0001 & ON	01
- 85A	NAS1291-4	.							(208) 0001 & ON (208B) 0001 & ON	01
86	2652025-31	.	.						(208) 0001 & ON (208B) 0001 & ON	01
- 87	2652025-24	.	.						(208) 0128 - 0403 (208B) 0929 - 1197	NP
88	2652025-42	.	.						(208) 0404 & ON (208B) 1198 - 4999	01
89	2652036-3	.	.						(208B) 5000 & ON	01
90		.								RF
91	2652025-27	.							(208) 0001 & ON (208B) 0001 & ON	01
92	2652025-28	.							(208) 0001 & ON (208B) 0001 & ON	01
93	MS20392-2C11	.							(208) 0001 & ON (208B) 0001 & ON	01
94	NAS1149C0332R	.							(208) 0001 & ON (208B) 0001 & ON	01
95	MS24665-132	.							(208) 0001 & ON (208B) 0001 & ON	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


INERTIAL SEPARATOR ACTUATOR INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
96	AN3-7A	.	BOLT						(208) 0001 & ON (208B) 0001 & ON	01
97	NAS43HT3-27	.	SPACER					76275	(208) 0001 & ON (208B) 0001 & ON	01
98	NAS1149F0363P	.	WASHER					73197	(208) 0001 & ON (208B) 0001 - 4999	01
98A	NAS1149C0363R	.	WASHER						(208B) 5000 & ON	01
99	MS21045L3	.	NUT						(208) 0001 & ON (208B) 0001 & ON	01
			--*--							
100	2658057-11	.	TUBE ASSEMBLY - ACTUATOR						(208) 0001 & ON (208B) 0001 & ON	01
101	AN316-4R	.	NUT - CHECK						(208) 0001 & ON (208B) 0001 & ON	02
102	S1819-3	.	ROD END						(208) 0001 & ON (208B) 0001 & ON	02
			ATTACHING PARTS							
103	AN3-10A	.	BOLT - FORWARD						(208) 0001 & ON (208B) 0001 & ON	01
104	AN3-11A	.	BOLT - AFT						(208) 0001 & ON (208B) 0001 & ON	01
105	S1450-3-10-032	.	WASHER						(208) 0001 & ON (208B) 0001 & ON	01
106	NAS43HT3-4	.	SPACER - FORWARD						(208) 0001 & ON (208B) 0001 & ON	01
107	NAS43HT3-6	.	SPACER - AFT						(208) 0001 & ON (208B) 0001 & ON	02
108	NAS1149F0363P	.	WASHER					73197	(208) 0001 & ON (208B) 0001 & ON	01
109	MS21044N3	.	NUT					4W953	(208) 0001 & ON (208B) 0001 & ON	01
			--*--							
110	2658057-12	.	EYEBOLT						(208) 0001 & ON (208B) 0001 & ON	01
111	NAS1149F0463P	.	WASHER					99321	(208) 0001 & ON (208B) 0001 & ON	01
112	MS20365-428C	.	NUT						(208) 0001 & ON (208B) 0001 & ON	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24543

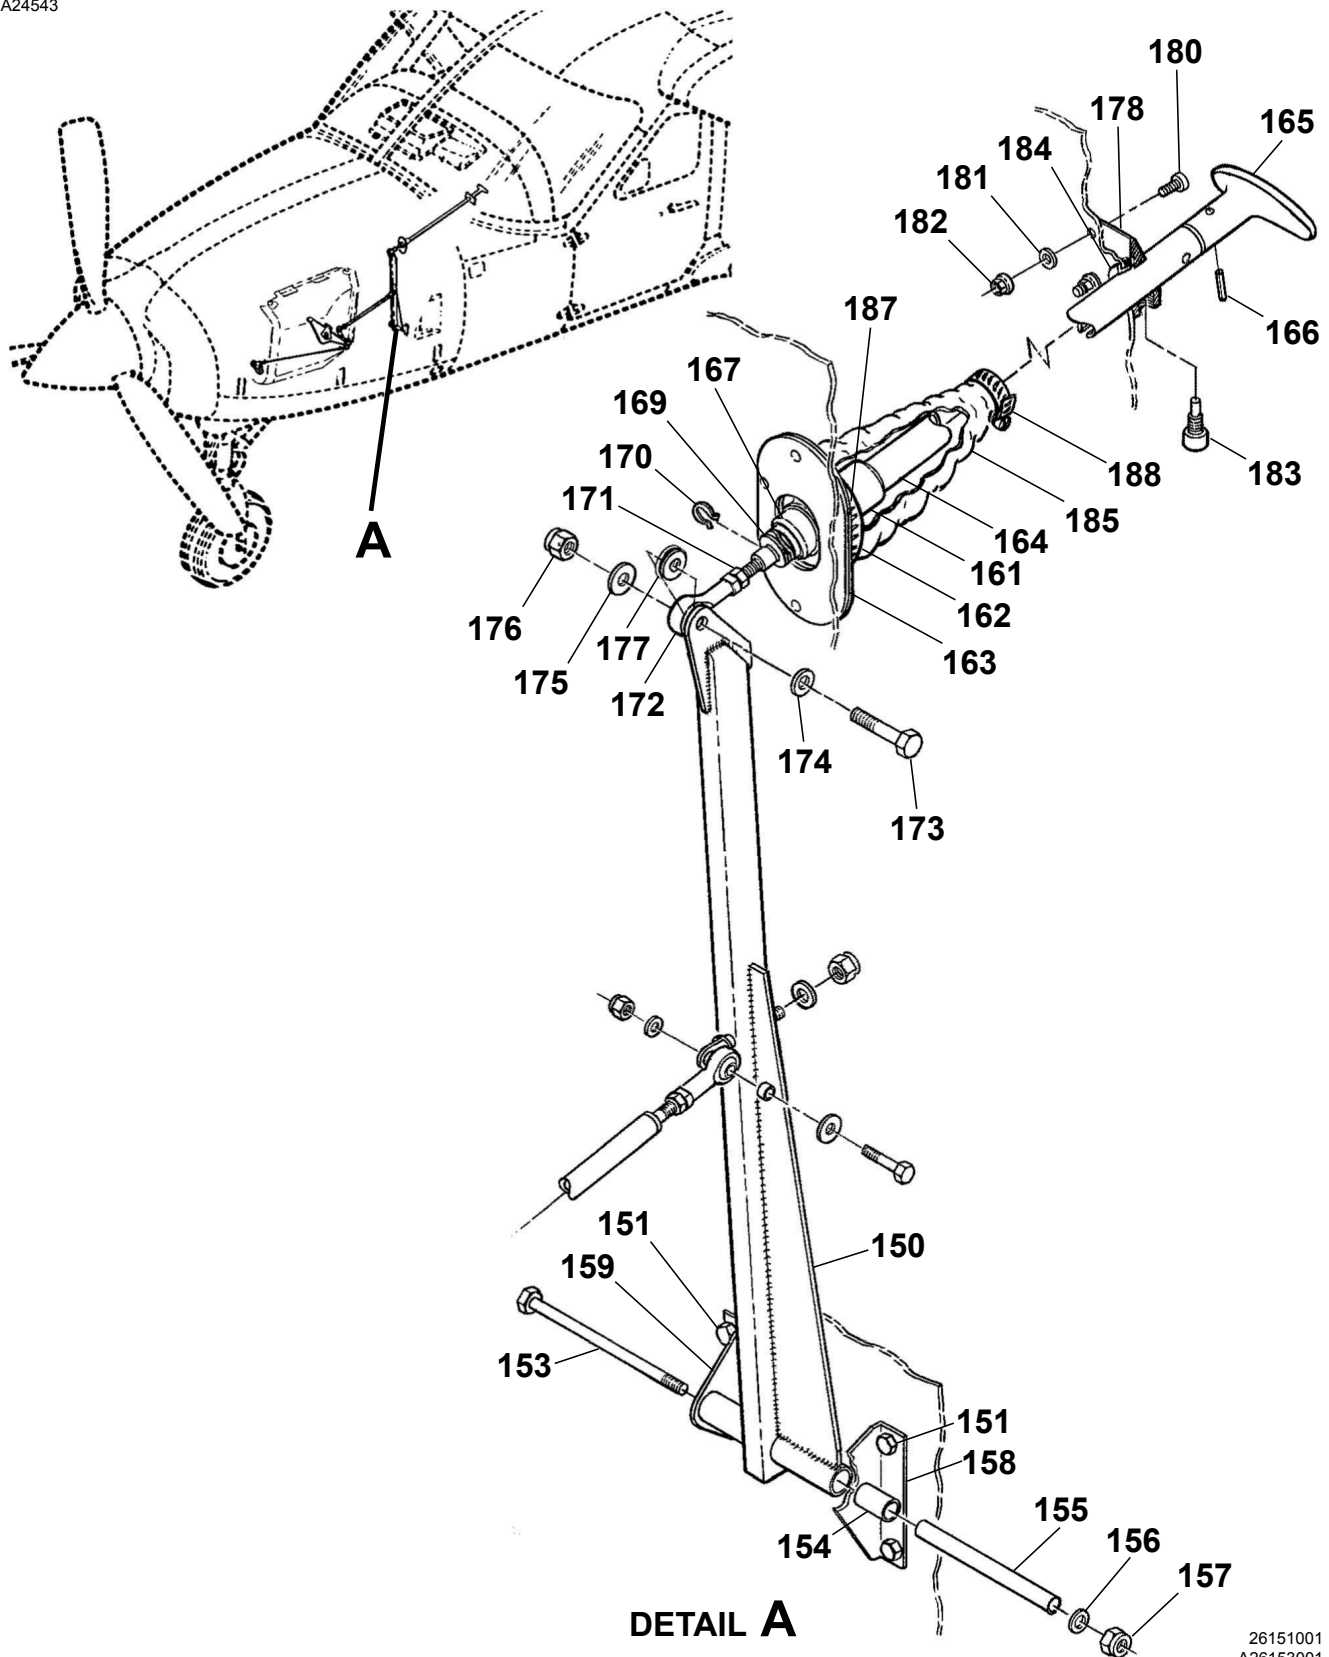

INERTIAL SEPARATOR ACTUATOR INSTALLATION
Figure 02. (Sheet 3)

26151001
 A26153001

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

INERTIAL SEPARATOR ACTUATOR INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
150	2658057-1	.							(208) 0001 - 0219 (208B) 0001 - 0311	NP
- 150A	2658057-13	.							(208) 0220 - 0327 (208B) 0312 - 0836	NP
- 150B	2658057-16	.							(208) 0328 & ON (208B) 0837 & ON	01
151	AN3-4A	.						80205	(208) 0001 & ON (208B) 0001 & ON	04
- 152	MS21042-3	.							(208) 0001 & ON (208B) 0001 & ON	04
153	AN4-37A	.	.						(208) 0001 & ON (208B) 0001 & ON	01
154	NAS75-6-024	.	.						(208) 0001 & ON (208B) 0001 & ON	02
155	S133-4P58	.	.						(208) 0001 & ON (208B) 0001 - 0928	NP
- 155A	S133-4P3.38	.	.						(208B) 0929 & ON	01
156	NAS1149F0463P	.	.					99321	(208) 0001 & ON (208B) 0001 & ON	01
157	MS21044N4	.	.					33269	(208) 0001 & ON (208B) 0001 & ON	01
158	2658057-8	.	.						(208) 0001 - 0329 (208B) 0001 - 0928	01
- 158A	2658057-19	.	.						(208B) 0929 - 4999	01
- 158B	2658057-17	.	.						(208) 0330 & ON (208B) 5000 & ON	01
159	2658057-14	.	.						(208) 0001 - 0329 (208B) 0001 - 4999	01
- 159A	2658057-18	.	.						(208) 0330 & ON (208B) 5000 & ON	01
- 160		.								
161	2613374-3	.							(208) 0001 & ON (208B) 0001 & ON	01
162	2613374-2	.							(208) 0001 & ON (208B) 0001 & ON	01
163	2613374-7	.							(208) 0001 & ON (208B) 0001 & ON	01
164	2613375-1	.							(208) 0001 & ON (208B) 0001 & ON	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

INERTIAL SEPARATOR ACTUATOR INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
165	S2663-2	.	.	HANDLE					(208) 0001 & ON (208B) 0001 & ON	01
				ATTACHING PARTS						
166	NAS561P4-11	.	.	PIN					(208) 0001 & ON (208B) 0001 & ON	01
				--*--						
167	U437-0100	.	.	WASHER - SPRING					(208) 0001 & ON (208B) 0001 & ON	01
				ALTERNATE SPARE (INTERCHANGEABLE WITH): U437-0100S						
- 168	U437-0100S	.	.	WASHER - SPRING					(208) 0001 & ON (208B) 0001 & ON	01
				ALTERNATE SPARE (INTERCHANGEABLE WITH): U437-0100						
169	NAS1149F0763P	.	.	WASHER					(208) 0001 & ON (208B) 0001 & ON	01
170	MS16624-1043	.	.	RING - RETAINING					(208) 0001 & ON (208B) 0001 & ON	01
171	AN316-4R	.		NUT - CHECK					(208) 0001 & ON (208B) 0001 & ON	01
172	S1106-4	.		ROD END					(208) 0001 & ON (208B) 0001 & ON	01
				ATTACHING PARTS						
173	AN4-11A	.		BOLT					(208) 0001 & ON (208B) 0001 & ON	01
174	NAS1149F0463P	.		WASHER				99321	(208) 0001 & ON (208B) 0001 & ON	01
175	S1450-4-12-032	.		WASHER					(208) 0001 & ON (208B) 0001 & ON	01
176	MS21044N4	.		NUT				33269	(208) 0001 & ON (208B) 0001 & ON	01
				ALTERNATE SPARE (INTERCHANGEABLE WITH): MS20365-428C						
- 176A	MS21045-4	.		NUT					(208) 0128 & ON (208B) 0070 & ON	01
				ALTERNATE SPARE (INTERCHANGEABLE WITH): MS20365-428C						
- 176B	MS20365-428C	.		NUT					(208) 0001 & ON (208B) 0001 & ON	01
				ALTERNATE SPARE (INTERCHANGEABLE WITH): MS21045-4 MS21044N4						
177	NAS43HT4-5	.		SPACER					(208) 0001 & ON (208B) 0001 & ON	01
				--*--						
178	2613373-5	.		BEZEL ASSEMBLY					(208) 0001 - 0188 (208B) 0001 - 0217	NP
				FOR SPARES ORDER (MUST REPLACE WITH): 2613373-8						
- 179	2613373-8	.		BEZEL ASSEMBLY					(208) 0189 & ON (208B) 0218 & ON	01
				SPARES REPLACEMENT FOR: 2613373-5						
				ATTACHING PARTS						
180	MS27039-1-07	.		SCREW					(208) 0001 & ON (208B) 0001 & ON	04
181	NAS1149F0332P	.		WASHER					(208) 0001 & ON (208B) 0001 & ON	04

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

INERTIAL SEPARATOR ACTUATOR INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
182	MS21042-3	.	NUT						(208) 0001 & ON (208B) 0001 & ON	04
			--*--							
183	2613373-3	.	SCREW - GUIDE						(208) 0001 & ON (208B) 0001 & ON	01
184	NAS557-12B	.	GROMMET						(208) 0001 & ON (208B) 0001 & ON	01
185	2613377-1	.	VAPOR SHIELD FOR SPARES ORDER (MUST REPLACE WITH): 2613439-1						(208) 0001 - 0165 (208B) 0001 - 0194	NP
- 186	2613439-1	.	VAPOR SHIELD SPARES REPLACEMENT FOR: 2613377-1 ATTACHING PARTS						(208) 0166 & ON (208B) 0195 & ON	01
187	S1891-32S	.	CLAMP						(208) 0001 & ON (208B) 0001 & ON	01
188	S1891-8S	.	CLAMP						(208) 0001 & ON (208B) 0001 & ON	01
			--*--							
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG



71-60-00

ICE VANE SWITCH INSTALLATION


AIRPLANES (208) 0382 & ON AND AIRPLANES (208B) 1087 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


A43103

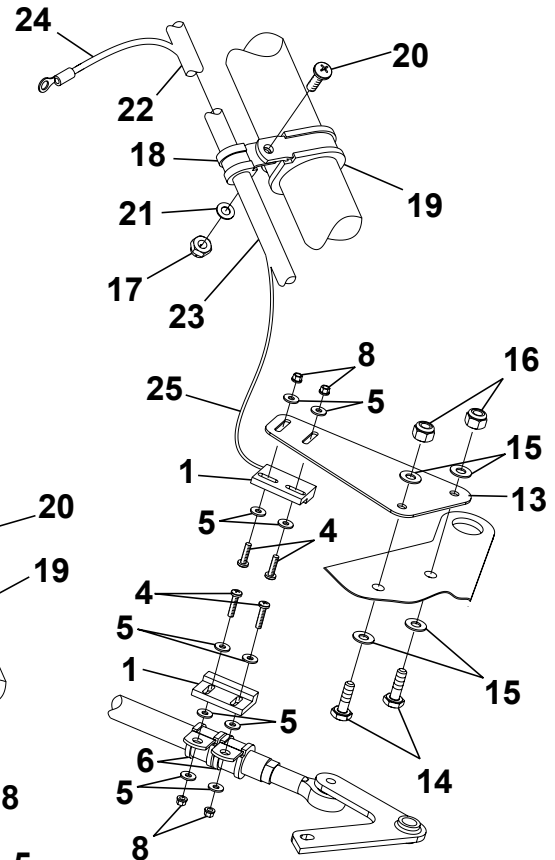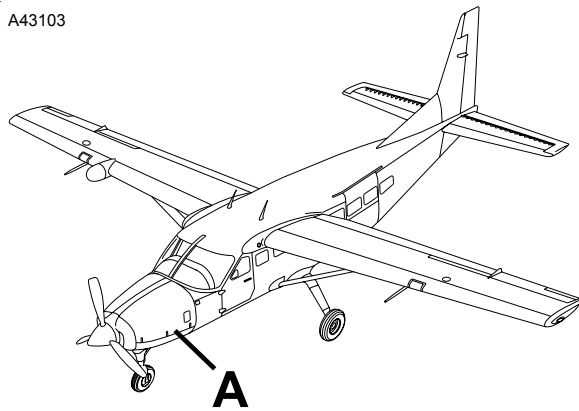

DETAIL A
 AIRPLANES 208B2500 AND ON

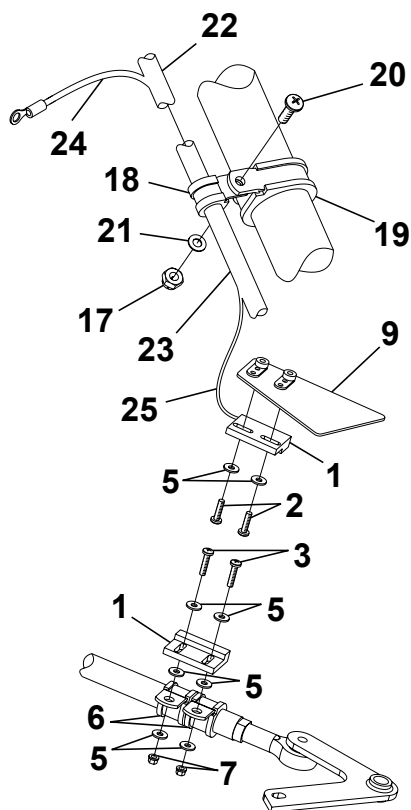

DETAIL A
 AIRPLANES 20800382, 20800385,
 208B01087 AND 208B01107

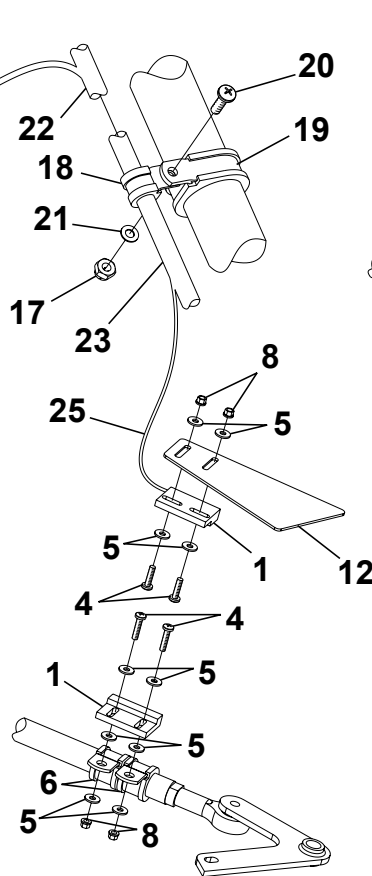

DETAIL A
 AIRPLANES 20800386 AND ON
 AIRPLANES 208B01108 THRU 208B2499

ICE VANE SWITCH INSTALLATION
Figure 03. (Sheet 1)

2610T7005
 A2614T1472
 A2314T1363
 A2314T1364

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ICE VANE SWITCH INSTALLATION

AIRPLANES (208) 0382 & ON AND AIRPLANES (208B) 1087 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	431-0101-01	.						MAGNETIC REED SWITCH	0TMJ9	(208) 0382 & ON (208B) 1087 & ON	11
2	MS35206-216	.						SCREW	04713	(208) 0382 - 0385 (208B) 1087 - 1107	02
3	MS35206-217	.						SCREW		(208) 0382 - 0385 (208B) 1087 - 1107	02
4	MS35206-217	.						SCREW		(208) 0386 & ON (208B) 1108 & ON	04
5	NAS1149FN432P	.						WASHER	80205	(208) 0382 & ON (208B) 1087 & ON	AR
6	MS21919WDG8	.						CLAMP		(208) 0382 & ON (208B) 1087 & ON	03
7	MS21042-04	.						NUT	80205	(208) 0382 - 0385 (208B) 1087 - 1107	02
8	MS21042-04	.						NUT	80205	(208) 0386 & ON (208B) 1108 & ON	04
9	2654032-6	.						SWITCH PLATE ASSEMBLY - ICE VANE		(208) 0382 - 0385 (208B) 1087 - 1107	01
- 10	2654032-7	.	.					SWITCH PLATE - ICE VANE FOR SPARES ORDER (MUST REPLACE WITH): 2654032-18		(208) 0382 - 0385 (208B) 1087 - 1107	NP
- 11	MS21071L04	.	.					NUTPLATE		(208) 0382 - 0385 (208B) 1087 - 1107	02
12	2654032-18	.						SWITCH PLATE - ICE VANE SPARES REPLACEMENT FOR: 2654032-7		(208) 0386 & ON (208B) 1108 - 4999	01
13	2654035-1	.						SWITCH PLATE - ICE VANE ATTACHING PARTS		(208B) 5000 & ON	01
14	AN3-5A	.						BOLT		(208B) 5000 & ON	02
15	NAS1149C0332R	.						WASHER		(208B) 5000 & ON	04
16	MS21044N3	.						NUT	4W953	(208B) 5000 & ON	02
		.						--*--			
17	MS21045L3	.						NUT		(208) 0382 & ON (208B) 1087 & ON	03
18	MS21919WDG20	.						CLAMP		(208) 0382 & ON (208B) 1087 & ON	03
19	MS21919WDG6	.						CLAMP	84971	(208) 0382 & ON (208B) 1087 & ON	03
20	MS35207-264	.						SCREW	80205	(208) 0382 & ON (208B) 1087 & ON	03
21	NAS1149F0332P	.						WASHER		(208) 0382 & ON (208B) 1087 & ON	03
22	S2562-1-10.00	.						TUBING		(208) 0382 & ON (208B) 1087 & ON	01
23	S2562-1-25.00	.						TUBING		(208) 0382 & ON (208B) 1087 & ON	01
24	2671000EL22	.						WIRE		(208) 0382 & ON (208B) 1087 & ON	01
25	2671000LH9	.						WIRE		(208) 0382 & ON (208B) 1087 & ON	01

- ITEM NOT ILLUSTRATED


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

71-60-01

INDUCTION AIR PLENUM INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24548

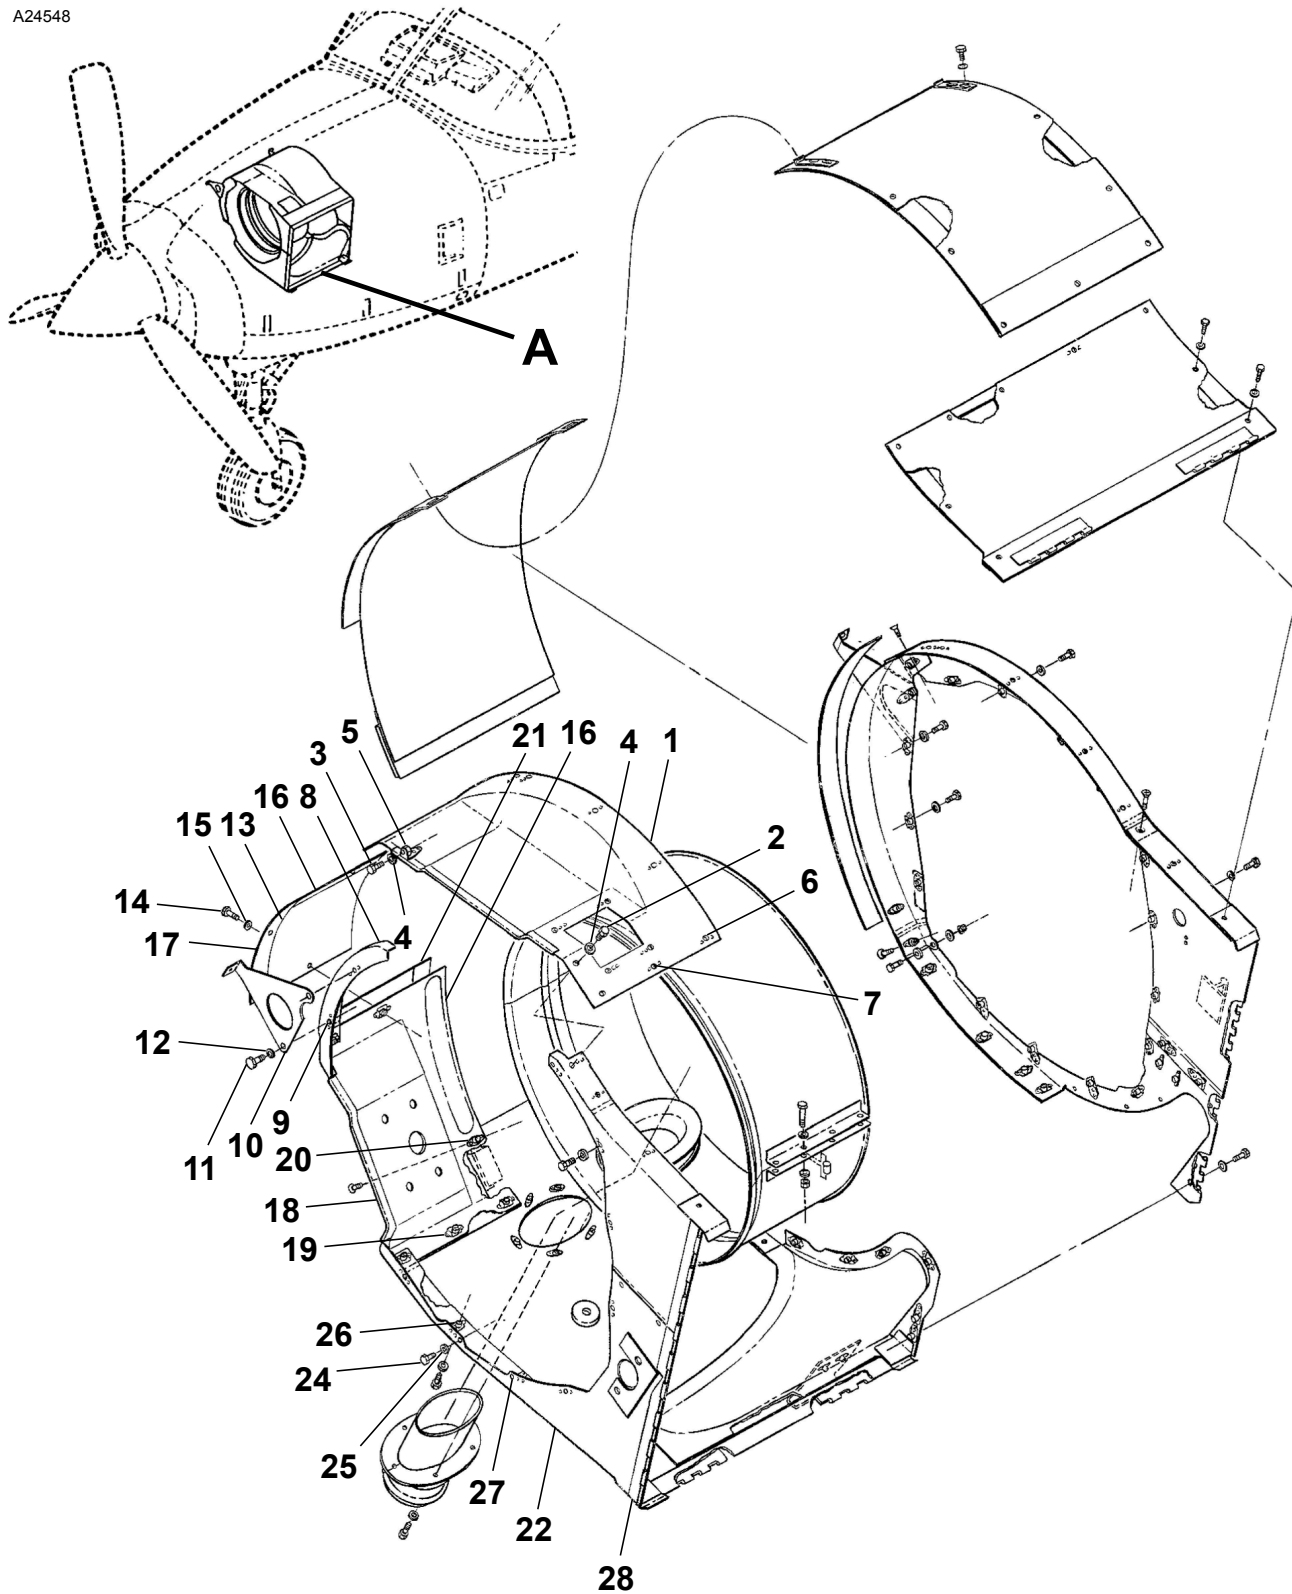

INDUCTION AIR PLENUM INSTALLATION
 Figure 01. (Sheet 1)

2614R1024
 A2614R3002

Figure 01
 Page 2
71-60-01 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

INDUCTION AIR PLENUM INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

NOMENCLATURE									UNITS PER ASSY		
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	2658017-1	.	SEAL ASSEMBLY - INDUCTION AIR PLENUM							(208) 0001 & ON (208B) 0001 - 4999	01
			ATTACHING PARTS								
2	AN3-4A	.	BOLT					80205	(208) 0001 & ON (208B) 0001 - 4999	01	
3	AN3-3A	.	BOLT						(208) 0001 & ON (208B) 0001 - 4999	01	
4	NAS1149F0332P	.	WASHER						(208) 0001 & ON (208B) 0001 - 4999	02	
			--*--								
5	NAS1033A3	.	.	NUTPLATE					(208) 0001 & ON (208B) 0001 - 4999	01	
6	MS21059L3	.	.	NUTPLATE					(208) 0001 & ON (208B) 0001 - 4999	05	
7	MS21061L3	.	.	NUTPLATE					(208) 0001 & ON (208B) 0001 - 4999	06	
8	2658031-1	.	SEAL ASSEMBLY - INDUCTION AIR PLENUM							(208) 0001 & ON (208B) 0001 - 4999	01
9	MS21059L3	.	.	NUTPLATE					(208) 0001 & ON (208B) 0001 - 4999	05	
10	2650012-6	.	BRACKET - STARTER/GENERATOR BLAST TUBE FORWARD							(208) 0001 & ON (208B) 0001 - 4999	01
			ATTACHING PARTS								
11	AN3-4A	.	BOLT					80205	(208) 0001 & ON (208B) 0001 - 4999	02	
12	NAS1149F0332P	.	WASHER						(208) 0001 & ON (208B) 0001 - 4999	02	
			--*--								
13	2658034-1	.	PANEL - INDUCTION AIR PLENUM FOR SPARES ORDER: 2658053-201							(208) 0001 & ON (208B) 0001 - 4999	NP
- 13A	2658053-201	.	PANEL ASSEMBLY - AIR INDUCTION PLENUM SPARES ONLY FOR: 2658034-1							(208) 0001 & ON (208B) 0001 - 4999	01
			ATTACHING PARTS								
14	AN3-4A	.	BOLT					80205	(208) 0001 & ON (208B) 0001 - 4999	05	
15	NAS1149F0332P	.	WASHER						(208) 0001 & ON (208B) 0001 - 4999	05	
			--*--								
16	2658000-9	.	SEAL STRIP - FELT 6.05 IN LG							(208) 0001 & ON (208B) 0001 - 4999	02
17	2658000-11	.	SEAL STRIP - FELT 7.20 IN LG							(208) 0001 & ON (208B) 0001 - 4999	01
18	2658021-1	.	SEAL ASSEMBLY - INDUCTION AIR PLENUM							(208) 0001 & ON (208B) 0001 - 4999	01
19	MS21059L3	.	.	NUTPLATE					(208) 0001 & ON (208B) 0001 - 4999	03	
20	MS21049L3	.	.	NUTPLATE					(208) 0001 & ON (208B) 0001 - 4999	01	

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


INDUCTION AIR PLENUM INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
21	2658000-2	.	SEAL STRIP - FELT 11.47 IN LG						(208) 0001 & ON (208B) 0001 - 4999	01
22	2658042-1	.	SEAL ASSEMBLY - FELT 11.47 IN LG FOR SPARES ORDER (MUST REPLACE WITH): 2658042-7						(208) 0001 - 0130 (208B) 0001 - 0086	NP
- 22A	2658042-4	.	SEAL ASSEMBLY - FELT 11.47 IN LG FOR SPARES ORDER (MUST REPLACE WITH): 2658042-7						(208) 0131 - 0219 (208B) 0087 - 0311	NP
- 23	2658042-7	.	SEAL ASSEMBLY - INDUCTION AIR PLENUM SPARES REPLACEMENT FOR: 2658042-1 2658042-4						(208) 0220 - 0511 (208B) 0312 - 2113	01
- 23A	2658042-8	.	SEAL ASSEMBLY - INDUCTION AIR PLENUM						(208) 0512 & ON (208B) 2114 & ON	01
ATTACHING PARTS										
24	AN3-3A	.	BOLT						(208) 0001 & ON (208B) 0001 - 4999	07
25	NAS1149F0332P	.	WASHER						(208) 0001 & ON (208B) 0001 - 4999	07
--*--										
- 25A	AN3-3A	.	BOLT						(208) 0512 & ON (208B) 2114 & ON	08
- 25B	NAS1149F0332P	.	WASHER						(208) 0512 & ON (208B) 2114 & ON	08
26	MS21059L3K	.	NUTPLATE						(208) 0001 & ON (208B) 0001 - 4999	08
27	MS21061L3K	.	NUTPLATE						(208) 0001 & ON (208B) 0001 - 4999	02
28	2658038-4	.	HINGE HALF						(208) 0001 - 0511 (208B) 0001 - 2113	01
- 28A	2658038-9	.	HINGE HALF						(208) 0512 & ON (208B) 2114 & ON	01
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24528

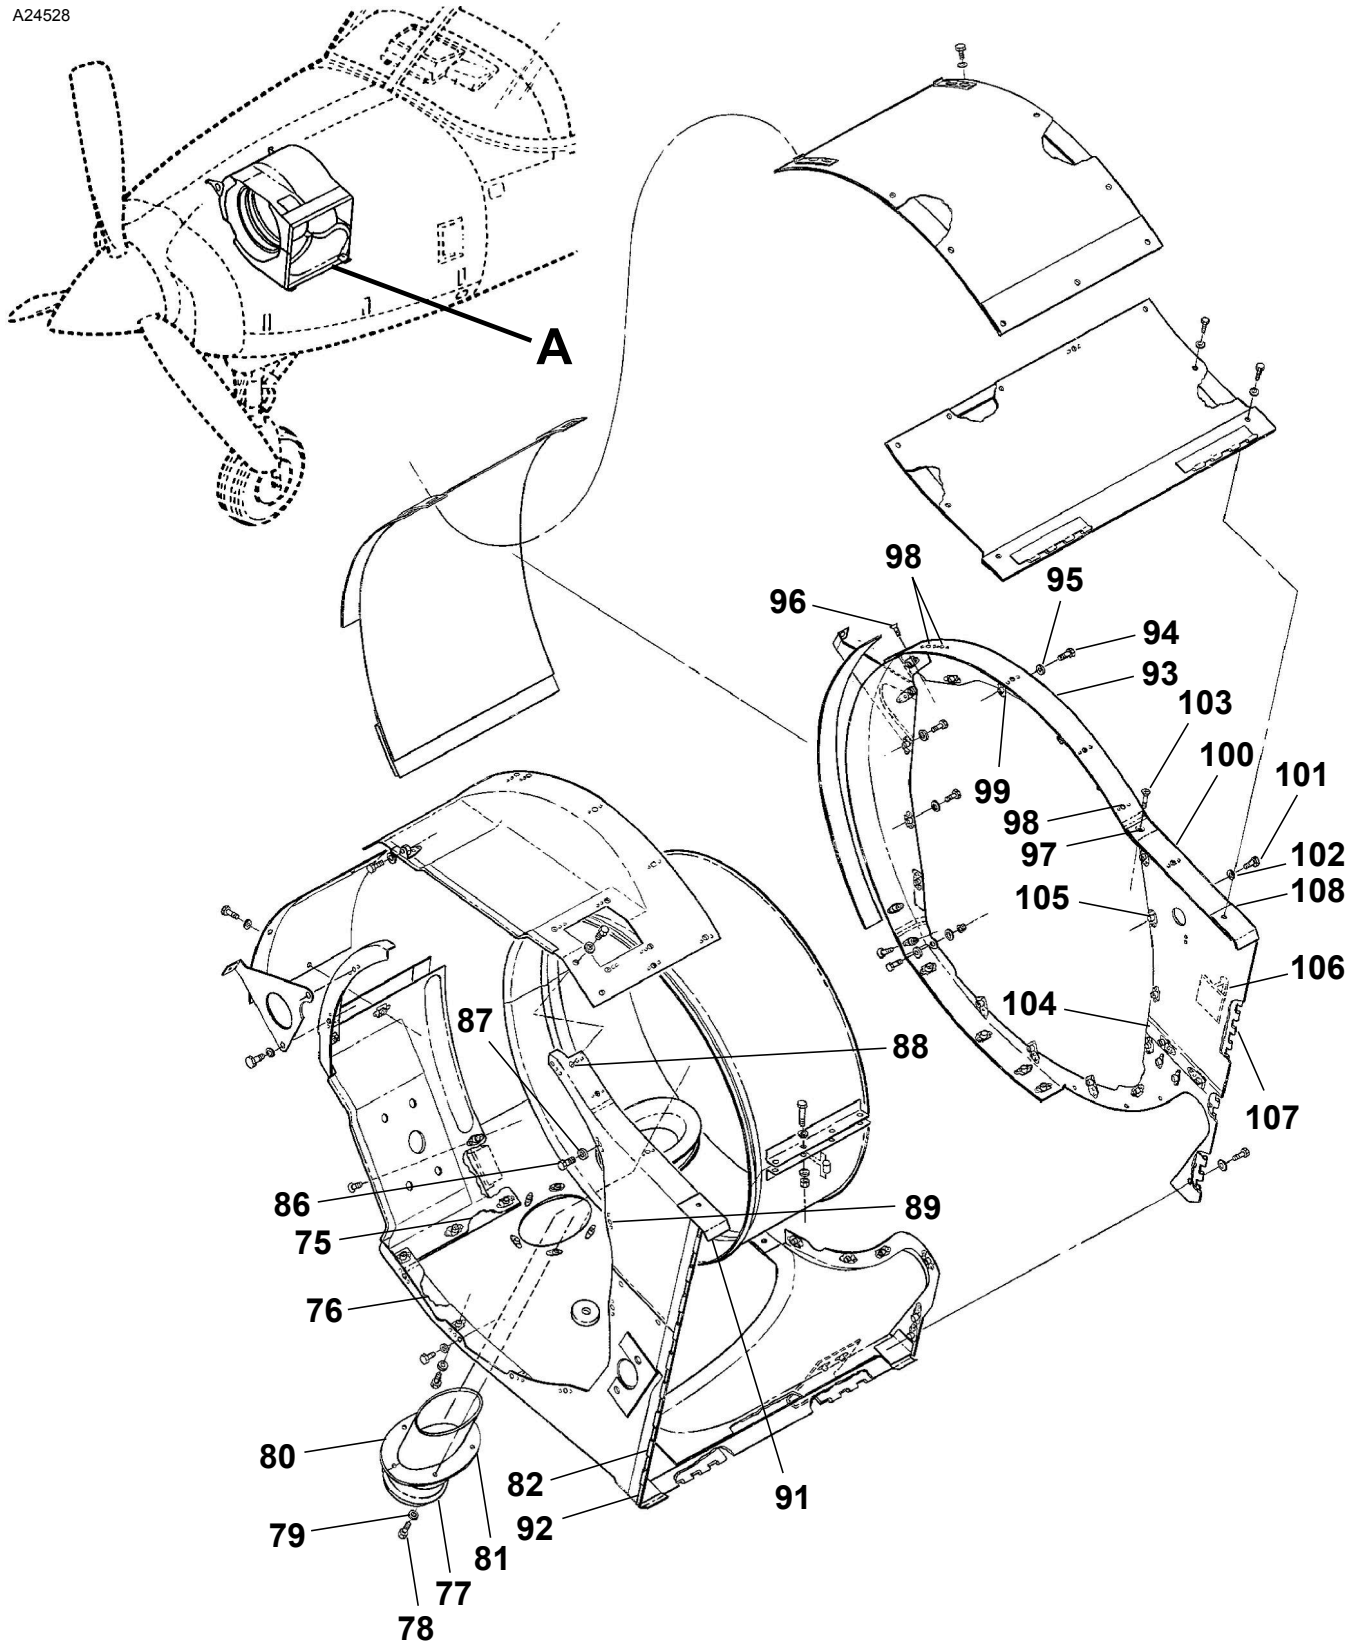

INDUCTION AIR PLENUM INSTALLATION
Figure 01. (Sheet 2)

2614R1024
 A2614R3002

Figure 01
 Page 6
71-60-01 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

INDUCTION AIR PLENUM INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
75	2658000-12	.							(208) 0001 & ON (208B) 0001 - 4999	01
76	2658000-4	.							(208) 0001 & ON (208B) 0001 - 4999	01
77	2658055-1	.							(208) 0001 & ON (208B) 0001 - 4999	01
78	AN3-4A	.						80205	(208) 0001 & ON (208B) 0001 - 4999	06
79	NAS1149F0332P	.							(208) 0001 & ON (208B) 0001 - 4999	06
80	2658055-10	.	.						(208) 0001 & ON (208B) 0001 - 4999	01
81	2658055-11	.	.						(208) 0001 & ON (208B) 0001 - 4999	01
82	2658004-1	.							(208) 0001 - 0130 (208B) 0001 - 0086	NP
- 83	2658004-3	.							(208) 0131 - 0176 (208B) 0087 - 0206	NP
- 84	2658004-5	.							(208) 0177 - 0511 (208B) 0207 - 2113	01
- 85	2658004-7	.							(208) 0512 & ON (208B) 2114 & ON	01
86	AN3-3A	.							(208) 0001 & ON (208B) 0001 - 4999	03
87	NAS1149F0332P	.							(208) 0001 & ON (208B) 0001 - 4999	03
88	MS21061L3K	.	.						(208) 0001 & ON (208B) 0001 - 4999	03
89	MS21059L3K	.	.						(208) 0001 - 0176 (208B) 0001 - 0206	06
- 90	MS21061L3K	.	.						(208) 0177 & ON (208B) 0207 & ON	06
91	2658029-1	.	.						(208) 0001 & ON (208B) 0001 - 4999	01
92	2658038-5	.	.						(208) 0001 & ON (208B) 0001 - 4999	01
93	2658016-1	.							(208) 0001 & ON (208B) 0001 - 4999	01
94	AN3-3A	.							(208) 0001 & ON (208B) 0001 - 4999	06
95	NAS1149F0332P	.							(208) 0001 & ON (208B) 0001 - 4999	06

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

INDUCTION AIR PLENUM INSTALLATION


AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
96	MS24694-S49	.							(208) 0001 & ON (208B) 0001 - 4999	01
- 96A	AN509-10-7	.							(208) 0001 & ON (208B) 0001 - 4999	01
97	MS21049L3	.	.						(208) 0001 & ON (208B) 0001 - 4999	01
98	MS21059L3	.	.						(208) 0001 & ON (208B) 0001 - 4999	08
99	MS21061L3	.	.						(208) 0001 & ON (208B) 0001 - 4999	02
100	2658051-1	.							(208) 0001 - 0511 (208B) 0001 - 2113	01
- 100A	2658051-4	.							(208) 0512 & ON (208B) 2114 & ON	01
101	AN3-3A	.							(208) 0001 & ON (208B) 0001 - 4999	04
102	NAS1149F0332P	.							(208) 0001 & ON (208B) 0001 - 4999	04
103	MS24694-S49	.							(208) 0001 - 0511 (208B) 0001 - 2113	01
- 103A	AN525-10R7	.	.						(208) 0512 & ON (208B) 2114 & ON	08
104	MS21061L3	.	.						(208) 0001 & ON (208B) 0001 - 4999	02
105	MS21059L3	.	.						(208) 0001 - 0511 (208B) 0001 - 2113	05
- 105A	MS21059L3	.	.						(208) 0512 & ON (208B) 2114 & ON	13
- 105B	MS21055L3	.	.						(208) 0512 & ON (208B) 2114 & ON	01
106	2658051-3	.	.						(208) 0001 & ON (208B) 0001 - 4999	01
107	2658052-5	.	.						(208) 0001 - 0511 (208B) 0001 - 2113	01
- 107A	2658052-11	.	.						(208) 0512 & ON (208B) 2114 & ON	01
108	2658029-1	.	.						(208) 0001 & ON (208B) 0001 - 4999	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24530

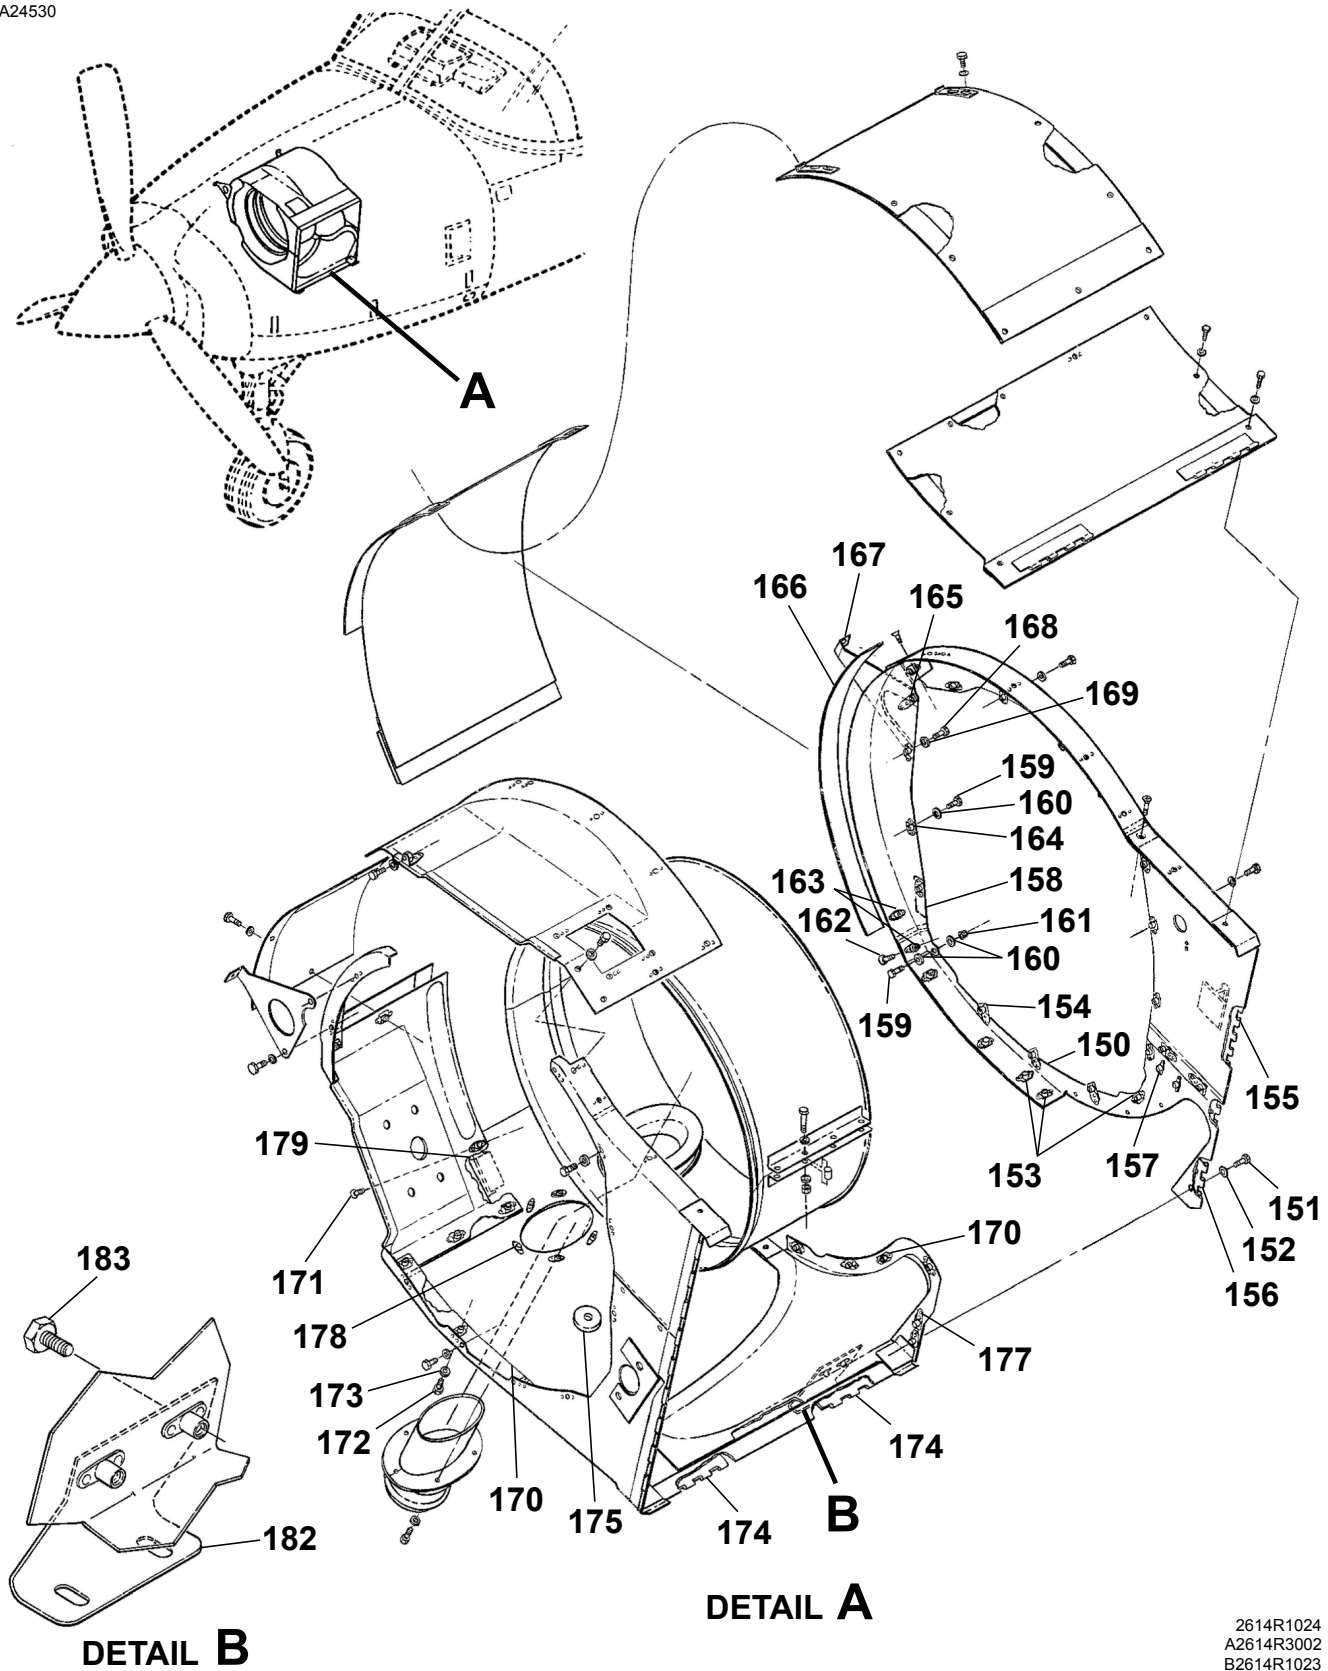

INDUCTION AIR PLENUM INSTALLATION
Figure 01. (Sheet 3)

2614R1024
 A2614R3002
 B2614R1023

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

INDUCTION AIR PLENUM INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
150	2658050-1	.							(208) 0001 - 0511 (208B) 0001 - 2113	01
- 150A	2658050-3	.							(208) 0512 & ON (208B) 2114 & ON	01
									ATTACHING PARTS	
151	AN3-3A	.							(208) 0001 & ON (208B) 0001 - 4999	13
152	NAS1149F0332P	.							(208) 0001 & ON (208B) 0001 - 4999	13
									--*--	
153	MS21059L3	.	.						(208) 0001 & ON (208B) 0001 - 4999	06
154	MS21061L3	.	.						(208) 0001 & ON (208B) 0001 - 4999	03
- 154A	MS21069L08	.	.					71785	(208) 0512 & ON (208B) 2114 & ON	02
155	2658052-7	.	.						(208) 0001 & ON (208B) 0001 - 4999	01
156	2658052-6	.	.						(208) 0001 & ON (208B) 0001 - 4999	01
157	MS21069L08	.	.					71785	(208) 0001 & ON (208B) 0001 - 4999	02
158	2658035-3	.							(208) 0001 & ON (208B) 0001 - 4999	01
									ATTACHING PARTS	
159	AN3-3A	.							(208) 0001 & ON (208B) 0001 - 4999	03
160	NAS1149F0332P	.							(208) 0001 & ON (208B) 0001 - 4999	04
161	MS21042L3	.						00624	(208) 0001 & ON (208B) 0001 - 4999	01
162	MS24694-S49	.							(208) 0001 & ON (208B) 0001 - 4999	01
- 162A	AN509-10-7	.							(208) 0001 & ON (208B) 0001 - 4999	01
									--*--	
163	MS21049L3	.	.						(208) 0001 & ON (208B) 0001 - 4999	02
164	MS21059L3	.	.						(208) 0001 & ON (208B) 0001 - 4999	04
165	MS21061L3	.	.						(208) 0001 & ON (208B) 0001 - 4999	01
166	2658000-6	.							(208) 0001 & ON (208B) 0001 - 4999	01
167	2650012-8	.							(208) 0001 & ON (208B) 0001 - 4999	01
									ATTACHING PARTS	
168	AN3-4A	.						80205	(208) 0001 & ON (208B) 0001 - 4999	02
169	NAS1149F0332P	.							(208) 0001 & ON (208B) 0001 - 4999	02

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


INDUCTION AIR PLENUM INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

		NOMENCLATURE								UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
		--*--									
170	2658053-19	.	PANEL ASSEMBLY - INDUCTION AIR PLENUM							(208) 0001 & ON (208B) 0001 - 4999	01
		ATTACHING PARTS									
171	MS24694-S49	.	SCREW							(208) 0001 & ON (208B) 0001 - 4999	02
		.	ALTERNATE SPARE (INTERCHANGEABLE WITH): AN509-10-7								
- 171A	AN509-10-7	.	SCREW							(208) 0001 & ON (208B) 0001 - 4999	02
		.	ALTERNATE SPARE (INTERCHANGEABLE WITH): MS24694-S49								
172	AN3-4A	.	BOLT							80205 (208) 0001 & ON (208B) 0001 - 4999	10
173	NAS1149F0332P	.	WASHER							(208) 0001 & ON (208B) 0001 - 4999	10
		--*--									
174	5955153-11	.	.	HINGE HALF					(208) 0001 & ON (208B) 0001 - 4999	02	
175	MS35489-12	.	.	GROMMET					(208) 0001 & ON (208B) 0001 - 4999	01	
- 176	MS21059L3	.	.	NUTPLATE					(208) 0001 & ON (208B) 0001 - 4999	04	
177	MS21061L3	.	.	NUTPLATE					(208) 0001 & ON (208B) 0001 - 4999	02	
178	MS21069L3K	.	.	NUTPLATE					(208) 0001 & ON (208B) 0001 - 4999	06	
179	2658053-8	.	.	LATCH - INDUCTION AIR PANEL					(208) 0001 & ON (208B) 0001 - 4999	02	
- 180	AA55487-5	.	.	PIN - LATCH					(208) 0001 & ON (208B) 0001 - 4999	02	
- 181	2658053-4	.	.	SPACER - LATCH					(208) 0001 & ON (208B) 0001 - 4999	02	
182	2658062-1	.	.	BRACKET					(208) 0001 & ON (208B) 0001 - 4999	01	
183	AN3-3A	.	.	BOLT					(208) 0001 & ON (208B) 0001 - 4999	02	
- 184	MS21069L3	.	.	NUTPLATE					(208) 0001 & ON (208B) 0001 - 4999	02	
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24532

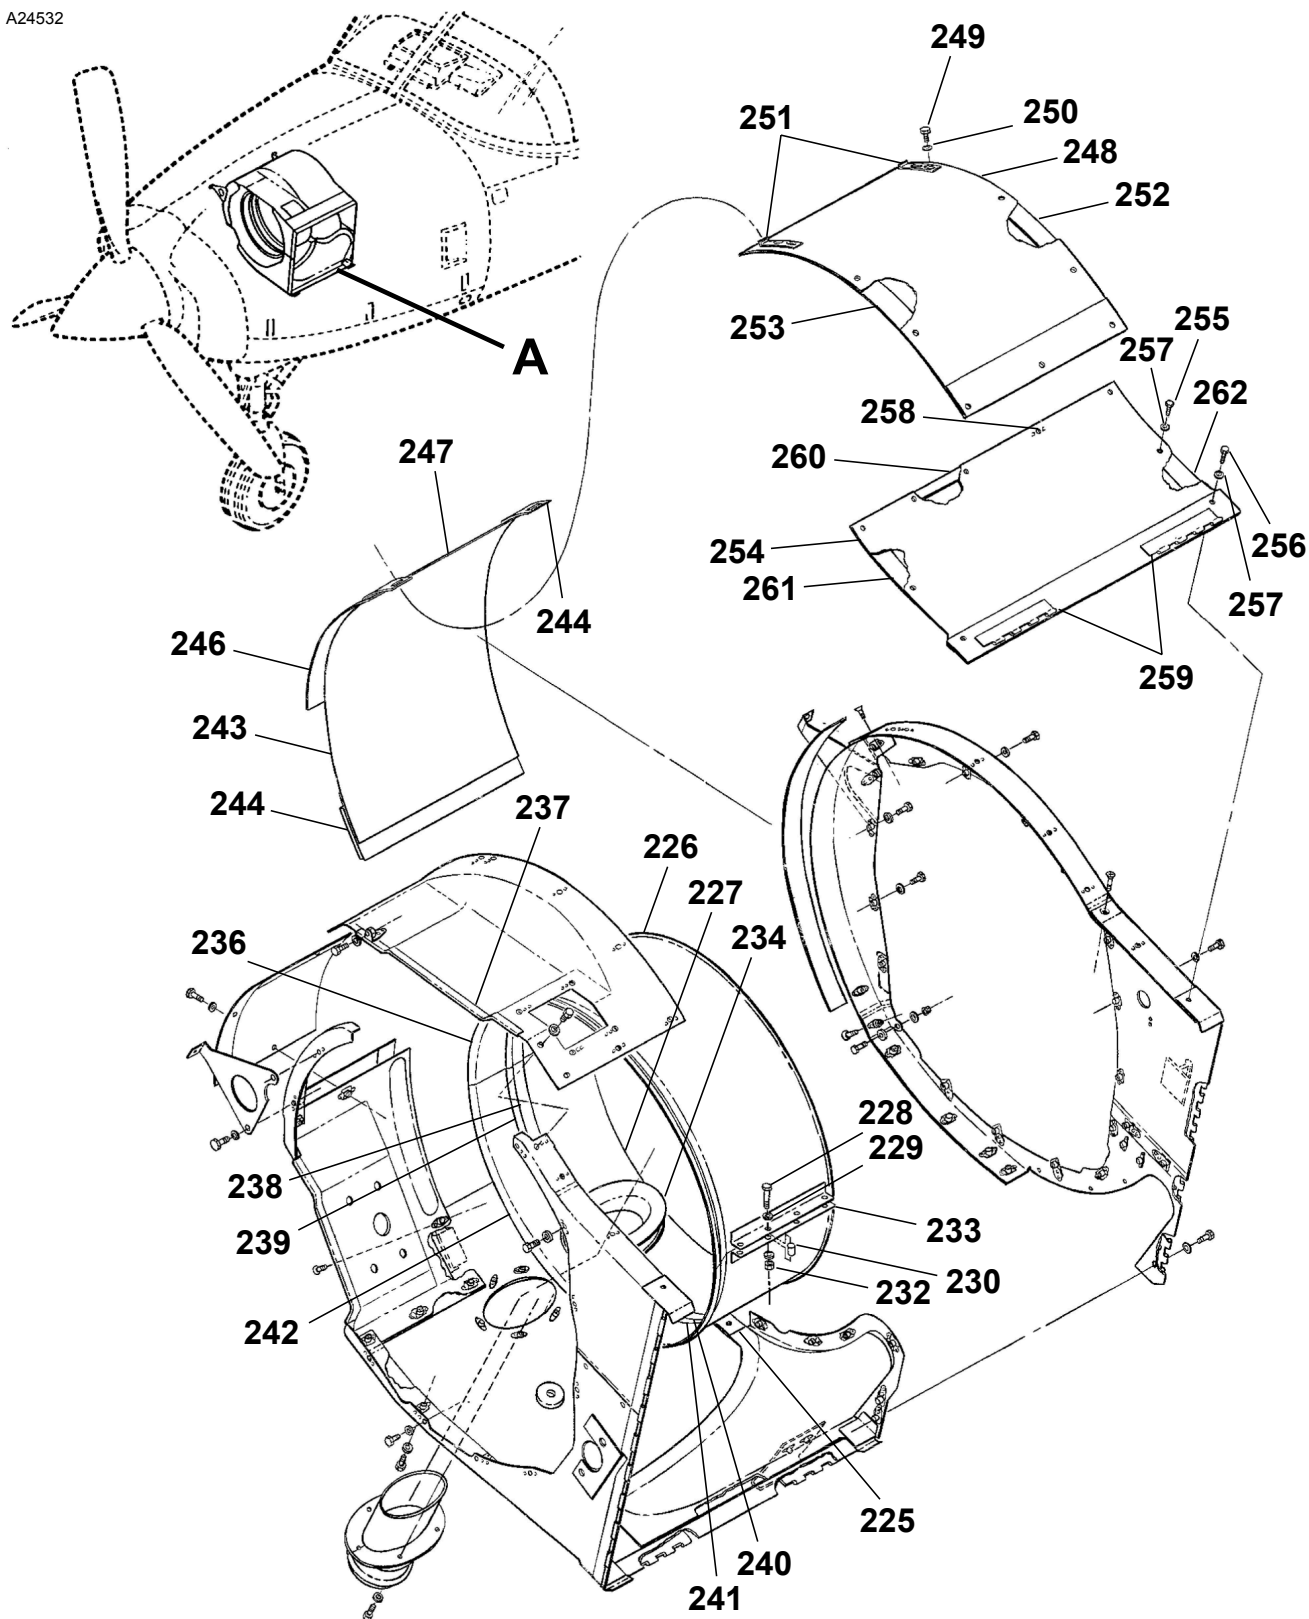

INDUCTION AIR PLENUM INSTALLATION
Figure 01. (Sheet 4)

2614R1024
 A2614R3002

Figure 01
 Page 14
71-60-01 Nov 4, 2021

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

INDUCTION AIR PLENUM INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
225	2658000-3	.						SEAL STRIP - FELT 12.10 IN LG	(208) 0001 & ON (208B) 0001 - 4999	01
226	2658047-1	.						BAND ASSEMBLY - INDUCTION AIR PLENUM UPPER	(208) 0001 & ON (208B) 0001 - 4999	01
227	2658047-2	.						BAND ASSEMBLY - INDUCTION AIR PLENUM LOWER	(208) 0001 & ON (208B) 0001 - 4999	01
								ATTACHING PARTS		
228	AN3-10A	.						BOLT	(208) 0001 & ON (208B) 0001 - 4999	08
229	NAS1149F0332P	.						WASHER	(208) 0001 & ON (208B) 0001 - 4999	16
230	NAS43DD3-25N	.						SPACER ALTERNATE SPARE (INTERCHANGEABLE WITH): NAS43DD3-25FC	(208) 0001 & ON (208B) 0001 - 4999	08
- 231	NAS43DD3-25FC	.						SPACER ALTERNATE SPARE (INTERCHANGEABLE WITH): NAS43DD3-25N	(208) 0001 & ON (208B) 0001 - 4999	01
232	MS21042L3	.						NUT	00624 (208) 0001 & ON (208B) 0001 - 4999	08
								--*--		
233	2658047-3	.	.					ANGLE - INDUCTION AIR BAND	(208) 0001 & ON (208B) 0001 - 4999	02
234	2658055-2	.	.					BELLMOUTH ASSEMBLY - COMPRESSOR AIR BLEED	(208) 0001 & ON (208B) 0001 - 4999	01
- 235	2658047-19	.	.					RETAINER - SEAL UPPER	(208) 0001 & ON (208B) 0001 - 4999	01
236	2658047-18	.						SEAL - UPPER INDUCTION AIR BAND	(208) 0001 & ON (208B) 0001 - 4999	01
237	2658047-17	.	.					SEAL - UPPER INDUCTION AIR BAND	(208) 0001 & ON (208B) 0001 - 4999	01
238	2658047-24	.	.					RETAINER - SEAL LOWER RIGHT	(208) 0001 & ON (208B) 0001 - 4999	01
239	2658047-23	.	.					SEAL - LOWER INDUCTION AIR BAND RIGHT	(208) 0001 & ON (208B) 0001 - 4999	01
240	2658047-22	.	.					RETAINER - SEAL LOWER LEFT	(208) 0001 & ON (208B) 0001 - 4999	01
241	2658047-20	.	.					SEAL - LOWER INDUCTION AIR BAND LEFT	(208) 0001 & ON (208B) 0001 - 4999	01
242	2658047-21	.	.					SEAL - LOWER INDUCTION AIR BAND	(208) 0001 & ON (208B) 0001 - 4999	01
243	2658039-1	.						PANEL ASSEMBLY - INDUCTION AIR PLENUM INSPECTION	(208) 0001 & ON (208B) 0001 - 4999	01
244	2658030-1	.	.					STRIKE - INSPECTION PANEL	(208) 0001 & ON (208B) 0001 - 4999	04
- 245	2658040-6	.	.					SPACER - STRIKE LOWER	(208) 0001 & ON (208B) 0001 - 4999	02
246	S1389-1	.	.					SEAL STRIP - FELT 10.11 IN LG BULK ITEM	(208) 0001 & ON (208B) 0001 - 4999	01
247	S1389-1	.	.					SEAR STRIP - FELT 9.16 IN LG BULK ITEM	(208) 0001 & ON (208B) 0001 - 4999	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

INDUCTION AIR PLENUM INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

NOMENCLATURE									UNITS PER ASSY		
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
248	2658023-1	.	PANEL ASSEMBLY - INDUCTION AIR PLENUM							(208) 0001 & ON (208B) 0001 - 4999	01
			ATTACHING PARTS								
249	AN3-4A	.	BOLT					80205	(208) 0001 & ON (208B) 0001 - 4999	10	
250	NAS1149F0332P	.	WASHER						(208) 0001 & ON (208B) 0001 - 4999	10	
			--*--								
251	2658040-3	.	HOOK						(208) 0001 & ON (208B) 0001 - 4999	02	
252	2658000-7	.	SEAL STRIP - FELT 18.65 IN LG							(208) 0001 & ON (208B) 0001 - 4999	01
253	2658000-5	.	SEAL STRIP - FELT 16.12 IN LG							(208) 0001 & ON (208B) 0001 - 4999	01
254	2658022-1	.	PANEL ASSEMBLY - INDUCTION AIR PLENUM							(208) 0001 - 0511 (208B) 0001 - 2113	01
- 254A	2658022-4	.	PANEL ASSEMBLY - INDUCTION AIR PLENUM							(208) 0512 & ON (208B) 2114 & ON	01
			ATTACHING PARTS								
255	AN3-4A	.	BOLT					80205	(208) 0001 & ON (208B) 0001 - 4999	02	
256	AN3-5A	.	BOLT						(208) 0001 & ON (208B) 0001 - 4999	02	
257	NAS1149F0332P	.	WASHER						(208) 0001 & ON (208B) 0001 - 4999	04	
			--*--								
- 257A	AN525-10R7	.	SCREW						(208) 0512 & ON (208B) 2114 & ON	10	
258	MS21059L3	.	.	NUTPLATE					(208) 0001 - 0511 (208B) 0001 - 2113	01	
- 258A	MS21059L3	.	.	NUTPLATE					(208) 0512 & ON (208B) 2114 & ON	11	
259	5955153-11	.	.	HINGE HALF					(208) 0001 & ON (208B) 0001 - 4999	02	
260	2658000-12	.	SEALER STRIP - FELT 7.05 IN LG							(208) 0001 & ON (208B) 0001 - 4999	01
261	2658000-10	.	SEALER STRIP - FELT 6.24 IN LG							(208) 0001 & ON (208B) 0001 - 4999	01
262	2658000-8	.	SEALER STRIP - FELT 5.69 IN LG							(208) 0001 & ON (208B) 0001 - 4999	01
- ITEM NOT ILLUSTRATED											

- ITEM NOT ILLUSTRATED


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

71-60-01

INDUCTION AIR PLENUM INSTALLATION
AIRPLANES (208B) 5000 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A87959

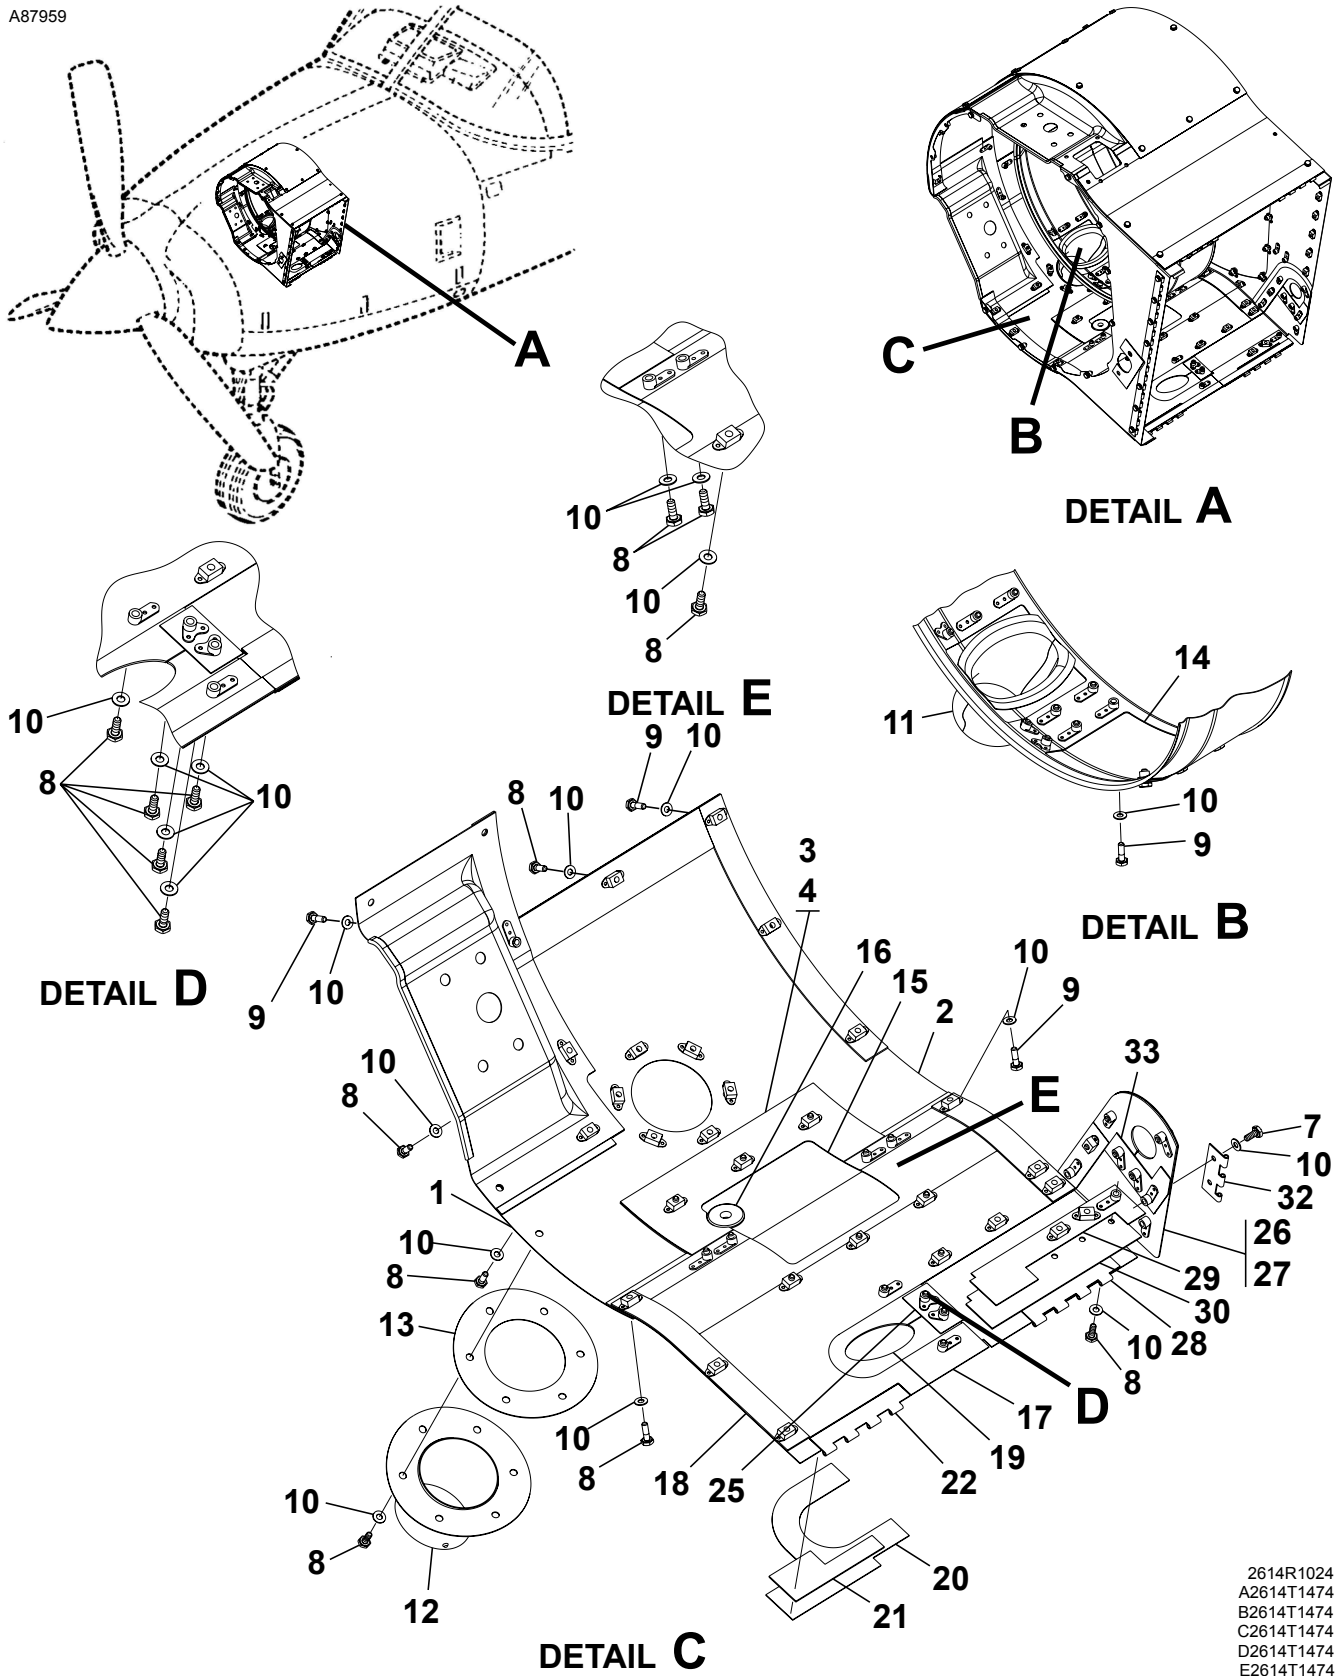

INDUCTION AIR PLENUM INSTALLATION
 Figure 02. (Sheet 1)

2614R1024
 A2614T1474
 B2614T1474
 C2614T1474
 D2614T1474
 E2614T1474

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

INDUCTION AIR PLENUM INSTALLATION

AIRPLANES (208B) 5000 & ON


NOMENCLATURE									UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY
1	2650132-9	.							(208B) 5000 & ON
2	2650132-10	.	.						(208B) 5000 & ON
3	2650132-25	.	.						(208B) 5000 & ON
4	2650132-24	.	.						(208B) 5000 & ON
- 5	S1389-1	.	.						(208B) 5000 & ON
- 6	S1389-2	.	.						(208B) 5000 & ON
		ATTACHING PARTS							
7	AN3-3A	.							(208B) 5000 & ON
8	AN3-4A	.						80205	(208B) 5000 & ON
9	AN3-5A	.							(208B) 5000 & ON
10	NAS1149C0332R	.							(208B) 5000 & ON
		--*--							
11	2650133-7	.							(208B) 5000 - 5262
- 11A	2650133-19	.							(208B) 5263 & ON
12	2650133-10	.							(208B) 5000 & ON
13	2650133-13	.							(208B) 5000 & ON
14	2650133-14	.							(208B) 5000 - 5262
		ACCESS PANEL FOR SPARES ORDER (MUST REPLACE WITH): 2650133-22							
- 14A	2650133-22	.							(208B) 5263 & ON
		ACCESS PANEL SPARES REPLACEMENT FOR: 2650133-14							
15	2650133-15	.							(208B) 5000 & ON
16	MS35489-12	.							(208B) 5000 & ON
17	2650132-11	.							(208B) 5000 - 5062
		FOR SPARES ORDER (MUST REPLACE WITH): 2650132-27							(208B) 5126 - 5262
- 17A	DDA06603-1	.							(208B) 5063 - 5125
		NOTE: WHEN ORDERING DDA PART NUMBERS, ALSO PROVIDE REFERENCE DRAWING NUMBER 2650132							
- 17B	2650132-27	.							(208B) 5263 & ON
		PANEL ASSEMBLY - LOWER LEFT SPARES REPLACEMENT FOR: 2650132-11 * AIRPLANES (208B) 5000 THRU 5062 INCORPORATING CAB-71-02							(208B) *5000 - 5062
18	2650132-12	.	.						(208B) 5000 - 5062
		PANEL - LOWER LEFT							(208B) 5126 - 5262
- 18A	DDA06603-2	.	.						(208B) 5063 - 5125
		NOTE: WHEN ORDERING DDA PART NUMBERS, ALSO PROVIDE REFERENCE DRAWING NUMBER 2650132							
- 18B	2650132-28	.	.						(208B) 5263 & ON
		PANEL - LOWER LEFT * AIRPLANES (208B) 5000 THRU 5062 INCORPORATING CAB-71-02							(208B) *5000 - 5062
19	2650132-13	.	.						(208B) 5000 - 5062
		SEAL - LOWER							(208B) 5126 - 5263
- 19A	DDA06603-3	.	.						(208B) 5063 - 5125
		NOTE: WHEN ORDERING DDA PART NUMBERS, ALSO PROVIDE REFERENCE DRAWING NUMBER 2650132							
- 19B	2650132-29	.	.						(208B) 5263 & ON
		SEAL - LOWER * AIRPLANES (208B) 5000 THRU 5062 INCORPORATING CAB-71-02							(208B) *5000 - 5062
- ITEM NOT ILLUSTRATED									

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG
 INDUCTION AIR PLENUM INSTALLATION
 AIRPLANES (208B) 5000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
20	2650132-14	.	.	.	.	.	.	SEAL RETAINER - LOWER	(208B) 5000 - 5062 (208B) 5126 - 5262	01
- 20A	DDA06603-4	.	.	.	.	.	.	SEAL RETAINER - LOWER	(208B) 5063 - 5125	01
		NOTE: WHEN ORDERING DDA PART NUMBERS, ALSO PROVIDE REFERENCE DRAWING NUMBER 2650132								
- 20B	2650132-30	.	.	.	.	.	.	SEAL RETAINER - LOWER * AIRPLANES (208) 5000 THRU 5062 INCORPORATING CAB-71-02	(208) *5000 - 5062 (208B) 5263 & ON	01
21	2650132-15	.	.	.	.	.	.	SPACER	(208B) 5000 & ON	01
22	2650132-4	.	.	.	.	.	.	HINGE HALF	(208B) 5000 & ON	01
- 23	S1389-1	.	.	.	.	.	.	SEALER STRIP	(208B) 5000 & ON	AR
- 24	S1389-8	.	.	.	.	.	.	SEALER STRIP	(208B) 5000 & ON	AR
25	2650132-22	.	.	.	.	.	.	RETAINER ASSEMBLY	(208B) 5000 & ON	01
26	2650132-16	.	.	.	.	.	.	CLOSEOUT ASSEMBLY - ENGINE TRUSS FOR SPARES ORDER (MUST REPLACE WITH): 2650132-31	(208B) 5000 - 5062 (208B) 5126 - 5262	NP
- 26A	DDA06603-5	.	.	.	.	.	.	CLOSEOUT ASSEMBLY - ENGINE TRUSS	(208B) 5063 - 5125	01
		NOTE: WHEN ORDERING DDA PART NUMBERS, ALSO PROVIDE REFERENCE DRAWING NUMBER 2650132								
- 26B	2695130-2	.	.	.	.	.	.	CLOSEOUT ASSEMBLY - ENGINE TRUSS * AIRPLANES (208B) 5000 THRU 5062 INCORPORATING CAB-71-02	(208B) *5000 - 5062	01
- 26C	2650132-31	.	.	.	.	.	.	CLOSEOUT PANEL - ENGINE TRUSS SPARES REPLACEMENT FOR: 2650132-16	(208B) 5263 & ON	01
27	2650132-17	.	.	.	.	.	.	PANEL - CLOSEOUT	(208B) 5000 - 5262	01
- 27A	2650132-32	.	.	.	.	.	.	PANEL - CLOSEOUT	(208B) 5263 & ON	01
28	2650132-4	.	.	.	.	.	.	HINGE HALF	(208B) 5000 & ON	01
29	2650132-19	.	.	.	.	.	.	DOUBLER	(208B) 5000 & ON	01
30	2650132-18	.	.	.	.	.	.	SPACER	(208B) 5000 & ON	01
- 31	S1389-9	.	.	.	.	.	.	SEALER STRIP	(208B) 5000 & ON	AR
32	2650131-12	.	.	.	.	.	.	HINGE - AFT FIRESEAL	(208B) 5000 & ON	01
33	2650132-20	.	.	.	.	.	.	RETAINER ASSEMBLY FOR SPARES ORDER (MUST REPLACE WITH): 2650132-33	(208B) 5000 - 5062 (208B) 5126 - 5262	NP
- 33A	DDA06603-6	.	.	.	.	.	.	RETAINER ASSEMBLY	(208B) 5063 - 5125	01
		NOTE: WHEN ORDERING DDA PART NUMBERS, ALSO PROVIDE REFERENCE DRAWING NUMBER 2650132								
- 33B	2695130-3	.	.	.	.	.	.	RETAINER ASSEMBLY * AIRPLANES (208B) 5000 THRU 5062 INCORPORATING CAB-71-02	(208B) *5000 - 5062	01
- 33C	2650132-33	.	.	.	.	.	.	RETAINER ASSEMBLY SPARES REPLACEMENT FOR: 2650132-20	(208B) 5263 & ON	01
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A87960

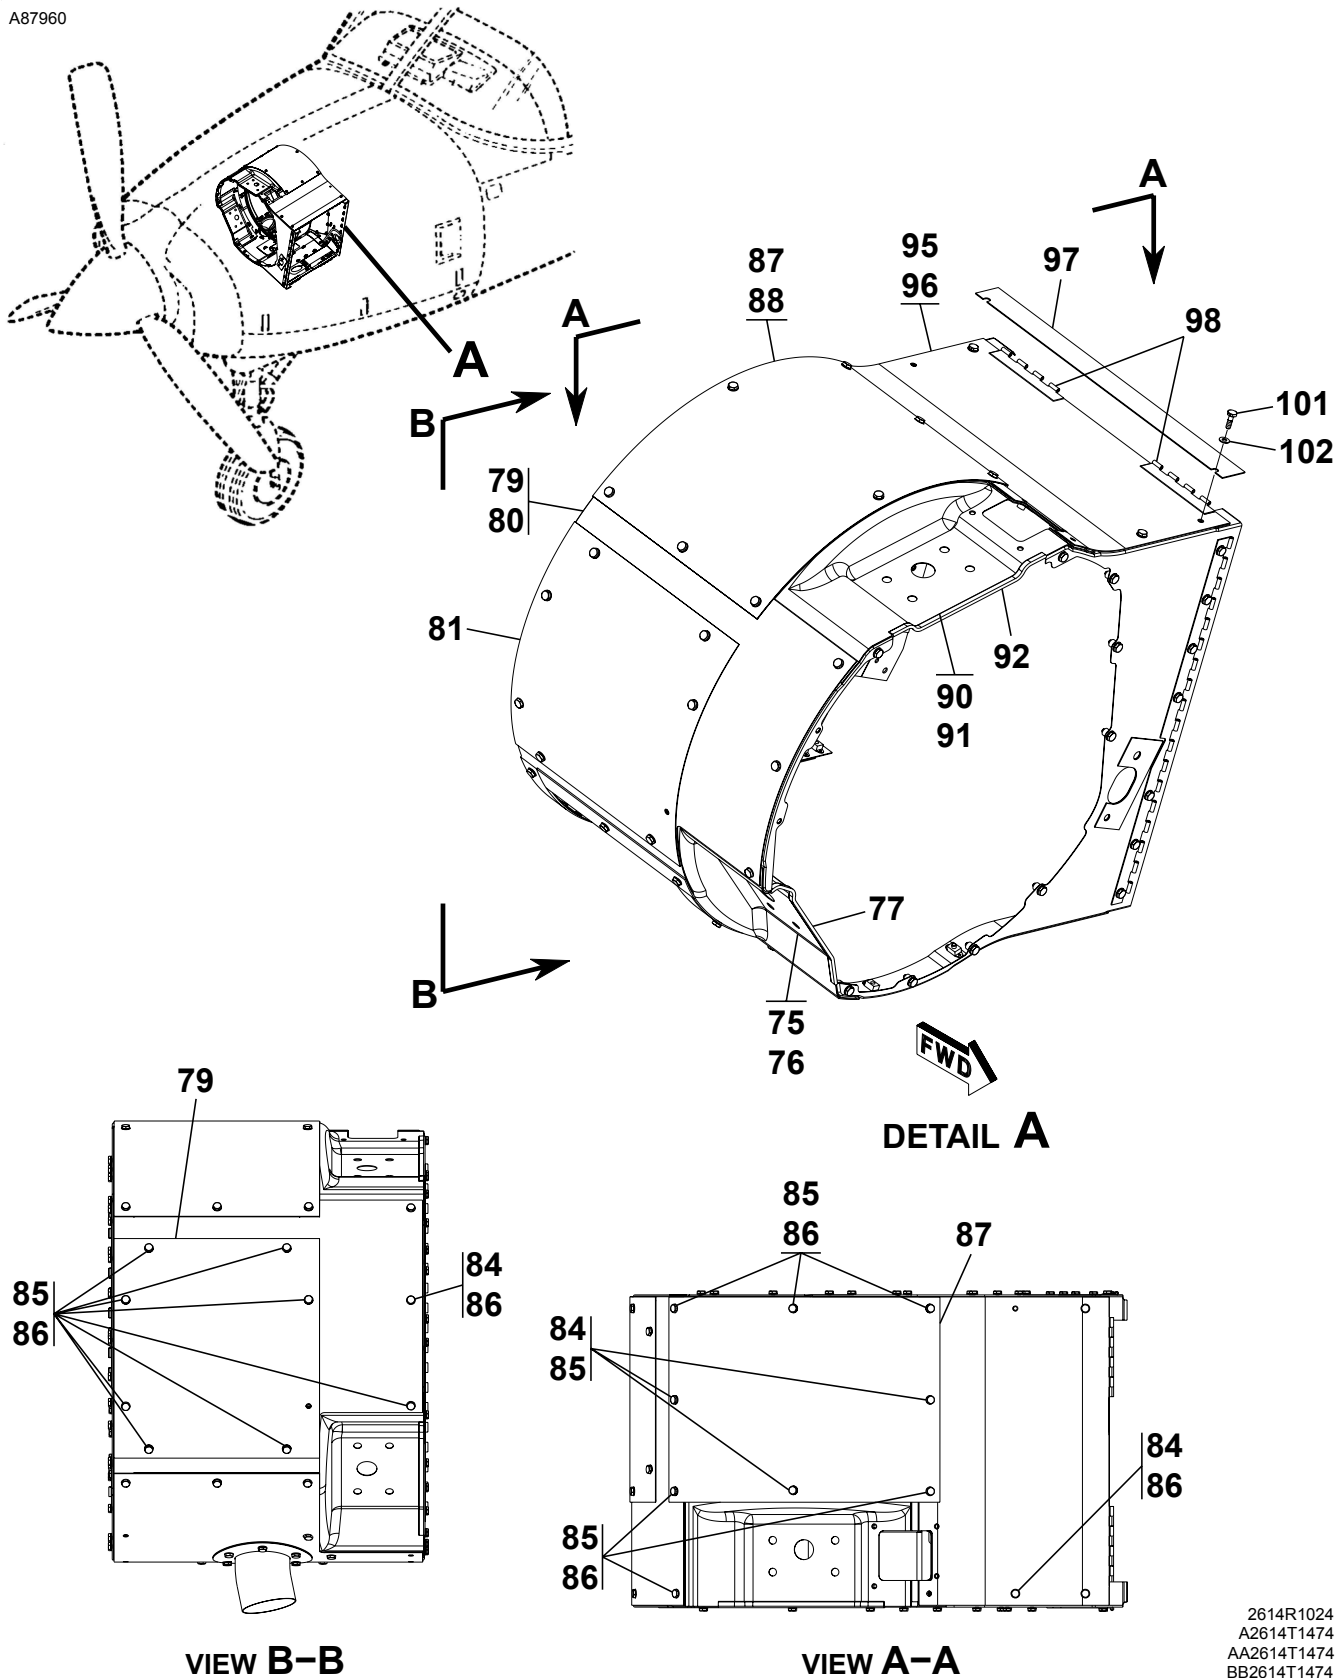

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

INDUCTION AIR PLENUM INSTALLATION

AIRPLANES (208B) 5000 & ON



ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
75	2650131-15	.							(208B) 5000 - 5262	NP
- 75A	2650131-23	.							(208B) 5263 & ON	01
76	2650131-16	.	.						(208B) 5000 - 5262	NP
- 76A	2650131-24	.	.						(208B) 5263 & ON	01
77	CM2613-2	.	.						(208B) 5000 & ON	AR
- 77A	S1055-1	.	.						(208B) 5000 & ON	AR
- 78	S1389-1	.	.						(208B) 5000 & ON	AR
79	2650132-7	.							(208B) 5000 & ON	01
80	2650132-8	.	.						(208B) 5000 & ON	01
81	2650132-26	.	.						(208B) 5000 & ON	01
- 82	S1389-1	.	.						(208B) 5000 & ON	AR
- 83	S1389-2	.	.						(208B) 5000 & ON	AR
84	AN3-4A	.						80205	(208B) 5000 & ON	10
85	AN3-5A	.							(208B) 5000 & ON	15
86	NAS1149C0332R	.							(208B) 5000 & ON	30
87	2650132-5	.							(208B) 5000 & ON	01
88	2650132-6	.	.						(208B) 5000 & ON	01
- 89	S1389-1	.	.						(208B) 5000 & ON	AR
90	2650131-17	.							(208B) 5000 - 5262	NP
- 90A	2650131-25	.							(208B) 5263 & ON	01
91	2650131-18	.	.						(208B) 5000 - 5262	01
- 91A	2650131-26	.	.						(208B) 5263 & ON	01
92	CM2613-2	.	.						(208B) 5000 & ON	AR
- 92A	S1055-1	.	.						(208B) 5000 & ON	AR
- 93	S1389-1	.	.						(208B) 5000 & ON	AR
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG
 INDUCTION AIR PLENUM INSTALLATION
 AIRPLANES (208B) 5000 & ON


ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 94	S1389-2	.	.	SEAL					(208B) 5000 & ON	AR
95	2650132-1	.		PANEL ASSEMBLY - UPPER LEFT					(208B) 5000 & ON	01
96	2650132-2	.	.	PANEL - UPPER LEFT					(208B) 5000 & ON	01
97	2650132-3	.	.	DOUBLER - UPPER					(208B) 5000 & ON	01
98	2650132-4	.	.	HINGE HALF					(208B) 5000 & ON	02
- 99	S1389-1	.	.	SEALER STRIP					(208B) 5000 & ON	AR
- 100	S1389-9	.	.	SEALER STRIP					(208B) 5000 & ON	AR
				ATTACHING PARTS						
101	AN3H5A	.		BOLT					(208B) 5000 & ON	02
102	NAS1149C0332R	.		WASHER					(208B) 5000 & ON	02
				--*--						
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A87961

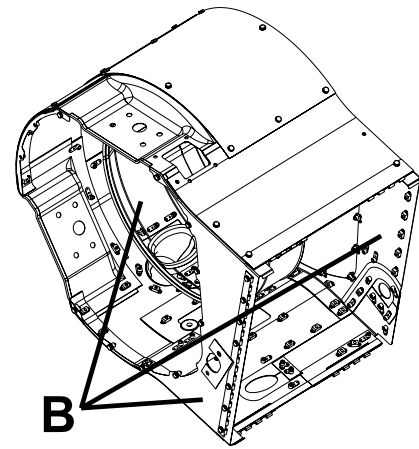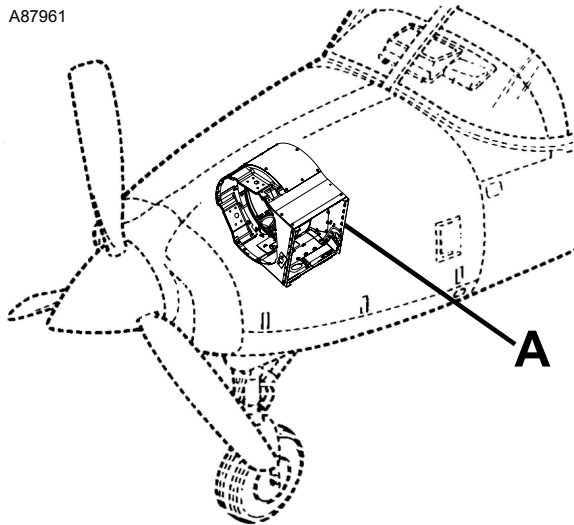

DETAIL A

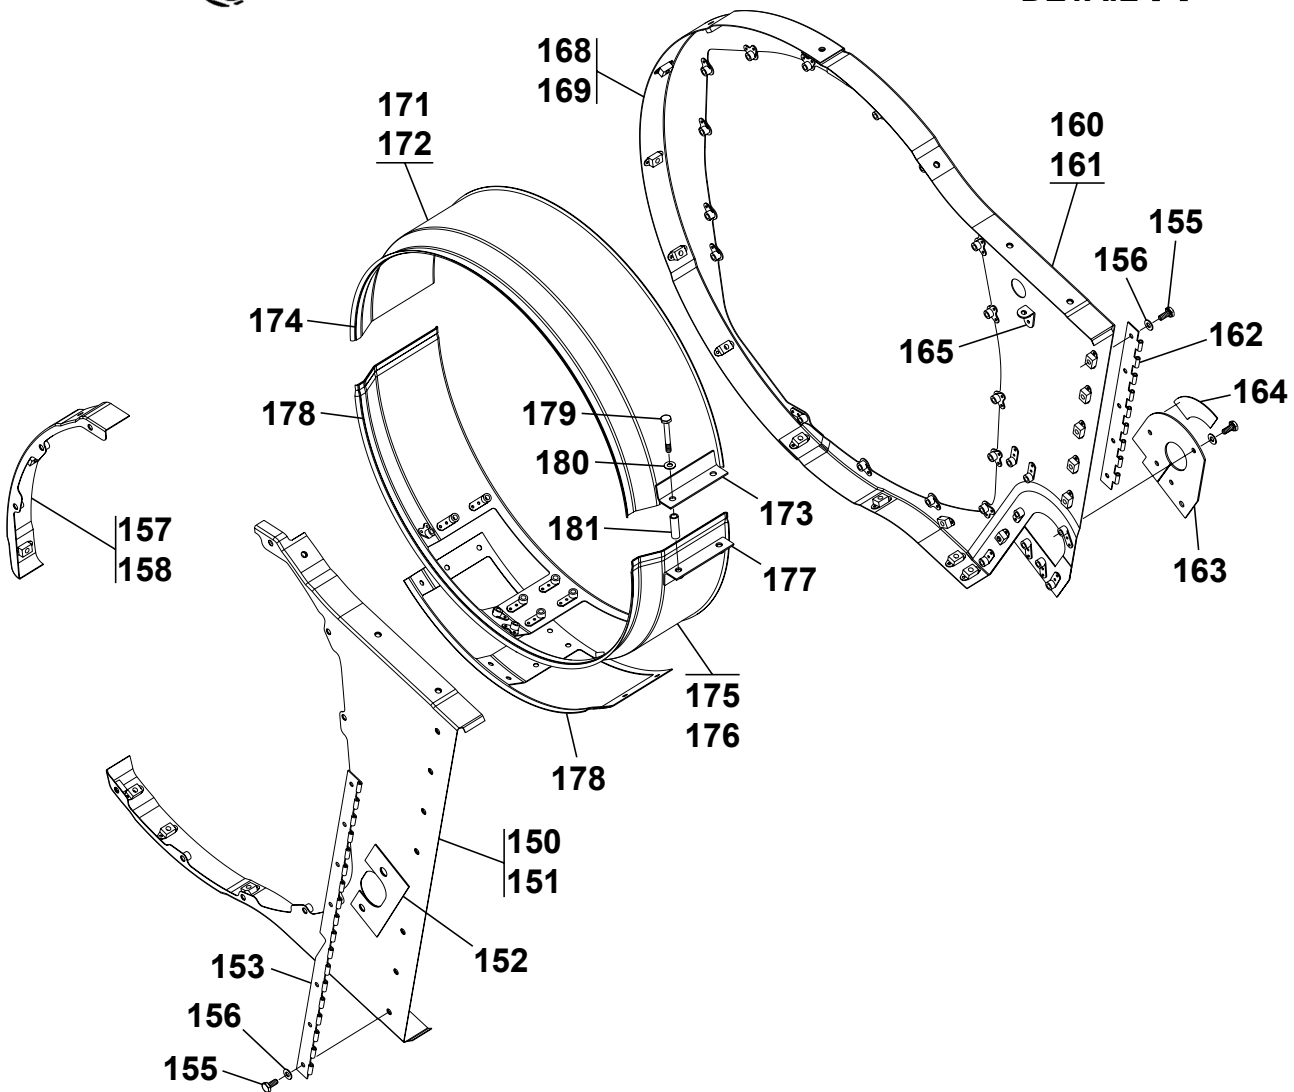

DETAIL B

INDUCTION AIR PLENUM INSTALLATION
Figure 02. (Sheet 3)

2614R1024
 A2614T1474
 B2614T1474

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

INDUCTION AIR PLENUM INSTALLATION

AIRPLANES (208B) 5000 & ON

		NOMENCLATURE								UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY	
150	2650131-1	.							(208B) 5000 - 5029	NP
		FIRESEAL ASSEMBLY - FORWARD LEFT FOR SPARES ORDER (MUST REPLACE WITH): 2650131-22								
- 150A	DDA06537-1	.							(208B) 5030 - 5262	01
		NOTE: WHEN ORDERING DDA PART NUMBERS, ALSO PROVIDE REFERENCE DRAWING NUMBER 2650131								
- 150B	2650131-21	.							(208B) 5263 & ON	01
151	2650131-2	.	.						(208B) 5000 - 5029	NP
		FIRESEAL - FORWARD LEFT FOR SPARES ORDER (MUST REPLACE WITH): 2650131-22								
- 151A	DDA06537-2	.	.						(208B) 5030 - 5262	01
		NOTE: WHEN ORDERING DDA PART NUMBERS, ALSO PROVIDE REFERENCE DRAWING NUMBER 2650131								
- 151B	2650131-22	.	.						(208B) 5263 & ON	01
		FIRESEAL - FORWARD LEFT SPARES REPLACEMENT FOR: 2650131-1 2650131-2								
152	2650131-3	.	.						(208B) 5000 & ON	01
153	2650131-4	.	.						(208B) 5000 & ON	01
- 154	S1389-1	.	.						(208B) 5000 & ON	AR
		SEALER STRIP ATTACHING PARTS								
155	AN3-3A	.	.						(208B) 5000 & ON	07
156	NAS1149C0332R	.	.						(208B) 5000 & ON	07
		WASHER --*--								
157	2650131-5	.							(208B) 5000 & ON	01
158	2650131-6	.	.						(208B) 5000 & ON	01
- 159	S1389-1	.	.						(208B) 5000 & ON	AR
160	2650131-7	.							(208B) 5000 - 5009	01
- 160A	2650131-19	.							(208B) 5010 - 5062 (208B) 5126 - 5262	NP
		FIRESEAL ASSEMBLY - AFT LEFT FOR SPARES ORDER (MUST REPLACE WITH): 2650131-27								
- 160B	DDA06602-1	.							(208B) 5063 - 5125	01
		NOTE: WHEN ORDERING DDA PART NUMBERS, ALSO PROVIDE REFERENCE DRAWING NUMBER 2650131								
- 160C	2695130-4	.							(208B) *5000 - 5062	01
		FIRESEAL ASSEMBLY * AIRPLANES (208B) 5000 THRU 5062 INCORPORATING CAB-71-02								
- 160D	2650131-27	.							(208B) 5263 & ON	01
		FIRESEAL ASSEMBLY - AFT LEFT SPARES REPLACEMENT FOR: 2650131-19								
161	2650131-10	.	.						(208B) 5000 - 5009	01
- 161A	2650131-20	.	.						(208B) 5010 - 5062 (208B) 5126 & ON	01
		FIRESEAL - AFT LEFT								
- 161B	DDA06602-2	.	.						(208B) 5063 - 5125	01
		NOTE: WHEN ORDERING DDA PART NUMBERS, ALSO PROVIDE REFERENCE DRAWING NUMBER 2650131								
- 161C	2650131-28	.	.						(208B) 5263 & ON	01
162	2650131-11	.	.						(208B) 5000 & ON	01
163	2650131-9	.	.						(208B) 5000 & ON	01
164	2650131-8	.	.						(208B) 5001 - 5062 (208B) 5126 & ON	01
		SEAL - AFT SEAL RETAINER - AFT								
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG
 INDUCTION AIR PLENUM INSTALLATION
 AIRPLANES (208B) 5000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 164A	DDA06602-3	.	.	SEAL RETAINER - AFT					(208B) 5063 - 5125	01
		NOTE: WHEN ORDERING DDA PART NUMBERS, ALSO PROVIDE REFERENCE DRAWING NUMBER 2650131								
- 164B	2650131-29	.	.	SEAL RETAINER - AFT					(208B) 5263 & ON	01
165	AN743-13	.	.	BRACKET					(208B) 5000 & ON	01
- 166	S1389-1	.	.	SEALER STRIP					(208B) 5000 & ON	AR
- 167	S1389-9	.	.	SEALER STRIP					(208B) 5000 & ON	AR
168	2650131-13	.		FIRESEAL ASSEMBLY - AFT RIGHT					(208B) 5000 & ON	01
169	2650131-14	.	.	FIRESEAL - AFT RIGHT					(208B) 5000 & ON	01
- 170	S1389-1	.	.	SEALER STRIP					(208B) 5000 & ON	AR
171	2650133-1	.		UPPER BAND ASSEMBLY					(208B) 5000 & ON	01
172	2650133-2	.	.	UPPER BAND					(208B) 5000 & ON	01
173	2650133-4	.	.	ANGLE					(208B) 5000 & ON	01
174	R441362	.	.	RUBBER					(208B) 5000 & ON	AR
175	2650133-5	.		LOWER BAND ASSEMBLY					(208B) 5000 - 5179	NP
				FOR SPARES ORDER (MUST REPLACE WITH): 2650133-24						
- 175A	2650133-24	.		LOWER BAND ASSEMBLY					(208B) 5180 & ON	01
				SPARES REPLACEMENT FOR: 2650133-5						
176	2650133-6	.	.	LOWER BAND					(208B) 5000 - 5179	NP
				FOR SPARES ORDER (MUST REPLACE WITH): 2650133-23						
- 176A	2650133-23	.	.	LOWER BAND					(208B) 5180 & ON	01
				SPARES REPLACEMENT FOR: 2650133-6						
177	2650133-3	.	.	ANGLE ASSEMBLY					(208B) 5000 & ON	01
178	R441362	.	.	RUBBER					(208B) 5000 & ON	AR
179	AN3-13A	.		BOLT					(208B) 5000 & ON	04
180	NAS1149C0332R	.		WASHER					(208B) 5000 & ON	04
181	NAS43DD3-56FC	.		SPACER					(208B) 5000 & ON	04
- ITEM NOT ILLUSTRATED										


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

71-70-00

OIL BREATHER AND ENGINE DRAINS INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24533

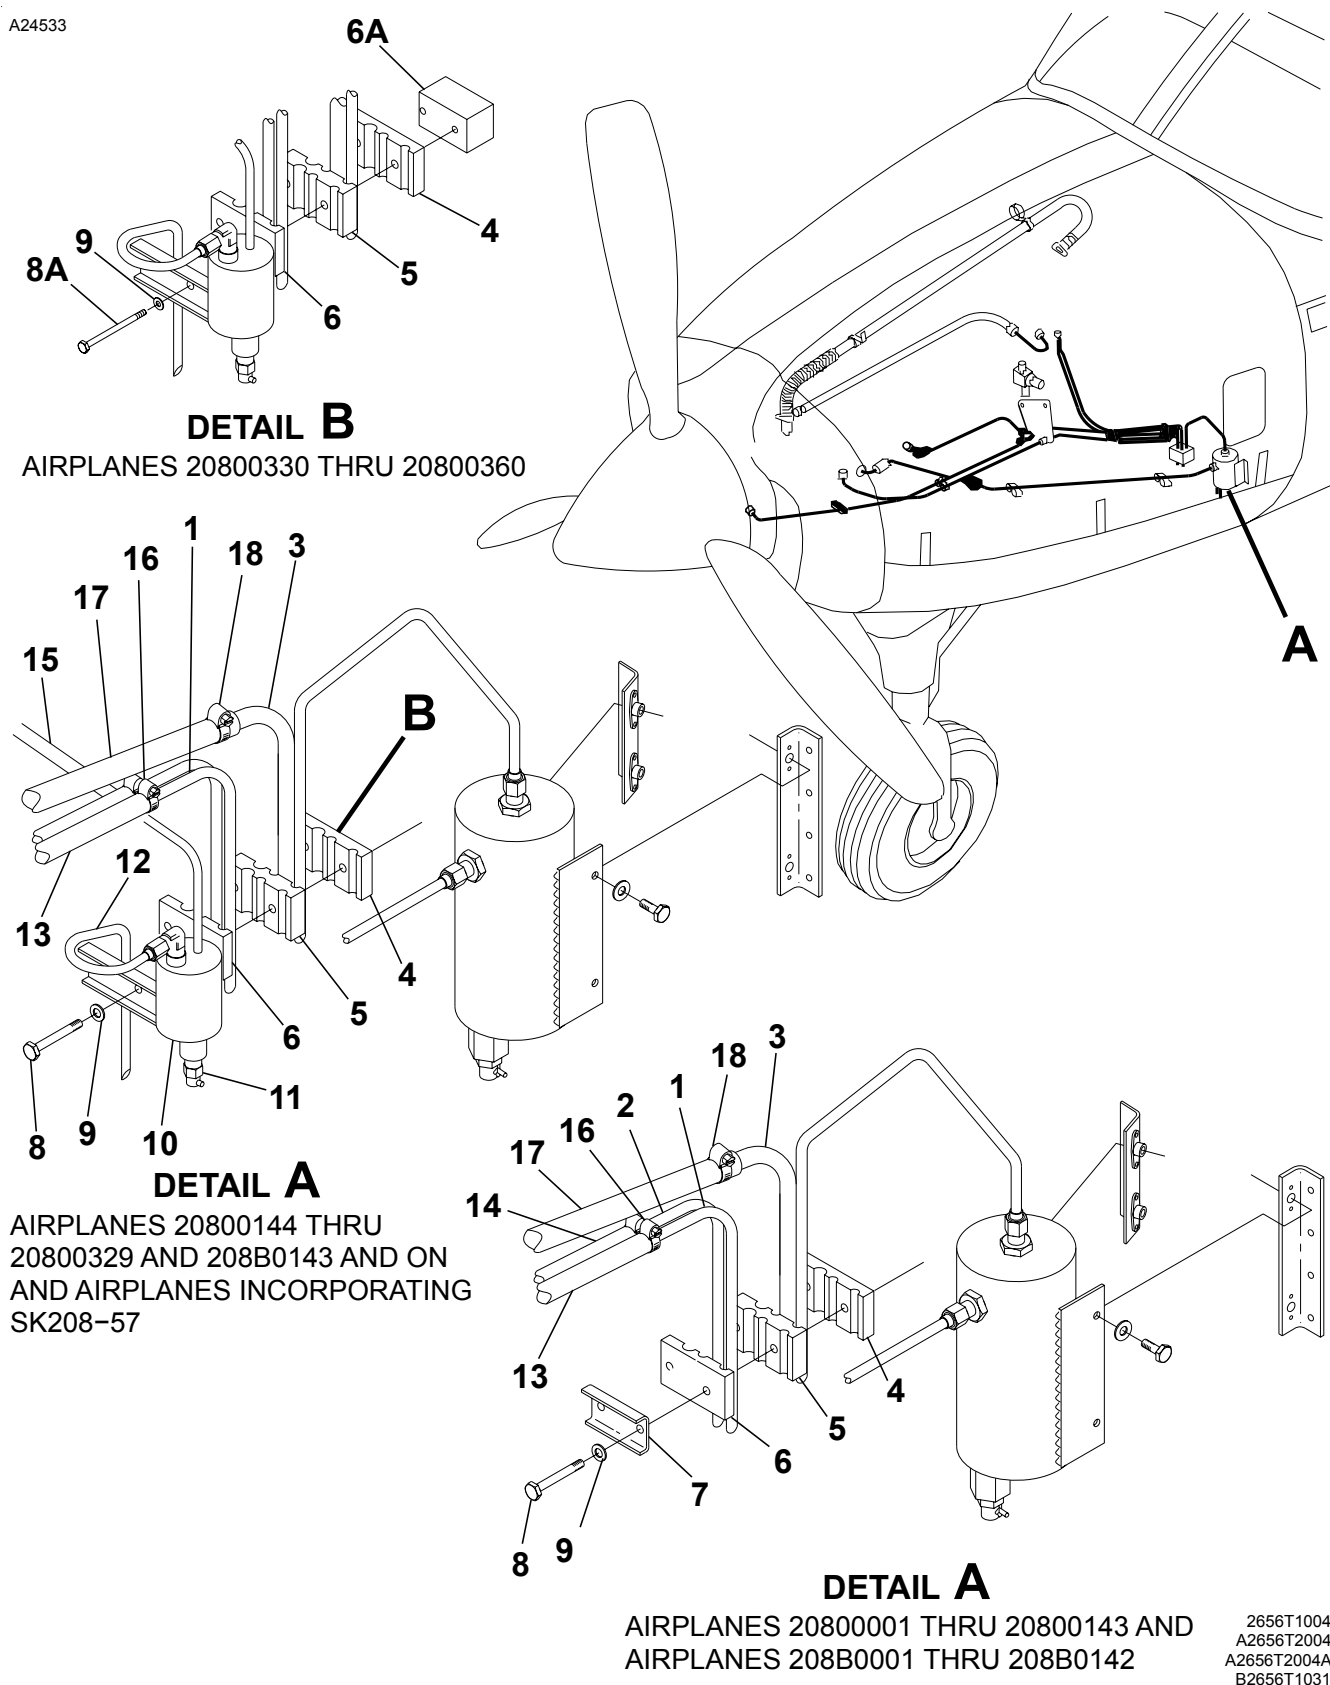

OIL BREATHER AND ENGINE DRAINS INSTALLATION
Figure 01. (Sheet 1)

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

OIL BREATHER AND ENGINE DRAINS INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	2600100-14	.	LINE - PROP OIL SEAL DRAIN						(208) 0001 & ON (208B) 0001 - 4999	01
2		.	LINE - FUEL MANIFOLD DUMP VALVE DRAIN FOR SPARES ORDER (MUST REPLACE WITH): 2656014-1							RF
3	2600100-16	.	LINE - COMBUSTION DRAIN VALVE						(208) 0001 & ON (208B) 0001 - 4999	01
4	2650050-3	.	SPACER - ENGINE DRAIN LINE AFT						(208) 0001 & ON (208B) 0001 - 4999	01
5	2650050-2	.	SPACER - ENGINE DRAIN LINE CENTER						(208) 0001 & ON (208B) 0001 - 4999	01
6	2650050-1	.	SPACER - ENGINE DRAIN LINE FORWARD						(208) 0001 & ON (208B) 0001 - 4999	01
6A	2656014-14	.	SPACER - ENGINE DRAIN LINE						(208) 0330 - 0416	01
- 6B	2656014-15	.	SPACER - ENGINE DRAIN LINE						(208) 0417 & ON (208B) 1302 & ON	01
7	2650051-1	.	PLATE - ENGINE DRAIN LINE FOR SPARES ORDER (MUST REPLACE WITH): 2656014-1 ATTACHING PARTS						(208) 0001 - 0143 (208B) 0001 - 0142	NP
8	AN3-15A	.	BOLT						(208) 0001 - 0329 (208B) 0001 - 1301	02
8A	AN3-26A	.	BOLT						(208) 0330 - 0360	02
- 8B	AN3-30A	.	BOLT						(208) 0361 & ON (208B) 1302 & ON	02
9	NAS1149F0332P	.	WASHER						(208) 0001 & ON (208B) 0001 - 4999	02
			--*--							
10	2656014-1	.	DRAIN CAN ASSEMBLY - F.C.U. LUBE OIL SPARES REPLACEMENT FOR: 2650051-1 * AIRPLANES (208) 0001 THRU 0143 INCORPORATING SK208-57 * AIRPLANES (208B) 0001 THRU 0142 INCORPORATING SK208-57						(208) 0144 & ON (208) *0001 - 0143 (208B) 0143 & ON (208B) *0001 - 0142	01
			NOTE: WHEN INITIALLY ORDERING PARTS FOR AIRPLANES -0001 THRU -0143 OR B0001 THRU B0142 ORDER 2656014-1 AND S2548-4 TOGETHER.							
11	0850410-1	.	DRAIN VALVE * AIRPLANES (208) 0001 THRU 0143 INCORPORATING SK208-57 * AIRPLANES (208B) 0001 THRU 0142 INCORPORATING SK208-57						(208) 0144 & ON (208) *0001 - 0143 (208B) 0143 & ON (208B) *0001 - 0142	01
12	2656014-6	.	LINE ASSEMBLY - DRAIN * AIRPLANES (208) 0001 THRU 0143 INCORPORATING SK208-57 * AIRPLANES (208B) 0001 THRU 0142 INCORPORATING SK208-57						(208) 0144 & ON (208) *0001 - 0143 (208B) 0143 & ON (208B) *0001 - 0142	01
13	S2548-4	.	HOSE - 13.50 IN LG BULK ITEM PROP OIL SEAL DRAIN						(208) 0001 & ON (208B) 0001 - 4999	01
14		.	HOSE 27.00 IN LG BULK ITEM FUEL MANIFOLD DUMP VALVE DRAIN							RF
15	S2548-4	.	HOSE - 22.00 IN LG BULK ITEM FUEL MANIFOLD DUMP VALVE DRAIN * AIRPLANES (208) 0001 THRU 0143 INCORPORATING SK208-57 * AIRPLANES (208B) 0001 THRU 0142 INCORPORATING SK208-57						(208) 0144 & ON (208) *0001 - 0143 (208B) 0143 & ON (208B) *0001 - 0142	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG



OIL BREATHER AND ENGINE DRAINS INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999


NOMENCLATURE										UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY	
NOTE: WHEN INITIALLY ORDERING PARTS FOR AIRPLANES -0001 THRU -0143 OR B0001 THRU B0142 ORDER 2656014-1 AND S2548-4 TOGETHER.										
16	S2357-1	.	CLAMP						(208) 0001 & ON (208B) 0001 - 4999	04
17	S2548-6	.	HOSE - 13.50 IN LG BULK ITEM COMBUSTION DRAIN						(208) 0001 & ON (208B) 0001 - 4999	01
18	S2357-3	.	CLAMP						(208) 0001 & ON (208B) 0001 - 4999	02
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24536

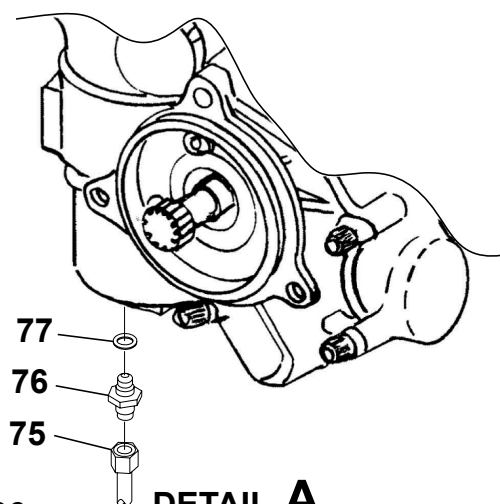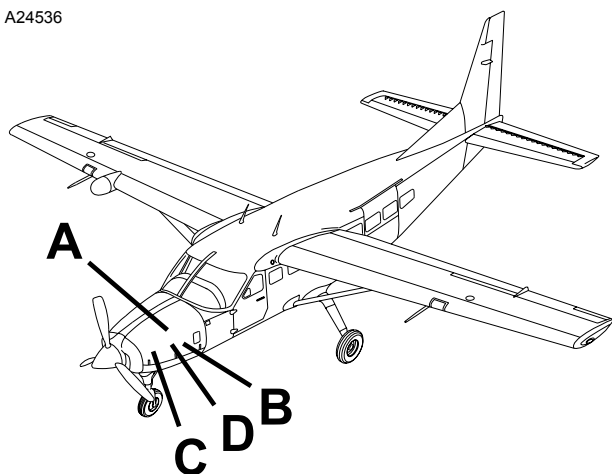


DETAIL A

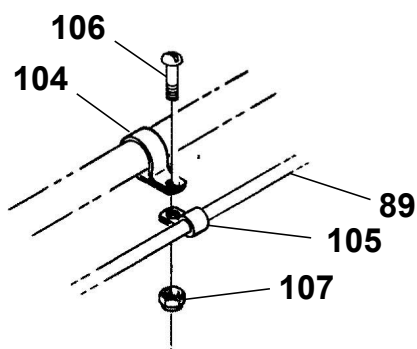


DETAIL D

AIRPLANES 208-0397 AND ON
 AIRPLANES 208B-1173 AND ON

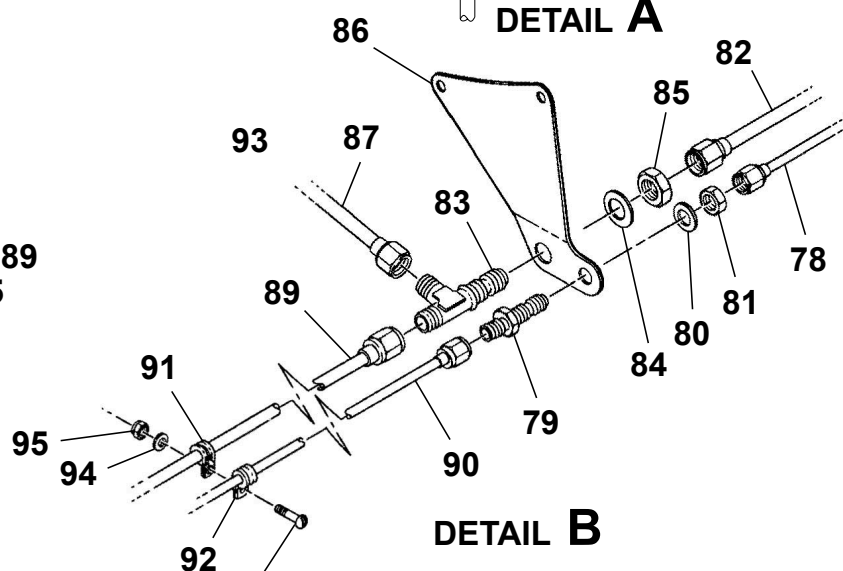


DETAIL B

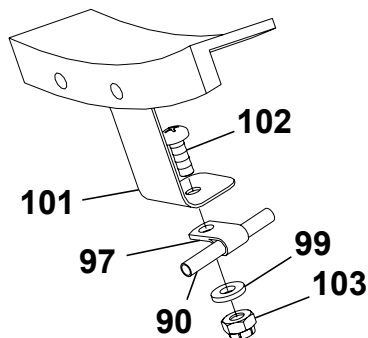


DETAIL C

AIRPLANES 208-0353 AND ON
 AIRPLANES 208B-0929 AND ON

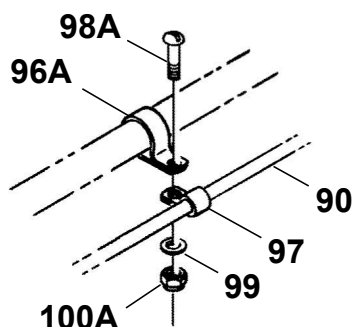

DETAIL C

AIRPLANES 208-0327 THRU -0352
 AIRPLANES 208B-0825 THRU -0928

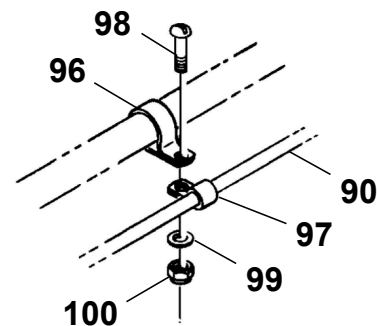

DETAIL C

AIRPLANES 208-0001 THRU -0326
 AIRPLANES 208B THRU -0824

OIL BREATHER AND ENGINE DRAINS INSTALLATION
 Figure 01. (Sheet 2)

2610T7005
 A2656R1004
 B2656R1010
 B2656R1011
 C2656T1011A
 C2656R1011

Figure 01
 Page 6

71-70-00 Nov 29, 2022

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

OIL BREATHER AND ENGINE DRAINS INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
75	2600100-12	.	LINE ASSEMBLY - FUEL MANIFOLD DUMP VALVE DRAIN							(208) 0001 & ON (208B) 0001 - 4999	01
76	AS5174-0404	.	UNION							(208) 0001 & ON (208B) 0001 - 4999	01
77	MS28778-4	.	PACKING							(208) 0001 & ON (208B) 0001 - 4999	01
78	2600100-11	.	LINE ASSEMBLY - PROP OIL SEAL DRAIN							(208) 0001 - 0241 (208B) 0001 - 0434	01
- 78A	2600100-64	.	LINE ASSEMBLY - PROP OIL SEAL DRAIN							(208) 0242 & ON (208B) 0435 & ON	01
79	AN832-4D	.	UNION ALTERNATE SPARE (INTERCHANGEABLE WITH): MS24393D4							(208) 0001 & ON (208B) 0001 - 4999	01
- 79A	MS24393D4	.	UNION ALTERNATE SPARE (INTERCHANGEABLE WITH): AN832-4D							(208) 0001 & ON (208B) 0001 - 4999	01
80	NAS1149F0763P	.	WASHER							(208) 0001 & ON (208B) 0001 - 4999	01
81	AN924-4D	.	NUT							(208) 0001 & ON (208B) 0001 - 4999	01
82	2600100-10	.	LINE ASSEMBLY - COMBUSTION DRAIN							(208) 0001 & ON (208B) 0001 - 4999	01
83	AN804D6	.	TEE							(208) 0001 & ON (208B) 0001 - 4999	01
84	NAS1149F0963P	.	WASHER							(208) 0001 & ON (208B) 0001 - 4999	01
85	AN924-6D	.	NUT ALTERNATE SPARE (INTERCHANGEABLE WITH): AS5178W06							(208) 0001 & ON (208B) 0001 - 4999	01
- 85A	AS5178W06	.	NUT ALTERNATE SPARE (INTERCHANGEABLE WITH): AN924-6D							(208) 0001 & ON (208B) 0001 - 4999	01
86	2650041-1	.	BRACKET - DRAIN LINE SUPPORT							(208) 0001 & ON (208B) 0001 - 4999	01
87	2600100-8	.	LINE ASSEMBLY - COMBUSTION DRAIN LG 13 IN							(208) 0001 & ON (208B) 0001 - 4999	01
- 88	MS35489-12	.	GROMMET - COMBUSTION DRAIN LINE							(208) 0001 & ON (208B) 0001 - 4999	01
89	2600100-9	.	LINE ASSEMBLY - COMBUSTION DRAIN LG 23 IN							(208) 0001 & ON (208B) 0001 - 4999	01
90	2600100-7	.	LINE ASSEMBLY - PROP OIL SEAL DRAIN							(208) 0001 & ON (208B) 0001 - 4999	01
91	MS21919DG6	.	CLAMP				83259		(208) 0001 & ON (208B) 0001 - 4999	01	
92	MS21919WDG3	.	CLAMP				70436		(208) 0001 & ON (208B) 0001 - 4999	01	
ATTACHING PARTS											
93	MS35207-263	.	SCREW				80205		(208) 0001 & ON (208B) 0001 - 4999	01	
94	NAS1149F0363P	.	WASHER				73197		(208) 0001 & ON (208B) 0001 - 4999	01	
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

OIL BREATHER AND ENGINE DRAINS INSTALLATION


AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
95	MS21044N3	.	NUT						4W953	(208) 0001 & ON (208B) 0001 - 4999	01
			--*--								
96	AN742D10	.	CLAMP							(208) 0001 - 0326 (208B) 0001 - 0824	01
96A	MS21103D20	.	CLAMP							(208) 0327 - 0352 (208B) 0825 - 0928	01
97	AN742D3	.	CLAMP							(208) 0001 & ON (208B) 0001 - 4999	01
			ATTACHING PARTS								
98	MS35207-263	.	SCREW						80205	(208) 0001 - 0326 (208B) 0001 - 0824	01
98A	MS35207-265	.	SCREW							(208) 0327 - 0352 (208B) 0825 - 0928	01
99	NAS1149F0363P	.	WASHER						73197	(208) 0001 & ON (208B) 0001 - 4999	01
100	MS21044N3	.	NUT						4W953	(208) 0001 - 0326 (208B) 0001 - 0824	01
100A	MS21042L3	.	NUT						00624	(208) 0327 - 0352 (208B) 0825 - 0928	01
			--*--								
101	2650113-4	.	BRACKET							(208) 0353 & ON (208B) 0929 & ON	01
			ATTACHING PARTS								
102	MS35207-263	.	SCREW						80205	(208) 0001 & ON (208B) 0001 & ON	01
103	MS21045L3	.	NUT							(208) 0353 & ON (208B) 0929 & ON	01
			--*--								
104	MS21919WDG17	.	CLAMP							(208) 0397 & ON (208B) 1173 & ON	01
105	MS21919WDG6	.	CLAMP						84971	(208) 0397 & ON (208B) 1173 & ON	01
106	AN520-10R8	.	SCREW							(208) 0397 & ON (208B) 1173 & ON	01
107	MS21042L3	.	NUT						00624	(208) 0397 & ON (208B) 1173 & ON	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24538

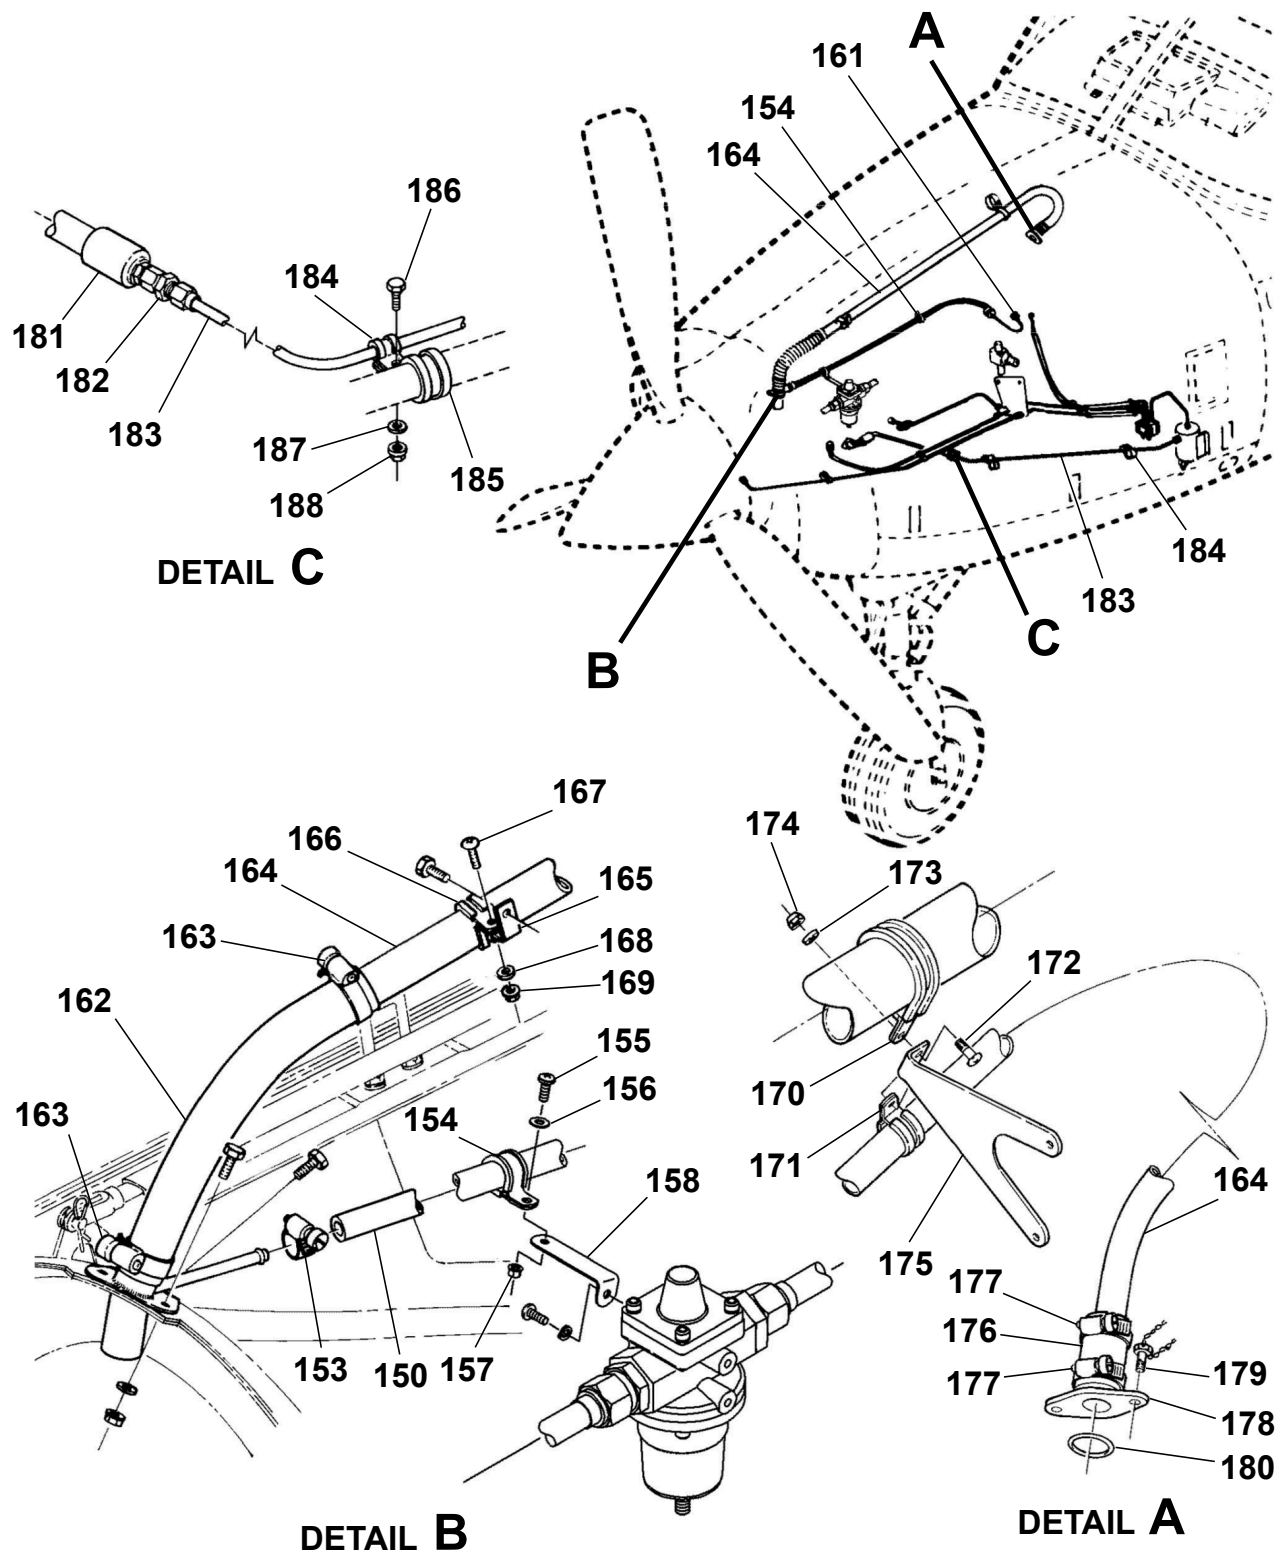

OIL BREATHER AND ENGINE DRAINS INSTALLATION
Figure 01. (Sheet 3)

26561004
 A26561005
 B26561001A
 C26561003

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

OIL BREATHER AND ENGINE DRAINS INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
150	S2554-4	.	HOSE 36.00 IN LG BULK ITEM STARTER/GENERATOR OIL DRAIN						(208) 0001 & ON (208B) 0001 - 4999	01
- 151	S2554-4	.	HOSE 22.00 IN LG BULK ITEM STARTER/GENERATOR OIL DRAIN - USED WITH AIR CONDITIONING TEE TO EXHAUST DRAIN						(208) 0140 & ON	01
- 152	S2554-4	.	HOSE 10.50 IN LG BULK ITEM STARTER/GENERATOR OIL DRAIN - USED WITH AIR CONDITIONING GENERATOR TO TEE ATTACHING PARTS						(208) 0140 & ON	01
153	S2357-1	.	CLAMP						(208) 0001 & ON (208B) 0001 - 4999	02
154	MS21919DG10	.	CLAMP						(208) 0001 & ON (208B) 0001 - 4999	02
155	MS35207-263	.	SCREW					80205	(208) 0001 & ON (208B) 0001 - 4999	02
156	NAS1149F0332P	.	WASHER						(208) 0001 & ON (208B) 0001 - 4999	02
157	MS21042-3	.	NUT						(208) 0001 & ON (208B) 0001 - 4999	02
158	S2300-19	.	BRACKET						(208) 0001 & ON (208B) 0001 - 4999	01
- 159	MS35206-263	.	SCREW					80205	(208) 0001 & ON (208B) 0001 - 4999	01
- 160	MS35338-100	.	WASHER - LOCK						(208) 0001 & ON (208B) 0001 - 4999	01
			--*--							
161	2600100-20	.	LINE ASSEMBLY - STARTER/GENERATOR OIL DRAIN						(208) 0001 & ON (208B) 0001 - 4999	01
162	S51-14	.	HOSE - OVERBOARD OIL BREATHER 12.50 IN LG ALTERNATE SPARE (INTERCHANGEABLE WITH): R221520						(208) 0001 & ON (208B) 0001 - 4999	01
- 162A	R221520	.	HOSE - OVERBOARD OIL BREATHER 12.50 IN LG ALTERNATE SPARE (INTERCHANGEABLE WITH): S51-14 ATTACHING PARTS						(208) 0001 & ON (208B) 0001 - 4999	01
163	S1891-12S	.	CLAMP					79326	(208) 0001 & ON (208B) 0001 - 4999	02
			--*--							
164	2650085-4	.	TUBE						(208) 0001 & ON (208B) 0001 - 4999	01
			ATTACHING PARTS							
165	S2300-24	.	BRACKET						(208) 0001 & ON (208B) 0001 - 4999	01
166	MS21919DG14	.	CLAMP						(208) 0001 & ON (208B) 0001 - 4999	01
167	MS35207-263	.	SCREW					80205	(208) 0001 & ON (208B) 0001 - 4999	01
168	NAS1149F0363P	.	WASHER					73197	(208) 0001 & ON (208B) 0001 - 4999	01
169	MS21042-3	.	NUT						(208) 0001 & ON (208B) 0001 - 4999	01
170	MS21919DG32	.	CLAMP						(208) 0001 & ON (208B) 0001 - 4999	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

OIL BREATHER AND ENGINE DRAINS INSTALLATION



AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
171	MS21919DG14	.	CLAMP						(208) 0001 & ON (208B) 0001 - 4999	01
172	AN3-5A	.	BOLT						(208) 0001 & ON (208B) 0001 - 4999	01
173	NAS1149F0363P	.	WASHER					73197	(208) 0001 & ON (208B) 0001 - 4999	01
174	MS21042-3	.	NUT						(208) 0001 & ON (208B) 0001 - 4999	01
			--*--							
175		.	MOUNTING BRACKET - TUBE ASSEMBLY AFT REFER TO 71-60-01 FIGURE 01.							RF
176	S51-14-8	.	HOSE						(208) 0001 & ON (208B) 0001 - 4999	01
			ATTACHING PARTS							
177	S1891-12S	.	CLAMP					79326	(208) 0001 & ON (208B) 0001 - 4999	02
			--*--							
178	5950028-10	.	BREATHER VENT ASSEMBLY - OVERBOARD OIL BREATHER						(208) 0001 & ON (208B) 0001 - 4999	01
			ATTACHING PARTS							
179	AN3H3A	.	BOLT						(208) 0001 & ON (208B) 0001 - 4999	02
			--*--							
180	MS28775-022	.	O-RING						(208) 0001 & ON (208B) 0001 - 4999	01
181	S2495-4-000-0145	.	HOSE ASSEMBLY FOR SPARES ORDER (MUST REPLACE WITH): S2808-4-0144						(208) 0001 - 0260 (208B) 0001 - 0586	01
- 181A	S2808-4-0144	.	HOSE ASSEMBLY SPARES REPLACEMENT FOR: S2495-4-000-0145						(208) 0261 & ON (208B) 0587 & ON	01
182	MS24392-4	.	UNION						(208) 0001 - 0416	01
- 182A	AS5174-0404	.	UNION						(208) 0417 & ON (208B) 1320 & ON	01
183	2600100-24	.	LINE ASSEMBLY - FUEL MANIFOLD DRAIN						(208) 0242 - 0360 (208B) 0001 - 1301	01
- 183A	2600100-66	.	LINE ASSEMBLY - FUEL MANIFOLD DRAIN						(208) 0361 & ON (208B) 1302 & ON	01
			ATTACHING PARTS							
184	MS21919WDG4	.	CLAMP					OTWO	(208) 0001 & ON (208B) 0001 - 4999	02
185	MS21919DG18	.	CLAMP						(208) 0001 & ON (208B) 0001 - 4999	02
186	AN3-5A	.	BOLT						(208) 0001 & ON (208B) 0001 - 4999	02
187	NAS1149F0363P	.	WASHER					73197	(208) 0001 & ON (208B) 0001 - 4999	02
188	MS21042-3	.	NUT						(208) 0001 & ON (208B) 0001 - 4999	02
			--*--							

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24540

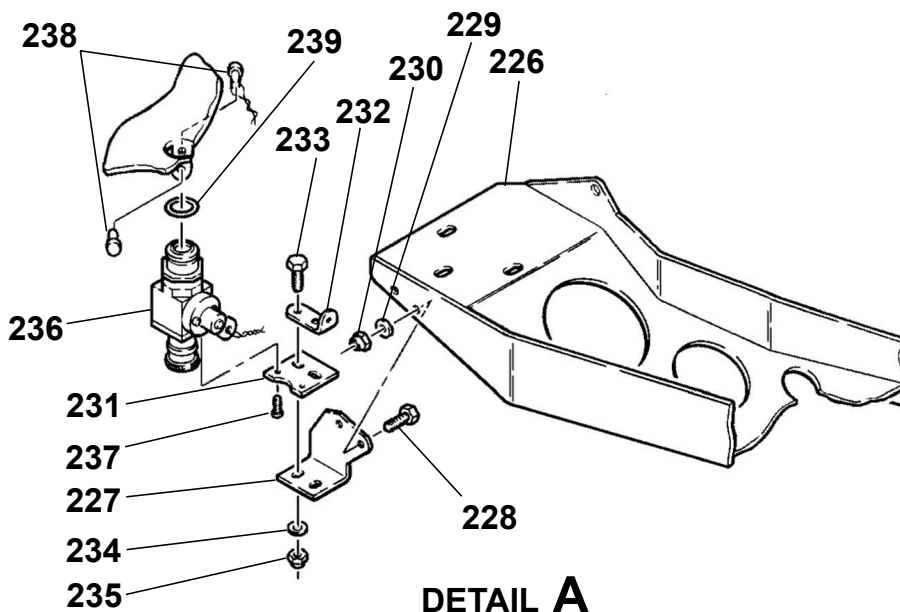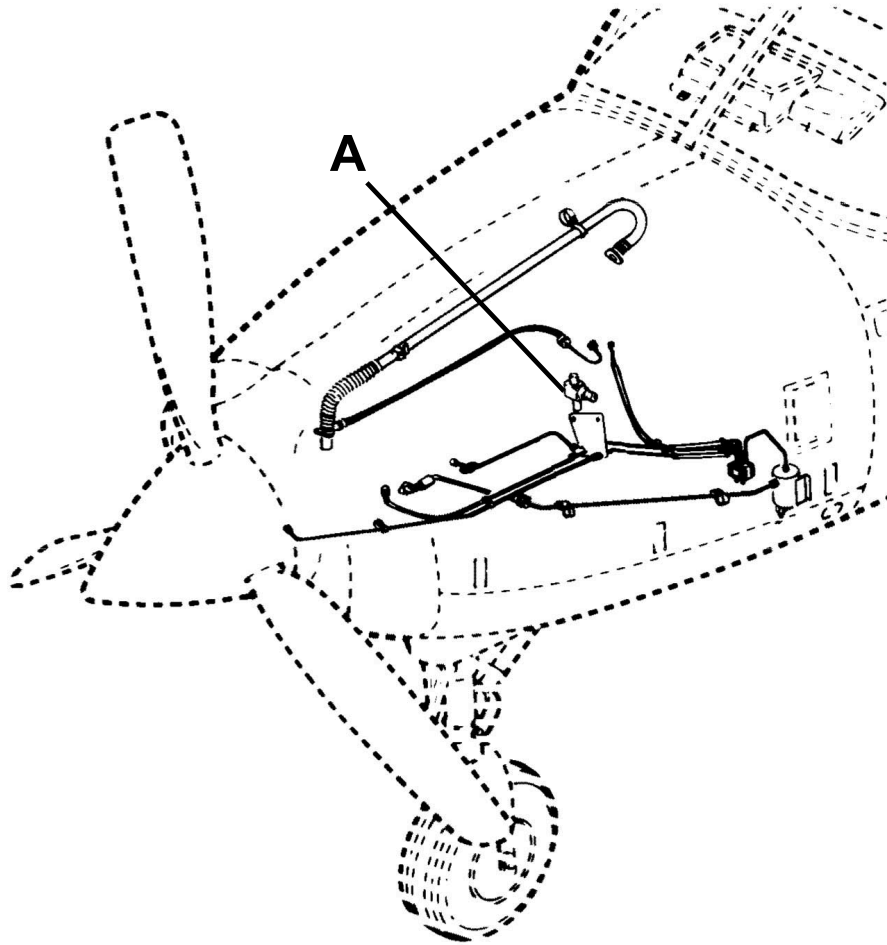

DETAIL A

OIL BREATHER AND ENGINE DRAINS INSTALLATION
Figure 01. (Sheet 4)

26561004
 A26562002

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

OIL BREATHER AND ENGINE DRAINS INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 225		.	.	.	.	.	.	.		
226		.	.	.	.	.	.	.		RF
		DELETED - NOT USED								
		.	.	.	.	.	.	.		
		BRACKET ASSEMBLY - ALTERNATOR								
		REFER TO 24-36-01 FIGURE 01.								
227	2601179-3	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	01
		.	.	.	.	.	.	.		
		BRACKET - DRAIN VALVE MOUNT								
		.	.	.	.	.	.	.		
		ATTACHING PARTS								
228	AN3-5A	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	02
		.	.	.	.	.	.	.		
		BOLT								
229	NAS1149F0363P	.	.	.	.	.	.	73197	(208) 0001 & ON (208B) 0001 - 4999	02
		.	.	.	.	.	.	.		
		WASHER								
230	MS21045L3	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	02
		.	.	.	.	.	.	.		
		NUT								
		.	.	.	.	.	.	.		
		MOUNT - DRAIN VALVE								
231	2601179-2	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	01
		.	.	.	.	.	.	.		
		BRACKET								
232	2601179-4	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	01
		.	.	.	.	.	.	.		
		ATTACHING PARTS								
233	AN3-5A	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	02
		.	.	.	.	.	.	.		
		BOLT								
234	NAS1149F0363P	.	.	.	.	.	.	73197	(208) 0001 & ON (208B) 0001 - 4999	02
		.	.	.	.	.	.	.		
		WASHER								
235	MS21045L3	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	02
		.	.	.	.	.	.	.		
		NUT								
		.	.	.	.	.	.	.		
		VALVE - OIL DRAIN								
236	S2669-1	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	01
		.	.	.	.	.	.	.		
		ATTACHING PARTS								
237	MS35275-215	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	02
		.	.	.	.	.	.	.		
		SCREW								
238	MS20392-2C9	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	02
		.	.	.	.	.	.	.		
		PIN								
239	M83248/1-016	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	01
		.	.	.	.	.	.	.		
		O-RING								
		.	.	.	.	.	.	.		
		ITEM NOT ILLUSTRATED								


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

71-70-00

OIL BREATHER AND ENGINE DRAINS INSTALLATION
AIRPLANES (208B) 5000 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A87746

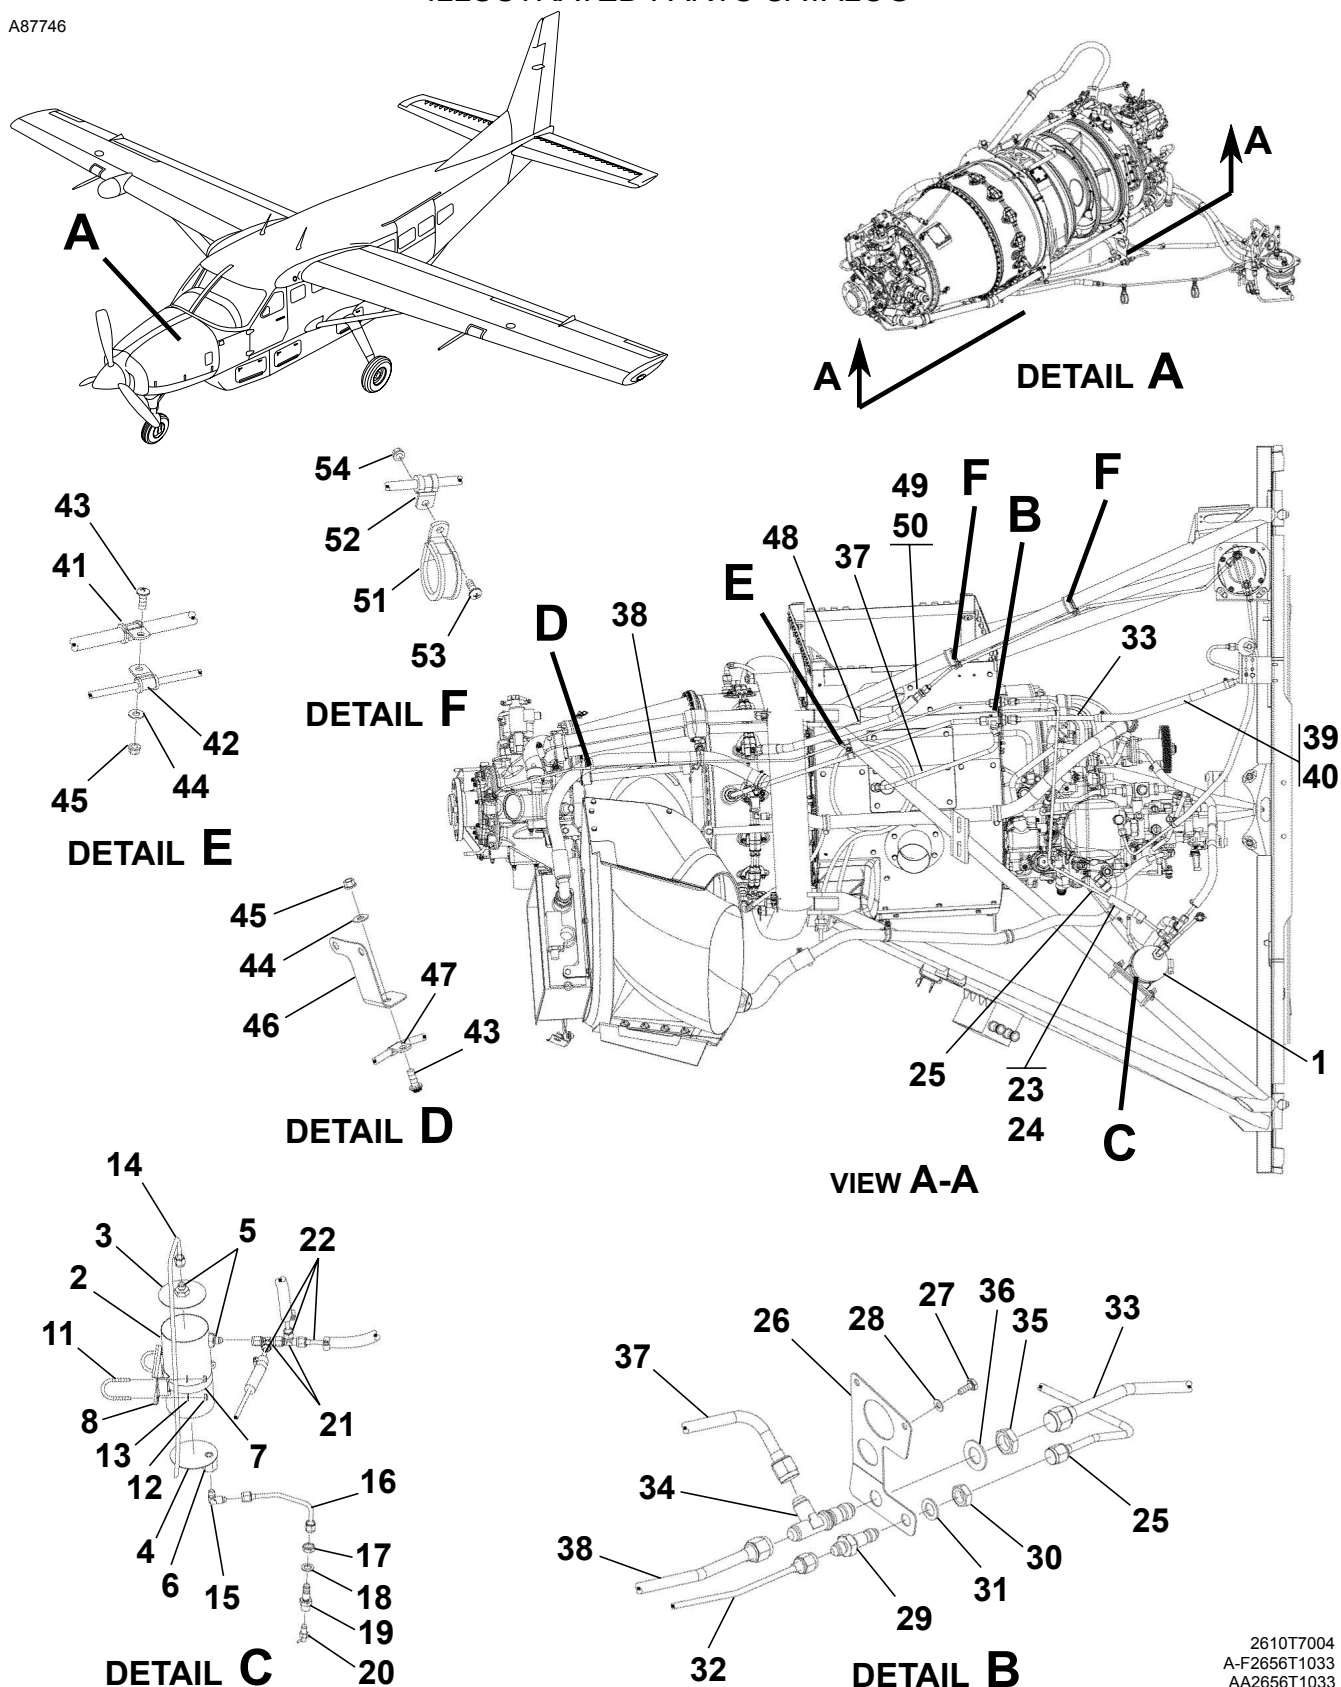

OIL BREATHER AND ENGINE DRAINS INSTALLATION
 Figure 02. (Sheet 1)

2610T7004
 A-F2656T1033
 AA2656T1033

OIL BREATHER AND ENGINE DRAINS INSTALLATION

AIRPLANES (208B) 5000 & ON

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

OIL BREATHER AND ENGINE DRAINS INSTALLATION
AIRPLANES (208B) 5000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
30	AN924-4D	.	NUT						(208B) 5000 & ON	01
31	NAS1149F0763P	.	WASHER						(208B) 5000 & ON	01
32	2600100-7	.	LINE ASSEMBLY						(208B) 5000 & ON	01
33	2600100-10	.	LINE ASSEMBLY						(208B) 5000 & ON	01
34	AN804D6	.	TEE						(208B) 5000 & ON	01
35	AN924-6D	.	NUT						(208B) 5000 & ON	01
			ALTERNATE SPARE (INTERCHANGEABLE WITH): AS5178W06							
- 35A	AS5178W06	.	NUT						(208B) 5000 & ON	01
			ALTERNATE SPARE (INTERCHANGEABLE WITH): AN924-6D							
36	NAS1149F0963P	.	WASHER						(208B) 5000 & ON	01
37	2600100-8	.	LINE ASSEMBLY						(208B) 5000 & ON	01
38	2600100-9	.	LINE ASSEMBLY						(208B) 5000 & ON	01
39	S2548-6-13.5	.	HOSE						(208B) 5000 & ON	01
40	S2357-3	.	CLAMP						(208B) 5000 & ON	01
41	MS21919WDG6	.	CLAMP					84971	(208B) 5000 & ON	01
42	MS21919WDG3	.	CLAMP					70436	(208B) 5000 & ON	01
43	MS35207-263	.	SCREW					80205	(208B) 5000 & ON	02
44	NAS1149F0332P	.	WASHER						(208B) 5000 & ON	02
45	MS21042-3	.	NUT						(208B) 5000 & ON	02
			ALTERNATE SPARE (INTERCHANGEABLE WITH): NAS1291X3							
- 45A	NAS1291X3	.	NUT						(208B) 5000 & ON	02
			ALTERNATE SPARE (INTERCHANGEABLE WITH): MS21042-3							
46	2650113-4	.	BRACKET						(208B) 5000 & ON	01
47	AN742D3	.	CLAMP						(208B) 5000 & ON	01
48	S2808-4-0144	.	HOSE ASSEMBLY						(208B) 5000 & ON	01
49	AS5174D0404	.	UNION						(208B) 5000 & ON	01
50	2656001-25	.	TUBE ASSEMBLY - FUEL MAIN DRAIN						(208B) 5000 & ON	01
51	MS21919WDG18	.	CLAMP					84971	(208B) 5000 & ON	02
52	MS21919WDG4	.	CLAMP					OTWO	(208B) 5000 & ON	02
53	MS35207-263	.	SCREW					80205	(208B) 5000 & ON	02
- 53A	NAS1291X3	.	NUT						(208B) 5000 & ON	02
			ALTERNATE SPARE (INTERCHANGEABLE WITH): MS21042-3							
54	MS21042-3	.	NUT						(208B) 5000 & ON	02

- ITEM NOT ILLUSTRATED

A87747




Figure 02
Page 6
71-70-00 Nov 4, 2021

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

OIL BREATHER AND ENGINE DRAINS INSTALLATION

AIRPLANES (208B) 5000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
75	2650118-2	.							(208B) 5000 & ON	01
76	MS28775-022	.							(208B) 5000 & ON	01
77	S51-14-8	.							(208B) 5000 & ON	01
78	S1891-12	.							(208B) 5000 & ON	01
79	2650085-4	.							(208B) 5000 & ON	01
80	MS21919WDG14	.							(208B) 5000 & ON	02
81	S2300-24	.							(208B) 5000 & ON	01
82	AN3-4A	.						80205	(208B) 5000 & ON	01
83	NAS1149F0332P	.							(208B) 5000 & ON	01
84	MS35207-265	.							(208B) 5000 & ON	01
85	MS21042-3	.							(208B) 5000 & ON	01
		.							ALTERNATE SPARE (INTERCHANGEABLE WITH): NAS1291X3	
- 85A	NAS1291X3	.							(208B) 5000 & ON	01
		.							ALTERNATE SPARE (INTERCHANGEABLE WITH): MS21042-3	
86	S51-14-50	.							(208B) 5000 & ON	01
87	S1891-12	.							(208B) 5000 & ON	02
88	2600100-20	.							(208B) 5000 & ON	01
		.							ATTACHING PARTS	
89	MS21919WDG3	.						70436	(208B) 5000 & ON	01
90	MS21919WCJ8	.							(208B) 5000 & ON	01
		.							ALTERNATE SPARE (INTERCHANGEABLE WITH): AS21919WCJ08	
- 90A	AS21919WCJ08	.							(208B) 5000 & ON	01
		.							ALTERNATE SPARE (INTERCHANGEABLE WITH): MS21919WCJ8	
91	MS35207-263	.						80205	(208B) 5000 & ON	01
92	MS21042-3	.							(208B) 5000 & ON	01
		.							ALTERNATE SPARE (INTERCHANGEABLE WITH): NAS1291X3	
- 92A	NAS1291X3	.							(208B) 5000 & ON	01
		.							ALTERNATE SPARE (INTERCHANGEABLE WITH): MS21042-3	
		.							--*--	
93	S2554-4-17.00	.							(208B) 5000 & ON	01
94	S2357-1	.							(208B) 5000 & ON	02
95	2650085-14	.							(208B) 5000 & ON	01
96	S2554-4-24.00	.							(208B) 5000 & ON	01
97	S2357-1	.							(208B) 5000 & ON	02
98	2650118-7	.							(208B) 5000 & ON	01
99	NAS552-4D	.							(208B) 5000 & ON	01
100	NAS551-4D	.							(208B) 5000 & ON	01
101	MS28778-4	.							(208B) 5000 & ON	01
102	MS28775-011	.						33269	(208B) 5000 & ON	01
103	S2548-4-22.00	.							(208B) 5000 & ON	02
104	S2357-1	.							(208B) 5000 & ON	01
105	2600100-16	.							(208B) 5000 & ON	01
106	2656001-24	.							(208B) 5000 & ON	01
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

OIL BREATHER AND ENGINE DRAINS INSTALLATION

AIRPLANES (208B) 5000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
107	H990004	.	SPIRAL WRAP						(208B) 5000 & ON	AR
108	2656014-1	.	DRAIN CAN ASSEMBLY						(208B) 5000 & ON	01
109	2656014-2	.	DRAIN CAN WELD ASSEMBLY						(208B) 5000 & ON	01
110	2656014-6	.	LINE ASSEMBLY						(208B) 5000 & ON	01
111	0850410-1	.	DRAIN VALVE						(208B) 5000 & ON	01
112	2650050-1	.	SPACER						(208B) 5000 & ON	01
113	2650050-2	.	SPACER						(208B) 5000 & ON	01
114	2650050-3	.	SPACER						(208B) 5000 & ON	01
115	2656014-15	.	SPACER						(208B) 5000 & ON	01
116	AN3-30A	.	BOLT						(208B) 5000 & ON	02
117	NAS1149F0363P	.	WASHER					73197	(208B) 5000 & ON	02
118	MS29512-04	.	O-RING					58918	(208B) 5000 & ON	01
119	AS5174J0404	.	UNION						(208B) 5000 & ON	01
120	AN833-4J	.	ELBOW						(208B) 5000 & ON	01
121	AS5178J04	.	NUT					04638	(208B) 5000 & ON	01
122	MS29512-04	.	O-RING					58918	(208B) 5000 & ON	01

- ITEM NOT ILLUSTRATED