

CHAPTER

73

**ENGINE
FUEL AND
CONTROL**

RECORD OF TEMPORARY REVISIONS

[illegible]

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

<u>CHAPTER/ SECTION/ SUBJECT</u>	<u>START PAGE OR FIGURE</u>	<u>NUMBER OF PAGES</u>	<u>DATE</u>
73 - TITLE		1	
73 - LIST OF EFFECTIVE PAGES	Page 1	1	Nov 29, 2022
73 - TABLE OF CONTENTS	Page 1	1	Nov 29, 2022
73-10-00	Figure 01	3	Nov 29, 2022
73-10-00	Figure 02	4	Nov 4, 2021
73-30-00	Figure 01	3	Nov 4, 2021
73-32-00	Figure 01	3	Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

<u>SUBJECT</u>	<u>LOCATION</u>	<u>EFFECTIVITY</u>	
		<u>START</u>	<u>END</u>
EPA CAN INSTALLATION	73-10-00 Figure 01	(208) 0001 (208B) 0001	& ON 4999
EPA CAN INSTALLATION	73-10-00 Figure 02	(208) 0242 (208) 0001 (208B) 0435 (208B) 0001	& ON 0241 & ON 0434
FUEL FLOW INDICATOR INSTALLATION	73-30-00 Figure 01	(208) 0001 (208B) 0001	0499 1999
FUEL TOTALIZER INDICATING SYSTEM	73-32-00 Figure 01	(208) 0001 (208B) 0001	& ON & ON

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG



73-10-00

EPA CAN INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24542

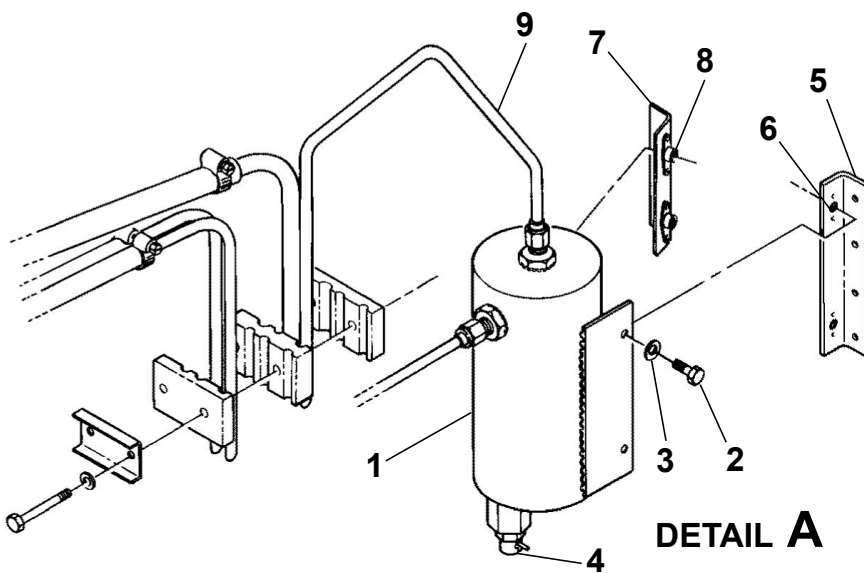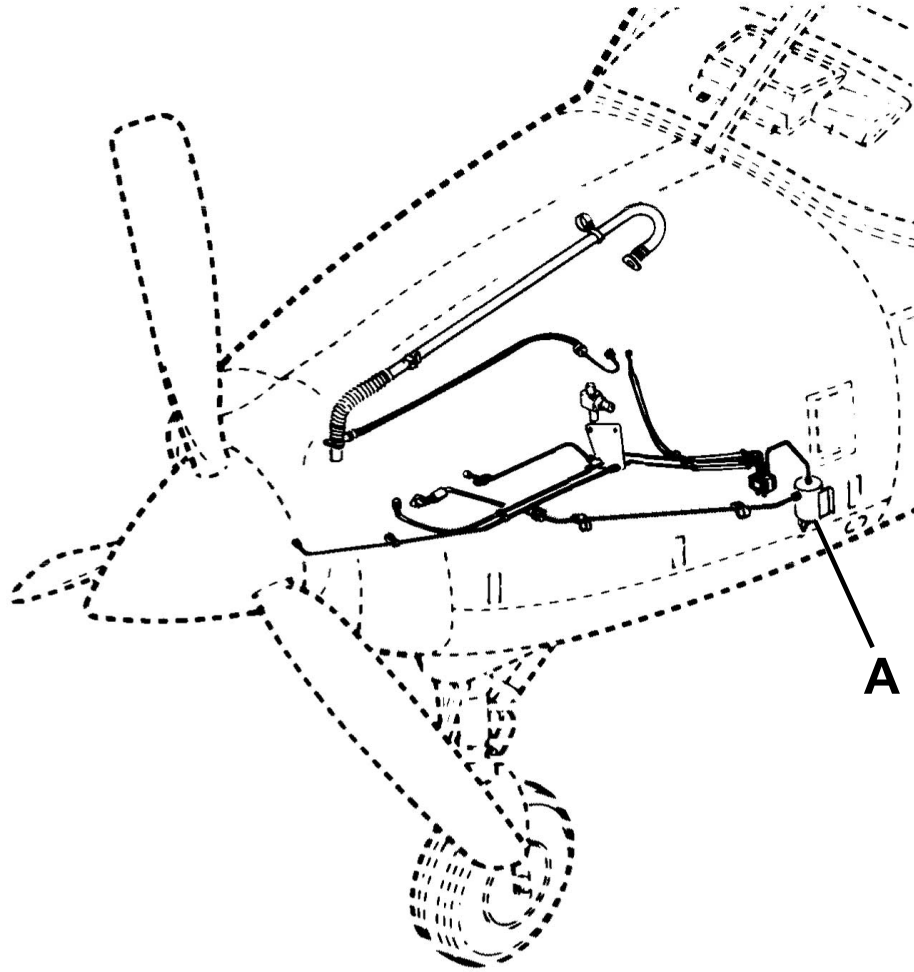

DETAIL A

EPA CAN INSTALLATION
 Figure 01. (Sheet 1)

26561004
 A26562004

EPA CAN INSTALLATION

		NOMENCLATURE							UNITS PER ASSY		
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	2656011-2	.	CAN ASSEMBLY - EPA							(208) 0001 & ON (208B) 0001 - 4999	01
			ATTACHING PARTS								
2	AN3-3A	.	BOLT							(208) 0001 & ON (208B) 0001 - 4999	04
3	NAS1149C0332R	.	WASHER							(208) 0001 & ON (208B) 0001 - 4999	04
			--*--								
4	0850410-1	.	DRAIN VALVE - EPA CAN							(208) 0001 & ON (208B) 0001 - 4999	01
5	2656011-12	.	SUPPORT BRACKET ASSEMBLY - EPA OUTBOARD							(208) 0001 - 0329 (208B) 0001 - 1301	01
- 5A	2656011-19	.	BRACKET ASSEMBLY - EPA OUTBOARD							(208) 0330 & ON (208B) 1302 - 4999	01
6	MS21047L3	.	.	NUTPLATE					13499	(208) 0001 & ON (208B) 0001 - 4999	02
7	2656011-16	.	BRACKET ASSEMBLY - EPA INBOARD							(208) 0001 - 0329 (208B) 0001 - 1301	01
- 7A	2656011-20	.	BRACKET ASSEMBLY - EPA INBOARD							(208) 0330 & ON (208B) 1302 - 4999	01
8	MS21047L3	.	.	NUTPLATE					13499	(208) 0001 & ON (208B) 0001 - 4999	02
9	2600100-13	.	LINE ASSEMBLY - EPA CAN VENT							(208) 0001 & ON (208B) 0001 - 4999	01

73-10-00 Figure 01
Page 3
Nov 29, 2022

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG


73-10-00

EPA CAN INSTALLATION

**AIRPLANES (208) 0242 & ON AND AIRPLANES (208) 0001 THRU 0241
INCORPORATING SK208-122 AND AIRPLANES (208B) 0435 & ON AND
AIRPLANES (208B) 0001 THRU 0434 INCORPORATING SK208-122**

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24544

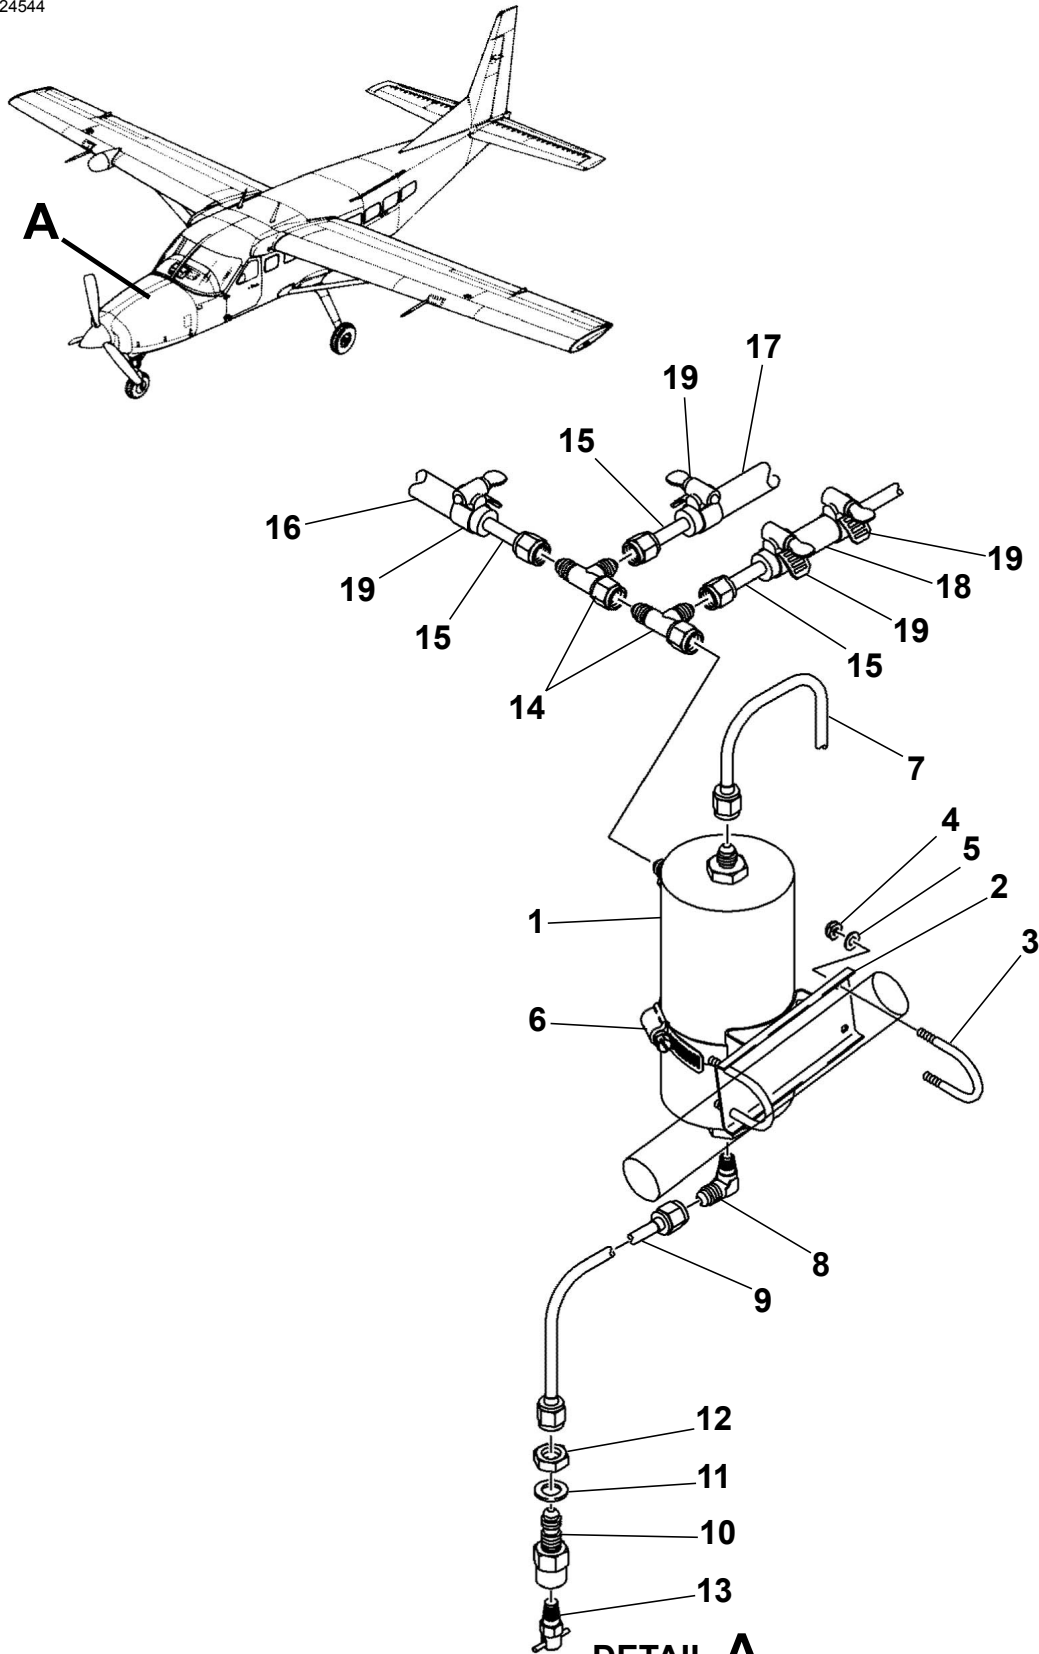

DETAIL A
EPA CAN INSTALLATION
Figure 02. (Sheet 1)

26107002]
 A2656T1026

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

EPA CAN INSTALLATION

**AIRPLANES (208) 0242 & ON AND AIRPLANES (208) 0001 THRU 0241 INCORPORATING SK208-122 AND
 AIRPLANES (208B) 0435 & ON AND AIRPLANES (208B) 0001 THRU 0434 INCORPORATING SK208-122**

		NOMENCLATURE								UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	2656011-18	.	CAN ASSEMBLY - EPA							(208) 0001 & ON (208B) 0001 & ON	01
2	2601260-2	.	SUPPORT BRACKET ASSEMBLY							(208) 0001 & ON (208B) 0001 & ON	01
3	2601260-5	.	CLAMP BOLT							(208) 0001 & ON (208B) 0001 & ON	02
			ATTACHING PARTS								
4	MS21083N3	.	NUT							(208) 0001 & ON (208B) 0001 & ON	04
5	NAS1149D0332K	.	WASHER							(208) 0001 & ON (208B) 0001 & ON	04
			--*--								
6	S1891-48S	.	CLAMP - EPA CAN ATTACH							08484 (208) 0001 & ON (208B) 0001 & ON	01
7	2650085-7	.	VENT TUBE ASSEMBLY FOR SPARES ORDER (MUST REPLACE WITH): 2650085-14							(208) 0242 - 0260 (208B) 0435 - 0597	NP
- 7A	2650085-14	.	VENT TUBE ASSEMBLY SPARES REPLACEMENT FOR: 2650085-7							(208) 0261 & ON (208B) 0598 & ON	01
8	MS20822-4	.	ELBOW							(208) 0001 & ON (208B) 0001 & ON	01
9	2650085-8	.	DRAIN TUBE ASSEMBLY FOR SPARES ORDER (MUST REPLACE WITH): 2650085-15							(208) 0242 - 0260 (208B) 0435 - 0597	NP
- 9A	2650085-15	.	DRAIN TUBE ASSEMBLY SPARES REPLACEMENT FOR: 2650085-8							(208) 0261 & ON (208B) 0598 & ON	01
10	2650085-13	.	FITTING - BULKHEAD							(208) 0001 & ON (208B) 0001 & ON	01
11	NAS1149D0763K	.	WASHER							(208) 0001 & ON (208B) 0001 & ON	01
12	AS5178-04	.	NUT							(208) 0001 & ON (208B) 0001 & ON	01
13	0850410-1	.	VALVE ASSEMBLY - DRAIN EPA CAN							(208) 0001 & ON (208B) 0001 & ON	01
14	CM3686D04-04-04	.	TEE ALTERNATE SPARE (INTERCHANGEABLE WITH): 7M151DA4L 7M151DA4							(208) 0001 & ON (208B) 0001 & ON	02
- 14A	7M151DA4	.	TEE ALTERNATE SPARE (INTERCHANGEABLE WITH): CM3686D04-04-04							(208) 0001 & ON (208B) 0001 & ON	02
- 14B	7M151DA4L	.	TEE ALTERNATE SPARE (INTERCHANGEABLE WITH): CM3686D04-04-04							(208) 0001 & ON (208B) 0001 & ON	02
15	2650085-10	.	TUBE ASSEMBLY							(208) 0001 & ON (208B) 0001 & ON	03
16		.	HOSE								RF
			REFER TO 21-51-01 FIGURE 01								
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

EPA CAN INSTALLATION

**AIRPLANES (208) 0242 & ON AND AIRPLANES (208) 0001 THRU 0241 INCORPORATING SK208-122 AND
 AIRPLANES (208B) 0435 & ON AND AIRPLANES (208B) 0001 THRU 0434 INCORPORATING SK208-122**

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
17		.						HOSE REFER TO 71-70-00 FIGURE 01		RF
18	S2554-4	.						HOSE - 3.00 IN LG BULK ITEM	(208) 0001 & ON (208B) 0001 & ON	01
19	AN737TW22	.						CLAMP	(208) 0001 & ON (208B) 0001 & ON	04
- ITEM NOT ILLUSTRATED										



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

73-30-00

FUEL FLOW INDICATOR INSTALLATION
AIRPLANES (208) 0001 THRU 0499 AND AIRPLANES (208B) 0001 THRU
1999

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

A24546

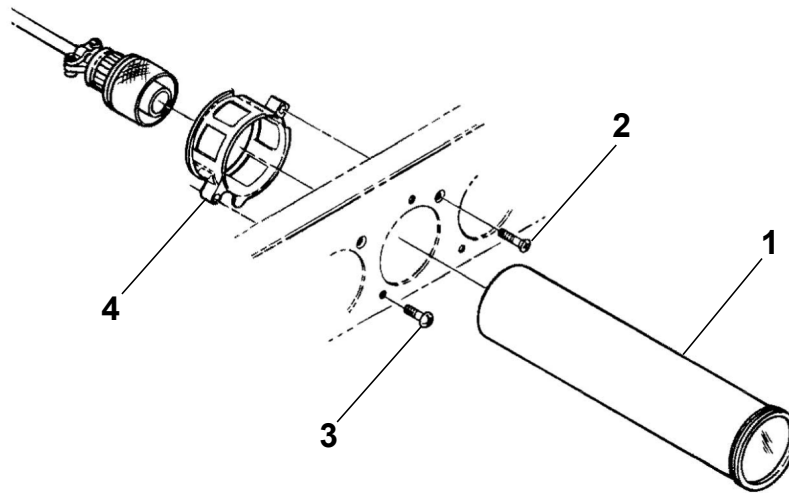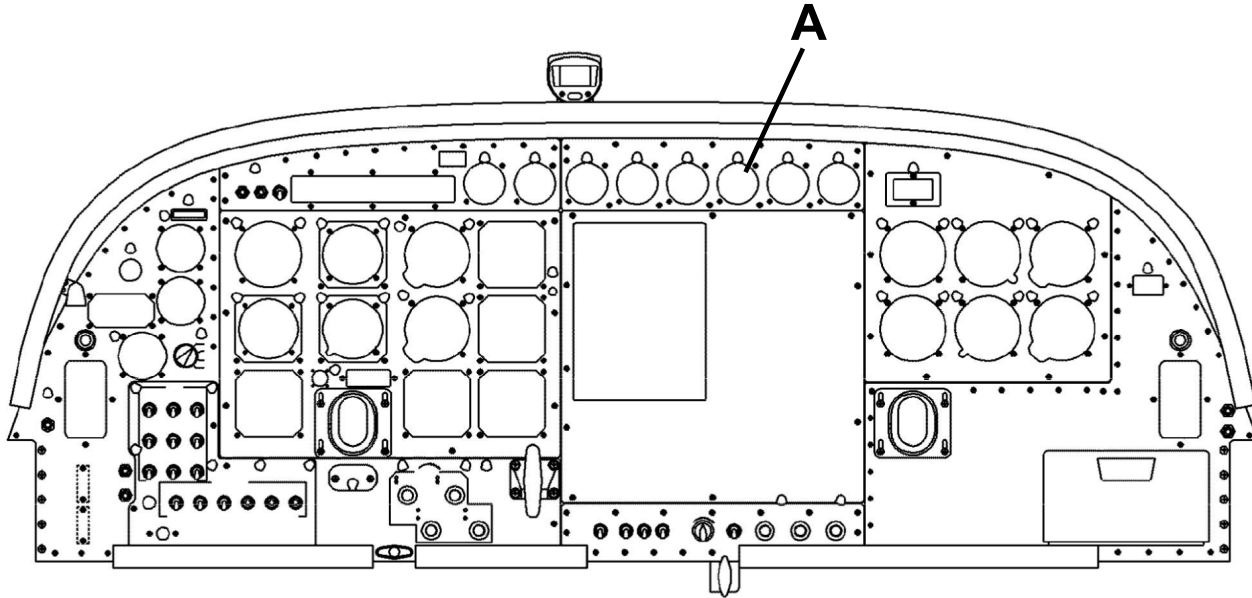

DETAIL A

FUEL FLOW INDICATOR INSTALLATION
Figure 01. (Sheet 1)

2618T1015
A26181033

Figure 01
Page 2
73-30-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL FLOW INDICATOR INSTALLATION

AIRPLANES (208) 0001 THRU 0499 AND AIRPLANES (208B) 0001 THRU 1999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	9910338-8	.						INDICATOR - FUEL FLOW	(208) 0001 - 0499 (208B) 0001 - 1999	01
								ATTACHING PARTS		
2	MS24693BB50	.						SCREW	(208) 0001 - 0499 (208B) 0001 - 1999	01
3	MS35214-43	.						SCREW	(208) 0001 - 0499 (208B) 0001 - 1999	01
4	MS28042-1A	.						CLAMP	77820 (208) 0001 - 0499 (208B) 0001 - 1999	01
								--*		
- ITEM NOT ILLUSTRATED										



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

73-32-00

FUEL TOTALIZER INDICATING SYSTEM
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON


CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24535

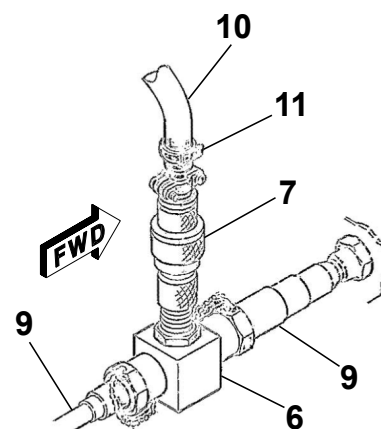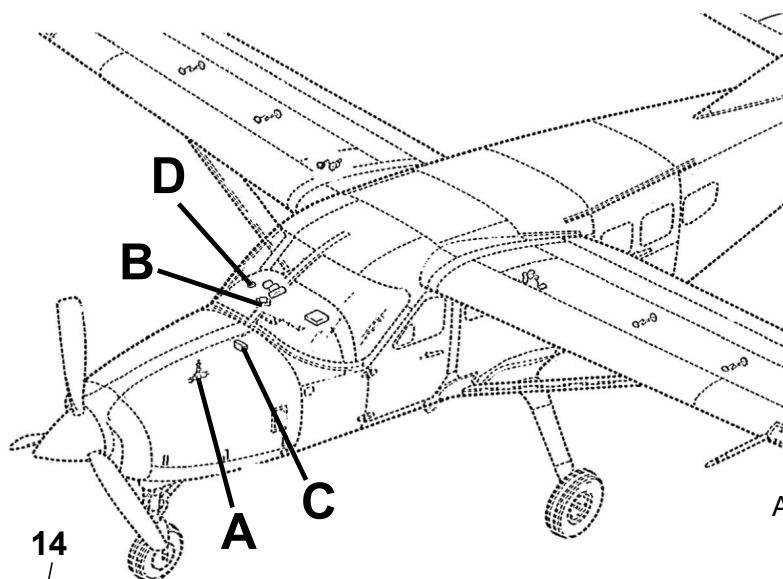


DETAIL A

AIRPLANES 20800001 THRU 20800079

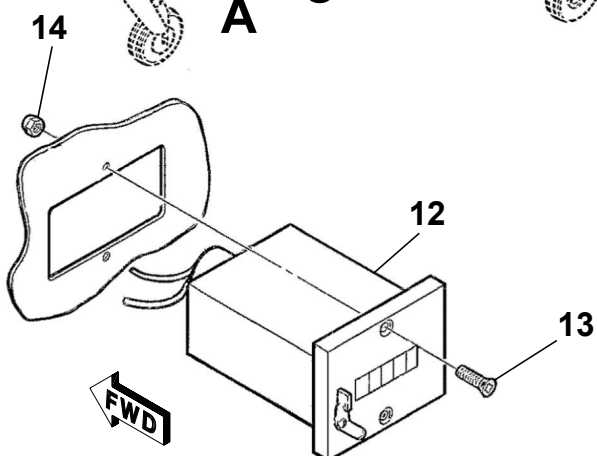


DETAIL D

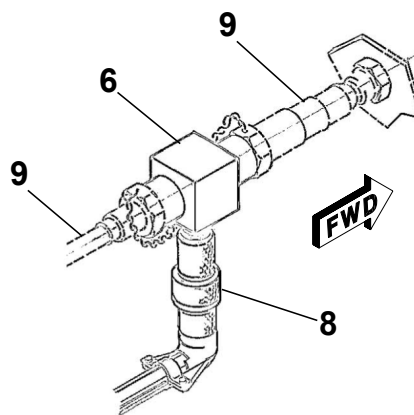


DETAIL A

AIRPLANES 20800080 AND ON
 AND 208B0001 AND ON

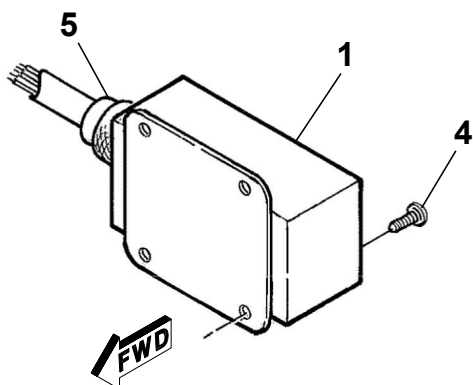

DETAIL C

AIRPLANES 20800035 AND ON

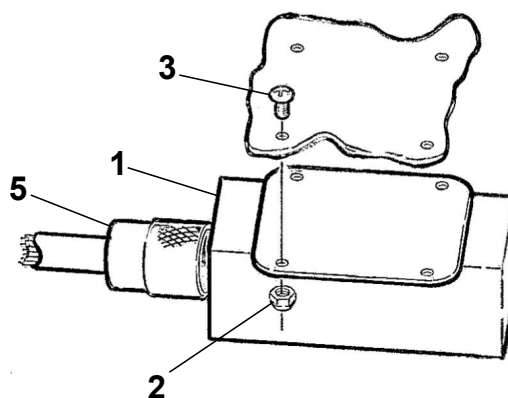

DETAIL B

AIRPLANES 20800001 THRU 20800034

26263002
 A26561006
 A26561006A
 B26561007
 C26561007A
 D26161017

FUEL TOTALIZER INDICATING SYSTEM
 Figure 01. (Sheet 1)

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

FUEL TOTALIZER INDICATING SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

		NOMENCLATURE								UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	9910338-7	.	SIGNAL CONDITIONER - FUEL TOTALIZER							(208) 0001 - 0499 (208B) 0214 - 1999	01
		.	ATTACHING PARTS								
2	NAS1022N3	.	NUT							(208) 0001 - 0034	04
3	MS35207-261	.	SCREW							07187 (208) 0001 - 0034	04
4	MS35207-261	.	SCREW							07187 (208) 0035 - 0499	02
		.	--*--								
5	S2654-6	.	CONNECTOR							(208) 0001 - 0499 (208B) 0214 - 1999	01
6	9910338-6	.	TRANSMITTER - FUEL FLOW UN032							(208) 0001 - 0650 (208B) 0001 - 5500	01
		.	NOTE: THIS PART ALSO AVAILABLE AS A REMANUFACTURED PART								
- 6A	1/2-2-81-301	.	FUEL FLOW TRANSMITTER - UN032							(208) 0651 & ON (208B) 5501 & ON	01
- 6B	MS20995C41	.	WIRE							(208) 0651 & ON (208B) 5501 & ON	AR
- 6C	A2049SM	.	SHIELD ASSEMBLY KIT							(208) 0651 & ON (208B) 5501 & ON	01
7	S2654-13	.	CONNECTOR - FUEL FLOW TRANSMITTER							(208) 0001 - 0079	01
8	S2654-23	.	CONNECTOR - FUEL FLOW TRANSMITTER							(208) 0080 - 0129	01
		.	ALTERNATE SPARE (INTERCHANGEABLE WITH):							(208B) 0001 - 0082	
		.	MS3126F10-6S								
- 8A	MS3126F10-6S	.	CONNECTOR							96906 (208) 0130 - 0650	01
		.	ALTERNATE SPARE (INTERCHANGEABLE WITH):							(208B) 0083 - 5500	
		.	S2654-23								
- 8B	MS3116F8-4S	.	PLUG							00779 (208) 0651 & ON (208B) 5501 & ON	01
9		.	LINE ASSEMBLY - FUEL FLOW								RF
		.	NOTE: REFER TO THE MAINTENANCE MANUAL FOR THE SUPPLIER PUBLICATION LIST.								
10	S2513-8	.	HOSE - 10.00 IN LG BULK ITEM							(208) 0001 - 0079	01
		.	ATTACHING PARTS								
11	MS3367-1-9	.	STA STRAP							(208) 0001 - 0079	02
		.	--*--								
12	9910338-4	.	FUEL TOTALIZER INDICATOR							(208) 0001 - 0499 (208B) 0214 - 1999	01
		.	ATTACHING PARTS								
13	MS21045L04	.	NUT							(208) 0001 - 0499 (208B) 0214 - 1999	02
14	MS24693BB6	.	SCREW							(208) 0001 - 0499 (208B) 0214 - 1999	02
		.	--*--								
- ITEM NOT ILLUSTRATED											

- ITEM NOT ILLUSTRATED