

CHAPTER

76

ENGINE CONTROLS

RECORD OF TEMPORARY REVISIONS

[illegible]

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

<u>CHAPTER/ SECTION/ SUBJECT</u>	<u>START PAGE OR FIGURE</u>	<u>NUMBER OF PAGES</u>	<u>DATE</u>
76 - TITLE		1	
76 - LIST OF EFFECTIVE PAGES	Page 1	1	Nov 29, 2022
76 - TABLE OF CONTENTS	Page 1	1	Nov 29, 2022
76-10-01	Figure 01	12	Nov 29, 2022
76-10-01	Figure 01A	3	Nov 4, 2021
76-10-01	Figure 01B	5	Nov 4, 2021
76-10-01	Figure 02	13	Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

<u>SUBJECT</u>	<u>LOCATION</u>	<u>EFFECTIVITY</u>	
		<u>START</u>	<u>END</u>
ENGINE CONTROLS	76-10-01 Figure 01	(208) 0001	& ON
		(208B) 0001	4999
ENGINE CONTROLS	76-10-01 Figure 01A	(208) 0396	& ON
		(208) 0001	0395
		(208B) 1171	& ON
		(208B) 0001	1170
ENGINE CONTROLS	76-10-01 Figure 01B	(208B) 5000	& ON
ENGINE CONTROL QUADRANT INSTALLATION.....	76-10-01 Figure 02	(208) 0001	& ON
		(208B) 0001	& ON

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG


76-10-01

ENGINE CONTROLS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24547

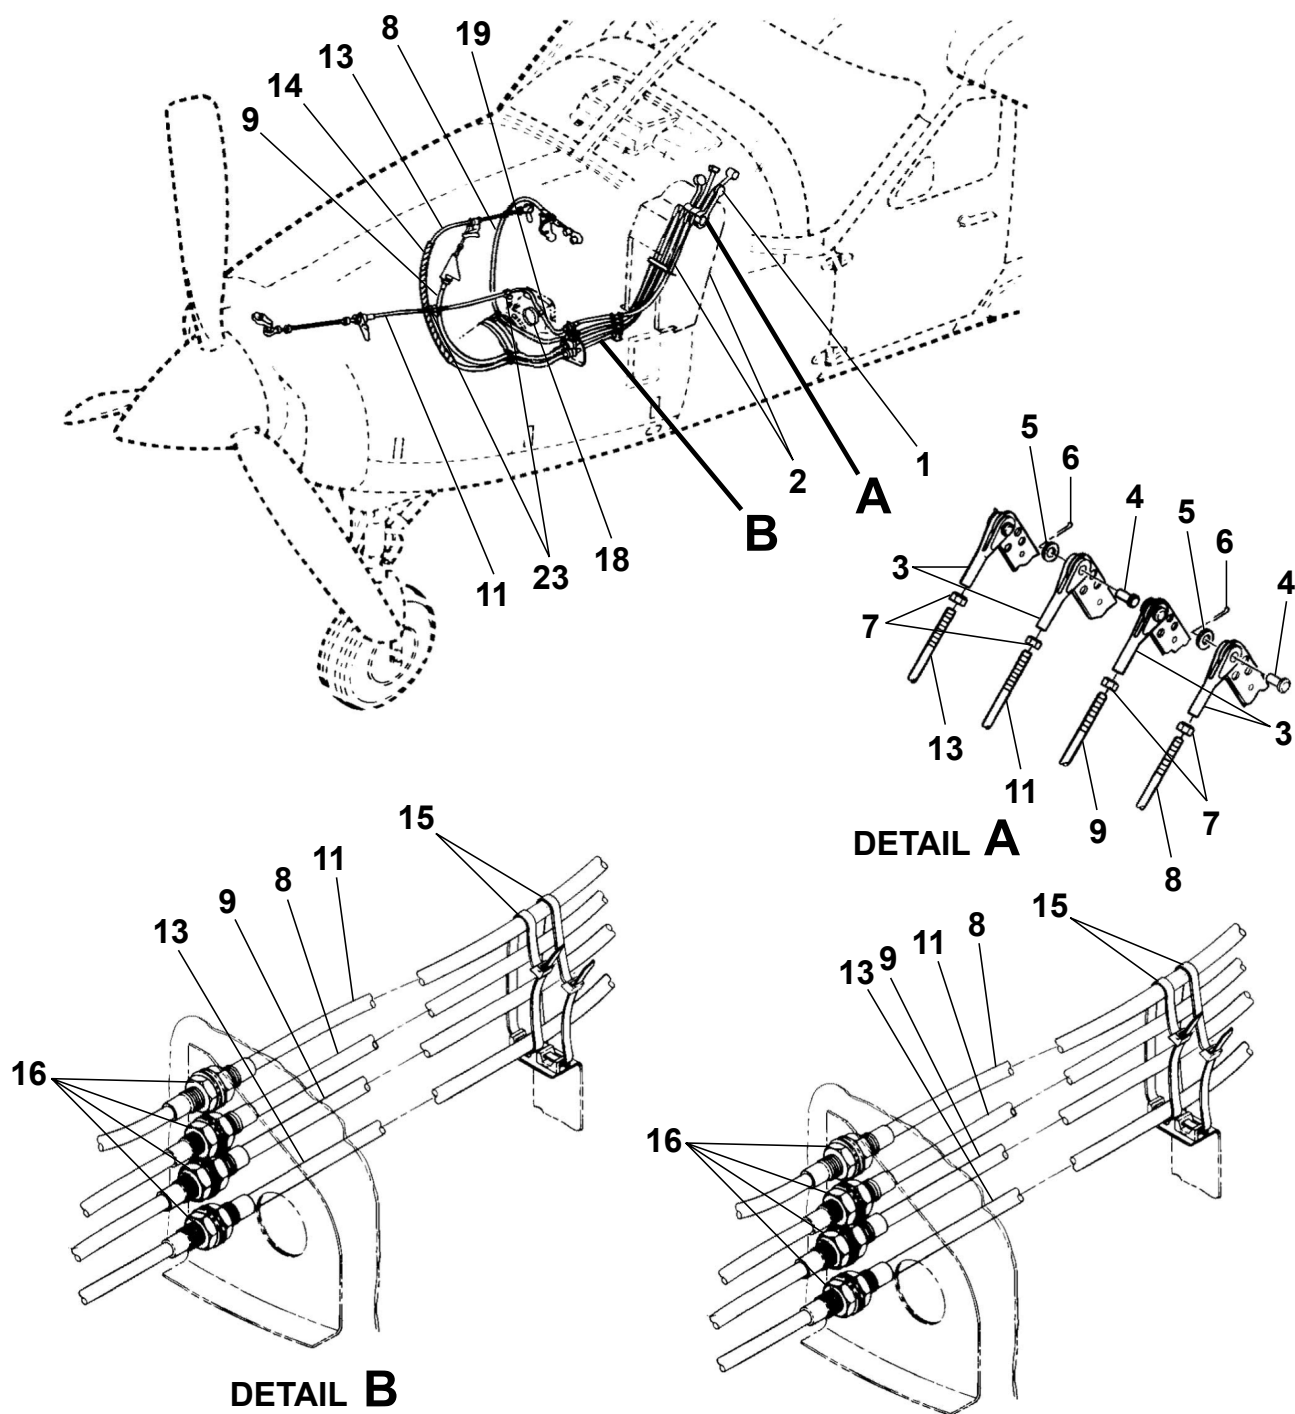

DETAIL B
 AIRPLANES 20800001 THRU 20800224
 AND 208B0001 THRU 208B0330
 INCORPORATING SK 208-108 AND
 20800225 & ON AND 208B0331 & ON

DETAIL A
 AIRPLANES 20800001 THRU 20800224
 AND 208B0001 THRU 208B0330

2615X1006
 A2615X1008
 B26152009
 B26152009

ENGINE CONTROLS
Figure 01. (Sheet 1)

Figure 01
 Page 2
76-10-01 Nov 29, 2022

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

ENGINE CONTROLS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

		NOMENCLATURE								UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1		.	ENGINE CONTROL QUADRANT ASSEMBLY REFER TO 76-10-01 FIGURE 02 .								RF
2		.	PEDESTAL STRUCTURE REFER TO 53-22-00 FIGURE 01 .								RF
3	1452535-1	.	TERMINAL - L-CLEVIS							(208) 0001 & ON (208B) 0001 - 4999	04
			ATTACHING PARTS								
4	MS20392-2C11	.	PIN							(208) 0001 & ON (208B) 0001 - 4999	01
5	NAS1149D0332K	.	WASHER							(208) 0001 & ON (208B) 0001 - 4999	01
6	MS24665-132	.	COTTER PIN							(208) 0001 & ON (208B) 0001 - 4999	01
			--*--								
7	AN315-3R	.	NUT							72962 (208) 0001 & ON (208B) 0001 - 4999	04
8	C299515-0202	.	CONTROL ASSEMBLY - EMERGENCY POWER FOR SPARES ORDER (MUST REPLACE WITH): C299515-0203							(208) 0001 - 0363 (208B) 0001 - 1003	NP
- 8A	C299515-0203	.	CONTROL ASSEMBLY - EMERGENCY POWER SPARES REPLACEMENT FOR: C299515-0202							(208) 0364 & ON (208B) 1004 & ON	01
9	C299515-0102	.	CONTROL ASSEMBLY - POWER FOR SPARES ORDER (MUST REPLACE WITH): 580-219-154							(208) 0001 - 0217 (208B) 0001 - 0305	NP
- 10	580-219-152	.	CONTROL ASSEMBLY - POWER FOR SPARES ORDER (MUST REPLACE WITH): 580-219-154							06970 (208) 0218 - 0241 (208B) 0306 - 0431	NP
- 10A	580-219-154	.	CONTROL ASSEMBLY - POWER SPARES REPLACEMENT FOR: C299515-0102 580-219-152							06970 (208) 0242 & ON (208B) 0432 & ON	01
11	C299515-0101	.	CONTROL ASSEMBLY - PROPELLER FOR SPARES ORDER (MUST REPLACE WITH): SK208-108							(208) 0001 - 0224 (208B) 0001 - 0330	NP
- 11A	SK208-108	.	PROP CONT'L CABLE REPLC. SPARES REPLACEMENT FOR: C299515-0101							(208) 0001 & ON (208B) 0001 - 4999	01
- 12	580-219-153	.	CONTROL ASSEMBLY - PROPELLER							06970 (208) 0225 & ON (208B) 0331 & ON	01
13	C299515-0201	.	CONTROL - ASSEMBLY-FUEL CONDITION							(208) 0001 & ON (208B) 0001 - 4999	01
14	S1399-1	.	SLEEVE - NYLON 27.00 IN LG BULK ITEM							(208) 0001 & ON (208B) 0001 - 4999	01
15	MS3367-1-9	.	TIE STRAP							(208) 0001 & ON (208B) 0001 - 4999	02
16	AN316-7R	.	NUT							(208) 0001 & ON (208B) 0001 - 4999	08
			NOTE: THIS PART IS SUPPLIED WITH CONTROL CABLE ASSEMBLIES.								
- 17	MS35333-43	.	WASHER							(208) 0001 & ON (208B) 0001 - 4999	08
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


ENGINE CONTROLS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
		NOTE: THIS PART IS SUPPLIED WITH CONTROL CABLE ASSEMBLIES.								
18	MS21919DG20	.	CLAMP - ATTACH TO ENGINE MOUNT						(208) 0001 & ON (208B) 0001 - 4999	01
19	MS21919DG5	.	CLAMP						(208) 0001 & ON (208B) 0001 - 4999	01
			ATTACHING PARTS							
- 20	MS35207-263	.	SCREW					80205	(208) 0001 & ON (208B) 0001 - 4999	01
- 21	NAS1149F0363P	.	WASHER					73197	(208) 0001 & ON (208B) 0001 - 4999	01
- 22	MS21044N3	.	NUT					4W953	(208) 0001 & ON (208B) 0001 - 4999	01
			--*--							
23	MS21919DG5	.	CLAMP						(208) 0001 & ON (208B) 0001 - 4999	02
			ATTACHING PARTS							
- 24	AN3-5A	.	BOLT						(208) 0001 & ON (208B) 0001 - 4999	01
			--*--							
- 25	MS21919WDG6	.	CLAMP					84971	(208) 0225 & ON (208B) 0331 & ON	04
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24549

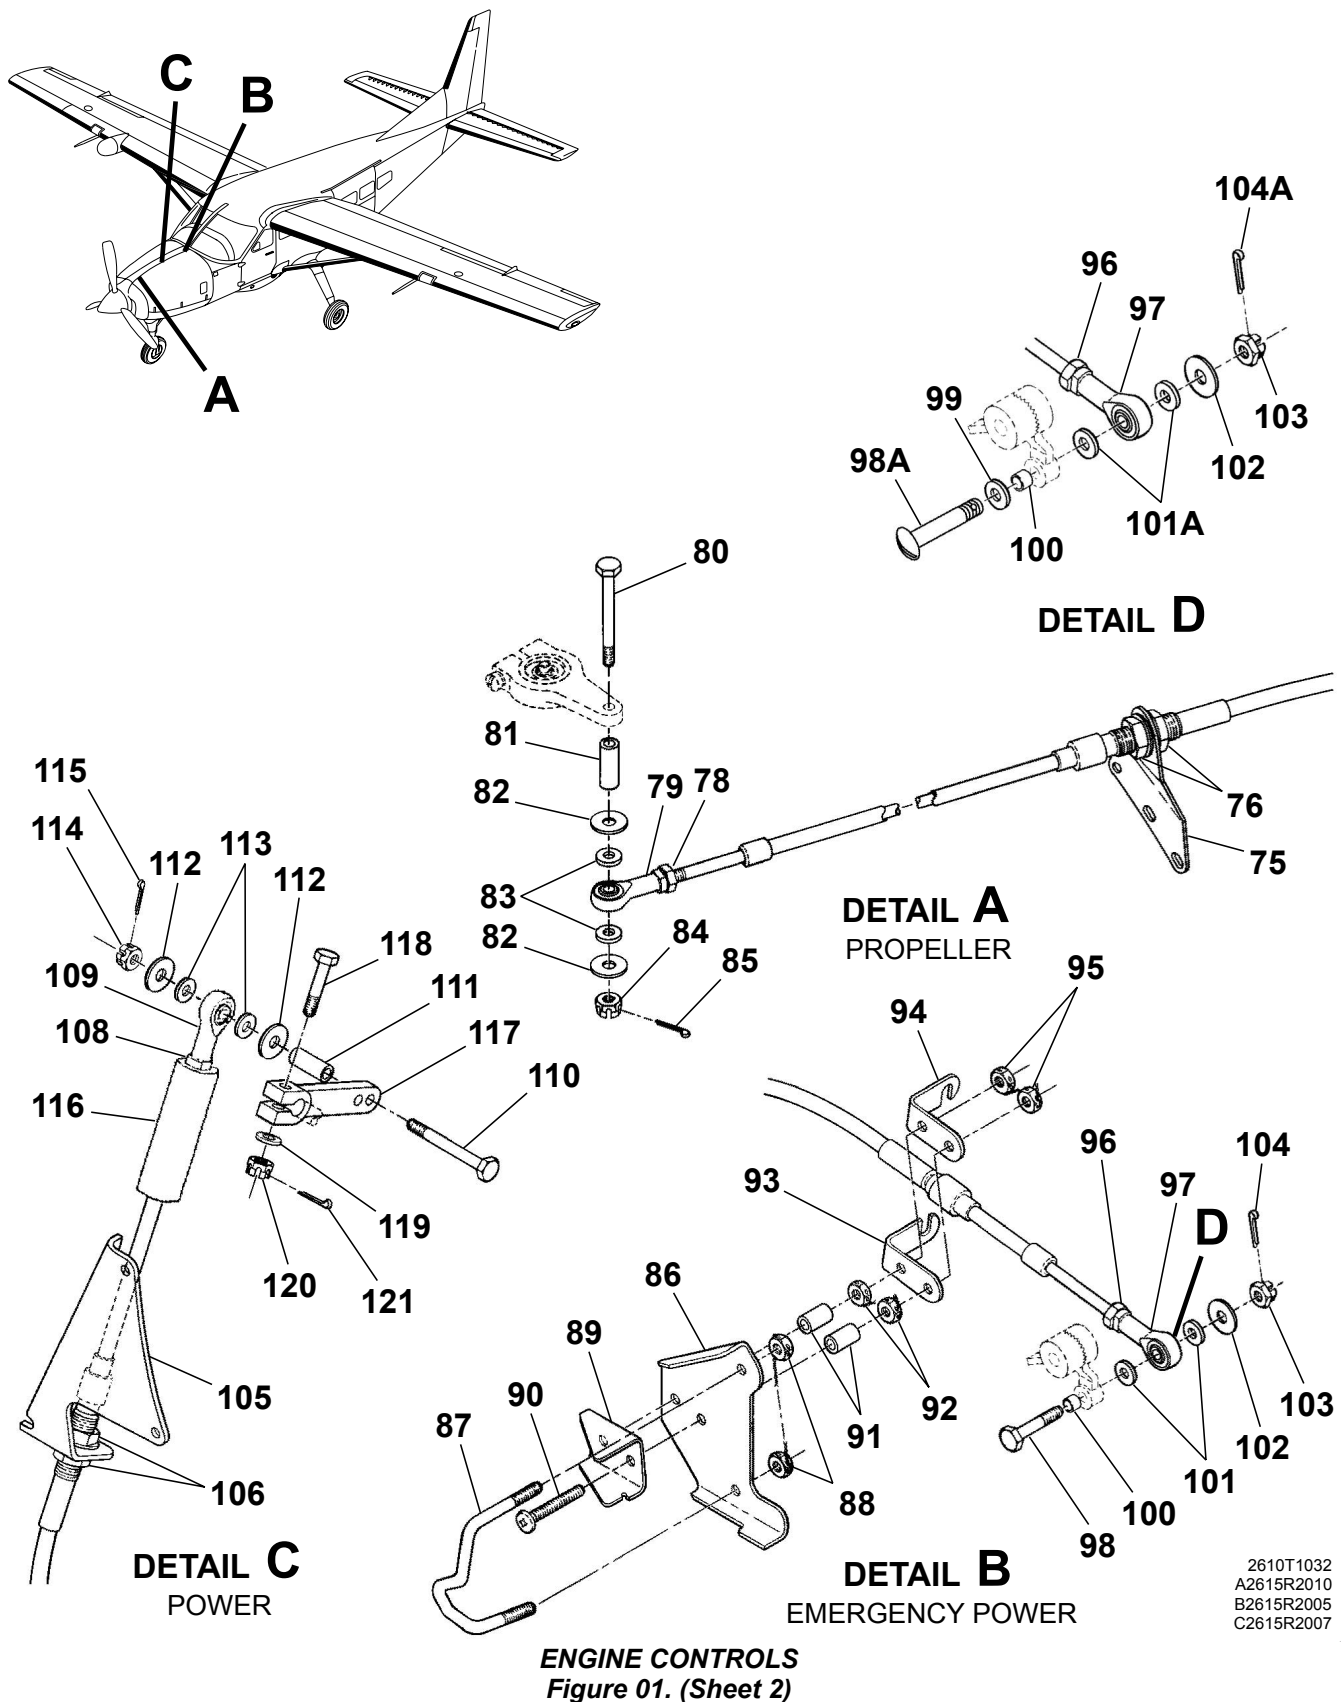

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ENGINE CONTROLS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
75	2650031-1	.	BRACKET - PROPELLER CONTROL						(208) 0001 & ON (208B) 0001 - 4999	01
76	AN316-7R	.	NUT						(208) 0001 & ON (208B) 0001 - 4999	02
NOTE: THIS PART IS SUPPLIED WITH CONTROL CABLE ASSEMBLIES.										
- 77	MS35333-43	.	WASHER						(208) 0001 & ON (208B) 0001 - 4999	02
NOTE: THIS PART IS SUPPLIED WITH CONTROL CABLE ASSEMBLIES.										
78	AN315-3R	.	NUT					72962	(208) 0001 & ON (208B) 0001 - 4999	01
NOTE: THIS PART IS SUPPLIED WITH CONTROL CABLE ASSEMBLIES.										
79	S1104-3	.	ROD END ALTERNATE SPARE (INTERCHANGEABLE WITH): MW-3M-53						(208) 0001 & ON (208B) 0001 - 4999	01
- 79A	MW-3M-53	.	ROD END ALTERNATE SPARE (INTERCHANGEABLE WITH): S1104-3						(208) 0001 & ON (208B) 0001 - 4999	01
ATTACHING PARTS										
80	AN3-17	.	BOLT						(208) 0001 & ON (208B) 0001 - 4999	01
81	NAS43HT3-52	.	SPACER						(208) 0001 & ON (208B) 0001 - 4999	01
82	S1450-3-10-032	.	WASHER						(208) 0001 & ON (208B) 0001 - 4999	02
83	NAS1149F0363P	.	WASHER					73197	(208) 0001 & ON (208B) 0001 - 4999	02
84	AN310-3	.	NUT						(208) 0001 & ON (208B) 0001 - 4999	01
85	MS24665-134	.	COTTER PIN						(208) 0001 & ON (208B) 0001 - 4999	01
--*--										
86	2650064-2	.	BRACKET - EMERGENCY POWER CONTROL						(208) 0001 & ON (208B) 0001 - 4999	01
ATTACHING PARTS										
87	2650065-1	.	BOLT						(208) 0001 & ON (208B) 0001 - 4999	01
88	NAS509-3	.	NUT						(208) 0001 & ON (208B) 0001 - 4999	02
--*--										
89	2650064-3	.	BRACKET						(208) 0001 & ON (208B) 0001 - 4999	01
ATTACHING PARTS										
90	MS35207-268	.	SCREW						(208) 0001 & ON (208B) 0001 - 4999	02
91	NAS43HT3-32	.	SPACER						(208) 0001 & ON (208B) 0001 - 4999	02
92	NAS509-3	.	NUT						(208) 0001 & ON (208B) 0001 - 4999	02
--*--										
- ITEM NOT ILLUSTRATED										

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

ENGINE CONTROLS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
93	2451002-2	.	BRACKET - CONTROL SUPPORT OUTER						(208) 0001 - 0352	NP
			FOR SPARES ORDER (MUST REPLACE WITH):						(208B) 0001 - 0928	
			2650112-6							
- 93A	2650112-6	.	BRACKET ASSEMBLY - CONTROL SUPPORT OUTER						(208) 0353 & ON	01
			SPARES REPLACEMENT FOR:						(208B) 0929 & ON	
			2451002-2							
94	2451002-1	.	BRACKET - CONTROL SUPPORT INNER						(208) 0001 - 0352	NP
			FOR SPARES ORDER (MUST REPLACE WITH):						(208B) 0001 - 0928	
			2650112-2							
- 94A	2650112-2	.	BRACKET - CONTROL SUPPORT INNER						(208) 0353 - 0395	01
			SPARES REPLACEMENT FOR:						(208B) 0929 - 1170	
			2451002-1							
95	NAS509-3	.	NUT						(208) 0001 & ON	02
									(208B) 0001 - 4999	
96	AN315-3R	.	NUT					72962	(208) 0001 & ON	01
									(208B) 0001 - 4999	
			NOTE: THIS PART IS SUPPLIED WITH CONTROL CABLE ASSEMBLIES.							
97	S1104-3	.	ROD END						(208) 0001 & ON	01
			ALTERNATE SPARE (INTERCHANGEABLE WITH):						(208B) 0001 - 4999	
			MW-3M-53							
- 97A	MW-3M-53	.	ROD END						(208) 0001 & ON	01
			ALTERNATE SPARE (INTERCHANGEABLE WITH):						(208B) 0001 - 4999	
			S1104-3							
			ATTACHING PARTS							
98	AN3-10	.	BOLT						(208) 0001 - 0395	01
									(208B) 0001 - 1170	
98A	AN23-15	.	BOLT						(208) 0396 & ON	01
									(208B) 1171 & ON	
			--*--							
99	NAS1149F0316P	.	WASHER						(208) 0396 & ON	01
									(208B) 1171 & ON	
			ATTACHING PARTS							
100	2650071-2	.	BUSHING						(208) 0131 & ON	01
									(208B) 0087 & ON	
101	NAS1149F0363P	.	WASHER					73197	(208) 0001 - 0395	02
									(208B) 0001 - 1170	
101A	NAS1149F0332P	.	WASHER						(208) 0396 & ON	02
									(208B) 1171 & ON	
102	S1450-3-10-032	.	WASHER						(208) 0001 & ON	01
									(208B) 0001 - 4999	
103	AN310-3	.	NUT						(208) 0001 & ON	01
									(208B) 0001 - 4999	
104	MS24665-134	.	COTTER PIN						(208) 0001 - 0395	01
									(208B) 0001 - 1170	
104A	MS24665-86	.	COTTER PIN						(208) 0396 & ON	01
									(208B) 1171 & ON	
			--*--							
105	2650030-1	.	BRACKET - POWER CONTROL						(208) 0001 & ON	01
									(208B) 0001 - 4999	
106	AN316-7R	.	NUT						(208) 0001 & ON	02
									(208B) 0001 - 4999	

NOTE: THIS PART IS SUPPLIED WITH CONTROL CABLE ASSEMBLIES.

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ENGINE CONTROLS


AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 107	MS35333-43	.	WASHER						(208) 0001 & ON (208B) 0001 - 4999	02
			NOTE: THIS PART IS SUPPLIED WITH CONTROL CABLE ASSEMBLIES.							
108	AN315-3R	.	NUT					72962	(208) 0001 & ON (208B) 0001 - 4999	01
			NOTE: THIS PART IS SUPPLIED WITH CONTROL CABLE ASSEMBLIES.							
109	S1104-3	.	ROD END						(208) 0001 & ON (208B) 0001 - 4999	01
			ALTERNATE SPARE (INTERCHANGEABLE WITH):							
			MW-3M-53							
- 109A	MW-3M-53	.	ROD END						(208) 0001 & ON (208B) 0001 - 4999	01
			ALTERNATE SPARE (INTERCHANGEABLE WITH):							
			S1104-3							
			ATTACHING PARTS							
110	AN3-16	.	BOLT						(208) 0001 & ON (208B) 0001 - 4999	01
111	NAS43HT3-46	.	SPACER						(208) 0001 & ON (208B) 0001 - 4999	01
112	S1450-3-10-032	.	WASHER						(208) 0001 & ON (208B) 0001 - 4999	02
113	NAS1149F0363P	.	WASHER					73197	(208) 0001 & ON (208B) 0001 - 4999	02
114	AN310-3	.	NUT						(208) 0001 & ON (208B) 0001 - 4999	01
115	MS24665-134	.	COTTER PIN						(208) 0001 & ON (208B) 0001 - 4999	01
			--*--							
116	160-071-006	.	UMBRELLA SEAL						(208) *0001 - 0241 (208B) *0001 - 0431	01
			* AIRPLANES (208) 0001 THRU 0241 INCORPORATING CAB97-02							
			* AIRPLANES (208B) 0001 THRU 0431 INCORPORATING CAB97-02							
117	5954031-6	.	LEVER - POWER CONTROL						(208) 0001 - 0510 (208B) 0001 - 2110	NP
			FOR SPARES ORDER (MUST REPLACE WITH):							
			5954031-14							
- 117A	5954031-14	.	LEVER - POWER CONTROL						(208) 0511 & ON (208B) 2111 & ON	01
			SPARES REPLACEMENT FOR:							
			5954031-6							
			ATTACHING PARTS							
118	AN3-10	.	BOLT						(208) 0001 & ON (208B) 0001 - 4999	01
119	NAS1149F0363P	.	WASHER					73197	(208) 0001 & ON (208B) 0001 - 4999	01
120	AN310C3	.	NUT						(208) 0001 & ON (208B) 0001 - 4999	01
121	MS24665-134	.	COTTER PIN						(208) 0001 & ON (208B) 0001 - 4999	01
			--*--							

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24550

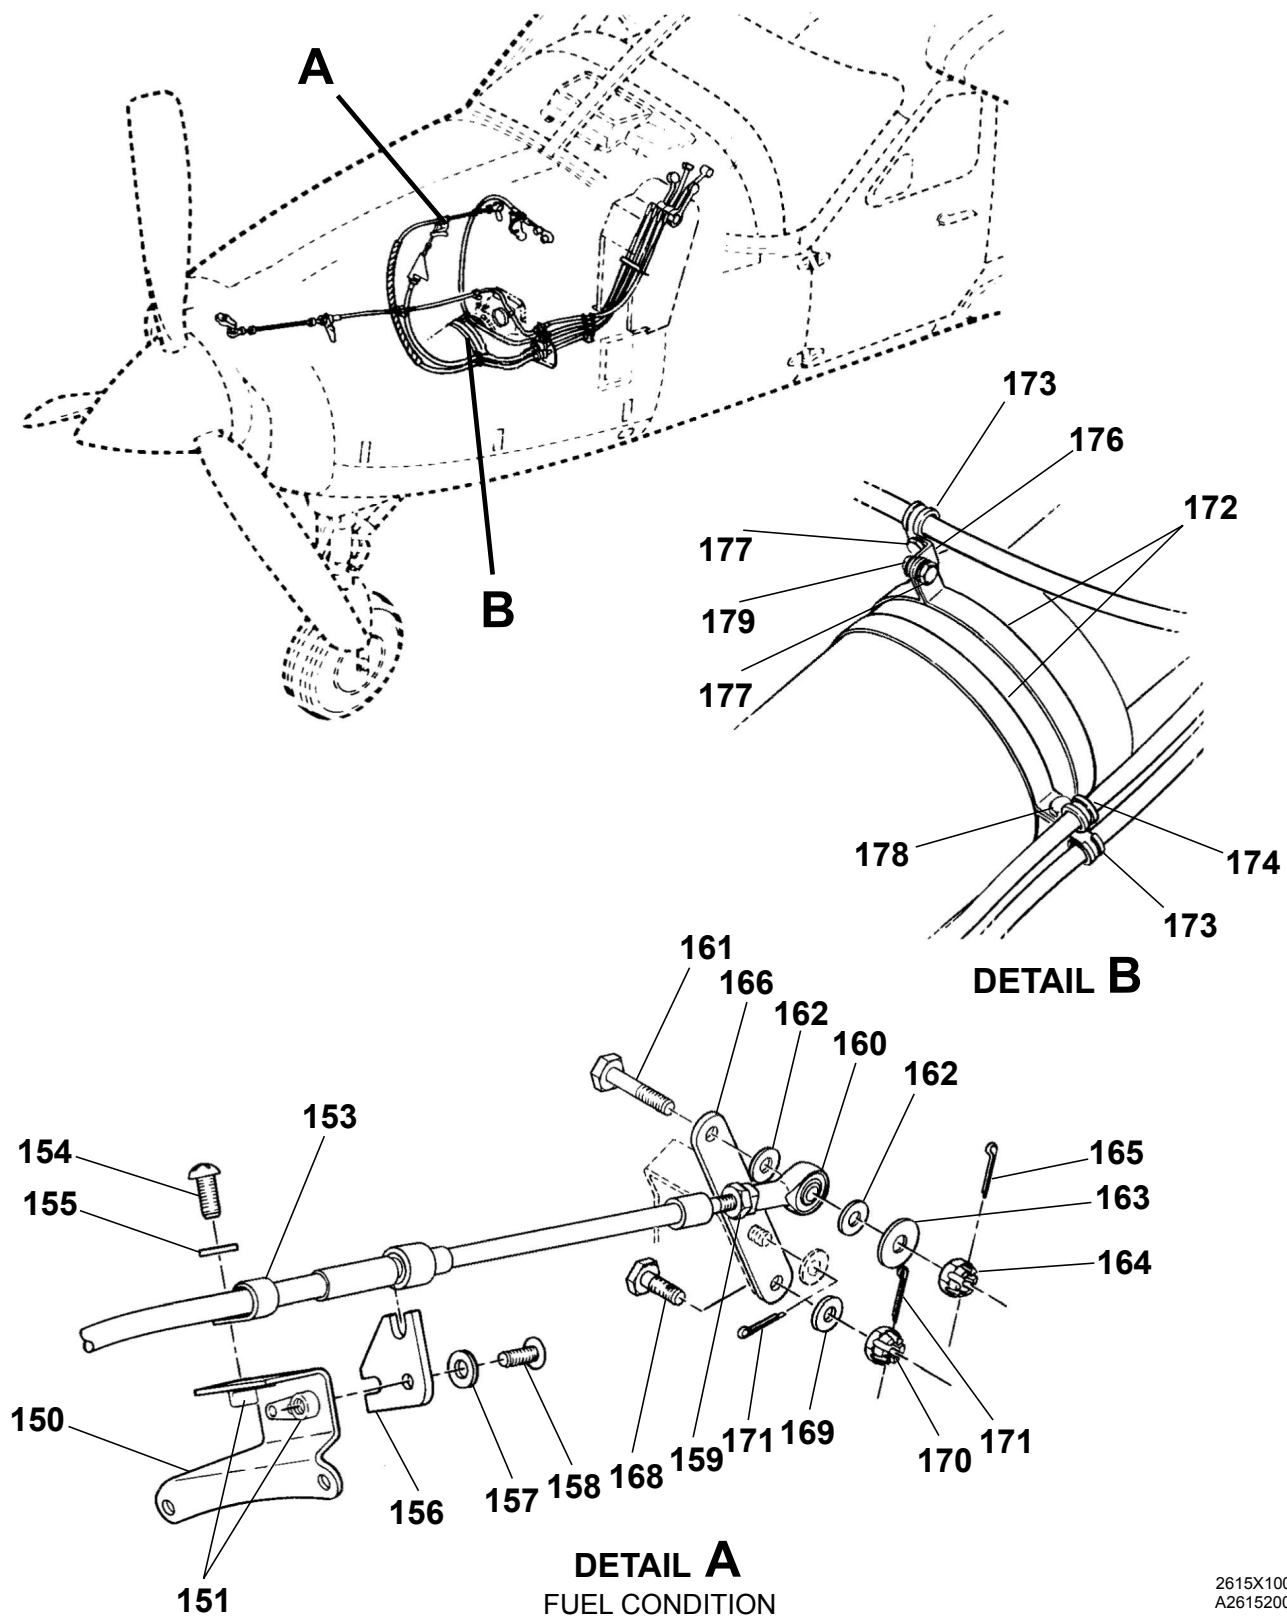

ENGINE CONTROLS
 Figure 01. (Sheet 3)

2615X1006
 A26152006
 B26151010

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ENGINE CONTROLS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
150	2650032-4	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	01
151	NAS682A3	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	02
- 152	NAS42HT3-7	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	01
153	AN742-5	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	01
		.	.	.	.	.	.	.	ATTACHING PARTS	
154	MS35207-263	.	.	.	.	.	.	80205	(208) 0001 & ON (208B) 0001 - 4999	01
155	NAS1149F0363P	.	.	.	.	.	.	73197	(208) 0001 & ON (208B) 0001 - 4999	01
		.	.	.	.	.	.	.	--*--	
156	2650032-3	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	01
		.	.	.	.	.	.	.	ATTACHING PARTS	
157	MS35207-263	.	.	.	.	.	.	80205	(208) 0001 & ON (208B) 0001 - 4999	01
158	NAS1149F0363P	.	.	.	.	.	.	73197	(208) 0001 & ON (208B) 0001 - 4999	01
		.	.	.	.	.	.	.	--*--	
159	AN315-3R	.	.	.	.	.	.	72962	(208) 0001 & ON (208B) 0001 - 4999	01
		.	.	.	.	.	.	.	NOTE: THIS PART IS SUPPLIED WITH CONTROL CABLE ASSEMBLIES.	
160	S1104-3	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	01
		.	.	.	.	.	.	.	ALTERNATE SPARE (INTERCHANGEABLE WITH): MW-3M-53	
- 160A	MW-3M-53	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	01
		.	.	.	.	.	.	.	ALTERNATE SPARE (INTERCHANGEABLE WITH): S1104-3	
		.	.	.	.	.	.	.	ATTACHING PARTS	
161	AN3-7	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	01
162	NAS1149F0363P	.	.	.	.	.	.	73197	(208) 0001 & ON (208B) 0001 - 4999	02
163	S1450-3-10-032	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	01
164	AN310-3	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	01
165	MS24665-134	.	.	.	.	.	.	.	(208) 0001 & ON (208B) 0001 - 4999	01
		.	.	.	.	.	.	.	--*--	
166	2651031-1	.	.	.	.	.	.	.	(208) 0001 - 0207 (208B) 0001 - 0282	NP
		.	.	.	.	.	.	.	LEVER - FUEL CONDITION CONTROL FOR SPARES ORDER (MUST REPLACE WITH): 2651032-1	
- 167	2651032-1	.	.	.	.	.	.	.	(208) 0208 & ON (208B) 0283 & ON	01
		.	.	.	.	.	.	.	SPARES REPLACEMENT FOR: 2651031-1	
		.	.	.	.	.	.	.	ATTACHING PARTS	
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ENGINE CONTROLS

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 THRU 4999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
168	AN3-4	.	BOLT						(208) 0001 & ON (208B) 0001 - 4999	01
169	NAS1149F0363P	.	WASHER					73197	(208) 0001 & ON (208B) 0001 - 4999	01
170	AN310-3	.	NUT						(208) 0001 & ON (208B) 0001 - 4999	01
171	MS24665-134	.	COTTER PIN						(208) 0001 & ON (208B) 0001 - 4999	02
			--*--							
172	AN735D96	.	CLAMP						(208) 0001 & ON (208B) 0001 - 4999	02
173	MS21919WDG5	.	CLAMP						(208) 0001 & ON (208B) 0001 - 4999	02
174	MS21919WDG5	.	CLAMP						(208) 0001 - 0217 (208B) 0001 - 0305	01
- 175	MS21919WDG6	.	CLAMP					84971	(208) 0218 & ON (208B) 0306 & ON	01
176	AN743-12	.	BRACKET						(208) 0001 & ON (208B) 0001 - 4999	01
177	AN3-5	.	BOLT						(208) 0001 & ON (208B) 0001 - 4999	02
178	AN3-10	.	BOLT						(208) 0001 & ON (208B) 0001 - 4999	01
179	MS21043-3	.	NUT						(208) 0001 & ON (208B) 0001 - 4999	03
- 180	NAS1149F0332P	.	WASHER						(208) 0001 & ON (208B) 0001 - 4999	03
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG



76-10-01

ENGINE CONTROLS

**AIRPLANES (208) 0396 & ON AND AIRPLANES (208) 0001 THRU 0395
INCORPORATING CAB06-3 AND SK208-166 AND AIRPLANES (208B) 1171 &
ON AND AIRPLANES (208B) 0001 THRU 1170 INCORPORATING CAB06-3
AND SK208-166**

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

A63212

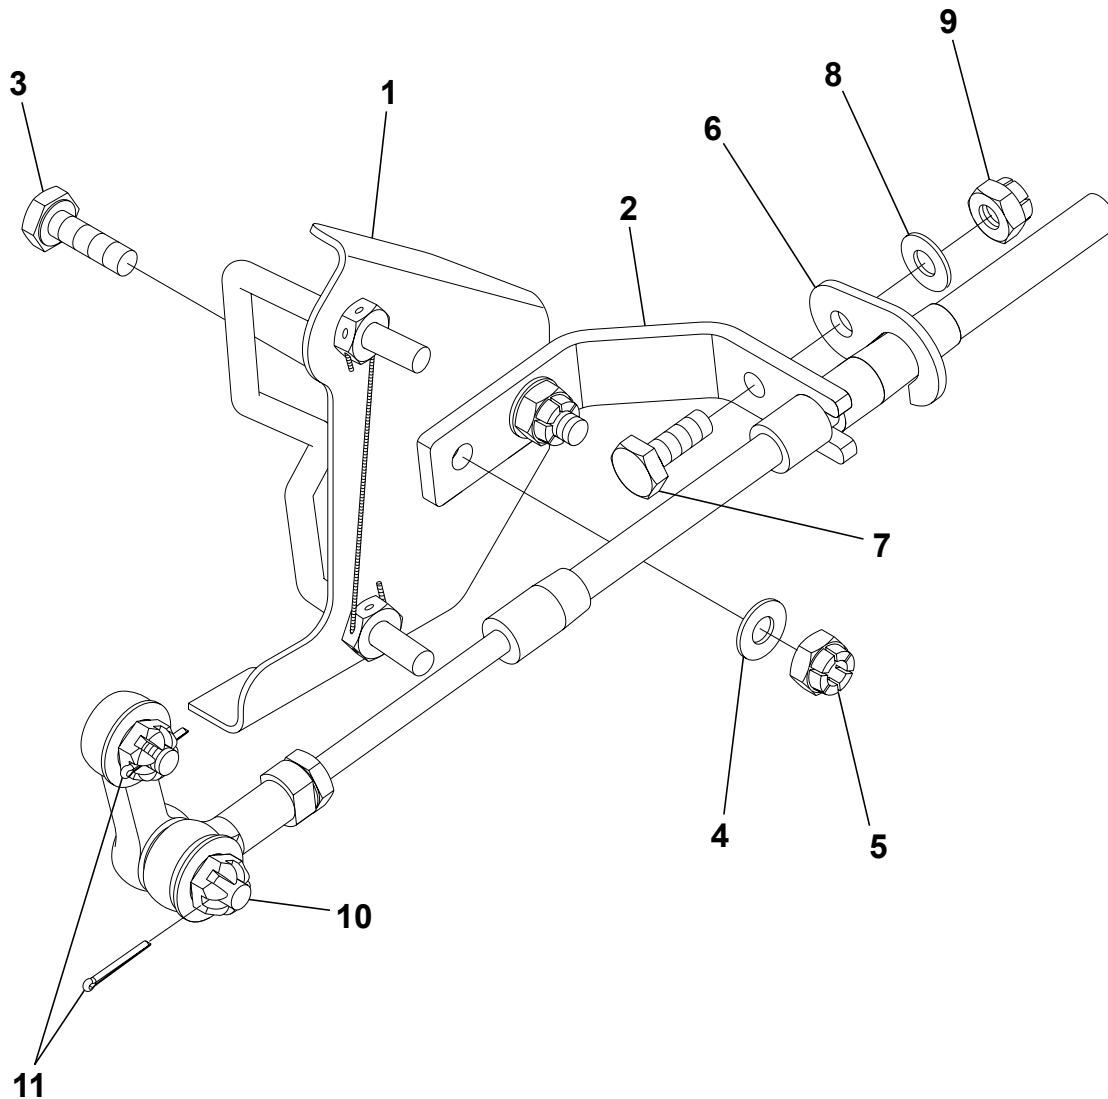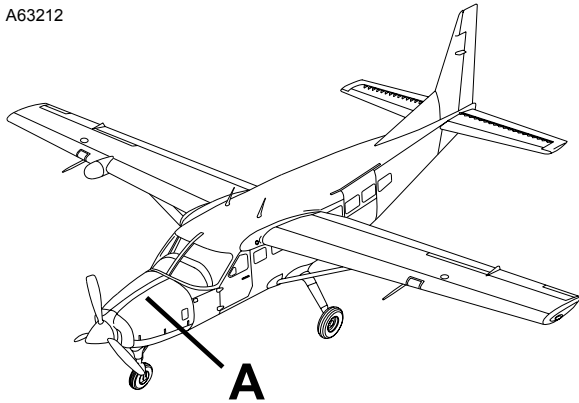

DETAIL A

ENGINE CONTROLS
Figure 01A. (Sheet 1)

2610T7005
A2650T071

Figure 01A
Page 2
76-10-01 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ENGINE CONTROLS

**AIRPLANES (208) 0396 & ON AND AIRPLANES (208) 0001 THRU 0395 INCORPORATING CAB06-3 AND
 SK208-166 AND AIRPLANES (208B) 1171 & ON AND AIRPLANES (208B) 0001 THRU 1170
 INCORPORATING CAB06-3 AND SK208-166**

		NOMENCLATURE								UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	2650064-4	.	BRACKET ASSEMBLY							(208) 0001 & ON (208B) 0001 & ON	01
2	2650112-8	.	MOUNT							(208) 0001 & ON (208B) 0001 & ON	01
			ATTACHING PARTS								
3	AN3-5A	.	BOLT							(208) 0001 & ON (208B) 0001 & ON	02
4	NAS1149F0363P	.	WASHER							73197 (208) 0001 & ON (208B) 0001 & ON	02
5	MS21045-3	.	NUT							(208) 0001 & ON (208B) 0001 & ON	02
			--*--								
6	1250025-1	.	RETAINER							(208) 0001 & ON (208B) 0001 & ON	01
			ATTACHING PARTS								
7	AN3-4A	.	BOLT							80205 (208) 0001 & ON (208B) 0001 & ON	01
8	NAS1149F0332P	.	WASHER							(208) 0001 & ON (208B) 0001 & ON	01
9	MS21045-3	.	NUT							(208) 0001 & ON (208B) 0001 & ON	01
			--*--								
10		.	ENGINE CONTROLS - ROD END ATTACH REFER TO 76-10-01 FIGURE 01								RF
11	MS24665-86	.	COTTER PIN							(208) 0001 & ON (208B) 0001 & ON	01

- ITEM NOT ILLUSTRATED


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

76-10-01

ENGINE CONTROLS
AIRPLANES (208B) 5000 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A87676

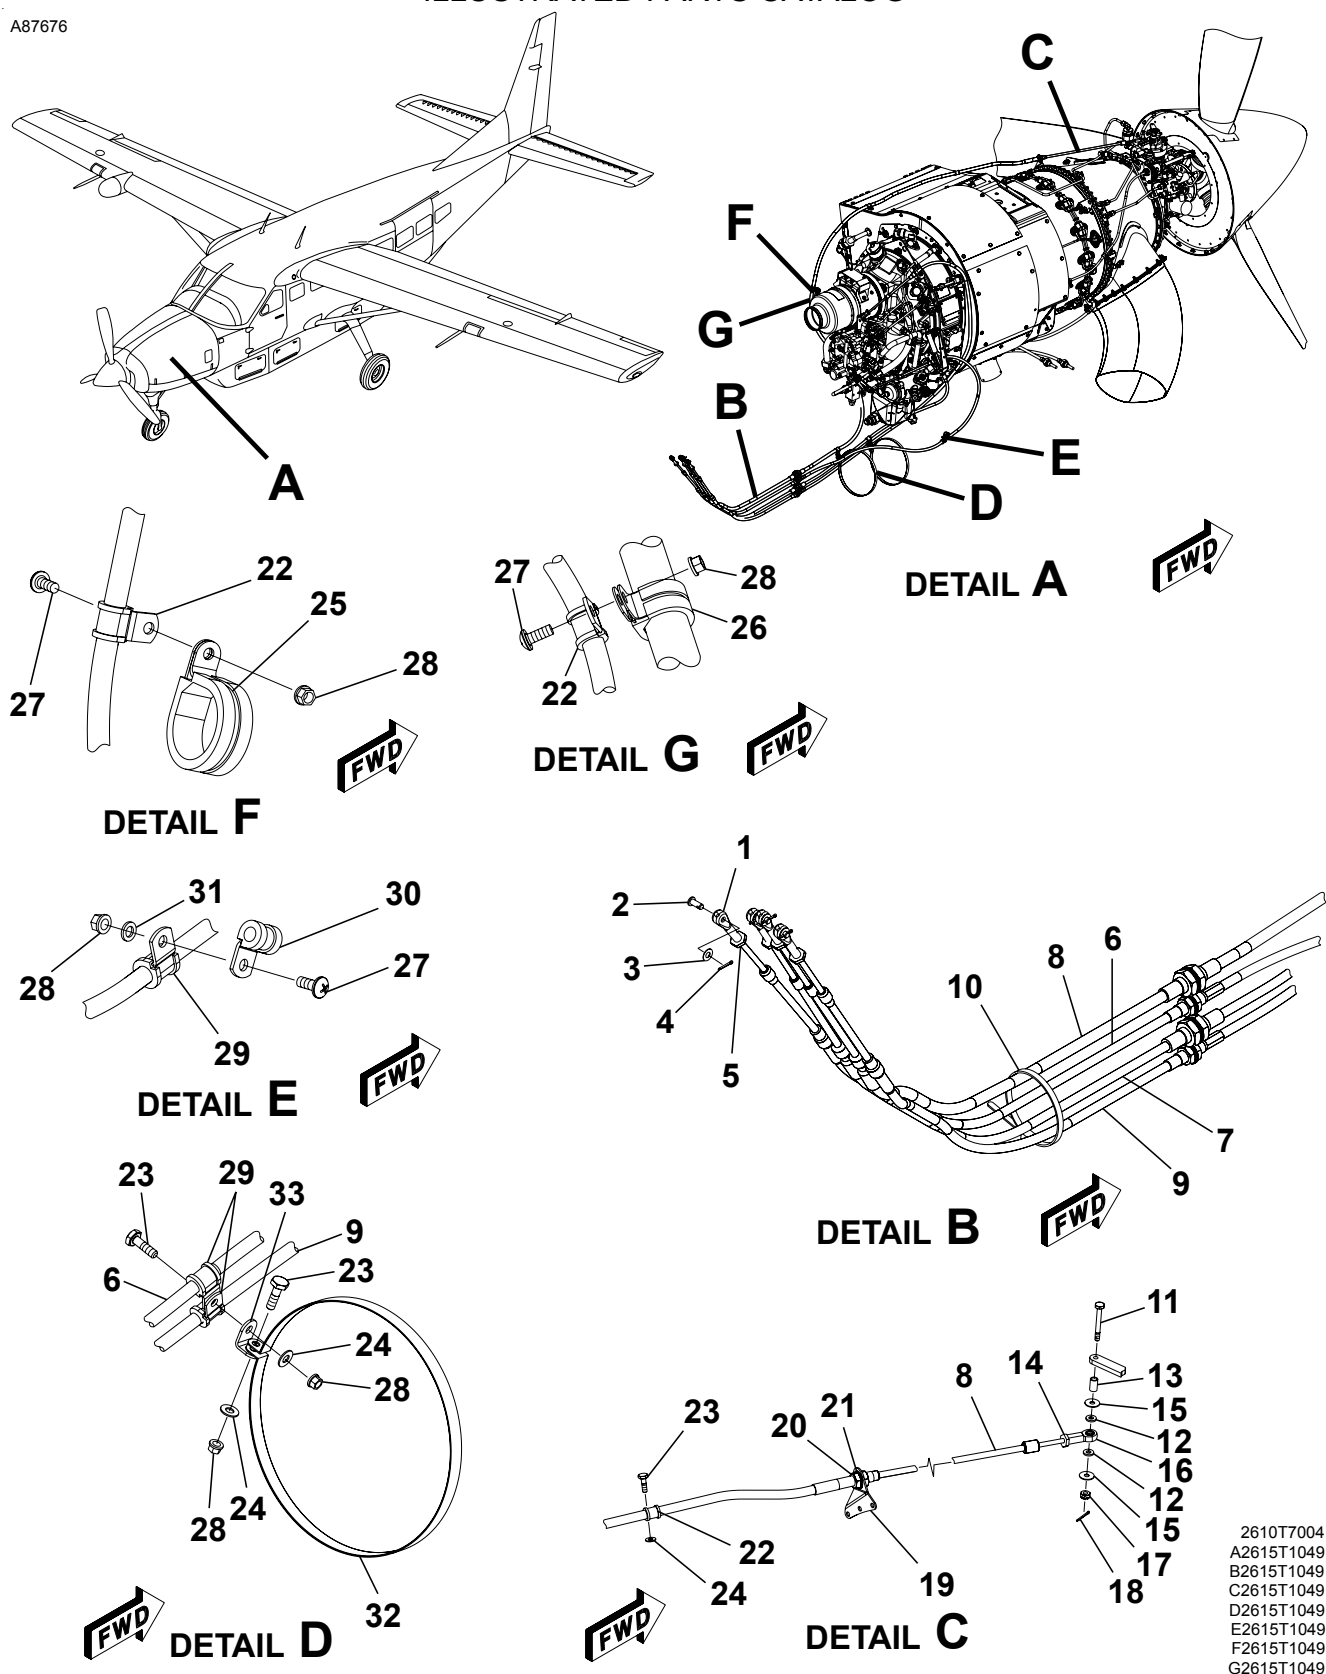

ENGINE CONTROLS
 Figure 01B. (Sheet 1)

2610T7004
 A2615T1049
 B2615T1049
 C2615T1049
 D2615T1049
 E2615T1049
 F2615T1049
 G2615T1049

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ENGINE CONTROLS


AIRPLANES (208B) 5000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	1452535-1	.	TERMINAL						(208B) 5000 & ON	04
2	MS20392-2C11	.	PIN						(208B) 5000 & ON	04
3	NAS1149D0316K	.	WASHER						(208B) 5000 & ON	04
4	MS24665-132	.	COTTER PIN						(208B) 5000 & ON	04
5	MS35691-31	.	NUT						(208B) 5000 & ON	01
6	38047100	.	CONTROL ASSEMBLY - EMERGENCY POWER					92867	(208B) 5000 & ON	01
7	580-219-154	.	CONTROL ASSEMBLY - MANUAL OVERRIDE 06970					06970	(208B) 5000 & ON	01
8	580-219-153	.	CONTROL ASSEMBLY - PROPELLER CONTROL 06970					06970	(208B) 5000 & ON	01
9	38047200	.	CONTROL ASSEMBLY - CONDITION CONTROL					92867	(208B) 5000 & ON	01
10	MS3367-1-9	.	STRAP						(208B) 5000 & ON	02
11	AN3-15	.	BOLT						(208B) 5000 & ON	01
12	NAS1149F0363P	.	WASHER					73197	(208B) 5000 & ON	02
13	NAS43HT3-31	.	SPACER						(208B) 5000 & ON	01
14	561-094-052	.	NUT					06970	(208B) 5000 & ON	02
15	S1450-3-10-032	.	WASHER						(208B) 5000 & ON	02
16	S3058-3	.	BEARING						(208B) 5000 & ON	01
			ALTERNATE SPARE (INTERCHANGEABLE WITH): S3058-3H							
- 16A	S3058-3H	.	BEARING						(208B) 5000 & ON	01
			ALTERNATE SPARE (INTERCHANGEABLE WITH): S3058-3							
17	AN310-3	.	NUT						(208B) 5000 & ON	01
18	MS24665-134	.	COTTER PIN						(208B) 5000 & ON	01
19	2650116-5	.	BRACKET - PROP CONTROL						(208B) 5000 & ON	01
20	MS35691-47	.	NUT						(208B) 5000 & ON	02
21	MS35333-43	.	LOCK WASHER						(208B) 5000 & ON	02
22	MS21919WDG6	.	CLAMP					84971	(208B) 5000 & ON	04
23	AN3-5A	.	BOLT						(208B) 5000 & ON	04
24	NAS1149F0332P	.	WASHER						(208B) 5000 & ON	02
25	MS21919WDG20	.	CLAMP						(208B) 5000 & ON	01
26	MS21919WDG12	.	CLAMP						(208B) 5000 & ON	01
27	MS35207-262	.	SCREW					80205	(208B) 5000 & ON	02
28	MS21043-3	.	NUT						(208B) 5000 & ON	05
29	MS21919WDG5	.	CLAMP						(208B) 5000 & ON	03
30	MS21919WDG4	.	CLAMP					OTWO	(208B) 5000 & ON	01
31	NAS1149F0363P	.	WASHER					73197	(208B) 5000 & ON	01
32	AN735D96	.	CLAMP						(208B) 5000 & ON	01
33	AN743-12	.	BRACKET						(208B) 5000 & ON	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A89495

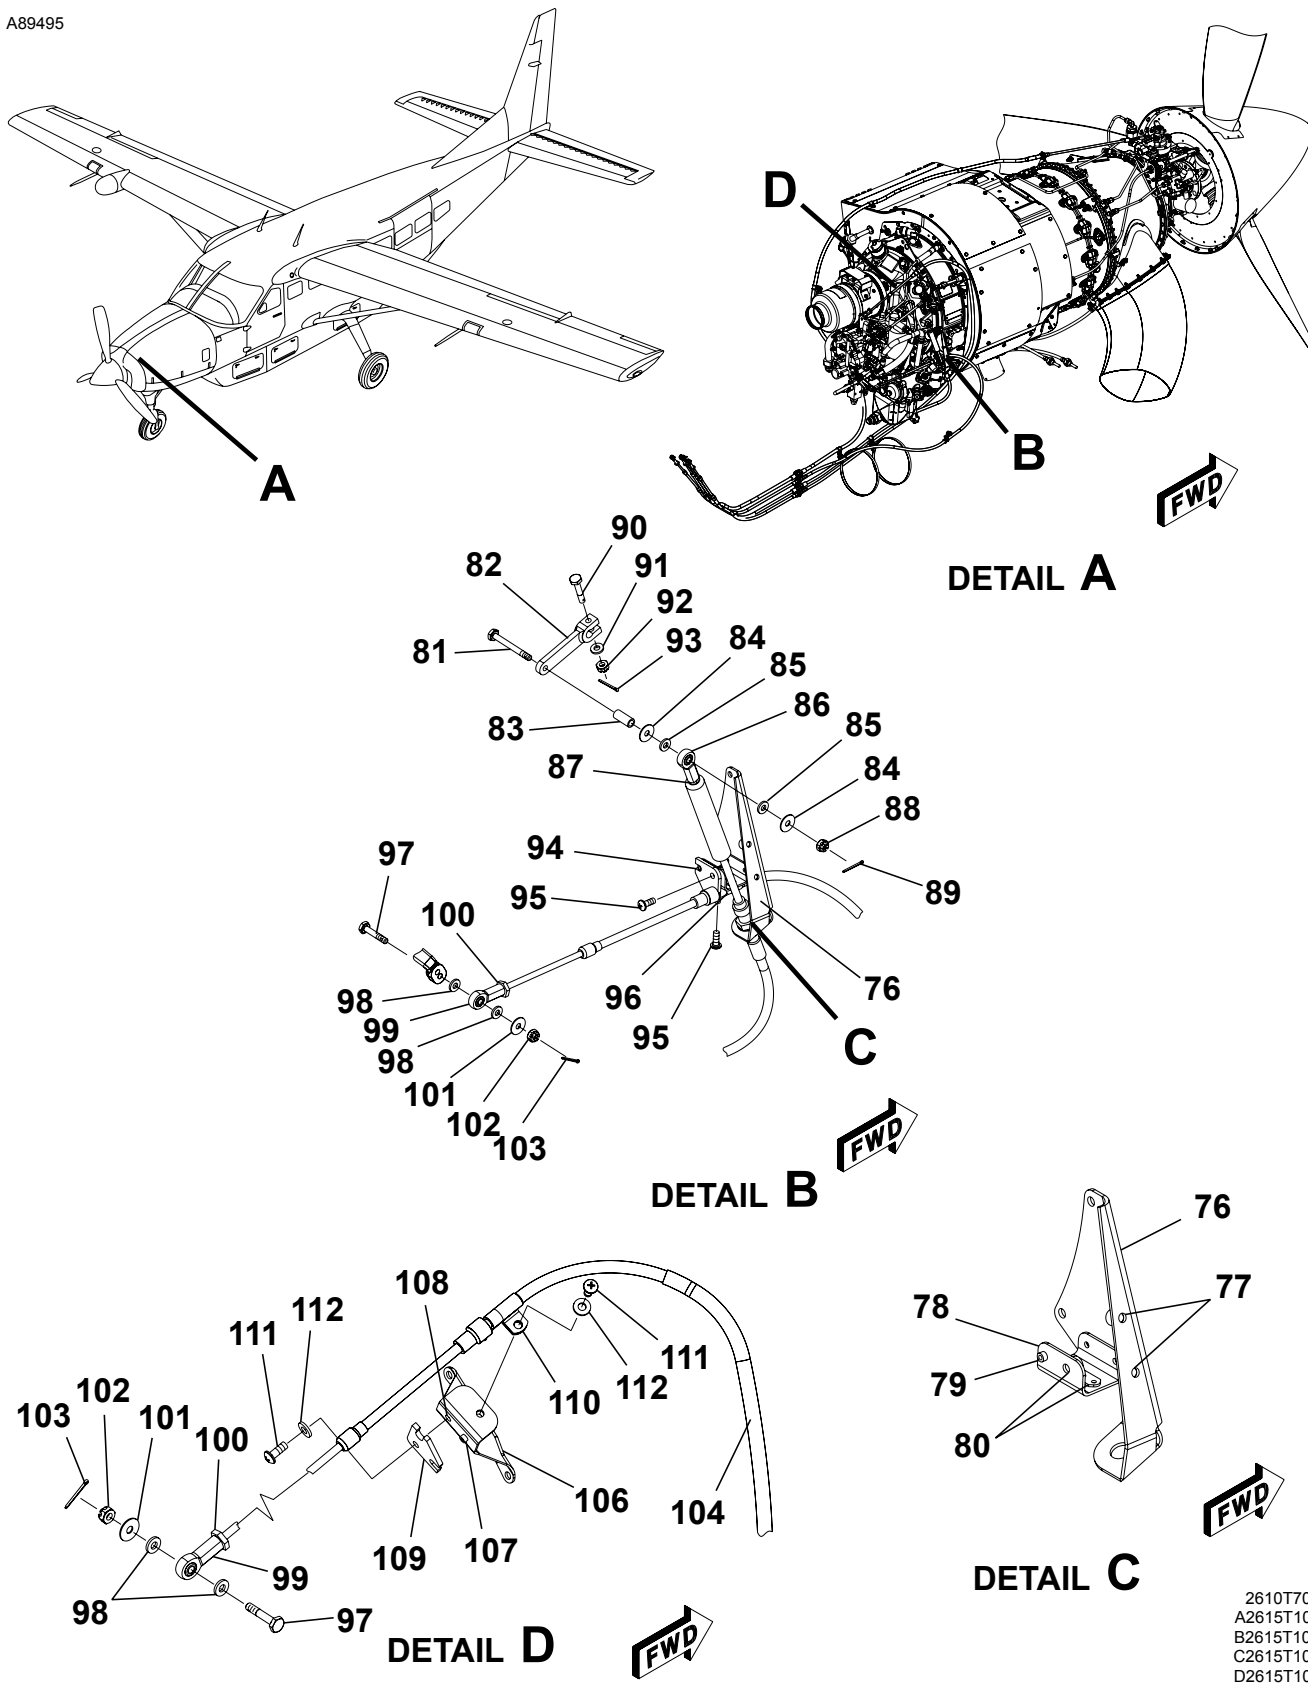

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ENGINE CONTROLS
AIRPLANES (208B) 5000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 75	2650116-1	.							(208B) 5000 & ON	01
76	2650116-7	.	.						(208B) 5000 & ON	01
77	MS21047L3	.	.					13499	(208B) 5000 & ON	02
78	2650116-3	.	.						(208B) 5000 & ON	01
79	NAS42HT3-7	.	.						(208B) 5000 & ON	01
80	NAS682A3	.	.						(208B) 5000 & ON	02
81	AN3-14	.							(208B) 5000 & ON	01
82	5954031-14	.							(208B) 5000 & ON	01
83	NAS43HT3-45	.							(208B) 5000 & ON	01
84	S1450-3-10-063	.							(208B) 5000 & ON	02
85	NAS1149F0363P	.						73197	(208B) 5000 & ON	02
86	S3058-3	.							(208B) 5000 & ON	01
		.							ALTERNATE SPARE (INTERCHANGEABLE WITH): S3058-3H	
- 86A	S3058-3H	.							(208B) 5000 & ON	01
		.							ALTERNATE SPARE (INTERCHANGEABLE WITH): S3058-3	
87	561-094-052	.						06970	(208B) 5000 & ON	01
88	AN310-3	.							(208B) 5000 & ON	01
89	MS24655-134	.							(208B) 5000 & ON	01
90	AN3-10	.							(208B) 5000 & ON	01
91	NAS1149F0363P	.						73197	(208B) 5000 & ON	01
92	AN310-3	.							(208B) 5000 & ON	01
93	MS24655-134	.							(208B) 5000 & ON	01
94	2650116-6	.							(208B) 5000 & ON	01
95	MS35207-263	.						80205	(208B) 5000 & ON	02
96	AN742D5	.							(208B) 5000 & ON	02
97	AN3-7	.							(208B) 5000 & ON	02
98	NAS1149F0363P	.						73197	(208B) 5000 & ON	04
99	S3058-3	.							(208B) 5000 & ON	02
		.							ALTERNATE SPARE (INTERCHANGEABLE WITH): S3058-3H	
- 99A	S3058-3H	.							(208B) 5000 & ON	02
		.							ALTERNATE SPARE (INTERCHANGEABLE WITH): S3058-3	
100	MS35691-31	.							(208B) 5000 & ON	02
101	S1450-3-10-032	.							(208B) 5000 & ON	02
102	AN310-3	.							(208B) 5000 & ON	02
103	MS24665-134	.							(208B) 5000 & ON	02
104	S1399-1	.							(208B) 5000 & ON	AR
- 105	2650116-2	.							(208B) 5000 & ON	01
106	2650116-4	.	.						(208B) 5000 & ON	01
107	NAS42HT3-7	.	.						(208B) 5000 & ON	01
108	NAS682A3	.	.						(208B) 5000 & ON	02
109	2650032-3	.							(208B) 5000 & ON	01
110	AN742D5	.							(208B) 5000 & ON	01
111	MS35207-263	.						80205	(208B) 5000 & ON	02
112	NAS1149F0363P	.						73197	(208B) 5000 & ON	02

- ITEM NOT ILLUSTRATED


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

76-10-01

ENGINE CONTROL QUADRANT INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

A24552

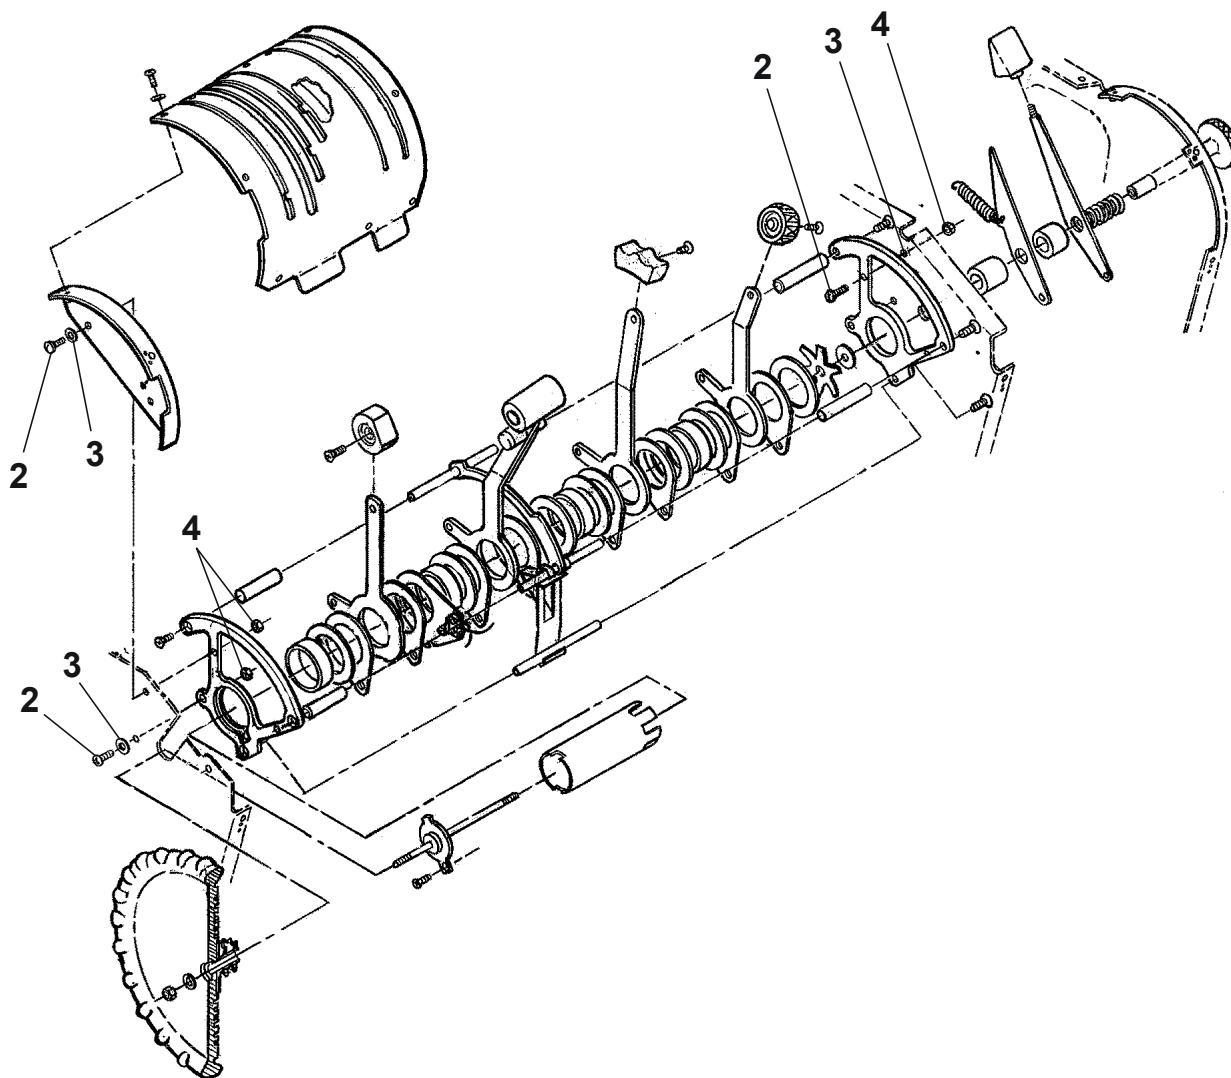

ENGINE CONTROL QUADRANT INSTALLATION
Figure 02. (Sheet 1)

26152004

Figure 02
Page 2
76-10-01 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ENGINE CONTROL QUADRANT INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

		NOMENCLATURE									UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
- 1	C299514-0101	.	QUADRANT ASSEMBLY - ENGINE CONTROL WITH "GO AROUND" SWITCH FOR SPARES ORDER (MUST REPLACE WITH): C299514-0102 C299514-0105 NOTE: FOR SPARES ORDER C299514-0102 IF "GO AROUND" SWITCH IS NOT REQUIRED. NOTE: FOR SPARES ORDER C299514-0105 IF "GO AROUND" SWITCH IS REQUIRED. SK208-166 MUST BE ACCOMPLISHED ON AIRCRAFT PRIOR TO REPLACEMENT							(208) 0001 - 0258 (208) 0332 - 0395 (208B) 0001 - 0556 (208B) 0875 - 1170	NP
- 1A	C299514-0102	.	QUADRANT ASSEMBLY - ENGINE CONTROL WITHOUT "GO AROUND" SWITCH SPARES REPLACEMENT FOR: C299514-0101 FOR SPARES ORDER (MUST REPLACE WITH): C299514-0107 NOTE: SK208-166 MUST BE ACCOMPLISHED ON AIRCRAFT PRIOR TO REPLACEMENT WHEN REPLACING THE C299514-0102 WITH THE C299514-0107							(208) 0259 - 0331 (208B) 0557 - 0874	NP
- 1B	C299514-0105	.	QUADRANT ASSEMBLY - ENGINE CONTROL WITH "GO AROUND" SWITCH SPARES REPLACEMENT FOR: C299514-0101							(208) 0396 & ON (208B) 1171 - 4999	01
- 1C	C299514-0107	.	QUADRANT ASSEMBLY - ENGINE CONTROL WITHOUT "GO AROUND" SWITCH SPARES REPLACEMENT FOR: C299514-0102							(208B) 2000 - 4999	01
- 1D	2601402-15	.	QUADRANT ASSEMBLY - ENGINE CONTROL FOR SPARES ORDER (MUST REPLACE WITH): C299514-0103 * BRITISH CERTIFIED AIRPLANES (208) 0238 THRU 0242 * BRITISH CERTIFIED AIRPLANES (208B) 0365 THRU 0463							(208) *0238 - 0242 (208B) *0365 - 0463	NP
- 1E	2601402-21	.	QUADRANT ASSEMBLY - ENGINE CONTROL FOR SPARES ORDER (MUST REPLACE WITH): C299514-0103 * BRITISH CERTIFIED AIRPLANES (208) 0243 THRU 0258 * BRITISH CERTIFIED AIRPLANES (208B) 0464 THRU 0556							(208) *0243 - 0258 (208B) *0464 - 0556	NP
- 1F	C299514-0103	.	QUADRANT ASSEMBLY - ENGINE CONTROL WITHOUT "GO AROUND" SWITCH SPARES REPLACEMENT FOR: 2601402-15 2601402-21 * BRITISH CERTIFIED AIRPLANES (208) 0259 THRU 0331 * BRITISH CERTIFIED AIRPLANES (208B) 0557 THRU 0874 NOTE: FOR SPARES ORDER C299514-0106. SK208-166 MUST BE ACCOMPLISHED ON AIRCRAFT PRIOR TO REPLACEMENT							(208) *0259 - 0331 (208B) *0557 - 0874	NP
- 1G	C299514-0104	.	QUADRANT ASSEMBLY - ENGINE CONTROL WITH "GO AROUND" SWITCH * BRITISH CERTIFIED AIRPLANES (208) 0332 THRU 0395 * BRITISH CERTIFIED AIRPLANES (208B) 0875 THRU 1170 NOTE: FOR SPARES ORDER C299514-0108. SK208-166 MUST BE ACCOMPLISHED ON AIRCRAFT PRIOR TO REPLACEMENT.							(208) *0332 - 0395 (208B) *0875 - 1170	NP
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


ENGINE CONTROL QUADRANT INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

		NOMENCLATURE								UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
- 1H	C299514-0106	.	QUADRANT ASSEMBLY - ENGINE CONTROL WITH "GO AROUND" SWITCH * BRITISH CERTIFIED AIRPLANES (208) 0396 THRU 0499 * BRITISH CERTIFIED AIRPLANES (208B) 1171 THRU 1999							(208) *0396 - 0499 (208B) *1171 - 1999	01
- 1J	C299514-0108	.	QUADRANT ASSEMBLY - ENGINE CONTROL WITH "GO AROUND" SWITCH * BRITISH CERTIFIED AIRPLANES (208) 0500 & ON * BRITISH CERTIFIED AIRPLANES (208B) 2000 THRU 4999							(208) *0500 & ON (208B) *2000 - 4999	01
- 1K	C100460	.	QUADRANT ASSEMBLY - ENGINE CONTROL				54071		(208B) 5000 - 5144	01	
- 1L	C100460-3	.	QUADRANT ASSEMBLY - THROTTLE				54071		(208B) 5145 & ON	01	
- 1M	C100465-3	.	QUADRANT ASSEMBLY - THROTTLE * EASA CERTIFIED AIRPLANES (208B) 5242 & ON ATTACHING PARTS				54071		(208B) *5242 & ON	01	
2	AN525-10R7	.	SCREW						(208) 0001 & ON (208B) 0001 - 4999	06	
- 2A	AN525-10R8	.	SCREW						(208B) 5000 & ON	06	
3	NAS1149F0332P	.	WASHER						(208) 0001 & ON (208B) 0001 & ON	06	
4	MS21083N3	.	NUT						(208) 0001 & ON (208B) 0001 & ON	06	
			--*--								
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24553

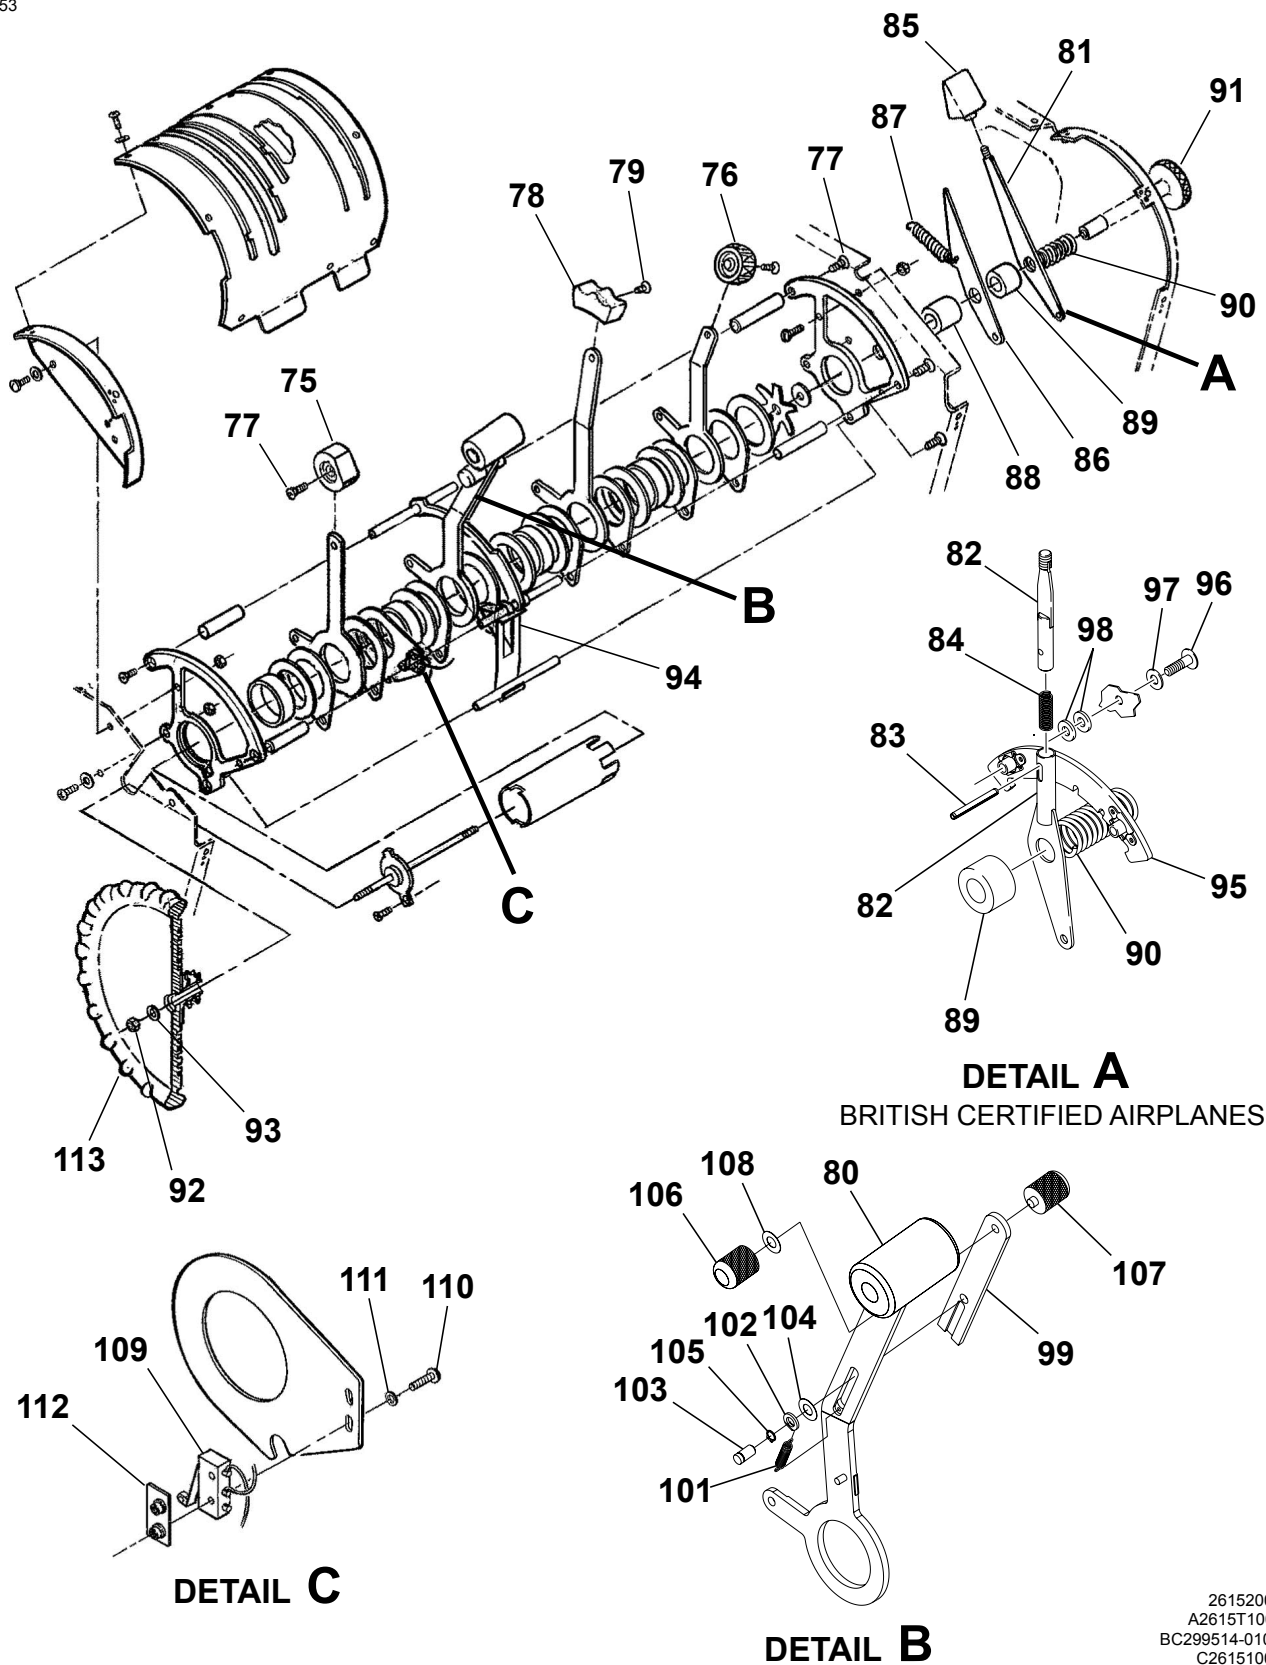

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ENGINE CONTROL QUADRANT INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
75	0861233-3	.							(208) 0001 & ON (208B) 0001 & ON	01
76	0861224-3	.							(208) 0001 & ON (208B) 0001 & ON	01
									ATTACHING PARTS	
77	MS24693-S273	.							(208) 0001 & ON (208B) 0001 & ON	01
									--*--	
78	SL6016-2	.							(208) 0001 & ON (208B) 0001 & ON	01
									ATTACHING PARTS	
79	MS24693S269	.							(208) 0001 & ON (208B) 0001 & ON	01
									--*--	
80	S1985-1	.							(208) 0001 & ON (208B) 0001 & ON	01
81		.								RF
									CONTROL ARM ASSEMBLY REFER TO 27-50-01 FIGURE 02	
82	2601442-1	.							(208) *0001 & ON (208B) *0001 & ON	01
									* BRITISH CERTIFIED AIRPLANES (208) 0001 & ON * BRITISH CERTIFIED AIRPLANES (208B) 0001 & ON	
83	NAS561-4-20	.	.						(208) *0001 & ON (208B) *0001 & ON	01
									ALTERNATE SPARE (INTERCHANGEABLE WITH): MS16562-39 NAS561P4-20 * BRITISH CERTIFIED AIRPLANES (208) 0001 & ON * BRITISH CERTIFIED AIRPLANES (208B) 0001 & ON	
- 83A	NAS561P4-20	.	.						(208) *0001 & ON (208B) *0001 & ON	01
									ALTERNATE SPARE (INTERCHANGEABLE WITH): NAS561-4-20 MS16562-39 * BRITISH CERTIFIED AIRPLANES (208) 0001 & ON * BRITISH CERTIFIED AIRPLANES (208B) 0001 & ON	
- 83B	MS16562-39	.	.						(208) *0001 & ON (208B) *0001 & ON	01
									ALTERNATE SPARE (INTERCHANGEABLE WITH): NAS561-4-20 NAS561P4-20 * BRITISH CERTIFIED AIRPLANES (208) 0001 & ON * BRITISH CERTIFIED AIRPLANES (208B) 0001 & ON	
84	5565812-5	.	.						(208) *0001 & ON (208B) *0001 & ON	01
									* BRITISH CERTIFIED AIRPLANES (208) 0001 & ON * BRITISH CERTIFIED AIRPLANES (208B) 0001 & ON	
85	S1771-1	.							(208) 0001 & ON (208B) 0001 & ON	01
86	2662015-3	.							(208) 0001 & ON (208B) 0001 & ON	01
- 86A	2662015-5	.							(208) *0001 & ON (208B) *0001 & ON	01
									INDICATOR * BRITISH CERTIFIED AIRPLANES (208) 0001 & ON * BRITISH CERTIFIED AIRPLANES (208B) 0001 & ON	
87	0460216-2	.							(208) 0001 & ON (208B) 0001 & ON	01
									SPRING	

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ENGINE CONTROL QUADRANT INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
88	2662005-6	.	SPACER						(208) 0001 & ON (208B) 0001 & ON	01
89	2662005-5	.	SPACER						(208) 0001 & ON (208B) 0001 & ON	01
90	2662005-7	.	SPRING - INDICATOR FRICTION						(208) 0001 & ON (208B) 0001 & ON	01
91	2662005-8	.	QUAD TENSION KNOB						(208) 0001 & ON (208B) 0001 & ON	01
92	MS21042L4	.	NUT						(208) 0001 & ON (208B) 0001 & ON	01
93	NAS1149F0432P	.	WASHER						(208) 0001 & ON (208B) 0001 & ON	01
94	SL6006-3	.	STOP ASSEMBLY					SLCO	(208) 0001 & ON (208B) 0001 & ON	01
			ATTACHING PARTS							
- 94A	MS35206-228	.	SCREW					80205	(208) 0001 & ON (208B) 0001 & ON	01
- 94B	MS21044C06	.	NUT						(208) 0001 & ON (208B) 0001 & ON	01
- 94C	NAS1149CN616R	.	WASHER					80205	(208) 0001 & ON (208B) 0001 & ON	01
			--*--							
95	2601443-3	.	CAM ASSEMBLY						(208) *0001 & ON (208B) *0001 & ON	01
			* BRITISH CERTIFIED AIRPLANES (208) 0001 & ON							
			* BRITISH CERTIFIED AIRPLANES (208B) 0001 & ON							
			ATTACHING PARTS							
96	AN525-10R11	.	SCREW						(208) 0001 & ON (208B) 0001 & ON	02
97	NAS1149F0332P	.	WASHER						(208) 0001 & ON (208B) 0001 & ON	02
98	NAS1149F0332P	.	WASHER						(208) 0001 & ON (208B) 0001 & ON	04
			--*--							
99	SL6005-2	.	DETENT CATCH					SLCO	(208) 0001 & ON (208B) 0001 & ON	01
- 100	SL6005-4	.	LOCKOUT BAR					SLCO	(208) 0001 & ON (208B) 0001 & ON	01
101	SL6015-5	.	SPRING					SLCO	(208) 0001 & ON (208B) 0001 & ON	01
102	SL6015-4	.	CLIP					SLCO	(208) 0001 & ON (208B) 0001 & ON	01
103	SL6015-3	.	PIN					SLCO	(208) 0001 & ON (208B) 0001 & ON	01
104	SL6015-2	.	WASHER					SLCO	(208) 0001 & ON (208B) 0001 & ON	01
105	MS16674-5021	.	RETAINING RING					SLCO	(208) 0001 & ON (208B) 0001 & ON	01
106	SL6011-1	.	KNOB					SLCO	(208) 0001 & ON (208B) 0001 & ON	01
107	SL6011-2	.	KNOB					SLCO	(208) 0001 & ON (208B) 0001 & ON	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


ENGINE CONTROL QUADRANT INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON


NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
108	SL6015-2	.	WASHER						SLCO	(208) 0001 & ON (208B) 0001 & ON	01
109	S1856-1	.	SWITCH - EMERGENCY POWER LEVER							(208) 0001 & ON (208B) 0001 - 5144	01
			NOTE: "GO AROUND SWITCH" ASSEMBLY								
			ATTACHING PARTS								
110	MS35206-208	.	SCREW							(208) 0001 & ON (208B) 0001 - 5144	02
111	NAS1149FN232P	.	WASHER							(208) 0001 & ON (208B) 0001 - 5144	02
			--*--								
112	1560218-1	.	PLATE ASSEMBLY - SWITCH ATTACH FOR SPARES ORDER (MUST REPLACE WITH): 2670166-30							(208) 0001 - 0537 (208B) 0001 - 2347	NP
- 112A	2670166-30	.	PLATE ASSEMBLY - SWITCH ATTACH SPARES REPLACEMENT FOR: 1560218-1							(208) 0538 & ON (208B) 2348 - 5144	01
113		.	ELEVATOR TRIM WHEEL INSTALLATION REFER TO 27-30-02 FIGURE 02								RF
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24455

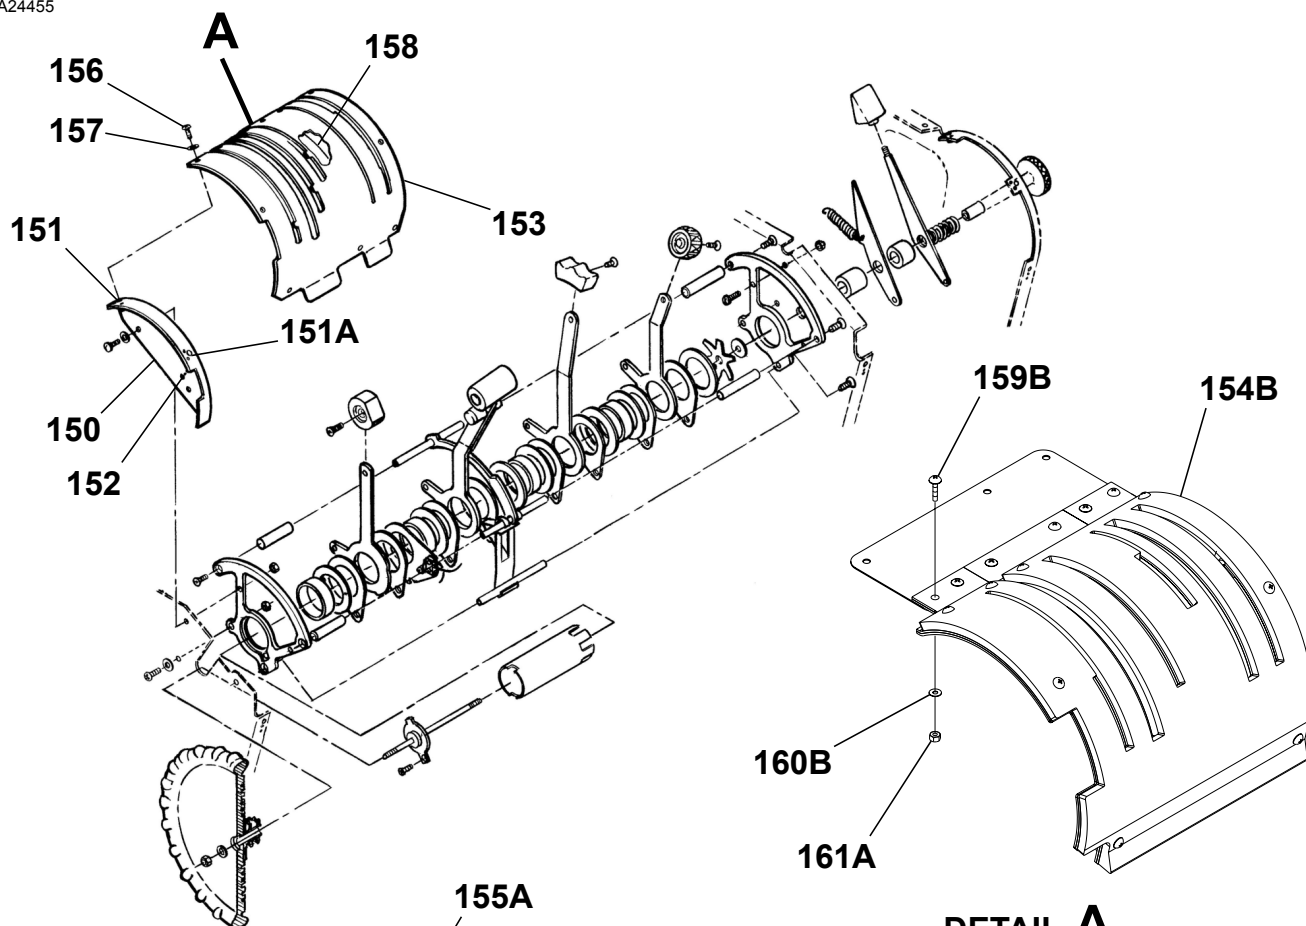


DETAIL A
 AIRPLANES 208B5000 AND ON

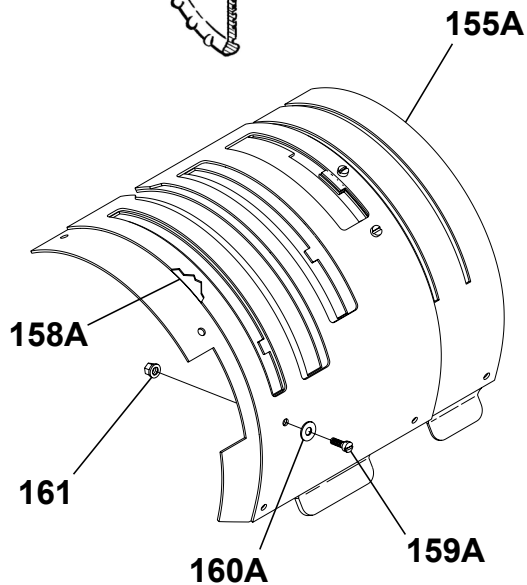

DETAIL A

BRITISH CERTIFIED AIRPLANES
 AIRPLANES 20800351 AND ON
 AND AIRPLANES 208B0920 AND ON

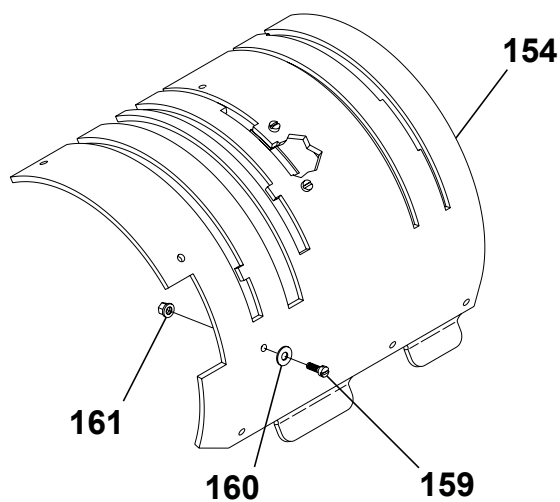

DETAIL A

AIRPLANES 20800351 AND ON
 AND AIRPLANES 208B0920 THRU 208B4999

2615R2005
 A2615T1046
 A2615T1043
 A1615T1044

ENGINE CONTROL QUADRANT INSTALLATION
Figure 02. (Sheet 3)

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

ENGINE CONTROL QUADRANT INSTALLATION
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
150	2613236-1	.							(208) 0001 - 0154 (208B) 0001 - 0179	NP
- 150A	2613236-3	.							(208) 0155 & ON (208B) 0180 - 5144	01
- 150B	2613236-5	.							(208B) 5145 & ON	01
151	MS21073L08	.	.					OCLM1	(208) 0001 - 0154 (208B) 0001 - 0179	01
151A	MS21075L08N	.	.						(208) 0001 - 0154 (208B) 0001 - 0179	01
- 151B	MS21075L08N	.	.						(208) 0155 & ON (208B) 0180 - 5144	02
- 151C	MS21075L04N	.	.						(208B) 5145 & ON	02
152	NAS696A08	.	.						(208) 0001 & ON (208B) 0001 - 5144	01
- 152A	MS21071L08	.	.						(208B) 5145 & ON	01
153	2613048-3	.							(208) 0001 - 0066	NP
- 153A	2613048-13	.							(208) 0067 - 0122	NP
- 153B	2613048-14	.							(208) 0123 - 0154 (208B) 0001 - 0179	NP
- 153C	2613048-15	.							(208) 0155 - 0234 (208B) 0180 - 0363	NP
- 153D	2613048-17	.							(208) 0235 - 0350 (208B) 0364 - 0919	NP
154	2613048-20	.							(208) 0351 - 0395 (208B) 0920 - 1170	01
- 154A	2613048-22	.							(208) 0396 & ON (208B) 1171 - 4999	01
154B	2613501-6	.							(208B) 5000 & ON	01
- 155	2601455-1	.							(208) *0238 - 0356 (208B) *0365 - 0934	NP
155A	2601455-7	.							(208) *0357 - 0395 (208B) *0935 - 1170	01

- ITEM NOT ILLUSTRATED

CESSNA® MODEL 208 ILLUSTRATED PARTS CATALOG

ENGINE CONTROL QUADRANT INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 155B	2601455-11	.	COVER ASSEMBLY - QUADRANT						(208) *0396 - 0416 (208B) *1171 - 1270	01
			* BRITISH CERTIFIED AIRPLANES (208) 0396 THRU 0416							
			* BRITISH CERTIFIED AIRPLANES (208B) 1171 THRU 1270							
- 155C	2601455-18	.	COVER ASSEMBLY - QUADRANT						(208) *0001 - 0395	01
			* AIRPLANES (208) 0001 THRU 0395 INCORPORATING CAB06-3						(208) *0001 - 0395	
			* AIRPLANES (208) 0001 THRU 0395 INCORPORATING SK208-166						(208) *0417 & ON	
			* BRITISH CERTIFIED AIRPLANES (208) 0417 & ON						(208B) *0001 - 1170	
			* AIRPLANES (208B) 0001 THRU 1170 INCORPORATING CAB06-3						(208B) *0001 - 1170	
			* AIRPLANES (208B) 0001 THRU 1170 INCORPORATING SK208-166						(208B) *1271 & ON	
			* BRITISH CERTIFIED AIRPLANES (208B) 1271 & ON							
			ATTACHING PARTS							
156	AN525-832R6	.	SCREW						(208) 0001 & ON (208B) 0001 & ON	13
157	NAS1149FN816P	.	WASHER						(208) 0001 & ON (208B) 0001 & ON	13
			--*--							
158	2601455-4	.	GUARD - PEDESTAL						(208) *0238 - 0356 (208B) *0365 - 0934	NP
			FOR SPARES ORDER (MUST REPLACE WITH):							
			2601455-14							
			* BRITISH CERTIFIED AIRPLANES (208) 0238 THRU 0356							
			* BRITISH CERTIFIED AIRPLANES (208B) 0365 THRU 0934							
158A	2601455-10	.	GUARD - PEDESTAL						(208) *0357 - 0395 (208B) *0935 - 1170	NP
			FOR SPARES ORDER (MUST REPLACE WITH):							
			2601455-14							
			* BRITISH CERTIFIED AIRPLANES (208) 0357 THRU 0395							
			* BRITISH CERTIFIED AIRPLANES (208B) 0935 THRU 1170							
- 158B	2601455-14	.	GUARD - PEDESTAL						(208) *0396 & ON (208B) *1171 & ON	01
			SPARES REPLACEMENT FOR:							
			2601455-4							
			2601455-10							
			* BRITISH CERTIFIED AIRPLANES (208) 0396 & ON							
			* BRITISH CERTIFIED AIRPLANES (208B) 1171 & ON							
- 158C	2601455-13	.	GUARD ASSEMBLY - PEDESTAL						(208) *0001 - 0395 (208) *0001 - 0395 (208) *0396 & ON (208B) *0001 - 1170 (208B) *0001 - 1170 (208B) *1171 & ON	01
			* AIRPLANES (208) 0001 THRU 0395 INCORPORATING CAB06-3							
			* AIRPLANES (208) 0001 THRU 0395 INCORPORATING SK208-166							
			* BRITISH CERTIFIED AIRPLANES (208) 0396 & ON							
			* AIRPLANES (208B) 0001 THRU 1170 INCORPORATING CAB06-3							
			* AIRPLANES (208B) 0001 THRU 1170 INCORPORATING SK208-166							
			* BRITISH CERTIFIED AIRPLANES (208B) 1171 & ON							
159	MS35265-43	.	SCREW						(208) 0351 - 0395 (208B) 0920 - 4999	01
159A	MS35265-45	.	SCREW						(208) *0351 & ON (208B) *0920 & ON	01
			* BRITISH CERTIFIED AIRPLANES (208) 0351 & ON							
			* BRITISH CERTIFIED AIRPLANES (208B) 0920 & ON							
159B	CM3558-4-10G	.	SCREW						(208B) 5000 & ON	03
160	NAS1149FN832P	.	WASHER					80205	(208) 0351 - 0395 (208B) 0920 - 4999	01
160A	NAS1149FN816P	.	WASHER						(208) *0351 & ON (208B) *0920 & ON	01
			* BRITISH CERTIFIED AIRPLANES (208) 0351 & ON							
			* BRITISH CERTIFIED AIRPLANES (208B) 0920 & ON							
160B	NAS1149DN416J	.	WASHER						(208B) 5000 & ON	03
161	MS21042L08	.	NUT						(208) 0351 - 0395 (208B) 0920 - 2499	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ENGINE CONTROL QUADRANT INSTALLATION

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
161A	MS21044N04	.	NUT						07187	(208B) 5000 & ON	03
- 162	MS20995CY15	.	WIRE							(208) 0351 & ON	01
			ALTERNATE SPARE (INTERCHANGEABLE WITH):							(208B) 0920 & ON	
			C489003								
- 163	C489003	.	LOCK WIRE							(208) 0351 & ON	01
			ALTERNATE SPARE (INTERCHANGEABLE WITH):							(208B) 0920 & ON	
			MS20995CY15								
- ITEM NOT ILLUSTRATED											