

CHAPTER

77

ENGINE INDICATING

RECORD OF TEMPORARY REVISIONS

[illegible]

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

CHAPTER/ SECTION/ SUBJECT	START PAGE OR FIGURE	NUMBER OF PAGES	DATE
77 - TITLE		1	
77 - LIST OF EFFECTIVE PAGES	Page 1	1	Nov 29, 2022
77 - TABLE OF CONTENTS	Page 1	1	Nov 29, 2022
77-11-00	Figure 01	8	Nov 29, 2022
77-11-00	Figure 02	4	Nov 4, 2021
77-12-00	Figure 01	9	Nov 29, 2022
77-12-00	Figure 02	4	Nov 29, 2022
77-12-00	Figure 03	4	Nov 29, 2022
77-13-00	Figure 01	3	Nov 4, 2021
77-14-00	Figure 01	3	Nov 4, 2021
77-15-00	Figure 01	3	Nov 4, 2021
77-21-00	Figure 01	3	Nov 4, 2021
77-30-00	Figure 01	3	Nov 4, 2021
77-30-00	Figure 02	3	Nov 4, 2021
77-30-00	Figure 03	3	Nov 4, 2021
77-40-00	Figure 01	3	Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

<u>SUBJECT</u>	<u>LOCATION</u>	<u>EFFECTIVITY</u>	
		<u>START</u>	<u>END</u>
WET TORQUE INDICATING SYSTEM.	77-11-00 Figure 01	(208) 0001 (208B) 0001	& ON & ON
WET TORQUE INDICATING SYSTEM.	77-11-00 Figure 02	(208B) 5000	& ON
ELECTRICAL TORQUE INDICATING SYSTEM.	77-12-00 Figure 01	(208) 0001 (208B) 0001	& ON & ON
TORQUE TRANSMITTER INSTALLATION.	77-12-00 Figure 02	(208) 0382 (208B) 1087	0499 1999
TORQUE TRANSMITTER INSTALLATION - FDR & CVR.	77-12-00 Figure 03	(208) 0417 (208B) 1052	& ON & ON
PROPELLER RPM INDICATING SYSTEM.	77-13-00 Figure 01	(208) 0001 (208B) 0001	& ON & ON
GAS GENERATOR RPM INDICATOR SYSTEM	77-14-00 Figure 01	(208) 0001 (208B) 0001	& ON & ON
TACHOMETER GENERATOR INSTALLATION	77-15-00 Figure 01	(208B) 5000	& ON
INTER-TURBINE TEMPERATURE INDICATOR	77-21-00 Figure 01	(208) 0001 (208B) 0001	0499 1999
ALTAIR ENGINE TREND MONITORING (ETM) COMPONENT INSTALLATION.	77-30-00 Figure 01	(208) 0500 (208B) 2000	& ON 4999
FAST ENGINE TREND MONITORING (ETM) COMPONENT INSTALLATION.	77-30-00 Figure 02	(208B) 5000	& ON
ADAS PLUS PROCESSOR INSTALLATION	77-30-00 Figure 03	(208) 0382 (208B) 1087	& ON & ON
GEA-71 ENGINE INTERFACE UNIT INSTALLATION . .	77-40-00 Figure 01	(208) 0500 (208B) 2000	& ON & ON



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

77-11-00


WET TORQUE INDICATING SYSTEM
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


A24554

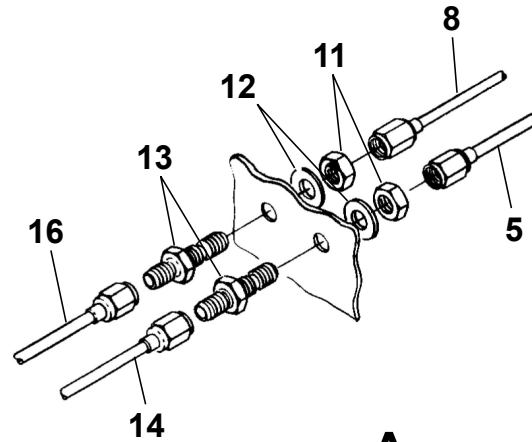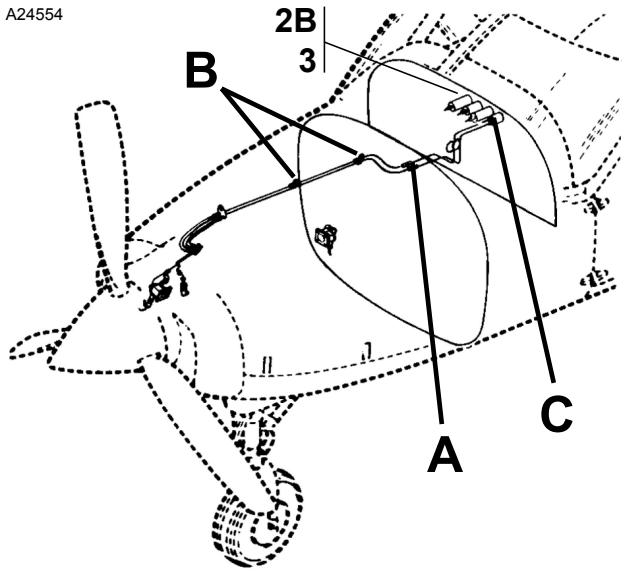

DETAIL A

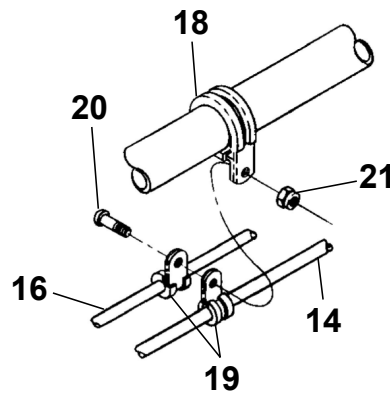

DETAIL B

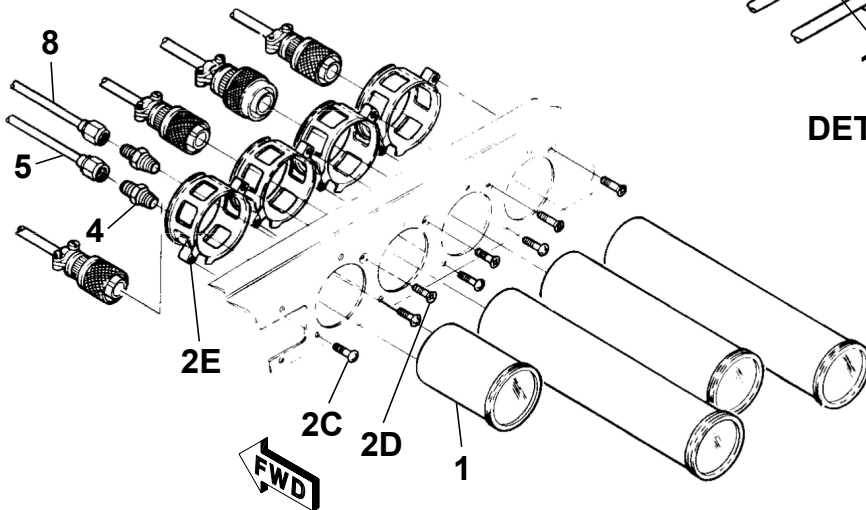

DETAIL C

WET TORQUE INDICATING SYSTEM
Figure 01. (Sheet 1)

2655R1004
 A2655R1008
 B2655R1007
 C2655R2002

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

WET TORQUE INDICATING SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

		NOMENCLATURE									UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	2606011-1	.	TORQUE INDICATOR - MECHANICAL FOR SPARES ORDER (MUST REPLACE WITH): 2606011-2							(208) 0001 - 0050	NP
- 2	2606011-2	.	TORQUE INDICATOR - MECHANICAL SPARES REPLACEMENT FOR: 2606011-1							(208) 0051 - 0276 (208B) 0045 - 0229	01
- 2A	2606011-3	.	TORQUE INDICATOR - MECHANICAL							(208) 0277 - 0499 (208B) 0230 - 1999	01
2B	MD82-4	.	TORQUE INDICATOR - MECHANICAL EI005							59742 (208) 0500 & ON (208B) 2000 - 4999	01
			ATTACHING PARTS								
2C	MS24693BB50	.	SCREW							(208) 0001 - 0499 (208B) 0499 - 1999	01
2D	MS35214-43	.	SCREW							(208) 0001 - 0499 (208B) 0499 - 1999	01
2E	MS28042-1A	.	CLAMP							77820 (208) 0001 - 0499 (208B) 0499 - 1999	01
- 2F	MS24693-BB30	.	SCREW							(208) 0001 & ON (208B) 0001 & ON	04
			--*--								
3	S3312-1	.	.	LIGHT ASSEMBLY					59742 (208) 0001 & ON (208B) 0001 & ON	01	
4	AS5194-0402	.	ADAPTER							(208) 0001 - 0499 (208B) 0001 - 1999	02
- 4A	AS5194D0402	.	ADAPTER							(208) 0500 & ON (208B) 2000 & ON	02
5	2606016-1	.	LINE ASSEMBLY - TORQUE VENT GAGE TO FIREWALL FOR SPARES ORDER (MUST REPLACE WITH): 2606016-13 * AIRPLANES (208) 0001 THRU 0050 NOT INCORPORATING SK208-16							(208) 0001 - 0050 (208) *0001 - 0050	NP
- 6	2606016-7	.	LINE ASSEMBLY - TORQUE VENT GAGE TO FIREWALL FOR SPARES ORDER (MUST REPLACE WITH): 2606016-13 * AIRPLANES (208) 0001 THRU 0050 INCORPORATING SK208-16							(208) 0051 - 0154 (208) *0001 - 0050	NP
- 7	2606016-13	.	LINE ASSEMBLY - TORQUE VENT GAGE TO FIREWALL SPARES REPLACEMENT FOR: 2606016-1 2606016-7							(208) 0155 - 0499 (208B) 0180 - 1999	01
- 7A	S3309B0260-000E	.	HOSE ASSEMBLY - TORQUE VENT GAGE TO FIREWALL							00624 (208) 0500 & ON (208B) 2000 & ON	01
8	2606016-2	.	LINE ASSEMBLY - TORQUE PRESSURE GAGE TO FIREWALL FOR SPARES ORDER (MUST REPLACE WITH): 2606016-16 * AIRPLANES (208) 0001 THRU 0050 NOT INCORPORATING SK208-16							(208) 0001 - 0050 (208) *0001 - 0050	NP
- 9	2606016-8	.	LINE ASSEMBLY - TORQUE PRESSURE GAGE TO FIREWALL FOR SPARES ORDER (MUST REPLACE WITH): 2606016-16 * AIRPLANES (208) 0001 THRU 0050 INCORPORATING SK208-16							(208) 0051 - 0154 (208) *0001 - 0050	NP
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

WET TORQUE INDICATING SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON





ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
- 10	2606016-14	.	LINE ASSEMBLY - TORQUE PRESSURE GAGE TO FIREWALL FOR SPARES ORDER (MUST REPLACE WITH): 2606016-16						(208) 0155 - 0319 (208B) 0180 - 0821	NP
- 10A	2606016-16	.	LINE ASSEMBLY - TORQUE PRESSURE GAGE TO FIREWALL SPARES REPLACEMENT FOR: 2606016-2 2606016-8 2606016-14						(208) 0320 - 0499 (208B) 0822 - 1999	01
- 10B	S3309B0260-000E	.	HOSE ASSEMBLY - TORQUE PRESSURE GAGE TO FIREWALL				00624		(208) 0500 & ON (208B) 2000 & ON	01
11	AS5178-04	.	NUT						(208) 0001 & ON (208B) 0001 & ON	02
12	NAS1149F0732P	.	WASHER						(208) 0001 & ON (208B) 0001 & ON	02
13	AN832-4	.	UNION						(208) 0001 & ON (208B) 0001 & ON	02
14	2600101-58	.	LINE ASSEMBLY - TORQUE VENT FIREWALL TO HOSE FOR SPARES ORDER (MUST REPLACE WITH): 2600101-25						(208) 0001 - 0191 (208B) 0001 - 0221	NP
- 15	2600101-25	.	LINE ASSEMBLY - TORQUE VENT FIREWALL TO HOSE SPARES REPLACEMENT FOR: 2600101-58						(208) 0192 & ON (208B) 0222 & ON	01
16	2600101-57	.	LINE ASSEMBLY - TORQUE PRESSURE FIREWALL TO HOSE FOR SPARES ORDER (MUST REPLACE WITH): 2600101-24						(208) 0001 - 0191 (208B) 0001 - 0221	NP
- 17	2600101-24	.	LINE ASSEMBLY - TORQUE PRESSURE FIREWALL TO HOSE SPARES REPLACEMENT FOR: 2600101-57						(208) 0192 & ON (208B) 0222 & ON	01
18	MS21919DG16	.	CLAMP						(208) 0001 & ON (208B) 0001 & ON	02
19	MS21919WDG4	.	CLAMP				OTWO		(208) 0001 & ON (208B) 0001 & ON	04
			ATTACHING PARTS							
20	MS35207-265	.	SCREW						(208) 0001 & ON (208B) 0001 & ON	01
21	MS21044N3	.	NUT				4W953		(208) 0001 & ON (208B) 0001 & ON	01

--*--

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24556

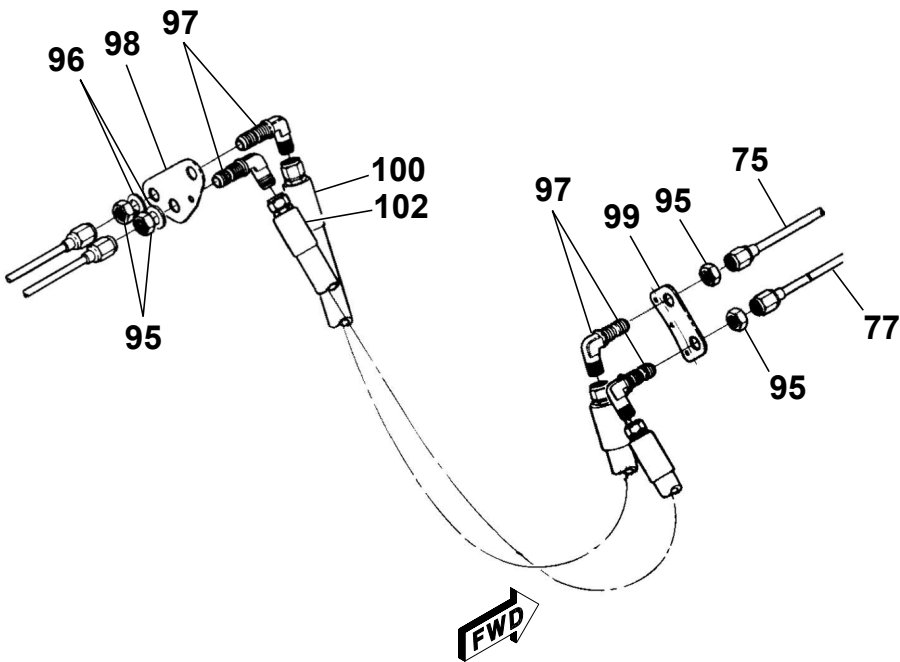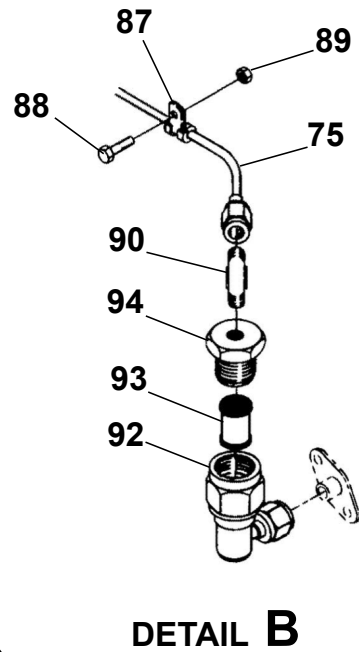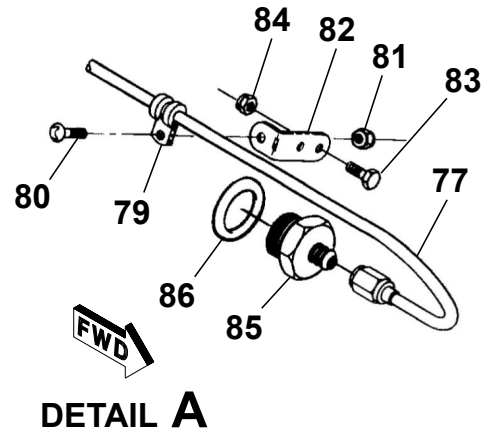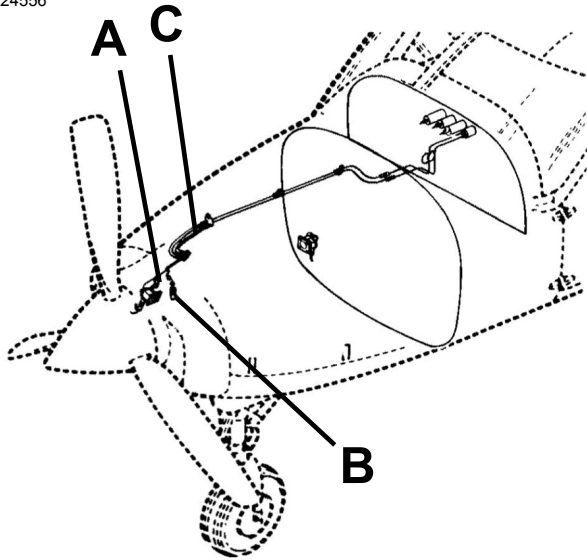

DETAIL C

WET TORQUE INDICATING SYSTEM
Figure 01. (Sheet 2)

26551004
 A26551001
 B26551003
 C26552001

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

WET TORQUE INDICATING SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
75	2600101-56	.	LINE ASSEMBLY - TORQUE VENT BRACKET TO SEPARATOR FOR SPARES ORDER (MUST REPLACE WITH): 2600101-22							(208) 0001 - 0191 (208B) 0001 - 0221	NP
- 76	2600101-22	.	LINE ASSEMBLY - TORQUE VENT BRACKET TO SEPARATOR SPARES REPLACEMENT FOR: 2600101-56							(208) 0192 & ON (208B) 0222 & ON	01
77	2600101-55	.	LINE ASSEMBLY - TORQUE PRESSURE BRACKET TO REDUCER FOR SPARES ORDER (MUST REPLACE WITH): 2600101-21							(208) 0001 - 0191 (208B) 0001 - 0221	NP
- 78	2600101-21	.	LINE ASSEMBLY - TORQUE PRESSURE BRACKET TO REDUCER SPARES REPLACEMENT FOR: 2600101-55							(208) 0192 & ON (208B) 0222 & ON	01
79	MS21919WDG4	.	CLAMP				OTWO		(208) 0001 & ON (208B) 0001 & ON	01	
			ATTACHING PARTS								
80	MS35207-264	.	SCREW				80205		(208) 0001 & ON (208B) 0001 & ON	01	
81	MS21044N3	.	NUT				4W953		(208) 0001 & ON (208B) 0001 & ON	01	
			--*--								
82	S2300-24	.	BRACKET						(208) 0001 & ON (208B) 0001 & ON	01	
			ATTACHING PARTS								
83	AN3-3A	.	BOLT						(208) 0001 & ON (208B) 0001 & ON	01	
84	MS21044N3	.	NUT				4W953		(208) 0001 & ON (208B) 0001 & ON	01	
			--*--								
85	5950017-11	.	REDUCER ASSEMBLY - TORQUE PRESSURE							(208) 0001 & ON (208B) 0001 & ON	01
86	M83248/1-213	.	O-RING						(208) 0001 & ON (208B) 0001 & ON	01	
87	MS21919WDG4	.	CLAMP				OTWO		(208) 0001 & ON (208B) 0001 & ON	01	
			ATTACHING PARTS								
88	AN3-3A	.	BOLT						(208) 0001 & ON (208B) 0001 & ON	01	
89	MS21044N3	.	NUT				4W953		(208) 0001 & ON (208B) 0001 & ON	01	
			--*--								
90	MS20822-4	.	ELBOW						(208) 0001 & ON (208B) 0001 & ON	01	
- 91	5950034-15	.	SEPARATOR ASSEMBLY - TORQUE VENT							(208) 0001 & ON (208B) 0001 & ON	01
92	5950034-2	.	.	BODY - SEPARATOR						(208) 0001 & ON (208B) 0001 & ON	01
93	204090-17	.	.	BREATHER PAD - SEPARATOR				00736	(208) 0001 & ON (208B) 0001 & ON	01	
94	5950034-7	.	.	ADAPTER - SEPARATOR						(208) 0001 & ON (208B) 0001 & ON	01
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

WET TORQUE INDICATING SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
95	AS5178-04	.	NUT						(208) 0001 & ON (208B) 0001 & ON	04
96	NAS1149F0732P	.	WASHER						(208) 0001 & ON (208B) 0001 & ON	02
97	AN833-4	.	ELBOW						(208) 0001 & ON (208B) 0001 & ON	04
98	2650081-1	.	BRACKET - TORQUE LINE ATTACH AFT						(208) 0001 & ON (208B) 0001 & ON	01
99	2650081-2	.	BRACKET - TORQUE LINE ATTACH FORWARD						(208) 0001 & ON (208B) 0001 & ON	01
100	S2808-4-0113	.	HOSE ASSEMBLY - TORQUE VENT BRACKET TO BRACKET ALTERNATE SPARE (INTERCHANGEABLE WITH): AE3663161E0113						(208) 0001 & ON (208B) 0001 & ON	01
- 101	AE3663161E0113	.	HOSE ASSEMBLY - TORQUE VENT BRACKET TO BRACKET ALTERNATE SPARE (INTERCHANGEABLE WITH): S2808-4-0113					00624	(208) 0001 & ON (208B) 0001 & ON	01
102	S2808-4-0113	.	HOSE ASSEMBLY - TORQUE PRESSURE BRACKET TO BRACKET ALTERNATE SPARE (INTERCHANGEABLE WITH): AE3663161E0113						(208) 0001 & ON (208B) 0001 & ON	01
- 103	AE3663161E0113	.	HOSE ASSEMBLY - TORQUE VENT BRACKET TO BRACKET ALTERNATE SPARE (INTERCHANGEABLE WITH): S2808-4-0113					00624	(208) 0001 & ON (208B) 0001 & ON	01
- ITEM NOT ILLUSTRATED										


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

77-11-00

WET TORQUE INDICATING SYSTEM
AIRPLANES (208B) 5000 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A87570

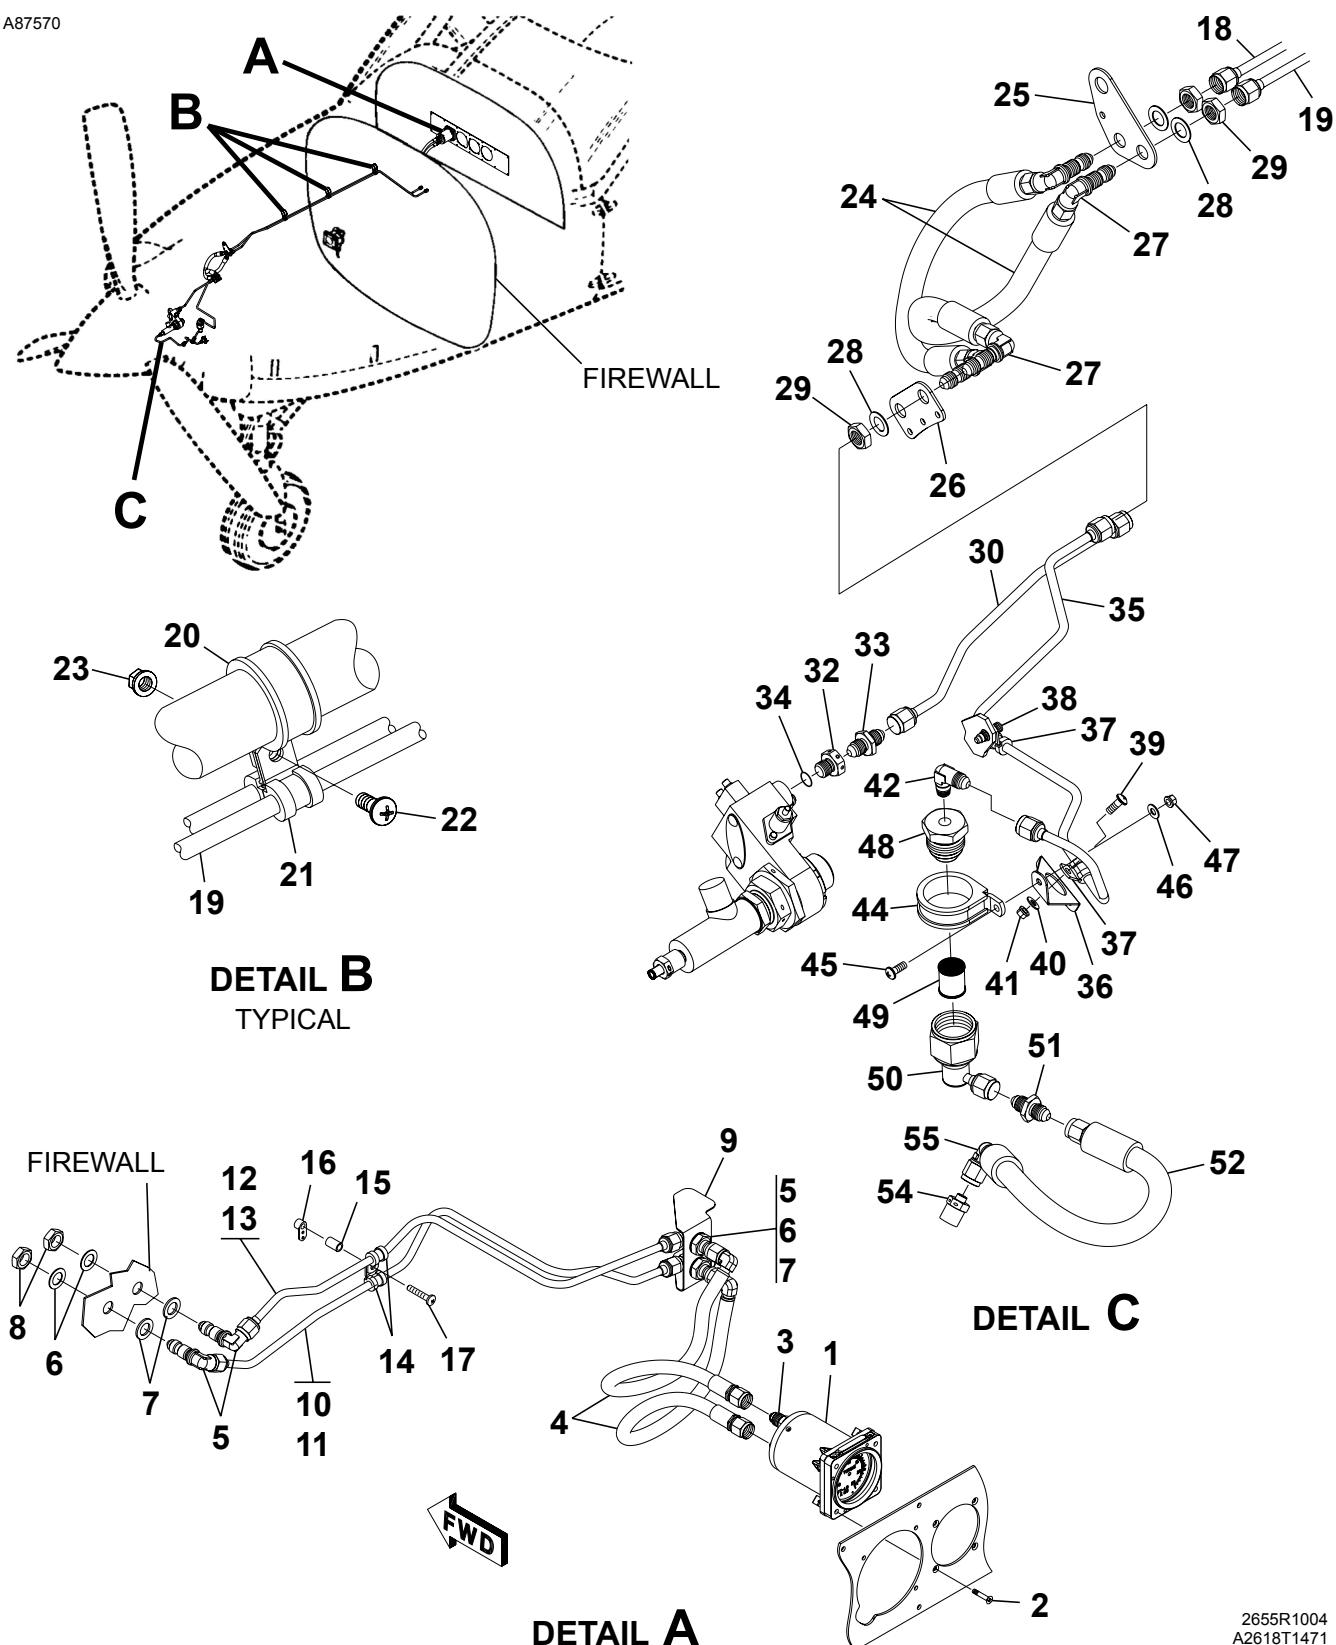

2655R1004
 A2618T1471
 B2618T1471
 C2618T1471

Figure 02
 Page 2
 77-11-00 Nov 4, 2021

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

WET TORQUE INDICATING SYSTEM

AIRPLANES (208B) 5000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	2606011-6	.	TORQUE INDICATOR EI005						(208B) 5000 & ON	01
		.	ATTACHING PARTS							
2	MS24693-BB30	.	SCREW						(208B) 5000 & ON	04
		.	--*--							
3	AS5194D0402	.	ADAPTER						(208B) 5000 & ON	02
4	S3309C0154-000E	.	HOSE ASSEMBLY						(208B) 5000 & ON	02
5	AN833-4J	.	ELBOW						(208B) 5000 & ON	04
6	NAS1149F0732P	.	WASHER - AFT SIDE						(208B) 5000 & ON	04
7	NAS1149F0763P	.	WASHER - FORWARD SIDE						(208B) 5000 & ON	04
8	AS5178J04	.	NUT					04638	(208B) 5000 & ON	04
9	2606040-5	.	BRACKET						(208B) 5000 & ON	01
10	2606040-6	.	TUBE ASSEMBLY - PRESSURE						(208B) 5000 & ON	01
11	CM3582-7-3	.	IDENT TAPE - PRESSURE						(208B) 5000 & ON	AR
12	2606040-7	.	TUBE ASSEMBLY - VENT						(208B) 5000 & ON	01
13	CM3582-7-2	.	IDENT TAPE - VENT						(208B) 5000 & ON	AR
14	MS21919WDF4	.	CLAMP						(208B) 5000 & ON	02
		.	ALTERNATE SPARE (INTERCHANGEABLE WITH):							
		.	AS21919WDF04							
- 14A	AS21919WDF04	.	CLAMP						(208B) 5000 & ON	02
		.	ALTERNATE SPARE (INTERCHANGEABLE WITH):							
		.	MS21919WDF4							
15	NAS43-3-32	.	SPACER						(208B) 5000 & ON	01
16	MS21071-3	.	NUTPLATE						(208B) 5000 & ON	01
		.	ATTACHING PARTS							
17	MS27039C1-16	.	SCREW						(208B) 5000 & ON	01
		.	--*--							
18	2655001-11	.	TUBE ASSEMBLY - TORQUE GAUGE						(208B) 5000 & ON	01
19	2655001-10	.	TUBE ASSEMBLY - TORQUE GAUGE						(208B) 5000 & ON	01
		.	ATTACHING PARTS							
20	MS21919WDG16	.	CLAMP						(208B) 5000 & ON	04
21	MS21919WDG4	.	CLAMP					OTWO	(208B) 5000 & ON	05
22	MS35207-263	.	SCREW					80205	(208B) 5000 & ON	06
23	MS21042L3	.	NUT					00624	(208B) 5000 & ON	06
		.	--*--							
24	AE3663161E0113	.	HOSE ASSEMBLY					00624	(208B) 5000 & ON	02
		.	ALTERNATE SPARE (INTERCHANGEABLE WITH):							
		.	S2808-4-0113							
- 24A	S2808-4-0113	.	HOSE ASSEMBLY						(208B) 5000 & ON	02
		.	ALTERNATE SPARE (INTERCHANGEABLE WITH):							
		.	AE3663161E0113							
25	2650081-1	.	BRACKET						(208B) 5000 & ON	01
26	2650081-2	.	BRACKET						(208B) 5000 & ON	01
27	AN833-4J	.	ELBOW						(208B) 5000 & ON	04
28	NAS1149C0763R	.	WASHER						(208B) 5000 & ON	04
29	AS5178J04	.	NUT					04638	(208B) 5000 & ON	04
30	2655001-8	.	TUBE ASSEMBLY - TORQUE GAUGE						(208B) 5000 & ON	01
- 31	6355003-6	.	ORIFICE ASSEMBLY						(208B) 5000 & ON	01
32	JETA1875120D	.	RESTRICTOR					92555	(208B) 5000 & ON	01
33	6355003-7	.	UNION						(208B) 5000 & ON	01
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG
WET TORQUE INDICATING SYSTEM
AIRPLANES (208B) 5000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
34	M83248/2-904	.	O-RING						(208B) 5000 & ON	01
35	2655001-12	.	TUBE ASSEMBLY						(208B) 5000 & ON	01
36	2655001-13	.	BRACKET - OIL SEPARATOR						(208B) 5000 & ON	01
			ATTACHING PARTS							
37	MS21919WDG4	.	CLAMP					OTWO	(208B) 5000 & ON	01
38		.	ATTACHING HARDWARE - SUPPLIED WITH ENGINE							RF
39	MS35207-263	.	SCREW					80205	(208B) 5000 & ON	01
40	NAS1149C0332R	.	WASHER						(208B) 5000 & ON	01
41	MS21042L3	.	NUT					00624	(208B) 5000 & ON	01
			ALTERNATE SPARE (INTERCHANGEABLE WITH):							
			NAS1291-3							
- 41A	NAS1291-3	.	NUT						(208B) 5000 & ON	01
			ALTERNATE SPARE (INTERCHANGEABLE WITH):							
			MS21042L3							
			--*--							
42	MS20822-4J	.	ELBOW						(208B) 5000 & ON	01
- 43	2655001-16	.	SEPARATOR ASSEMBLY						(208B) 5000 & ON	01
			ATTACHING PARTS							
44	MS21919WDG22	.	CLAMP						(208B) 5000 & ON	01
45	MS35207-263	.	SCREW					80205	(208B) 5000 & ON	01
46	NAS1149C0332R	.	WASHER						(208B) 5000 & ON	01
47	MS21042L3	.	NUT					00624	(208B) 5000 & ON	01
			ALTERNATE SPARE (INTERCHANGEABLE WITH):							
			NAS1291-3							
- 47A	NAS1291-3	.	NUT						(208B) 5000 & ON	01
			ALTERNATE SPARE (INTERCHANGEABLE WITH):							
			MS21042L3							
			--*--							
48	2655001-18	.	ADAPTER						(208B) 5000 & ON	01
49	204090-17	.	BREATHING PAD					00736	(208B) 5000 & ON	03
50	2655001-17	.	SEPARATOR WELD ASSEMBLY						(208B) 5000 & ON	01
51	AS5174J0404	.	UNION						(208B) 5000 & ON	01
52	AE3663161E0134	.	HOSE ASSEMBLY						(208B) 5000 & ON	01
- 53	2655001-15	.	ORIFICE ASSEMBLY						(208B) 5000 & ON	01
54	JETA1875120D	.	RESTRICTOR					92555	(208B) 5000 & ON	01
55	2655001-14	.	ELBOW						(208B) 5000 & ON	01
- ITEM NOT ILLUSTRATED										


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

77-12-00


ELECTRICAL TORQUE INDICATING SYSTEM
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24551

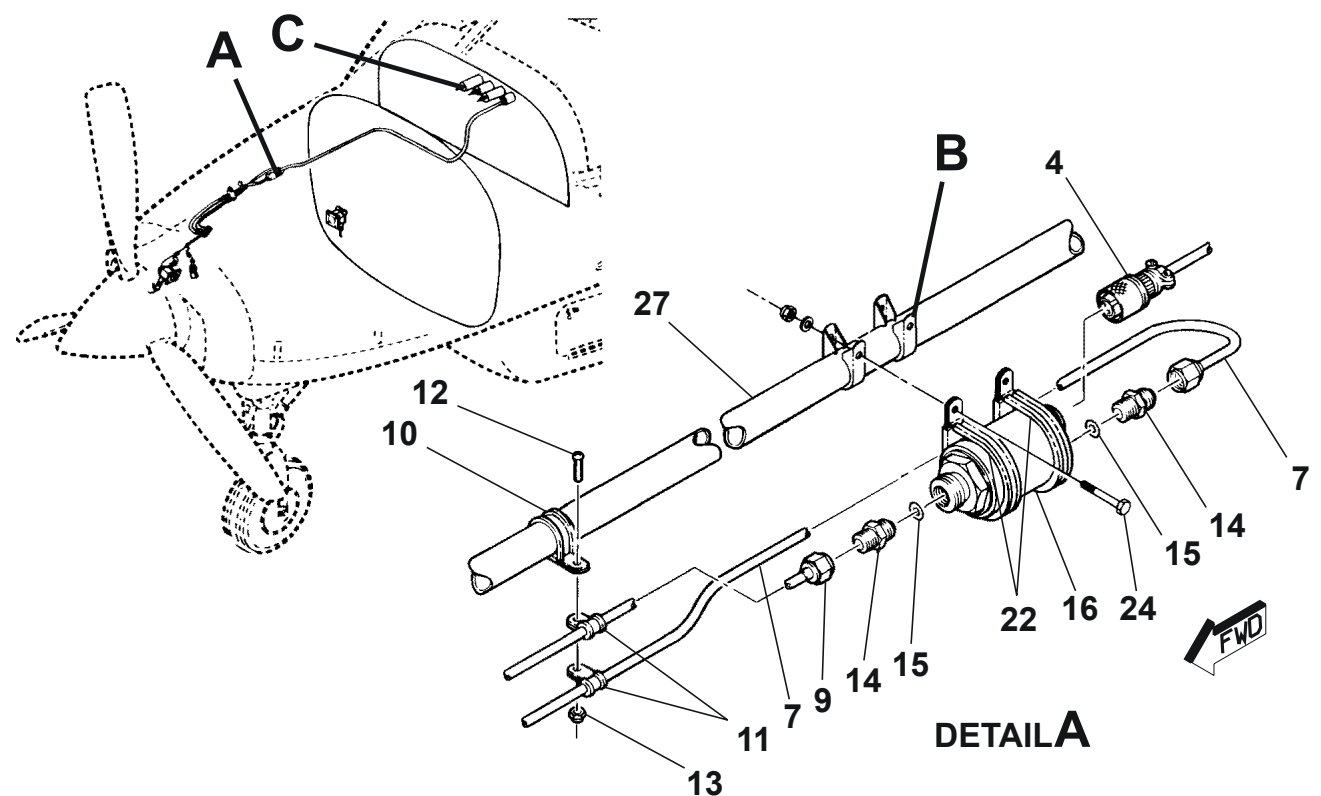


DETAIL A

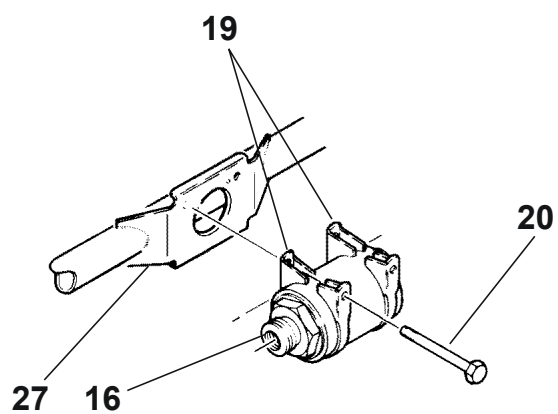

DETAIL B

AIRPLANES 20800007,
 20800009, AND 20800011

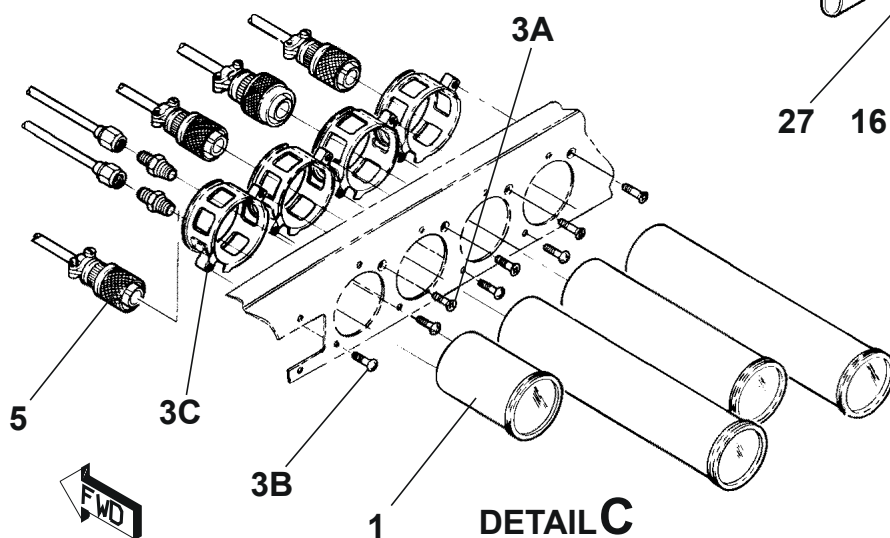

DETAIL C

ELECTRICAL TORQUE INDICATING SYSTEM
Figure 01. (Sheet 1)

26551006
 A26552003
 B26552004
 C26552002

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

ELECTRICAL TORQUE INDICATING SYSTEM
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	SR2AW	.	INDICATOR - ELECTRICAL TORQUE					61349	(208) 0001 - 0083	01
- 2	SE-OC2H	.	INDICATOR - ELECTRICAL TORQUE					61349	(208) 0084 & ON (208B) 0001 - 0229	01
- 3	10263N01W00	.	INDICATOR - ELECTRICAL TORQUE					61349	(208B) 0230 & ON	01
		.	ATTACHING PARTS							
3A	MS24693BB50	.	SCREW						(208) 0001 & ON (208B) 0001 & ON	01
3B	MS35214-43	.	SCREW						(208) 0001 & ON (208B) 0001 & ON	01
3C	MS28042-1A	.	CLAMP					77820	(208) 0001 & ON (208B) 0001 & ON	01
		.	--*--							
4	S2654-4	.	CONNECTOR ASSEMBLY - ELECTRICAL TORQUE INDICATOR						(208) 0001 & ON (208B) 0001 & ON	01
5	S2654-4	.	CONNECTOR ASSEMBLY - ELECTRICAL TORQUE INDICATOR						(208) 0001 - 0083	01
- 6	MS3126E12-10S	.	CONNECTOR - ELECTRICAL TORQUE INDICATOR						(208) 0001 & ON (208B) 0001 & ON	01
7	2653029-3	.	LINE ASSEMBLY - TORQUE VENT TRANS TO HOSE						(208) 0001 - 0083	01
- 8	2653029-6	.	LINE ASSEMBLY - TORQUE VENT TRANS TO HOSE						(208) 0001 & ON (208B) 0001 & ON	01
9	2653029-2	.	LINE ASSEMBLY - TORQUE PRESSURE TRANS TO HOSE						(208) 0001 & ON (208B) 0001 & ON	01
10	MS21919DG16	.	CLAMP						(208) 0001 & ON (208B) 0001 & ON	01
11	MS21919WDG4	.	CLAMP					OTWO	(208) 0001 & ON (208B) 0001 & ON	02
12	MS35207-265	.	SCREW						(208) 0001 & ON (208B) 0001 & ON	01
13	MS20364-1032C	.	NUT						(208) 0001 & ON (208B) 0001 & ON	01
14	MS24392D4	.	UNION						(208) 0001 & ON (208B) 0001 & ON	02
15	MS29512-04	.	O-RING					58918	(208) 0001 & ON (208B) 0001 & ON	02
16	ST502P	.	TRANSMITTER - TORQUE PRESSURE					61349	(208) 0001 - 0083	01
- 17	PTD102J	.	TRANSMITTER - TORQUE PRESSURE					61349	(208) 0084 - 0199 (208B) 0001 - 0255	01
- 18	10298T01W00	.	TRANSMITTER - TORQUE PRESSURE ALTERNATE SPARE (INTERCHANGEABLE WITH): PTD102J					61349	(208B) 0256 - 1049	01
- 18A	MS20365-1032C	.	NUT						(208) 0007 - 0199 (208B) 0001 - 0541	02
- 18B	MS21044N3	.	NUT					4W953	(208B) 0542 - 1049	04
- 18C	PTD102J	.	TRANSMITTER ALTERNATE SPARE (INTERCHANGEABLE WITH): 10298T01W00					61349	(208) 0001 & ON (208B) 0001 & ON	
19	S1601-16	.	CLAMP						(208) 0007 - 0199 (208B) 0001 - 0541	02
20	AN3-14A	.	BOLT						(208) 0007 - 0199 (208B) 0001 - 0541	02

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


ELECTRICAL TORQUE INDICATING SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
- 21	2653029-200	.	CLAMP ASSEMBLY							(208) 0008 - 0008 (208) 0010 - 0010 (208) 0012 - 0012 (208) 0084 & ON (208B) 0001 - 0541	02
22	MS21919WDG36	.	CLAMP							(208) 0008 - 0008 (208) 0010 - 0010 (208) 0012 - 0083	02
- 23	MS21919DG32	.	CLAMP							(208) 0084 - 0199 (208B) 0001 - 1049	02
- 23A	2653043-1	.	PLATE ASSEMBLY - TRANSMITTER CLAMP							(208B) 0542 - 1049	01
- 23B	2653043-2	.	CLAMP ASSEMBLY - TRANSMITTER							(208B) 0542 - 1049	04
- 23C	AN3-4A	.	BOLT							80205 (208B) 0542 - 1049	02
24	AN3-14A	.	BOLT							(208) 0008 - 0008 (208) 0010 - 0010 (208) 0012 - 0012 (208B) 0001 - 0541	02
- 24A	AN3-16A	.	BOLT							(208B) 0542 - 1049	04
- 25	NAS1149C0332R	.	WASHER							(208) 0007 - 0199 (208B) 0001 - 0541	02
- 26	NAS1149F0363P	.	WASHER							73197 (208B) 0542 - 1049	10
27		.	ENGINE MOUNT								RF
			REFER TO 71-20-00 FIGURE 01.								
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24555

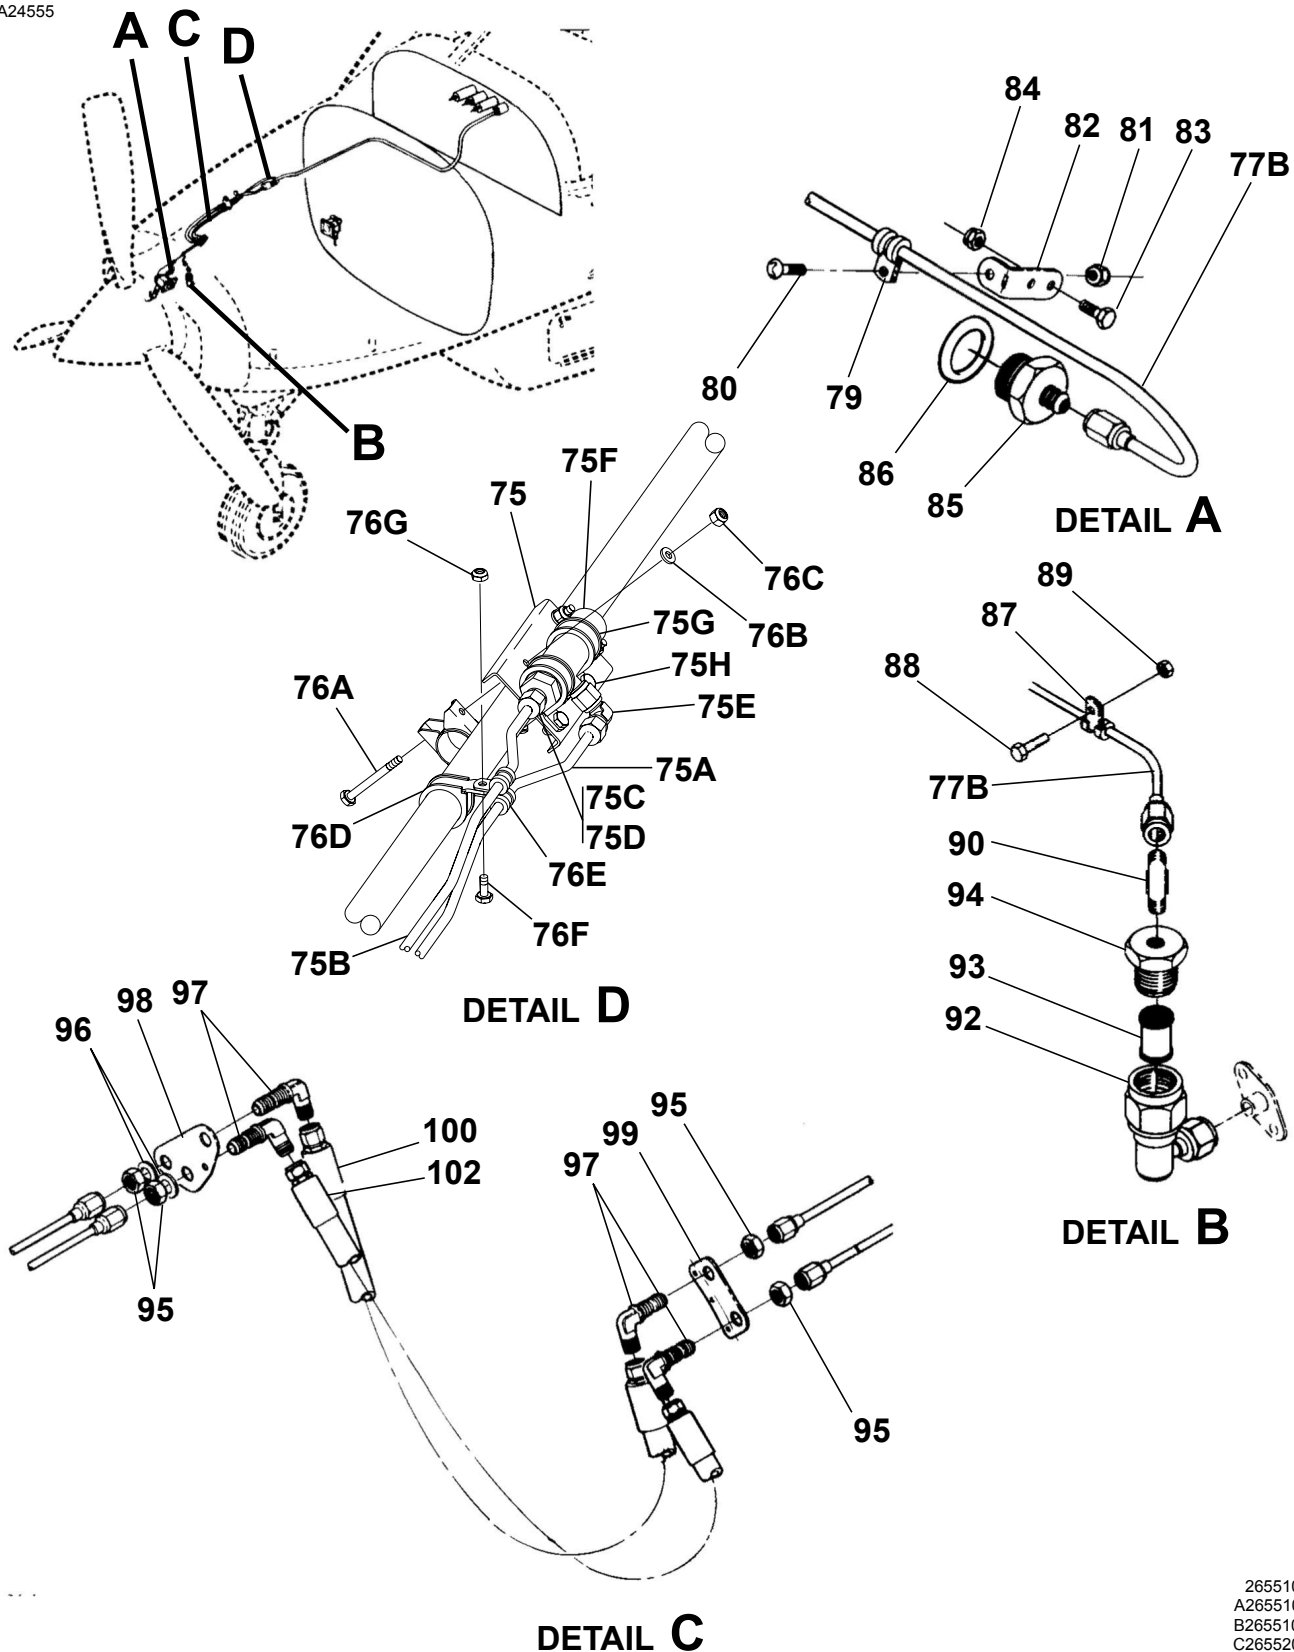

ELECTRICAL TORQUE INDICATING SYSTEM
 Figure 01. (Sheet 2)

26551006
 A26551001
 B26551003
 C26552001
 D2618T1374

ELECTRICAL TORQUE INDICATING SYSTEM
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ELECTRICAL TORQUE INDICATING SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
		ATTACHING PARTS								
83	AN3-3A	.	BOLT						(208) 0001 & ON (208B) 0001 & ON	01
84	MS21044N3	.	NUT					4W953	(208) 0001 & ON (208B) 0001 & ON	01
		.	--*							
85	5950017-11	.	REDUCER ASSEMBLY - TORQUE PRESSURE						(208) 0001 & ON (208B) 0001 & ON	01
86	M83248/1-213	.	O-RING						(208) 0001 & ON (208B) 0001 & ON	01
87	MS21919WDG4	.	CLAMP					OTWO	(208) 0001 & ON (208B) 0001 & ON	01
		.	ALTERNATE SPARE (INTERCHANGEABLE WITH): AS21919WDG04							
- 87A	AS21919WDG04	.	CLAMP						(208B) 1050 & ON	04
		.	ALTERNATE SPARE (INTERCHANGEABLE WITH): MS21919WDG4							
		ATTACHING PARTS								
88	AN3-3A	.	BOLT						(208) 0001 & ON (208B) 0001 & ON	01
89	MS21044N3	.	NUT					4W953	(208) 0001 & ON (208B) 0001 & ON	01
		.	--*							
90	MS20822-4	.	ELBOW						(208) 0001 & ON (208B) 0001 & ON	01
- 91	5950034-15	.	SEPARATOR ASSEMBLY - TORQUE VENT						(208) 0001 & ON (208B) 0001 & ON	01
92	5950034-2	.	BODY - SEPARATOR						(208) 0001 & ON (208B) 0001 & ON	01
93	204090-17	.	FILTER ELEMENT ASSEMBLY - SEPARATOR					00736	(208) 0001 & ON (208B) 0001 & ON	01
94	5950034-7	.	ADAPTER - SEPARATOR						(208) 0001 & ON (208B) 0001 & ON	01
95	AS5178-04	.	NUT						(208) 0001 & ON (208B) 0001 & ON	04
96	NAS1149F0732P	.	WASHER						(208) 0001 & ON (208B) 0001 & ON	02
97	AN833-4	.	ELBOW						(208) 0001 & ON (208B) 0001 & ON	04
98	2650081-1	.	BRACKET - TORQUE LINE ATTACH AFT						(208) 0001 & ON (208B) 0001 & ON	01
99	2650081-2	.	BRACKET - TORQUE LINE ATTACH FORWARD						(208) 0001 & ON (208B) 0001 & ON	01
100	S2808-4-0113	.	HOSE ASSEMBLY - TORQUE VENT BRACKET TO BRACKET						(208) 0001 & ON (208B) 0001 & ON	01
		.	ALTERNATE SPARE (INTERCHANGEABLE WITH): AE3663161E0113							
- 101	AE3663161E0113	.	HOSE ASSEMBLY - TORQUE VENT BRACKET TO BRACKET					00624	(208) 0001 & ON (208B) 0001 & ON	01
		.	ALTERNATE SPARE (INTERCHANGEABLE WITH): S2808-4-0113							
102	S2808-4-0113	.	HOSE ASSEMBLY - TORQUE PRESSURE BRACKET TO BRACKET						(208) 0001 & ON (208B) 0001 & ON	01
		.	ALTERNATE SPARE (INTERCHANGEABLE WITH): AE3663161E0113							

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ELECTRICAL TORQUE INDICATING SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

NOMENCLATURE										UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY	
- 103	AE3663161E0113	.	HOSE ASSEMBLY - TORQUE PRESSURE BRACKET TO BRACKET 00624						(208) 0001 & ON	01
			ALTERNATE SPARE (INTERCHANGEABLE WITH):						(208B) 0001 & ON	
			S2808-4-0113							
- ITEM NOT ILLUSTRATED										



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

77-12-00

TORQUE TRANSMITTER INSTALLATION
AIRPLANES (208) 0382 THRU 0499 AND AIRPLANES (208B) 1087 THRU
1999

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A43140

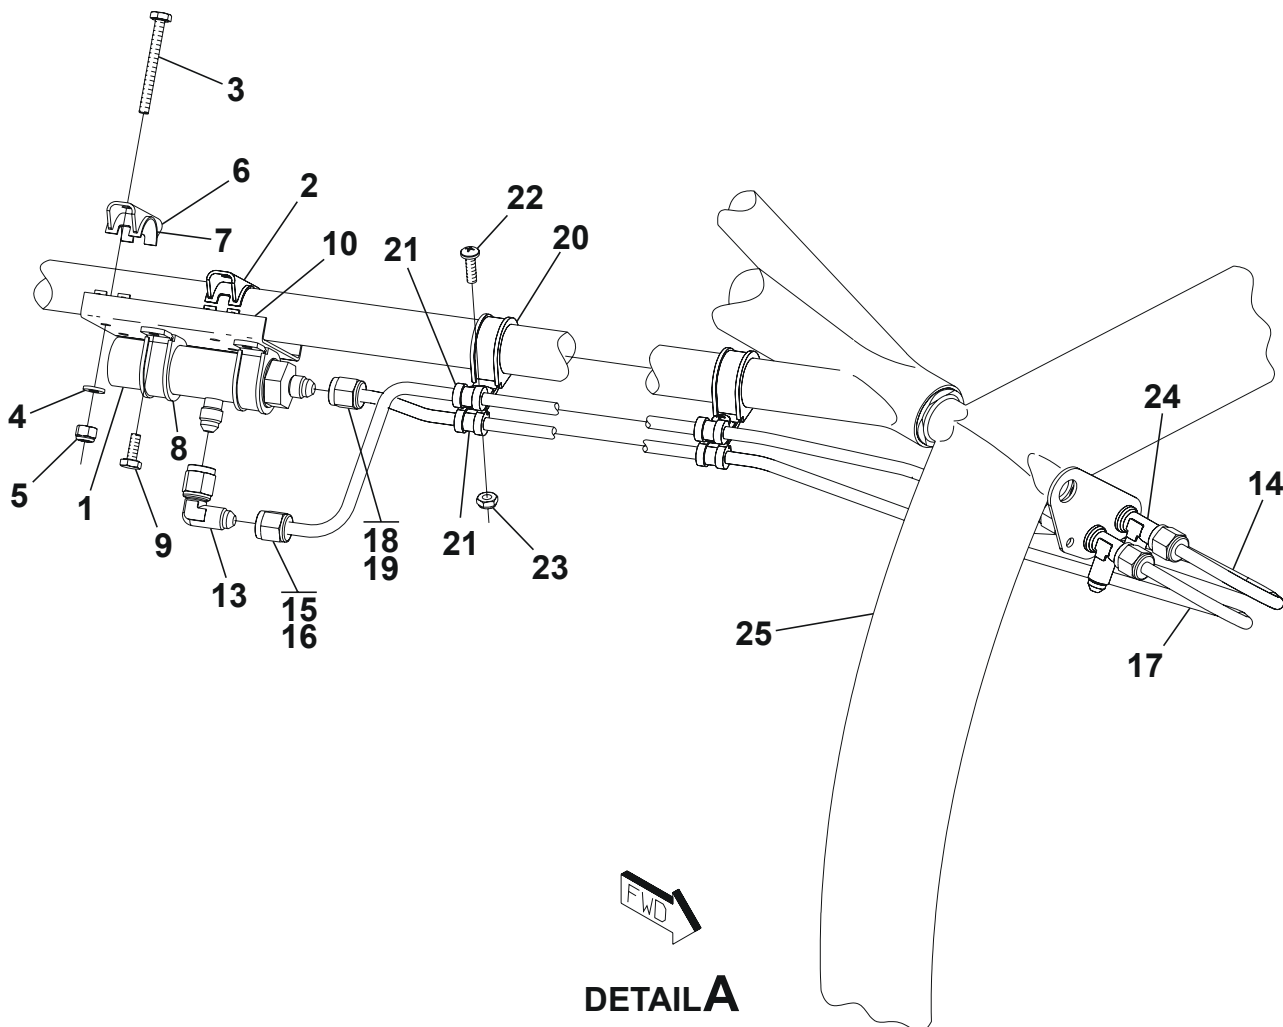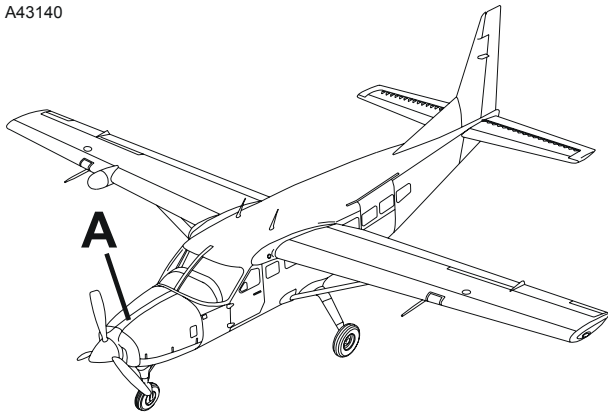

TORQUE TRANSMITTER INSTALLATION
 Figure 02. (Sheet 1)

2610T7005
 A2614T1365

Figure 02
 Page 2
77-12-00 Nov 29, 2022

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

TORQUE TRANSMITTER INSTALLATION

AIRPLANES (208) 0382 THRU 0499 AND AIRPLANES (208B) 1087 THRU 1999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	APTE51C-70D	.						TRANSDUCER FOR SPARES ORDER (MUST REPLACE WITH): APTE51CF-70D	34345 (208) 0382 - 0499 (208B) 1087 - 1999	NP
- 1A	APTE51CF-70D	.						TRANSDUCER SPARES REPLACEMENT FOR: APTE51C-70D * AIRPLANES (208) 0372 THRU 0415 AND 0417 THRU 0499 INCORPORATING CAB10-1 * AIRPLANES (208B) 1044 THRU 1189, 1191 THRU 1215 AND 1217 THRU 1999 INCORPORATING CAB10-1	34345 (208) 0382 - 0499 (208) *0372 - 0415 (208) *0417 - 0499 (208B) 1087 - 1999 (208B) *1044 - 1189 (208B) *1191 - 1215 (208B) *1217 - 1999	01
2	2653043-2	.						CLAMP ASSEMBLY	(208) 0382 - 0499 (208B) 1087 - 1999	04
								ATTACHING PARTS		
3	AN3-17A	.						BOLT	(208) 0382 - 0499 (208B) 1087 - 1999	04
4	NAS1149F0363P	.						WASHER	(208) 0382 - 0499 (208B) 1087 - 1999	04
5	MS21044N3	.						NUT	4W953 (208) 0382 - 0499 (208B) 1087 - 1999	04
								--*--		
6	2653043-4	.						CHANNEL	(208) 0382 - 0499 (208B) 1087 - 1999	01
7	2653043-5	.						NEST	(208) 0382 - 0499 (208B) 1087 - 1999	01
								ATTACHING PARTS		
8	MS21919WDG16	.						CLAMP	(208) 0382 - 0499 (208B) 1087 - 1999	02
9	AN3-4A	.						BOLT	80205 (208) 0382 - 0499 (208B) 1087 - 1999	02
								--*--		
10	2653048-3	.						PLATE ASSEMBLY	(208) 0382 - 0499 (208B) 1087 - 1999	01
- 11	2653048-2	.	.					CHANNEL	(208) 0382 - 0499 (208B) 1087 - 1999	01
- 12	MS21055L3	.	.					NUTPLATE	(208) 0382 - 0499 (208B) 1087 - 1999	02
13	AS4407J0404	.						ELBOW ASSEMBLY	(208) 0382 - 0499 (208B) 1087 - 1999	01
14	2653048-13	.						TUBE ASSEMBLY	(208) 0382 - 0499 (208B) 1087 - 1999	01
15	AN818-4J	.	.					NUT	(208) 0382 - 0499 (208B) 1087 - 1999	02
16	AS5176J04	.	.					SLEEVE ALTERNATE SPARE (INTERCHANGEABLE WITH): MS20819-4J	(208) 0382 - 0499 (208B) 1087 - 1999	02
- 16A	MS20819-4J	.	.					SLEEVE ALTERNATE SPARE (INTERCHANGEABLE WITH): AS5176J04	(208) 0382 - 0499 (208B) 1087 - 1999	02
17	2653048-7	.						TUBE ASSEMBLY	(208) 0382 - 0499 (208B) 1087 - 1999	01

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

TORQUE TRANSMITTER INSTALLATION

AIRPLANES (208) 0382 THRU 0499 AND AIRPLANES (208B) 1087 THRU 1999

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
18	AN818-4J	.	.	.	NUT				(208) 0382 - 0499 (208B) 1087 - 1999	02
19	AS5176J04	.	.	.	SLEEVE ALTERNATE SPARE (INTERCHANGEABLE WITH): MS20819-4J				(208) 0382 - 0499 (208B) 1087 - 1999	02
- 19A	MS20819-4J	.	.	.	SLEEVE ALTERNATE SPARE (INTERCHANGEABLE WITH): AS5176J04				(208) 0382 - 0499 (208B) 1087 - 1999	02
20	MS21919WDG16	.	.	.	CLAMP				(208) 0382 - 0499 (208B) 1087 - 1999	02
					ATTACHING PARTS					
21	MS21919WDG4	.	.	.	CLAMP			OTWO	(208) 0382 - 0499 (208B) 1087 - 1999	04
22	MS35207-265	.	.	.	SCREW				(208) 0382 - 0499 (208B) 1087 - 1999	02
23	MS21083N3	.	.	.	NUT				(208) 0382 - 0499 (208B) 1087 - 1999	02
					--*--					
24	AN804-4	.	.	.	TEE				(208) 0382 - 0499 (208B) 1087 - 1999	02
25		.	.	.	ENGINE MOUNT REFER TO 71-20-00 FIGURE 01 .					RF
- 26	2654032-9	.	.	.	CONNECTOR DOUBLER - FIREWALL				(208) 0382 - 0499 (208B) 1087 - 1999	01
- ITEM NOT ILLUSTRATED										



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

77-12-00

TORQUE TRANSMITTER INSTALLATION - FDR & CVR
AIRPLANES (208) 0417 & ON AND AIRPLANES (208B) 1052 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A63314

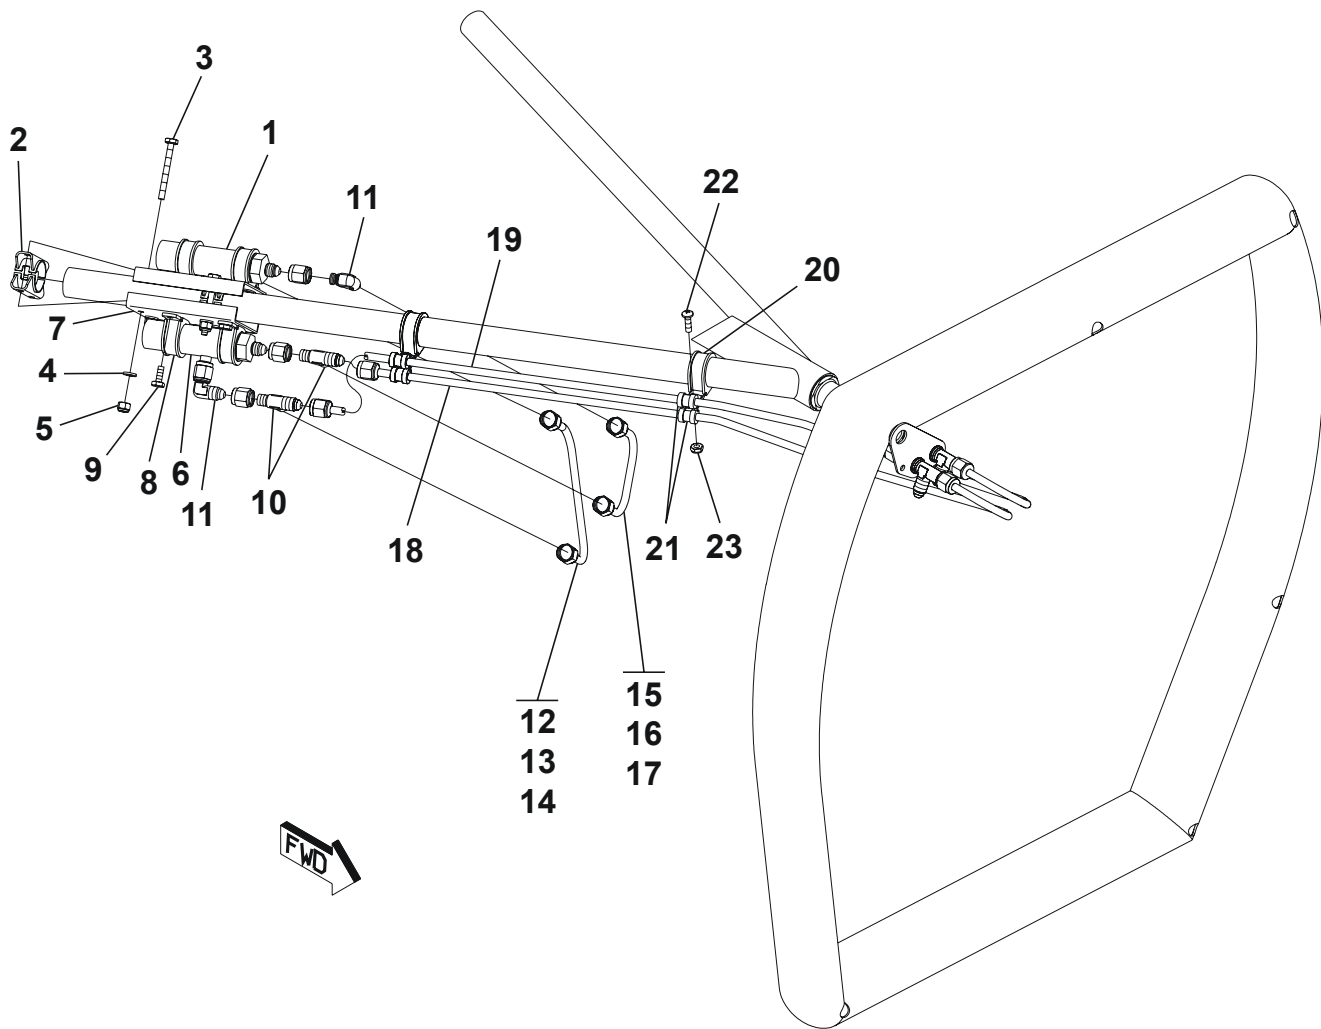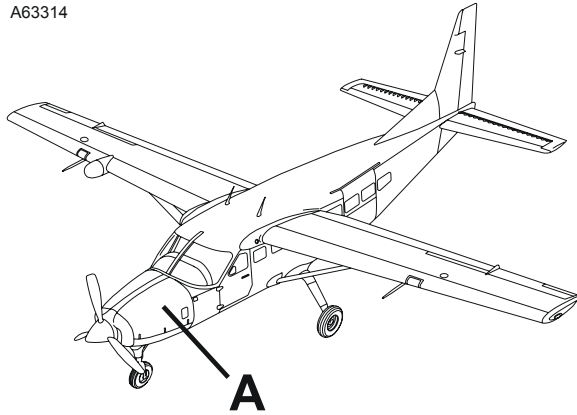

DETAIL A

TORQUE TRANSMITTER INSTALLATION - FDR & CVR
Figure 03. (Sheet 1)

2610T7005
 A2618T1410

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

TORQUE TRANSMITTER INSTALLATION - FDR & CVR
AIRPLANES (208) 0417 & ON AND AIRPLANES (208B) 1052 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	APTE51C-65D	.	TRANSDUCER DELTA P						(208) 0417 & ON (208B) 1052 & ON	01
			ATTACHING PARTS							
2	2653043-2	.	CLAMP ASSEMBLY						(208) 0417 & ON (208B) 1052 & ON	04
3	AN3-17A	.	BOLT						(208) 0417 & ON (208B) 1052 & ON	04
4	NAS1149F0363P	.	WASHER						(208) 0417 & ON (208B) 1052 & ON	04
								73197		
5	MS21044N3	.	NUT						(208) 0417 & ON (208B) 1052 & ON	04
			--*--							
6	APTE51C-70D	.	TRANSDUCER FOR SPARES ORDER (MUST REPLACE WITH): APTE51CF-70D						(208) 0417 & ON (208B) 1052 & ON	NP
- 6A	APTE51CF-70D	.	TRANSDUCER SPARES REPLACEMENT FOR: APTE51C-70D						(208) 0417 & ON (208B) 1052 & ON	01
			ATTACHING PARTS							
7	2653048-3	.	PLATE ASSEMBLY						(208) 0417 & ON (208B) 1052 & ON	02
8	MS21919WDG16	.	CLAMP						(208) 0417 & ON (208B) 1052 & ON	04
9	AN3-4A	.	BOLT						(208) 0417 & ON (208B) 1052 & ON	04
			--*--							
10	AS4410J040404	.	TEE ASSEMBLY						(208) 0417 & ON (208B) 1052 & ON	02
11	AS4407J0404	.	ELBOW ASSEMBLY						(208) 0417 & ON (208B) 1052 & ON	02
12	2653048-16	.	TUBE ASSEMBLY - OIL VENT						(208) 0417 & ON (208B) 1052 & ON	01
			ATTACHING PARTS							
13	AN818-4J	.	NUT						(208) 0417 & ON (208B) 1052 & ON	02
14	MS20819-4J	.	SLEEVE						(208) 0417 & ON (208B) 1052 & ON	02
			--*--							
15	2653048-15	.	TUBE ASSEMBLY - OIL PRESSURE						(208) 0417 & ON (208B) 1052 & ON	01
			ATTACHING PARTS							
16	AN818-4J	.	NUT						(208) 0417 & ON (208B) 1052 & ON	02
17	MS20819-4J	.	SLEEVE						(208) 0417 & ON (208B) 1052 & ON	02
			--*--							
18	2653048-7	.	TUBE ASSEMBLY						(208) 0417 & ON (208B) 1052 & ON	01
19	2653048-13	.	TUBE ASSEMBLY						(208) 0417 & ON (208B) 1052 & ON	01
			ATTACHING PARTS							

- ITEM NOT ILLUSTRATED

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

TORQUE TRANSMITTER INSTALLATION - FDR & CVR

AIRPLANES (208) 0417 & ON AND AIRPLANES (208B) 1052 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
20	MS21919WDG16	.	CLAMP							(208) 0417 & ON (208B) 1052 & ON	02
21	MS21919WDG4	.	CLAMP							(208) 0417 & ON (208B) 1052 & ON	04
22	MS35207-265	.	SCREW							(208) 0417 & ON (208B) 1052 & ON	02
23	MS21083N3	.	NUT							(208) 0417 & ON (208B) 1052 & ON	02
		--*--									
- ITEM NOT ILLUSTRATED											




CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

77-13-00

PROPELLER RPM INDICATING SYSTEM
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24557

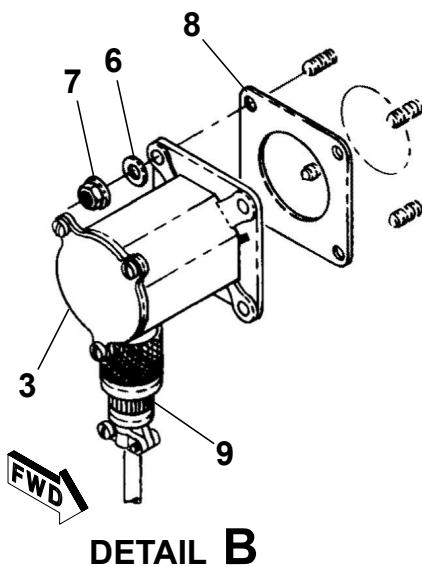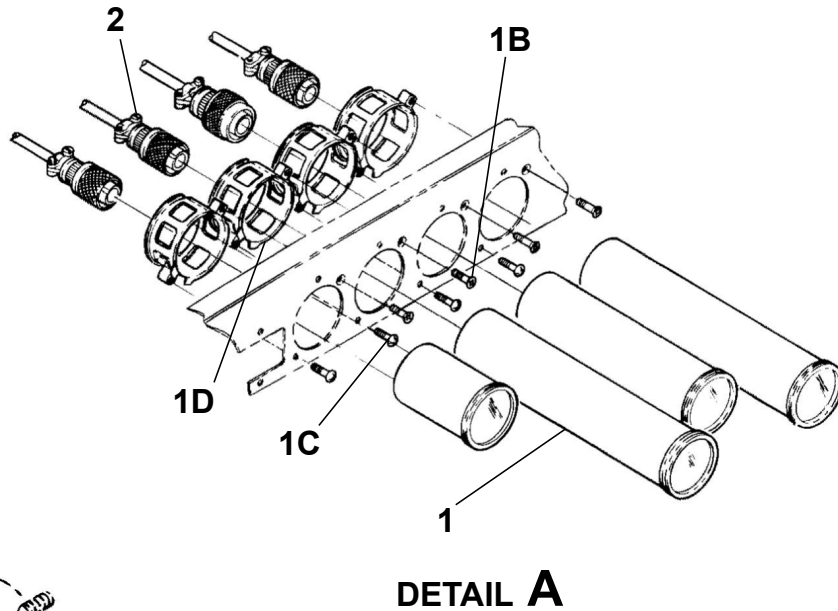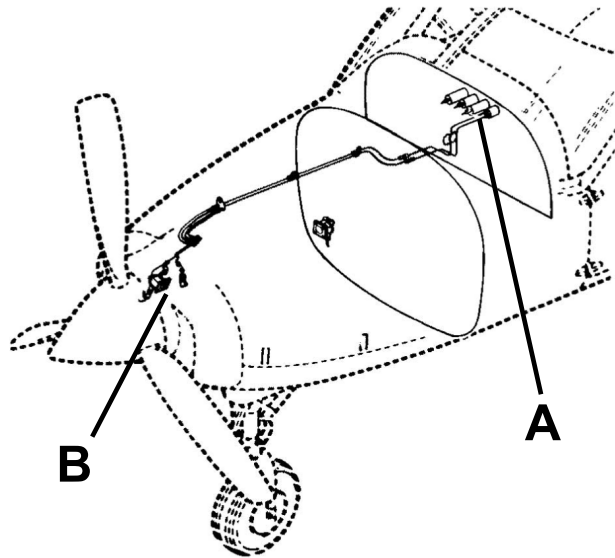

PROPELLER RPM INDICATING SYSTEM
 Figure 01. (Sheet 1)

26551004
 A2655R2002
 B26551002

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

PROPELLER RPM INDICATING SYSTEM

AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

		NOMENCLATURE									UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	2606014-1	.	INDICATOR - PROP RPM FOR SPARES ORDER (MUST REPLACE WITH): 2606014-2							(208) 0001 - 0373 (208B) 0001 - 1049	01
- 1A	2606014-2	.	INDICATOR - PROP RPM SPARES REPLACEMENT FOR: 2606014-1 ATTACHING PARTS							(208) 0374 - 0499 (208B) 1050 - 1999	01
1B	MS24693BB50	.	SCREW							(208) 0001 - 0499 (208B) 0001 - 1999	01
1C	MS35214-43	.	SCREW							(208) 0001 - 0499 (208B) 0001 - 1999	01
1D	MS28042-1A	.	CLAMP							77820 (208) 0001 - 0499 (208B) 0001 - 1999	01
		.	--*--								
2	S2654-1	.	CONNECTOR - PROP RPM INDICATOR							(208) 0001 - 0499 (208B) 0001 - 1999	01
3	9910378-1	.	GENERATOR - TACH ALTERNATE SPARE (INTERCHANGEABLE WITH): 9912034-1							(208) 0001 & ON (208B) 0001 & ON	01
- 3A	9912034-1	.	GENERATOR - TACH ALTERNATE SPARE (INTERCHANGEABLE WITH): 9910378-1							(208) 0001 & ON (208B) 0001 & ON	01
- 4		.	DELETED - NOT USED								
- 5		.	DELETED - NOT USED ATTACHING PARTS								
6	NAS1149F0432P	.	WASHER							(208) 0001 & ON (208B) 0001 & ON	04
7	MS21042L4	.	NUT							(208) 0001 & ON (208B) 0001 & ON	04
		.	--*--								
8	S3346-1	.	GASKET							(208) 0001 & ON (208B) 0001 & ON	01
9	S2654-3	.	CONNECTOR ASSEMBLY - PROP RPM TACH GENERATOR							(208) 0001 & ON (208B) 0001 & ON	01
- ITEM NOT ILLUSTRATED											



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

77-14-00


GAS GENERATOR RPM INDICATOR SYSTEM
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A24558

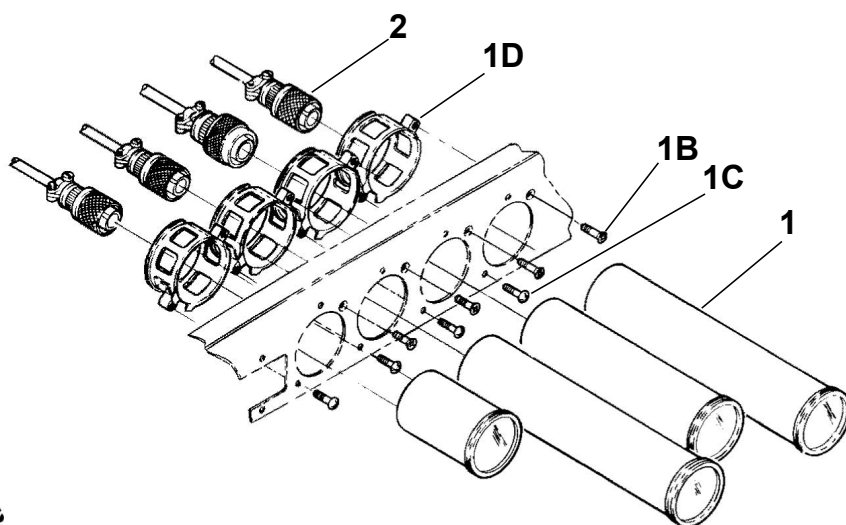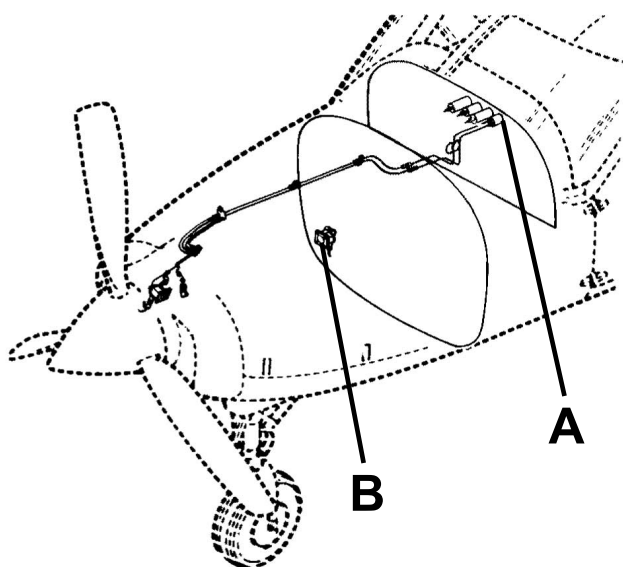

DETAIL A

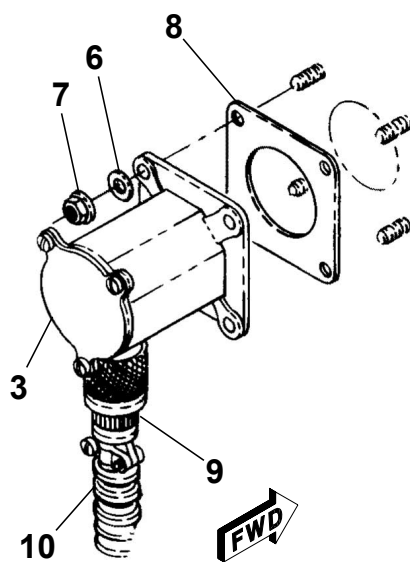

DETAIL B

GAS GENERATOR RPM INDICATOR SYSTEM
Figure 01. (Sheet 1)

26551004
 A2655R2002
 B26551002

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

GAS GENERATOR RPM INDICATOR SYSTEM
AIRPLANES (208) 0001 & ON AND AIRPLANES (208B) 0001 & ON

		NOMENCLATURE								UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	2606013-1	.	INDICATOR - PERCENT RPM FOR SPARES ORDER (MUST REPLACE WITH): 2606013-2							(208) 0001 - 0373 (208B) 0001 - 1049	01
- 1A	2606013-2	.	INDICATOR - PERCENT RPM SPARES REPLACEMENT FOR: 2606013-1 ATTACHING PARTS							(208) 0374 - 0499 (208B) 1050 - 1999	01
1B	MS24693BB50	.	SCREW							(208) 0001 - 0499 (208B) 0001 - 1999	01
1C	MS35214-43	.	SCREW							(208) 0001 - 0499 (208B) 0001 - 1999	01
1D	MS28042-1A	.	CLAMP							77820 (208) 0001 - 0499 (208B) 0001 - 1999	01
			--*--								
2	S2654-1	.	CONNECTOR - PERCENT RPM INDICATOR							(208) 0001 - 0499 (208B) 0001 - 1999	01
3	9910378-1	.	GENERATOR - TACH ALTERNATE SPARE (INTERCHANGEABLE WITH): 9912034-1							(208) 0001 & ON (208B) 0001 & ON	01
- 3A	9912034-1	.	GENERATOR - TACH ALTERNATE SPARE (INTERCHANGEABLE WITH): 9910378-1							(208) 0001 & ON (208B) 0001 & ON	01
- 4		.	DELETED - NOT USED								
- 5		.	DELETED - NOT USED ATTACHING PARTS								
6	NAS1149F0432P	.	WASHER							(208) 0001 & ON (208B) 0001 & ON	04
7	MS21042L4	.	NUT							(208) 0001 & ON (208B) 0001 & ON	04
			--*--								
8	S3346-1	.	GASKET							(208) 0001 & ON (208B) 0001 & ON	01
9	S2654-3	.	CONNECTOR ASSEMBLY - PERCENT RPM TACH GENERATOR							(208) 0001 & ON (208B) 0001 & ON	01
10	S2562-2	.	TUBING - BULK ITEM							(208) 0001 & ON (208B) 0001 & ON	AR
- ITEM NOT ILLUSTRATED											

- ITEM NOT ILLUSTRATED


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

77-15-00

TACHOMETER GENERATOR INSTALLATION
AIRPLANES (208B) 5000 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A89910

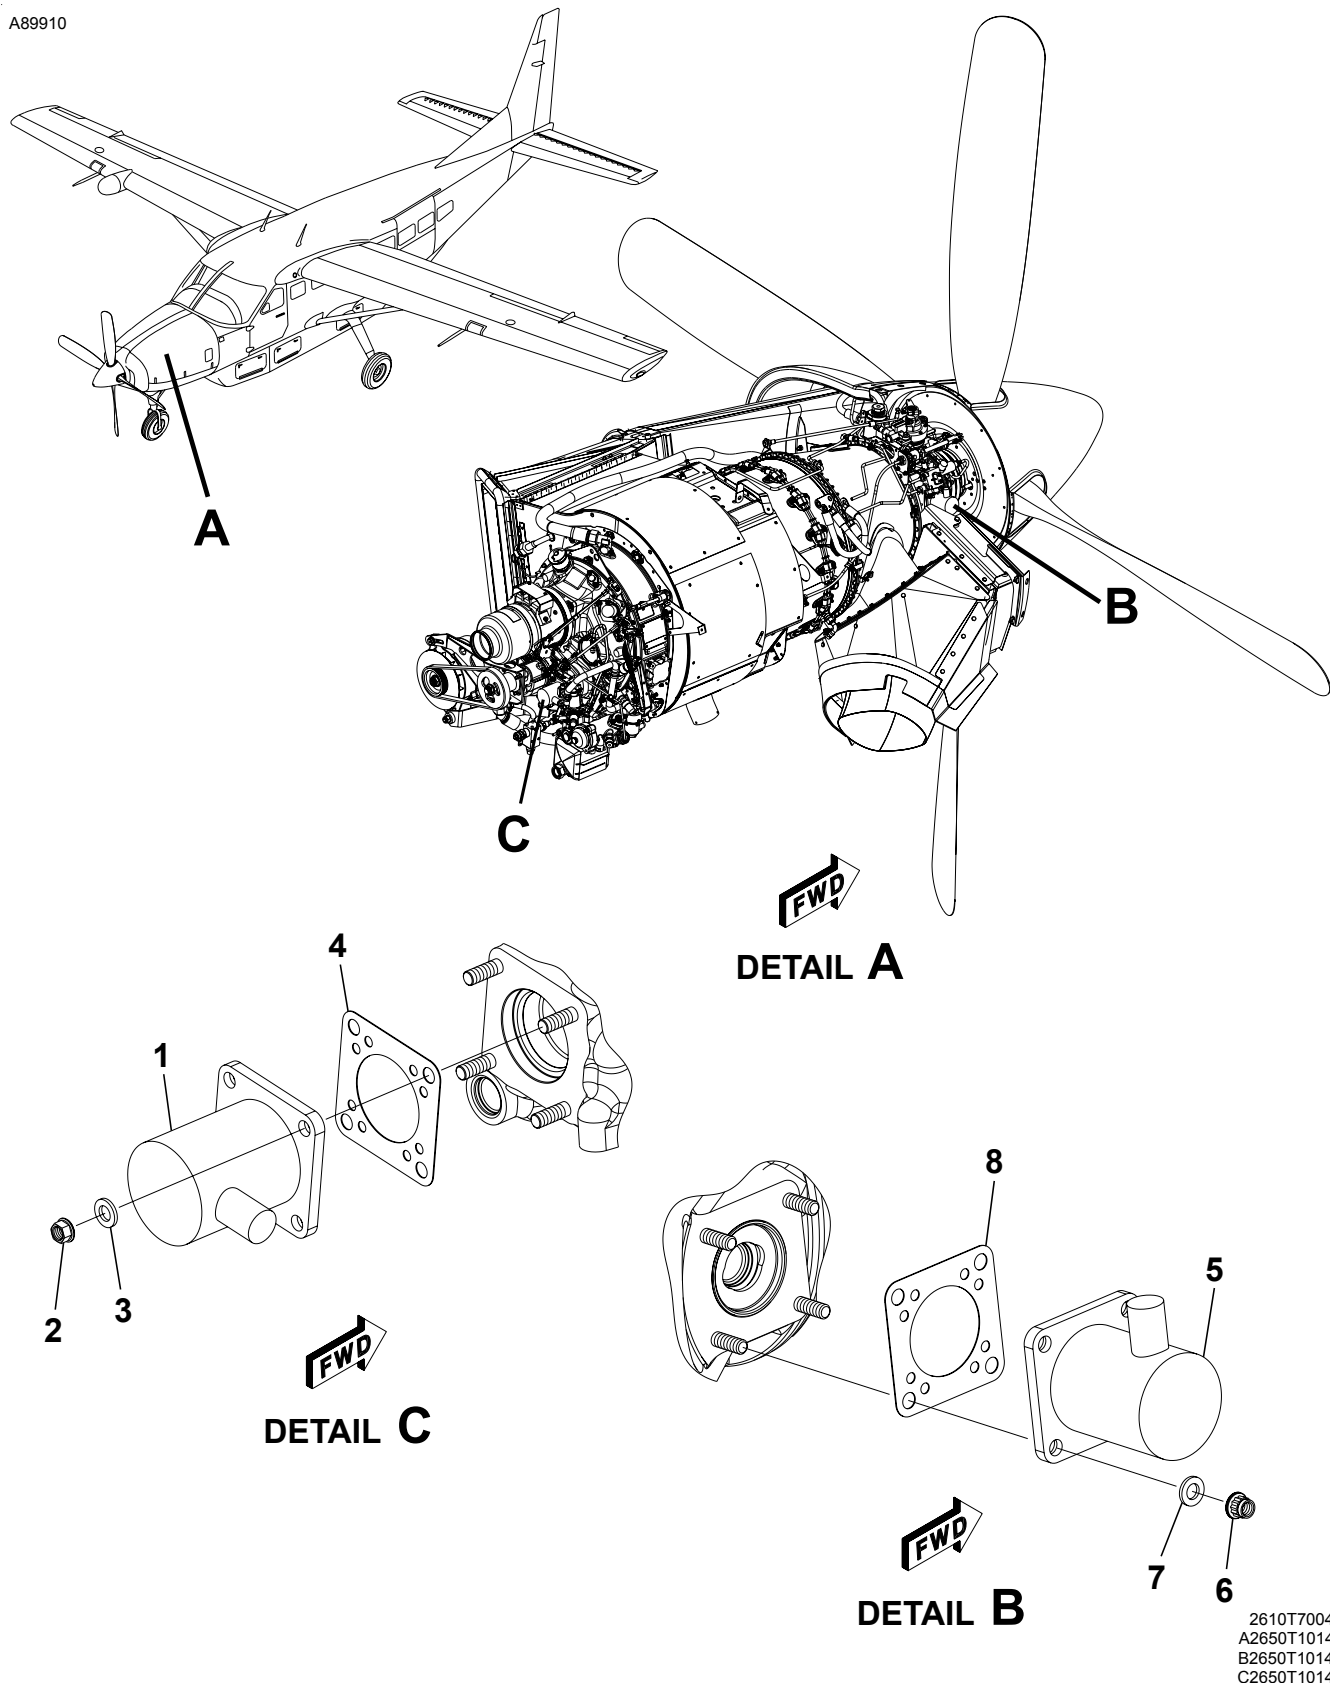

TACHOMETER GENERATOR INSTALLATION
 Figure 01. (Sheet 1)

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

TACHOMETER GENERATOR INSTALLATION

AIRPLANES (208B) 5000 & ON

ITEM	PART NUMBER	NOMENCLATURE							EFFECTIVITY	UNITS PER ASSY
		1	2	3	4	5	6	7		
1	9912034-1	.						TACHOMETER GENERATOR UN033 ATTACHING PARTS	(208B) 5000 & ON	01
2	NAS1149C0432R	.						WASHER	(208B) 5000 & ON	04
3	MS21042L4	.						NUT	(208B) 5000 & ON	04
								--*--		
4	S3346-1	.						GASKET	(208B) 5000 & ON	01
5	9912034-1	.						TACHOMETER GENERATOR UN034 ATTACHING PARTS	(208B) 5000 & ON	01
6	NAS1149C0432R	.						WASHER	(208B) 5000 & ON	04
7	MS21042L4	.						NUT	(208B) 5000 & ON	04
								--*--		
8	S3346-1	.						GASKET	(208B) 5000 & ON	01
- ITEM NOT ILLUSTRATED										



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

77-21-00

INTER-TURBINE TEMPERATURE INDICATOR
AIRPLANES (208) 0001 THRU 0499 AND AIRPLANES (208B) 0001 THRU
1999

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

A24560

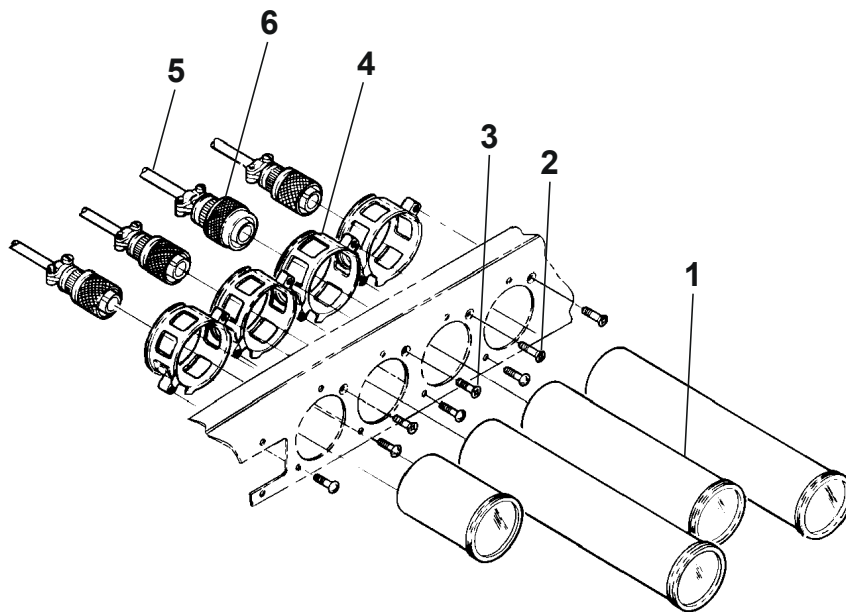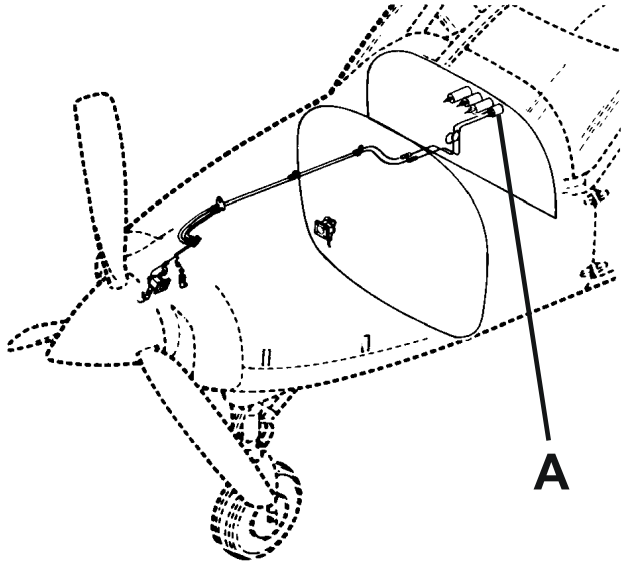

DETAIL A

INTER-TURBINE TEMPERATURE INDICATOR
Figure 01. (Sheet 1)

2655R1004
A2655R2002

Figure 01
Page 2
77-21-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

INTER-TURBINE TEMPERATURE INDICATOR

AIRPLANES (208) 0001 THRU 0499 AND AIRPLANES (208B) 0001 THRU 1999

		NOMENCLATURE								UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	2606012-1	.	INDICATOR - INTER-TURBINE TEMPERATURE FOR SPARES ORDER (MUST REPLACE WITH): 2606012-2 * AIRPLANES (208) 0001 THRU 0403 INCORPORATING SK208-170 * AIRPLANES (208B) 0001 THRU 1193 INCORPORATING SK208-170							(208) 0001 - 0403 (208) *0001 - 0403 (208B) 0001 - 1193 (208B) *0001 - 1193	NP
- 1A	2606012-2	.	INDICATOR - INTER-TURBINE TEMPERATURE SPARES REPLACEMENT FOR: 2606012-1 * AIRPLANES (208) 0001 THRU 0403 INCORPORATING SK208-170 * AIRPLANES (208B) 0001 THRU 1193 INCORPORATING SK208-170 ATTACHING PARTS							(208) 0404 - 0499 (208) *0001 - 0403 (208B) 1193 - 1999 (208B) *0001 - 1193	01
2	MS24693BB50	.	SCREW							(208) 0001 - 0499 (208B) 0001 - 1999	01
3	MS35214-43	.	SCREW							(208) 0001 - 0499 (208B) 0001 - 1999	01
4	MS28042-1A	.	CLAMP							77820 (208) 0001 - 0499 (208B) 0001 - 1999	01
			--*--								
5	2670014-1	.	CABLE ASSEMBLY - INTER-TURBINE TEMPERATURE							(208) 0001 - 0499 (208B) 0001 - 1999	01
6	S2654-15	.	CONNECTOR INTER-TURBINE TEMP INDICATOR							(208) 0001 - 0499 (208B) 0001 - 1999	01
- ITEM NOT ILLUSTRATED											

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG



77-30-00

**ALTAIR ENGINE TREND MONITORING (ETM) COMPONENT
INSTALLATION**

AIRPLANES (208) 0500 & ON AND AIRPLANES (208B) 2000 THRU 4999

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

A72300

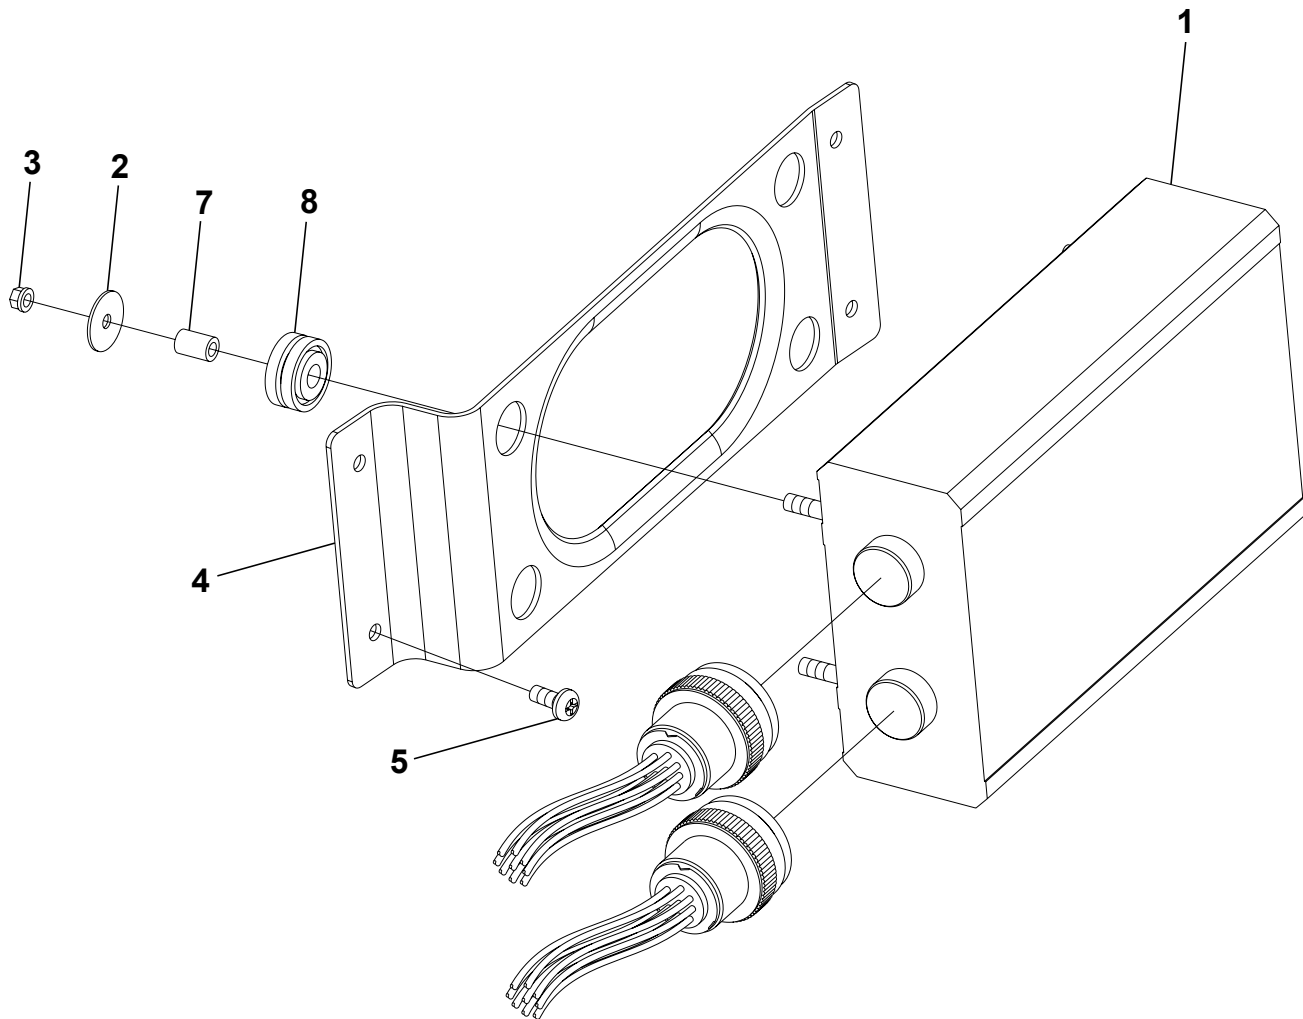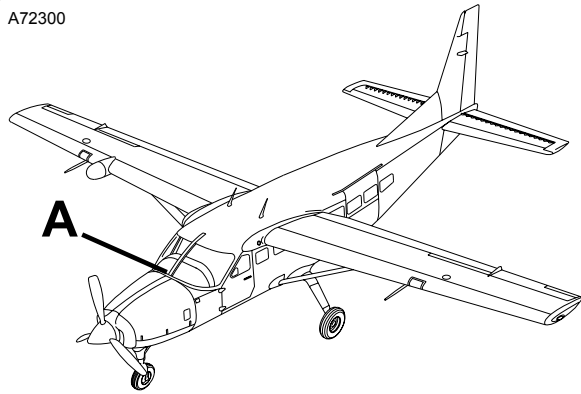

DETAIL A

ALTAIR ENGINE TREND MONITORING (ETM) COMPONENT INSTALLATION
Figure 01. (Sheet 1)

2610T7005
A2614T1413

Figure 01
Page 2
77-30-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ALTAIR ENGINE TREND MONITORING (ETM) COMPONENT INSTALLATION

AIRPLANES (208) 0500 & ON AND AIRPLANES (208B) 2000 THRU 4999

NOMENCLATURE										UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY	
1	DAAS-A-010-1	.	ADAS - D PROCESSOR UF001 FOR SPARES ORDER (MUST REPLACE WITH): S3100-519						1YQ22 (208) 0500 - 0517 (208B) 2000 - 2159	NP
- 1A	S3100-519	.	ADAS - D PROCESSOR -DAAS-A-010-1 (SW V5.0.6) UF001 SPARES REPLACEMENT FOR: DAAS-A-010-1 ATTACHING PARTS						(208) 0518 & ON (208B) 2160 & ON	01
2	S1450-1-10-032	.	WASHER						(208) 0500 & ON (208B) 2000 - 4999	04
3	MS21042-06	.	NUT ALTERNATE SPARE (INTERCHANGEABLE WITH): NAS1291X06						(208) 0500 & ON (208B) 2000 - 4999	04
- 3A	NAS1291X06	.	NUT ALTERNATE SPARE (INTERCHANGEABLE WITH): MS21042-06 --*--						(208) 0500 & ON (208B) 2000 - 4999	04
4	2670156-3	.	PROCESSOR BRACKET						(208) 0500 & ON (208B) 2000 - 4999	01
5	MS35206-243	.	SCREW						(208) 0500 & ON (208B) 2000 - 4999	04
			--*--							
- 6	ADAS-D-067-1	.	MOUNTING KIT						1YQ22 (208) 0500 & ON (208B) 2000 - 4999	04
7	940-00019	.	.	FERRULE					1YQ22 (208) 0500 & ON (208B) 2000 - 4999	01
8	J-3112-5-1	.	.	SHOCK MOUNT					1YQ22 (208) 0500 & ON (208B) 2000 - 4999	01
- 9	ADAS-C-031-1	.	DOWNLOAD PORT ASSEMBLY JI007						(208) 0500 & ON (208B) 2000 - 4999	01
- ITEM NOT ILLUSTRATED										

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG


77-30-00

**FAST ENGINE TREND MONITORING (ETM) COMPONENT
INSTALLATION**

AIRPLANES (208B) 5000 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

A87957

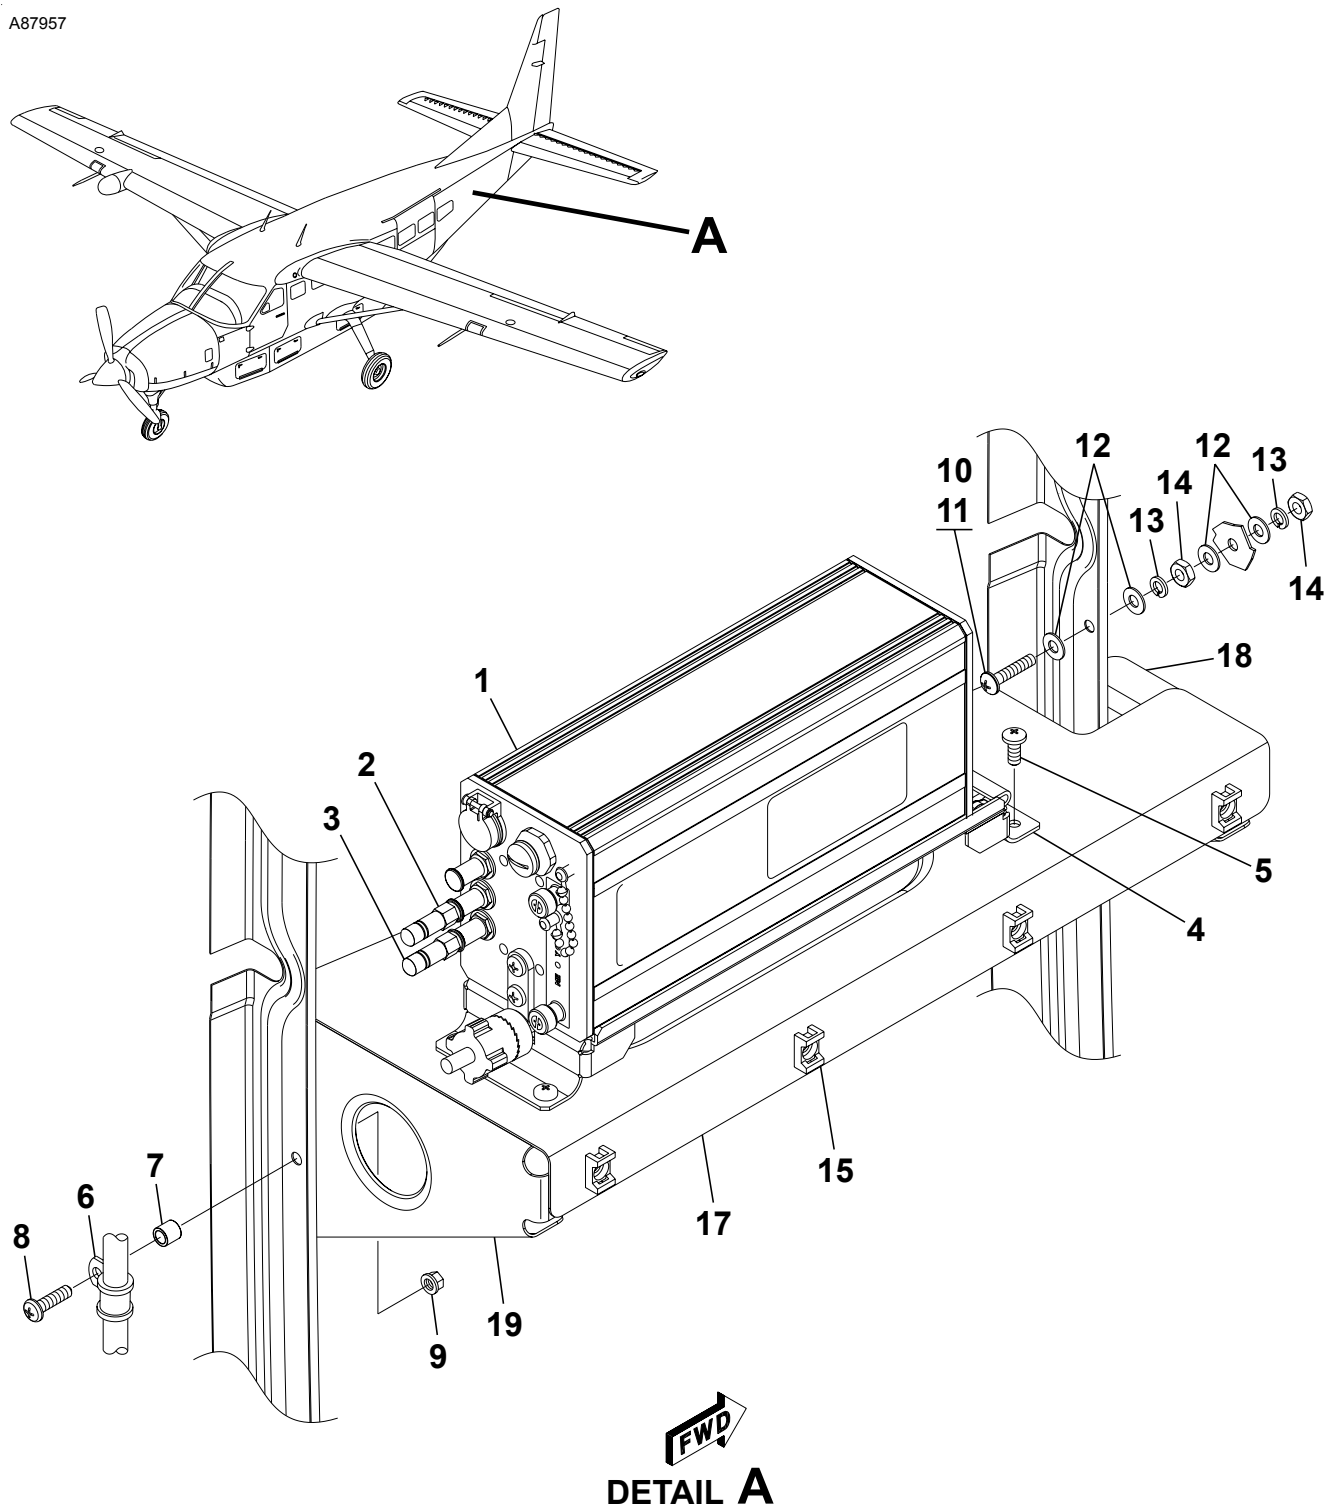

FAST ENGINE TREND MONITORING (ETM) COMPONENT INSTALLATION
 Figure 02. (Sheet 1)

2610T7004
 A2618T1472

Figure 02
 Page 2
77-30-00 Nov 4, 2021

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

FAST ENGINE TREND MONITORING (ETM) COMPONENT INSTALLATION

AIRPLANES (208B) 5000 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	FAST-A-010-4	.	FAST ETM PROCESSOR YT009						1YQ22	(208B) 5000 - 5120	01
		.	* AIRPLANES (208B) 5000 THRU 5120 INCORPORATING CAB-77-01							(208B) 5431 & ON	
		.								(208B) *5000 - 5120	
- 1A	FAST-A-010-4-V1	.	FAST ETM PROCESSOR UT001						1YQ22	(208B) 5121 - 5430	01
- 1B	FAST-A-010-4-V5	.	FAST ETM PROCESSOR UT001						1YQ22	(208B) *5000 - 5120	01
		.	* AIRPLANES (208B) 5000 THRU 5120 INCORPORATING CAB-77-01							(208B) 5431 & ON	
2	FAST-D-087-1	.	ANTENNA - WLAN STUBBY YT009						1YQ22	(208B) 5000 - 5120	01
3	FAST-D-087-1	.	ANTENNA - WLAN STUBBY YT010						1YQ22	(208B) 5000 - 5120	01
4	FAST-A-042-1	.	MOUNT						1YQ22	(208B) 5000 & ON	01
		.	ATTACHING PARTS								
5	MS27039-1-07	.	SCREW							(208B) 5000 & ON	05
		.	--*--								
6	MS21919WDG6	.	CLAMP						84971	(208B) 5000 & ON	01
7	NAS43DD3-19FC	.	SPACER							(208B) 5000 & ON	01
8	NAS603-12	.	SCREW							(208B) 5000 & ON	01
9	MS21042L3	.	NUT						00624	(208B) 5000 & ON	01
		.	ALTERNATE SPARE (INTERCHANGEABLE WITH):								
		.	NAS1291-3								
- 9A	NAS1291-3	.	NUT							(208B) 5000 & ON	01
		.	ALTERNATE SPARE (INTERCHANGEABLE WITH):								
		.	MS21042L3								
10	6318104-2	.	GROUND STUD INSTALLATION							(208B) 5000 & ON	01
		.	ALTERNATE SPARE (INTERCHANGEABLE WITH):								
		.	9256010-1								
- 10A	9256010-1	.	GROUND STUD ASSEMBLY							(208B) 5000 & ON	01
		.	ALTERNATE SPARE (INTERCHANGEABLE WITH):								
		.	6318104-2								
11	MS35207-266	.	.	SCREW					71468	(208B) 5000 & ON	01
12	NAS1149D0316H	.	.	WASHER						(208B) 5000 & ON	04
13	MS35338-157	.	.	LOCK WASHER					80205	(208B) 5000 & ON	02
14	MS35650-305T	.	.	NUT					80205	(208B) 5000 & ON	02
15	S1741-1	.	ANCHOR							(208B) 5000 & ON	04
- 16	2618507-2	.	SHELF ASSEMBLY							(208B) 5000 & ON	01
17	2618507-3	.	.	SHELF						(208B) 5000 & ON	01
18	2618507-4	.	.	SHELF SUPPORT - AFT						(208B) 5000 & ON	01
19	2618507-5	.	.	SHELF SUPPORT - FORWARD						(208B) 5000 & ON	01
- ITEM NOT ILLUSTRATED											


CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

77-30-00

ADAS PLUS PROCESSOR INSTALLATION
AIRPLANES (208) 0382 & ON AND AIRPLANES (208B) 1087 & ON

CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

A39817

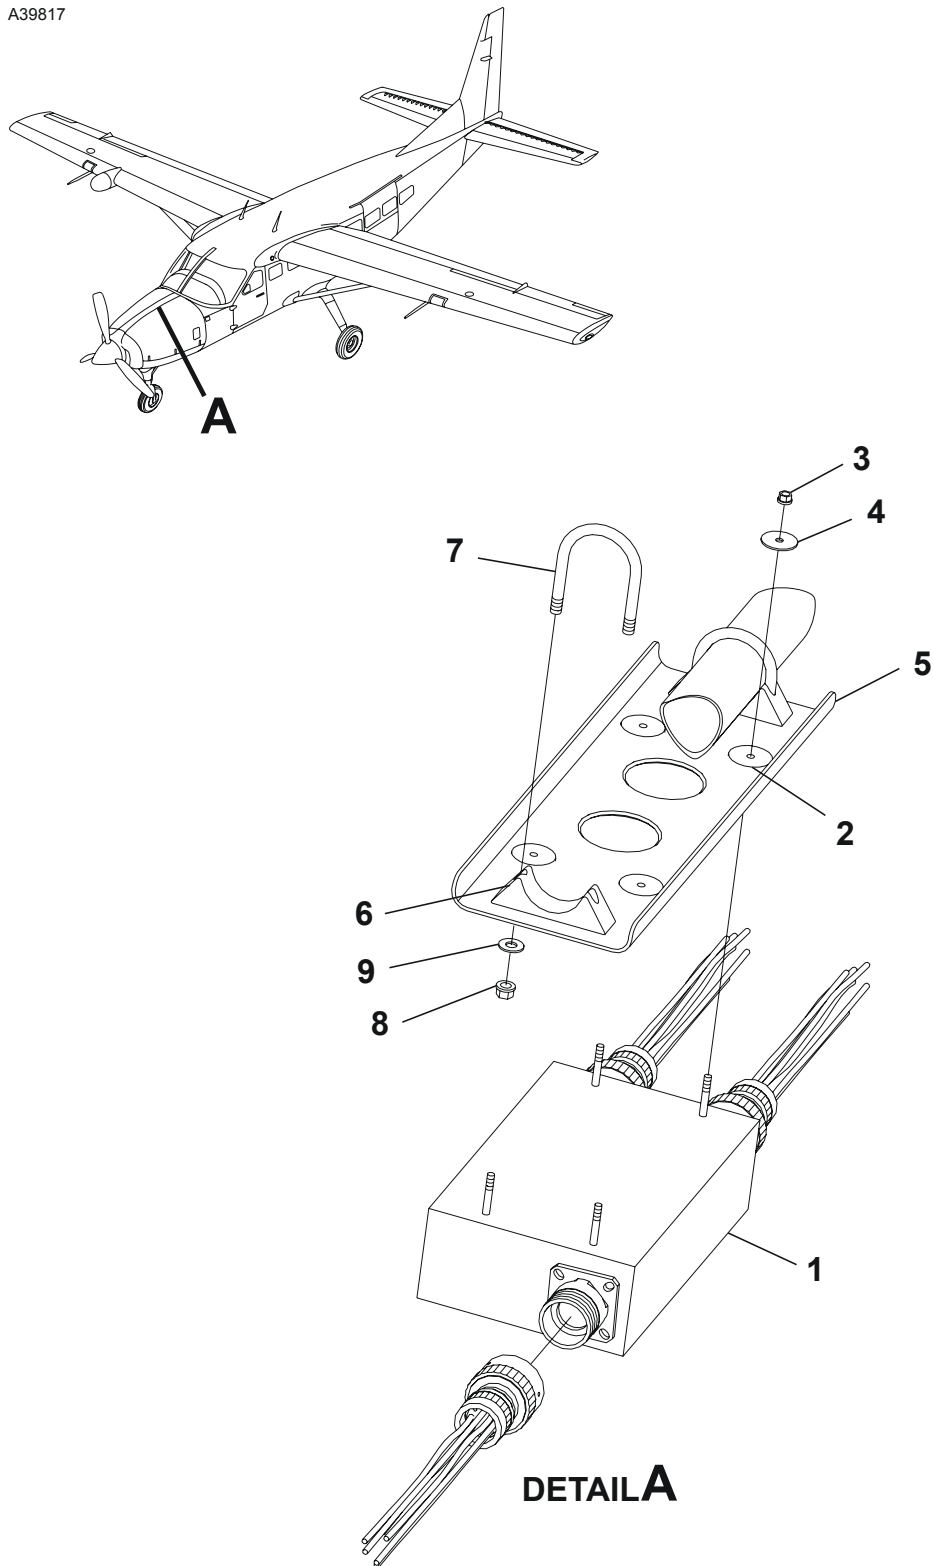

2610T7005
A2618T1363

ADAS PLUS PROCESSOR INSTALLATION
Figure 03. (Sheet 1)

Figure 03
Page 2
77-30-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

ADAS PLUS PROCESSOR INSTALLATION
AIRPLANES (208) 0382 & ON AND AIRPLANES (208B) 1087 & ON

NOMENCLATURE										UNITS PER ASSY	
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY		
1	EMU-A-010-3	.	ADAS PLUS PROCESSOR						1YQ22	(208) 0382 & ON (208B) 1087 & ON	01
			ATTACHING PARTS								
2	P01005	.	SHOCK MOUNT						76005	(208) 0382 & ON (208B) 1087 & ON	04
3	MS21042-06	.	NUT							(208) 0382 & ON (208B) 1087 & ON	04
4	S1450-1-10-032	.	WASHER							(208) 0382 & ON (208B) 1087 & ON	04
			--*--								
5	2654032-2	.	PROCESSOR BRACKET							(208) 0382 & ON (208B) 1087 & ON	01
			ATTACHING PARTS								
6	2654032-8	.	CLAMP HALF							(208) 0382 & ON (208B) 1087 & ON	02
7	2601260-5	.	CLAMP BOLT							(208) 0382 & ON (208B) 1087 & ON	02
8	MS21043-3	.	NUT							(208) 0382 & ON (208B) 1087 & ON	04
9	NAS1149F0332P	.	WASHER							(208) 0382 & ON (208B) 1087 & ON	04
			--*--								

- ITEM NOT ILLUSTRATED



CESSNA®
MODEL 208
ILLUSTRATED PARTS CATALOG

77-40-00


GEA-71 ENGINE INTERFACE UNIT INSTALLATION
AIRPLANES (208) 0500 & ON AND AIRPLANES (208B) 2000 & ON

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG


A72203

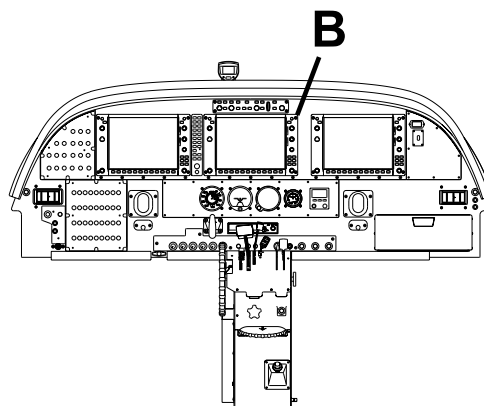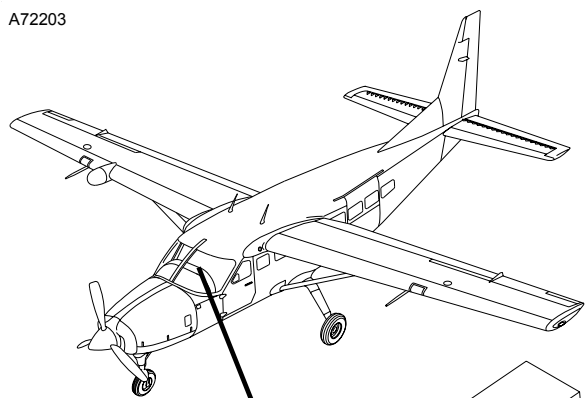

DETAIL A

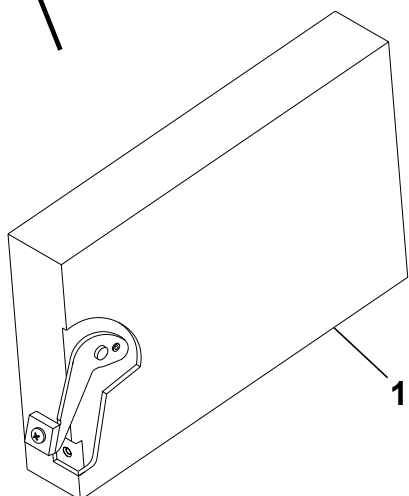

DETAIL C

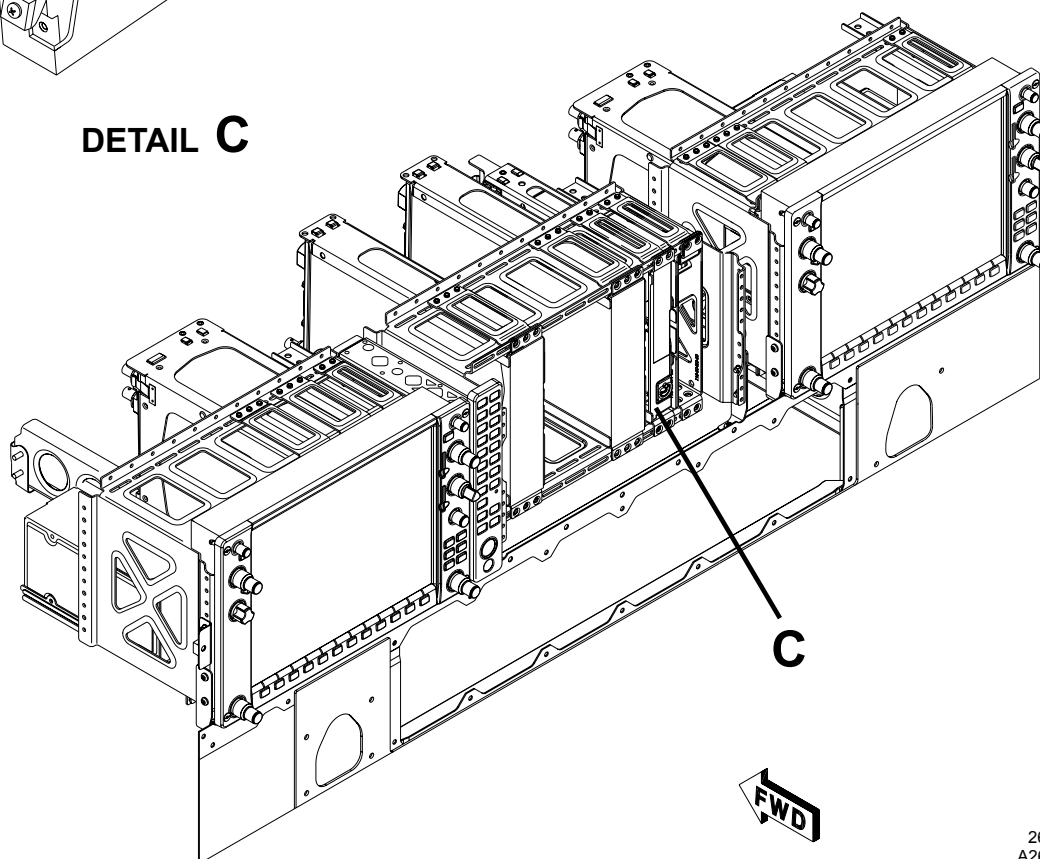

DETAIL B

GEA-71 ENGINE INTERFACE UNIT INSTALLATION
Figure 01. (Sheet 1)

2610T7001
 A2618T1419
 B2618T1419
 C7018T1075

Figure 01
 Page 2
77-40-00 Nov 4, 2021

CESSNA®
MODEL 208
 ILLUSTRATED PARTS CATALOG

GEA-71 ENGINE INTERFACE UNIT INSTALLATION
AIRPLANES (208) 0500 & ON AND AIRPLANES (208B) 2000 & ON

NOMENCLATURE										UNITS PER ASSY
ITEM	PART NUMBER	1	2	3	4	5	6	7	EFFECTIVITY	
1	S3100-385	.	GEA-71 ENGINE INTERFACE - REFERENCE SUPPLIER PART NUMBER 011-00831-00 (MOD 2 AND ON)						0TRC3 (208) 0500 - 0590 (208B) 2000 - 5329	01
- 1A	S3100-637	.	GEA-71 ENGINE INTERFACE - REFERENCE SUPPLIER PART NUMBER 011-00831-00 (MOD 1, 2, AND 3)						(208) 0591 - 0650 (208B) 5330 - 5500	01
- 1B	011-03682-02	.	GEA-71B ENHANCED						(208) 0651 & ON (208B) 5501 & ON	01
- 2	011-00796-00	.	BACKPLATE ASSEMBLY - GEA-71						0TRC3 (208) 0500 & ON (208B) 2000 & ON	01
- ITEM NOT ILLUSTRATED										